



v5.50

This Computer program (including software design, programming structure, graphics, manual, and on-line help) was created and published by STRUCTUREPOINT, formerly the Engineering Software Group of the Portland Cement Association (PCA) for the engineering analysis and design of reinforced concrete beams and slab floor systems

While STRUCTUREPOINT has taken every precaution to utilize the existing state-of-the-art and to assure the correctness of the analytical solution techniques used in this program, the responsibilities for modeling the structure, inputting data, applying engineering judgment to evaluate the output, and implementing engineering drawings remain with the structural engineer of record. Accordingly, STRUCTUREPOINT does and must disclaim any and all responsibility for defects or failures of structures in connection with which this program is used.

Neither this manual nor any part of it may be reproduced, edited, or altered by any means electronic or mechanical or by any information storage and retrieval system, without the written permission of STRUCTUREPOINT LLC.

All products, corporate names, trademarks, service marks, and trade names referenced in this material are the property of their respective owners and are used only for identification and explanation without intent to infringe. spSlab[®] and spBeam[®] are registered trademarks of STRUCTUREPOINT LLC.

Copyright © 2002 – 2018, STRUCTUREPOINT LLC All Rights Reserved.

Chapter 1: INTRODUCTION

1.1	Introduction.....	10
1.2	Program Features	10
1.3	Program Capacity	11
1.4	System Requirements	12
1.5	Terms	12
1.6	Conventions	13
1.7	Installing, Purchasing and Licensing spSlab/spBeam	13

Chapter 2: METHOD OF SOLUTION

2.1	Introduction.....	16
2.2	Geometric Checks.....	16
2.3	Code Checks	17
2.3.1	Minimum Thickness - One-Way Construction.....	17
2.3.2	Minimum Slab Thickness - Two-Way Construction.....	17
2.3.3	Drop Panel Dimensions	21
2.3.4	Beam Dimensions	22
2.4	Special Considerations for One and Two-Way Joist Systems.....	22
2.4.1	Rib Dimensions.....	22
2.4.2	Minimum Thickness for Joist Systems.....	23
2.4.3	Joist System Analysis and Design	23
2.5	Material Properties.....	25
2.6	Equivalent Frame Method	 27
2.6.1	Stiffness Characteristics.....	28
2.6.2	Slab Beams	29
2.6.3	Columns	29
2.7	Loading	35
2.7.1	Self-Weight.....	36
2.7.2	Superimposed Loading	36
2.7.3	Lateral Loading.....	36
2.7.4	Load Patterns	37
2.7.5	Load Combinations.....	39
2.8	Column and Middle Strip Widths	 42
2.9	Strip Design Moments	 45
2.9.1	ACI 318 and CSA A23.3-94.....	46
2.9.2	CSA A23.3-14/04	49
2.10	Moment Redistribution	50
2.11	Shear Analysis of Slabs	 52
2.11.1	Critical Section for Interior Supports of Interior Frames	55

2.11.2	Critical Section for Exterior Supports of Interior Frames	55
2.11.3	Critical Section for Interior Supports of Exterior Frames	56
2.11.4	Critical Section for Exterior Supports of Exterior Frames	57
2.11.5	Computation of Allowable Shear Stress at Critical Section	57
2.11.6	Computation of Factored Shear Force at Critical Section	59
2.11.7	Computation of Unbalanced Moment at Critical Section.....	60
2.11.8	Computation of Shear Stresses at Critical Section	60
2.11.9	Shear Resistance at Corner Columns.....	62
2.11.10	Shear Resistance in Slab Bands	62
2.12	One-Way Shear Analysis of Longitudinal Beams and Slabs	63
2.12.1	Shear Calculations for ACI 318 and CSA A23.3-94	63
2.12.2	Shear Calculations for CSA A23.3-14/04.....	66
2.12.3	Shear Distribution	68
2.12.4	One-Way Shear in Slab Bands (CSA A23.3-14/04).....	69
2.12.5	Shear in Drop Panels.....	69
2.13	Torsion and Shear	69
2.13.1	Additional Longitudinal Reinforcement for ACI 318 and CSA A23.3-94.....	72
2.13.2	Additional Longitudinal Reinforcement for CSA A23.3-14/04	73
2.13.3	Investigation Mode	74
2.14	Area of Reinforcement.....	75
2.14.1	Design for Combined Flexure, Shear, and Torsion	79
2.15	Reinforcement Selection.....	80
2.16	Concentration and Additional Reinforcement	85
2.17	Structural Integrity Reinforcement	86
2.18	Corner Reinforcement.....	87
2.19	Deflections	88
2.19.1	Instantaneous Deflections	88
2.19.2	Cracking.....	88
2.19.3	Long-Term Deflections.....	90
2.19.4	Deflections of two-way systems	91
2.20	Material Quantities	93
2.21	References.....	94

Chapter 3: spSlab/spBeam INTERFACE

3.1	spSlab/spBeam Interface.....	97
3.2	File Menu	99
3.3	Input Menu.....	103
3.4	Solve Menu	107
3.5	View Menu	108
3.6	Options Menu	111

3.7	Window Menu	113
3.8	Help Menu	114
3.9	Control Menu	115
3.10	Program Toolbar	116

Chapter 4: OPERATING spSlab/spBeam

4.1	Introduction.....	121
4.2	Creating New File.....	121
4.3	Opening File	121
4.4	Saving File	122
4.4.1	Save the data with the same file name	122
4.4.2	Change the format or rename the file	123
4.5	Most Recently Used Files (MRU)	123
4.6	Specifying Model Data (Menu Input).....	124
4.6.1	Data Input Wizard.....	124
4.7	Defining General Information	124
4.7.1	Defining Solve Option	125
4.7.1.1	Two-way systems	126
4.7.1.2	One way/beam systems.....	128
4.7.2	Using Span Control.....	129
4.7.3	Defining Material Properties	133
4.7.4	Defining Slabs/Flanges	135
4.7.5	Defining Longitudinal Beams.....	137
4.7.6	Defining Ribs	138
4.7.7	Defining Longitudinal Slab Bands	140
4.7.8	User Defined Column Strip Widths.....	141
4.7.9	User Defined Moment Distribution Factors	142
4.7.10	Defining Columns.....	143
4.7.11	Defining Drop Panels.....	145
4.7.12	Defining Column Capitals	147
4.7.13	Defining Transverse Beams.....	149
4.7.14	Defining Transverse Slab Bands.....	150
4.7.15	Defining Boundary Conditions.....	151
4.7.16	Defining Moment Redistribution Factors	153
4.7.17	Defining Reinforcement Criteria for Slabs and Ribs.....	154
4.7.18	Defining Reinforcement Criteria for Beams.....	156
4.7.19	Defining Column Strip Bars for Two-Way Slab Systems.....	158
4.7.20	Defining Middle Strip Bars for Two-Way Slab Systems	159
4.7.21	Defining Beam Bars for Two-Way Slab Systems	161
4.7.22	Defining Beam Stirrups for Two-Way Slab Systems.....	162
4.7.23	Defining Flexure Bars for Beams and One-Way Slab Systems	164
4.7.24	Defining Stirrups for Beams and One-Way Slab Systems	164

4.7.25	Defining Torsional Longitudinal Bars for Beams	165
4.7.26	Defining Load Cases.....	167
4.7.27	Defining Load Combinations.....	168
4.7.28	Span Loads.....	169
4.7.29	Defining Area Load on Span	170
4.7.30	Defining Line Load on Span.....	171
4.7.31	Defining Point Force on Span.....	173
4.7.32	Defining Point Moment on Span	174
4.7.33	Defining Line Torque on Span	175
4.7.34	Defining Point Torque on Span	177
4.7.35	Defining Support Loads and Displacements	178
4.7.36	Defining Lateral Effects.....	180
4.8	Executing Calculations (menu Solve).....	181
4.8.1	Execute.....	181
4.8.2	Viewing Results.....	181
4.9	View Program Output (menu View).....	182
4.9.1	Zooming in on Floor System	182
4.9.2	Change Isometric View Angle.....	183
4.9.3	Viewing Specific Member Type.....	184
4.9.4	Plan View.....	185
4.9.5	Elevated View	186
4.9.6	Side View.....	188
4.9.7	Isometric View.....	189
4.9.8	Loads.....	191
4.9.9	View Graphical Results	192
4.9.9.1	Viewing Internal Forces Diagrams	192
4.9.9.2	Viewing Moment Capacity	194
4.9.9.3	Viewing Shear Capacity	196
4.9.9.4	Viewing Reinforcement.....	197
4.9.9.5	Viewing Deflected Shapes.....	199
4.9.10	Printing Results.....	201
4.9.10.1	Printing Analysis and Design Results.....	201
4.9.10.2	Printing Current View Window	202
4.9.11	Print Preview.....	203
4.9.12	Copy Graphs to Clipboard	204
4.10	Customizing Program (menu Options).....	205
4.10.1	Changing Colors	205
4.10.2	Changing Fonts	206
4.11	Working with View Windows (menu Window).....	208
4.12	Obtaining Help Information (menu Help)	208
4.12.1	Opening Table of Contents of the Help System	208
4.12.2	Displaying the Manual.....	208
4.12.3	Checking for Updates	209
4.12.4	Obtaining Information about the Program.....	209

Chapter 5: OUTPUT DESCRIPTION

5.1	Output Elements	213
5.2	Cover & Contents	213
5.3	Input Echo	213
5.3.1	General Information	213
5.3.2	Material Properties	214
5.3.3	Reinforcement Database	214
5.3.4	Span Data	214
5.3.5	Support Data	214
5.3.6	Load Data	214
5.3.7	Reinforcement Criteria	215
5.3.8	Reinforcing Bars	215
5.4	Design Results	215
5.4.1	Strip Widths and Distribution Factors	215
5.4.2	Top Reinforcement	215
5.4.3	Top Bar Details	216
5.4.4	Band Reinforcement at Supports	216
5.4.5	Bottom Reinforcement	217
5.4.6	Bottom Bar Details - Bottom Bar Development Lengths	217
5.4.7	Flexural Capacity	217
5.4.8	Longitudinal Beam Shear Reinforcement Required	217
5.4.9	Longitudinal Beam Shear Reinforcement Details	218
5.4.10	Beam Shear (and Torsion) Capacity	218
5.4.11	Slab Shear Capacity	218
5.4.12	Flexural Transfer of Unbalanced Moments at Supports	218
5.4.13	Punching Shear Around Columns	219
5.4.14	Punching Shear Around Drops	219
5.4.15	Integrity Reinforcement at Supports	219
5.4.16	Corner Reinforcement	219
5.4.17	Shear Resistance at Corner Columns	220
5.4.18	Material Takeoff	220
5.5	Deflection Results: Summary	220
5.6	Detailed Results	220
5.6.1	Column Forces and Redistributed Column Forces	220
5.6.2	Non – Redistributed and Redistributed Internal Forces: $M - V$	221
5.6.3	Internal Forces: T	221
5.6.4	Deflections - Load Cases	222
5.6.5	Required Reinforcement	222
5.7	Graphical Output	222

Chapter 6: EXAMPLES

6.1	Example 1 Spandrel Beam with Moment Redistribution	226
-----	--	-----

6.1.1	Problem Formulation	226
6.1.2	Preparing Input	227
6.1.3	Assigning Properties	227
6.1.4	Solving	232
6.1.5	Viewing and Printing Results	233
6.2	Example 2 Spandrel Beam with Torsion	249
6.2.1	Problem Formulation	249
6.2.2	Preparing Input	250
6.2.3	Assigning Properties	251
6.2.4	Solving	257
6.2.5	Viewing and Printing Results	258
6.3	Example 3 Design of a Continuous Beam	274
6.3.1	Problem Formulation	274
6.3.2	Preparing Input	275
6.3.3	Assigning Properties	275
6.3.4	Solving	281
6.3.5	Viewing and Printing Results	282
6.4	Example 4 Flat Plate Floor System.....	301
6.4.1	Problem Formulation	301
6.4.2	Preparing Input	302
6.4.3	Assigning Properties	302
6.4.4	Solving	307
6.4.5	Viewing and Printing Results	308
6.5	Example 5 Two-way Slab System	327
6.5.1	Problem Formulation	327
6.5.2	Preparing Input	328
6.5.3	Assigning Properties	328
6.5.4	Solving	334
6.5.5	Viewing and Printing Results	334

Chapter 7: spReporter MODULE

7.1	Program Description	358
7.2	Toolbar	358
7.3	Export / Print Panel.....	360
7.4	Explorer panel.....	361

Chapter 8: spResults MODULE

8.1	Introduction.....	364
8.2	Toolbar	364
8.3	Explorer panel.....	366

Chapter A: APPENDIX

A.1 Conversion Factors - English to SI.....	368
A.2 Conversion Factors - SI to English.....	368
A.3 Contact Information.....	369

CHAPTER

1

INTRODUCTION

1.1 Introduction	10
1.2 Program Features	10
1.3 Program Capacity	11
1.4 System Requirements	12
1.5 Terms	12
1.6 Conventions	13
1.7 Installing, Purchasing and Licensing spSlab/spBeam	13

1.1 Introduction

Formerly pcaSlab and ADOSS, spSlab is a computer program for the analysis and design of reinforced concrete beams and slab floor systems. Two-way slab systems are analyzed using the Equivalent Frame Method. Beams and frames of up to 22 spans can be analyzed and designed. In addition to the design option spSlab has the capability of investigating existing beams and slab systems. spSlab includes provisions for slab band systems as well as punching shear check and deflection calculations using cracked or gross sections. For beams, moment redistribution as well as combined shear and torsion design are available. Material quantity take-offs are computed. In addition to the required area of reinforcing steel at the critical sections, spSlab provides a complete bar schedule that includes number of bars and bar sizes and lengths. spSlab checks the applicable provisions of the relevant code.

Formerly pcaBeam, spBeam is a limited version of spSlab. It includes all elements that apply to beams and one-way slab systems. Topics describing these elements are denoted with  icon because they are included in both spSlab and spBeam. Two-way slab systems are available in spSlab only and topics related to two-way slab systems are denoted with .

1.2 Program Features

- ACI 318-14, ACI 318-11, ACI 318-08, ACI 318-05, ACI 318-02, ACI 318-99, CSA A23.3-14, CSA A23.3-04, and CSA A23.3-94
- English and Metric (SI) units
- Design and investigation of beams, one and two-way slabs including one-way joist systems (standard and wide module) and two-way joist systems (waffle slabs)
- Slab band system design and investigation for CSA A23.3-14/04
- Flexure and shear design and investigation with live load reduction and patterning
- Torsion design and investigation for beams/one-way slab systems
- Longitudinal reinforcement for combined flexure, shear, and torsion per CSA A23.3-14/04
- Automatic or manual moment distribution factors and strip widths
- Moment redistribution for beams/one-way slab systems
- Calculation of instantaneous deflections at three load levels; dead load, dead load plus sustained live load, and dead load plus live load
- Calculation of incremental long-term deflections

- Instantaneous and long-term design strip deflections for two-way systems
- Analytical modeling of variable support stiffness in systems with rectangular, and circular supports
- One and two-way (punching) shear investigation considering the effects of drop panels, column capitals, longitudinal beams, transverse beams, and slab bands.
- Boundary conditions including vertical and rotational springs
- Top and bottom bar details including development lengths and material quantities
- Specialty design requirements including crack control, integrity reinforcing, and corner column checking
- Frame solution results including tabulated column axial forces and moments
- Mixed span types within one-way or two-way systems
- Auto-input wizard with instantaneous data checking
- Graphical display of geometry, loads, and results
- Advanced view, print, display settings and options
- Customizable detailed results report
- Import input data from ADOSS v6.0x/7.0x, PCA-Beam, and pcaSlab
- Detailed manual and online help

1.3 Program Capacity

- 21 supports (22 spans including left and right cantilevers)
- 6 load cases
- 50 load combinations
- 999 partial dead loads per case
- 999 partial live loads per case
- 2 top bar layers (Design mode)
- 2 bottom bar layers (Design mode)
- 15 bar sets per span

1.4 System Requirements

Any computer running Microsoft Windows XP, Windows Vista, Windows 7, Windows 8 or Windows 10 operating system is sufficient to run the spSlab and spBeam programs. For instructions on how to troubleshoot system specific installation and licensing issues, please refer to support pages on StructurePoint website at www.StructurePoint.org.

1.5 Terms

The following terms are used throughout this manual. A brief explanation is given to help familiarize you with them.

Windows	refers to the Microsoft Windows environment as listed in System Requirements.
[]	indicates equivalent value expressed in metric unit or CSA code requirement corresponding ACI code requirement
Click on	means to position the cursor on top of a designated item or location and press and release the left-mouse button (unless instructed to use the right-mouse button).
Double-click on	means to position the cursor on top of a designated item or location and press and release the left-mouse button twice in quick succession.
Marquee select	means to depress the mouse button and continue to hold it down while moving the mouse. As you drag the mouse, a rectangle (known as a marquee) follows the cursor. Release the mouse button and the area inside the marquee is selected.

1.6 Conventions

Various styles of text and layout have been used in this manual to help differentiate between different kinds of information. The styles and layout are explained below...

	placed in a topic header means that the topic applies to both spSlab and spBeam
 <i>Italic</i>	placed in a topic header means that the topic applies to spSlab only indicates a glossary item, or emphasizes a given word or phrase.
Bold	All bold typeface makes reference to either a menu or a menu item command such as File or Save , or a tab such as General Information or Columns
Mono-space	indicates something you should enter with the keyboard. For example type “c:*.txt”.
KEY + KEY	indicates a key combination. The plus sign indicates that you should press and hold the first key while pressing the second key, then release both keys. For example, “ALT + F” indicates that you should press the “ALT” key and hold it while you press the “F” key. Then release both keys.
SMALL CAPS	Indicates the name of an object such as a dialog box or a dialog box component. For example, the OPEN dialog box or the CANCEL or MODIFY buttons.

1.7 Installing, Purchasing and Licensing spSlab/ spBeam

To purchase StructurePoint software please visit StructurePoint.org/buy.asp

To download and install a trial version of StructurePoint software please visit StructurePoint.org/download-trial.asp

For setup, installation, and licensing please use the StructurePoint [Setup & Licensing Guide](#)

CHAPTER

2

METHOD OF SOLUTION

2.1	Introduction	16
2.2	Geometric Checks	16
2.3	Code Checks	17
2.3.1	Minimum Thickness - One-Way Construction	17
2.3.2	Minimum Slab Thickness - Two-Way Construction	18
2.3.3	Drop Panel Dimensions	21
2.3.4	Beam Dimensions	23
2.4	Special Considerations for One and Two-Way Joist Systems	23
2.4.1	Rib Dimensions	23
2.4.2	Minimum Thickness for Joist Systems	23
2.4.3	Joist System Analysis and Design	24
2.5	Material Properties	26
2.6	Equivalent Frame Method	28
2.6.1	Stiffness Characteristics	29
2.6.2	Slab Beams	29
2.6.3	Columns	30
2.7	Loading	37
2.7.1	Self-Weight	38
2.7.2	Superimposed Loading	38
2.7.3	Lateral Loading	38
2.7.4	Load Patterns	39
2.7.5	Load Combinations	40
2.8	Column and Middle Strip Widths	44
2.9	Strip Design Moments	47
2.9.1	ACI 318 and CSA A23.3-94	48

2.9.2	CSA A23.3-14/04	50
2.10	Moment Redistribution	52
2.11	Shear Analysis of Slabs	53
2.11.1	Critical Section for Interior Supports of Interior Frames	56
2.11.2	Critical Section for Exterior Supports of Interior Frames	57
2.11.3	Critical Section for Interior Supports of Exterior Frames	58
2.11.4	Critical Section for Exterior Supports of Exterior Frames	58
2.11.5	Computation of Allowable Shear Stress at Critical Section	59
2.11.6	Computation of Factored Shear Force at Critical Section	61
2.11.7	Computation of Unbalanced Moment at Critical Section	61
2.11.8	Computation of Shear Stresses at Critical Section	62
2.11.9	Shear Resistance at Corner Columns	64
2.11.10	Shear Resistance in Slab Bands	64
2.12	One-Way Shear Analysis of Longitudinal Beams and Slabs	65
2.12.1	Shear Calculations for ACI 318 and CSA A23.3-94	65
2.12.2	Shear Calculations for CSA A23.3-14/04	68
2.12.3	Shear Distribution	70
2.12.4	One-Way Shear in Slab Bands (CSA A23.3-14/04)	71
2.12.5	Shear in Drop Panels	71
2.13	Torsion and Shear	71
2.13.1	Additional Longitudinal Reinforcement for ACI 318 and CSA A23.3-94 .	
74		
2.13.2	Additional Longitudinal Reinforcement for CSA A23.3-14/04	75
2.13.3	Investigation Mode	76
2.14	Area of Reinforcement	77
2.14.1	Design for Combined Flexure, Shear, and Torsion	81
2.15	Reinforcement Selection	82
2.16	Concentration and Additional Reinforcement	87
2.17	Structural Integrity Reinforcement	88
2.18	Corner Reinforcement	89
2.19	Deflections	90
2.19.1	Instantaneous Deflections	90
2.19.2	Cracking	90
2.19.3	Long-Term Deflections	92
2.19.4	Deflections of two-way systems	93
2.20	Material Quantities	95
2.21	References	96

2.1 Introduction

The user should be aware of the assumptions made by the program during the design stage. These include details regarding loading, strip widths, reinforcement selection, deflection computations, material quantities, etc.

2.2 Geometric Checks

spSlab and spBeam provide various geometric checks to avoid an analysis with an inconsistent system. Dimensions of slabs, beams, drops, bands and column capitals are checked and modified to produce a code compliant system.

If a slab cantilever length is less than one-half the column dimension in the direction of analysis, c_1 , or less than the lateral extension of the transverse beam into the cantilever, the cantilever length will be increased to the larger of these two lengths. If the slab width is less than one-half the column dimension transverse to the direction of analysis, c_2 , or less than one-half the longitudinal beam width, the slab width will be increased to the larger of these two widths.

If a drop panel extends beyond the end of a slab cantilever, the drop panel dimensions will be reduced so that it extends only to the cantilever tip.

Guidance is absent from all standards and reference documents regarding continuous extension of drop panels between supports. If a slab band is discontinuous, to model this condition, it must be completed with a user-defined drop panel of corresponding width and thickness on a discontinuous end, as a minimum, in order to complete the analysis.

When a column capital is defined, the program checks if capital side slope (depth/extension ratio) is more than 1, i.e. the angle between capital side and column axis is no greater than 45 degrees¹. The upper limit for the side slope is 50. If a column with capital frames into a drop panel (or a beam), extension of the capital will be automatically adjusted – if necessary – so that projected sides of the capital do not fall outside of the drop panel (or the beam) edges before reaching slab soffit (see Figure 2-1). The modified column capital extension will be used when computing column stiffness and in punching shear calculations.

1. ACI 318-14 (Ref. [1]), 8.4.1.4; ACI 318-11 (Ref. [1]), 13.1.2; ACI 318-08 (Ref. [3]), 13.1.2; ACI 318-05 (Ref. [4]), 13.1.2; ACI 318-02 (Ref. [5]), 13.1.2; ACI 318-99 (Ref. [6]), 13.1.2; CSA A23.3-04, 2.2; CSA A23.3-94, 13.1

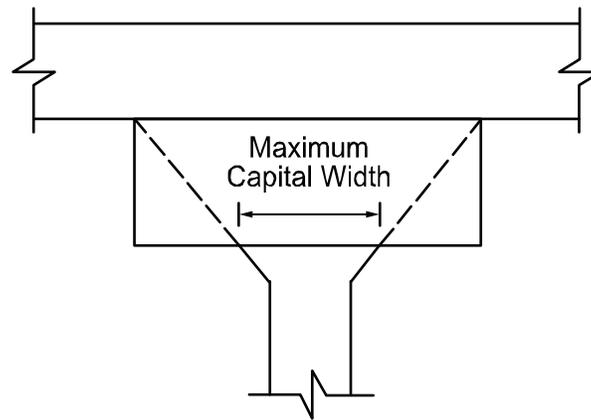


Figure 2.1 Maximum Capital Width

2.3 Code Checks

2.3.1 Minimum Thickness - One-Way Construction

The program checks beam or one-way slab thickness based on minimum requirement for ACI-318² code as specified in Table 9.5(a) or for CSA code³ according to Table 9.2. For lightweight concrete with density

$90 \text{ lb/ft}^3 \leq w_c \leq 115 \text{ lb/ft}^3$ [$1440 \text{ kg/m}^3 \leq w_c \leq 1840 \text{ kg/m}^3$] for ACI 318-14, ACI 318-11, and ACI 318-08

$90 \text{ lb/ft}^3 \leq w_c \leq 120 \text{ lb/ft}^3$ [$1440 \text{ kg/m}^3 \leq w_c \leq 1920 \text{ kg/m}^3$] for ACI 318-05

$90 \text{ lb/ft}^3 \leq w_c \leq 120 \text{ lb/ft}^3$ [$1500 \text{ kg/m}^3 \leq w_c \leq 2000 \text{ kg/m}^3$] for ACI 318-02, and ACI 318-99,

the minimum slab thickness is additionally increased by adjustment factor $(1.65 - 0.005w_c)$, but not less than 1.09. For CSA standards, the adjustment is calculated as $(1.65 - 0.0003w_c)$, but not less than 1.0, for structural low density ($w_c \leq 1850 \text{ kg/m}^3$) and structural semi-low density ($1850 \text{ kg/m}^3 \leq w_c \leq 2150 \text{ kg/m}^3$) concrete⁴.

2. ACI 318-14, 7.3.1.1, 9.3.1.1; ACI 318-11, 9.5.2.1; ACI 318-08, 9.5.2.1; ACI 318-05, 9.5.2.1; ACI 318-02, 9.5.2.1; ACI 318-99, 9.5.2.1;

3. CSA A23.3-14, 9.8.2.1; CSA A23.3-04, 9.8.2.1 (Ref. [10]);

4. CSA A23.3-04, 2.2; CSA A23.3-94 (Ref. [13]), 2.1

2.3.2 Minimum Slab Thickness - Two-Way Construction

The program checks slab thickness against minimum slab thickness defined by design standards for two-way systems with long to short span ratio not greater than 2.0⁵. Slabs with thickness below the minimum value will be flagged by the program, however, they are allowed provided that calculated deflections do not exceed maximum permissible computed deflections⁶.

For two-way system with a long to short span ratio greater than 2.0, the program will calculate minimum thickness requirements based on the provisions of one-way construction including any cantilevered spans.

Minimum thickness of slabs with beams spanning between supports on all sides is calculated for ACI 318 codes in US customary units from⁷

$$h = \begin{cases} \frac{l_n \left(0.8 + \frac{f_y}{200,000} \right)}{36 + 5\beta (\alpha_{fm} - 0.2)} \geq 5 \text{ in.}, & \text{if } 0.2 < \alpha_m \leq 2.0 \\ \frac{l_n \left(0.8 + \frac{f_y}{200,000} \right)}{36 + 9\beta} \geq 3.5 \text{ in.}, & \text{if } \alpha_m > 2.0 \end{cases} \quad \text{Eq. 2-1}$$

in metric unit system for ACI 318-14, ACI 318-11, ACI 318-08, and ACI 318-05 from⁸

$$h = \begin{cases} \frac{l_n \left(0.8 + \frac{f_y}{1400} \right)}{36 + 5\beta (\alpha_{fm} - 0.2)} \geq 125 \text{ mm}, & \text{if } 0.2 < \alpha_m \leq 2.0 \\ \frac{l_n \left(0.8 + \frac{f_y}{1400} \right)}{36 + 9\beta} \geq 90 \text{ mm}, & \text{if } \alpha_m > 2.0 \end{cases} \quad \text{Eq. 2-2}$$

and in metric unit system for ACI 318-02 and ACI 318-99 from⁹

-
5. ACI 318-14, 8.3.1.1; ACI 318-11, 9.5.3.1, 13.6.1.2; ACI 318-08, 9.5.3.1, 13.6.1.2; ACI 318-05, 9.5.3.1, 13.6.1.2; ACI 318-02, 9.5.3.1, 13.6.1.2; ACI 318-99, 9.5.3.1, 13.6.1.2; CSA A23.3-14, 13.2.2, 2.2; CSA A23.3-04, 13.2.2, 2.2; CSA A23.3-94, 13.3.2, 13.1
 6. ACI 318-14, 8.3.2.1; ACI 318-11, 9.5.3.4; ACI 318-08, 9.5.3.4; ACI 318-05, 9.5.3.4; ACI 318-02, 9.5.3.4; ACI 318-99, 9.5.3.4; CSA A23.3-14, 13.2.7; CSA A23.3-04, 13.2.7; CSA A23.3-94, 13.3.6
 7. ACI 318-14, 8.3.1.2; ACI 318-11, 9.5.3.3; ACI 318-08, 9.5.3.3; ACI 318-05, 9.5.3.3; ACI 318-02, 9.5.3.3; ACI 318-99, 9.5.3.3
 8. ACI 318M-11, 9.5.3.3; ACI 318M-08, 9.5.3.3; ACI 318M-05, 9.5.3.3
 9. ACI 318M-02, 9.5.3.3; ACI 318M-99, 9.5.3.3

$$h = \begin{cases} \frac{l_n \left(0.8 + \frac{f_y}{1500} \right)}{36 + 5\beta (\alpha_{fm} - 0.2)} \geq 120 \text{ mm}, & \text{if } 0.2 < \alpha_m \leq 2.0 \\ \frac{l_n \left(0.8 + \frac{f_y}{1500} \right)}{36 + 9\beta} \geq 90 \text{ mm}, & \text{if } \alpha_m > 2.0 \end{cases} \quad \text{Eq. 2-3}$$

where

- l_n = longer clear span measured face-to-face of beams,
- β = ratio of the clear spans in long to short direction,
- f_y = yield stress of reinforcing steel,
- α_m = average value of α , the ratio of flexural stiffness of a beam section to the flexural stiffness of a width of slab bounded laterally by centerlines of adjacent panels on either side of the beam, for all beams supporting the edges of a slab panel.

The program assumes that beams are present on all sides of a panel if the span under consideration includes a longitudinal beam and there are transverse beams defined at both ends of the span. If this assumption is satisfied but in reality beams are not present on all sides (e.g. design strip next to the one under consideration has no longitudinal beam) then the user is advised to check deflections even if slab thickness is larger than the minimum slab thickness reported by the program.

For the design of ACI slabs without beams ($\alpha_m \leq 0.2$) spanning between interior supports the minimum thickness shall conform to ACI 318 Table 9.5(c) and will not be less than 5.0 in. [125 mm for ACI 318M-11/08/05 or 120 mm for ACI 318M-02/99] for flat plates (slabs without drop panel) and not less than 4.0 in. [100 mm] for two-way flat slab systems (slab with drop panels)¹⁰. For flat slabs that contain valid drop panels (see Figure 2-2), Table 9.5(c) reduces the minimum thickness by approximately 10%. For values of f_y between the ones given in the table, minimum thickness is determined by linear interpolation.

For design strips that have neither beams between all supports nor beams between interior supports (e.g. exterior strips with beams on the outside edges only), the program reports maximum value of minimum slab thickness resulting from both Table 9-5(c) and Equations. However, since this case is not explicitly covered by the ACI code, the user is advised to check deflections even if slab thickness is larger than the minimum slab thickness reported by the program.

10. ACI 318-14, 8.3.1.1; ACI 318-11, 9.5.3.2; ACI 318-08, 9.5.3.2; ACI 318-05, 9.5.3.2; ACI 318-02, 9.5.3.2; ACI 318-99, 9.5.3.2; ACI 318M-08, 9.5.3.2; ACI 318M-05, 9.5.3.2; ACI 318M-02, 9.5.3.2; ACI 318M-99, 9.5.3.2

For CSA A23.3 standard¹¹, the minimum thickness of slab with beams spanning between all supports is

$$h_s \geq \frac{l_n \left(0.6 + \frac{f_y}{1000} \right)}{30 + 4\beta \alpha_m}, \alpha_m \text{ taken } \leq 2.0 \quad \text{Eq. 2-4}$$

with the value of α_m evaluated for CSA A23.3-04 using the following beam moment of inertia

$$I_b = \frac{b_w h^3}{12} 2.5 \left(1 - \frac{h_s}{h} \right) \quad \text{Eq. 2-5}$$

For flat plates and slabs with column capitals¹², the minimum slab thickness is

$$h_s \geq \frac{n \left(0.6 + \frac{f_y}{1000} \right)}{30} \quad \text{Eq. 2-6}$$

For slabs with drop panels¹³, the minimum slab thickness satisfies the conditions

$$h_s \geq \frac{n \left(0.6 + \frac{f_y}{1000} \right)}{30 \left[1 + \left(\frac{2x_d}{n} \right) \left(\frac{h_d - h_s}{h_s} \right) \right]}, \text{ (CSA A23.3-94)} \quad \text{Eq. 2-7}$$

$$h_s \geq \frac{n \left(0.6 + \frac{f_y}{1000} \right)}{30} - \frac{2x_d}{n} \Delta_h, \text{ (CSA A23.3-14/04)} \quad \text{Eq. 2-8}$$

where $(h_d - h_s)$ shall not be greater than h_s and

- x_d = dimension from face of column to edge of drop panel, but not more than $\ell_n/4$
- $2x_d/\ell_n$ = the smaller of the values determined in the two directions
- Δ_h = additional thickness of the drop panel below the soffit of the slab and shall not be taken more than h_s .

11. CSA A23.3-14, 13.2.5; CSA A23.3-04, 13.2.5; CSA A23.3-94, 13.3.5

12. CSA A23.3-14, 13.2.3; CSA A23.3-04, 13.2.3; CSA A23.3-94, 13.3.3

13. CSA A23.3-14, 13.2.4; CSA A23.3-04, 13.2.4; CSA A23.3-94, 13.3.4

The minimum thickness in a span that contains a discontinuous edge will be increased by 10%, if the edge beam provided has a stiffness ratio, α , of less than 0.80¹⁴. The first and last spans are considered to contain a discontinuous edge as well as a span that contains an exterior edge.

The minimum thickness of slab bands follows the requirements for the beams¹⁵.

2.3.3 Drop Panel Dimensions

Per ACI¹⁶, a valid drop must extend in each direction at least one-sixth the center-to-center span length in that direction (Figure 2-2). The depth of an invalid drop will not be used in the calculation of the depth used to reduce the amount of negative reinforcement required over a column¹⁷. If the valid drop depth is greater than one-quarter the distance from the edge of the drop panel to the face of the column (x) the excess depth exceeding $\frac{1}{4}x$ will not be considered in the calculation of the effective depth used to reduce the amount of negative reinforcement required at a column (Figure 2-3)¹⁸. Slabs that contain valid drops are allowed a 10% decrease in minimum slab depth¹⁹.

14.ACI 318-14, 8.3.1.2; ACI 318-11, 9.5.3.3 (d); ACI 318-08, 9.5.3.3 (d); ACI 318-05, 9.5.3.3 (d); ACI 318-02, 9.5.3.3 (d); ACI 318-99, 9.5.3.3 (d), CSA A23.3-14, 13.2.3, 13.2.4; CSA A23.3-04, 13.2.3, 13.2.4; CSA A23.3-94, 13.3.3

15.CSA A23.3-04, 13.2.6

16.ACI 318-14, 8.2.4; ACI 318-11, 13.2.5; ACI 318-08, 13.2.5; ACI 318-05, 13.2.5; ACI 318-02, 13.3.7.1, 13.3.7.2; ACI 318-99, 13.3.7.1, 13.3.7.2

17.ACI 318-14, 8.2.4; ACI 318-11, 13.2.5; ACI 318-08, 13.2.5; ACI 318-05, 13.2.5, 13.3.7; ACI 318-02, 13.3.7; ACI 318-99, 13.3.7

18.ACI 318-14, 8.5.2.2; ACI 318-11, 13.3.7; ACI 318-08, 13.3.7; ACI 318-05, 13.3.7; ACI 318-02, 13.3.7.3; ACI 318-99, 13.3.7.3; CSA A23.3-14, 13.10.7; CSA A23.3-04, 13.10.7; CSA A23.3-94, 13.11.6

19.ACI 318-14, 8.3.1.1; ACI 318-11, 9.5.3.2; ACI 318-08, 9.5.3.2; ACI 318-05, 9.5.3.2; ACI 318-02, 9.5.3.2, ACI 318-99, 9.5.3.2

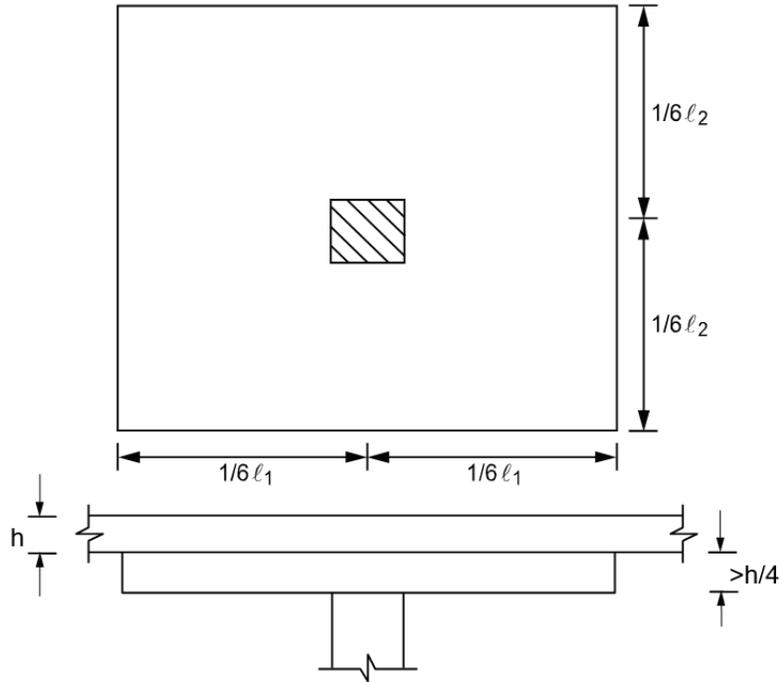


Figure 2.2 Valid Drop Dimensions

The input drop dimensions will be used for self-weight computations, when computing slab stiffness to determine deflections, moments, shears, and when computing punching shear around a column²⁰.

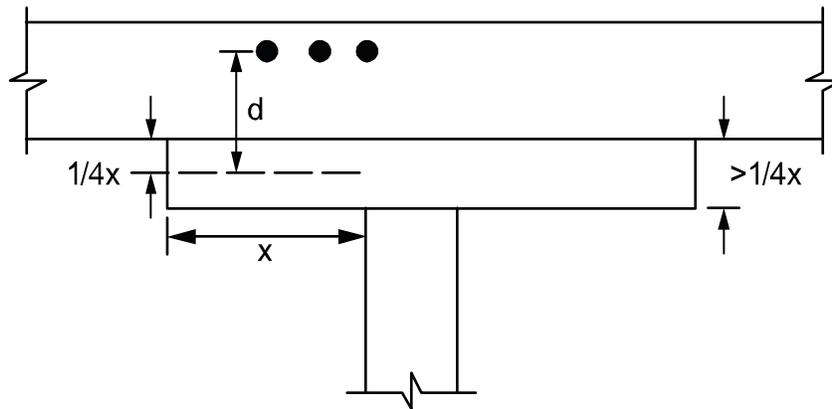


Figure 2.3 Excess Drop Depth

20.ACI 318-14, 8.2.4; ACI 318-11, R13.2.5; ACI 318-08, R13.2.5; ACI 318-05, R13.2.5

2.3.4 Beam Dimensions

The program follows linear distribution of strain (plain section) assumption²¹ for flexure design which is applicable to shallow flexural members. In case of deep beams²², design standards recommend using non-linear distribution of strain or strut-and-tie method. The program checks beam dimensions and if a beam with the following clear span, ℓ_n , to overall depth, h , ratio is found

$$\begin{aligned}
 n \leq 4h, & \quad \text{ACI 318-11, ACI 318-08, ACI 318-05 and ACI 318-02} \\
 n \leq 2.5h, & \quad \text{ACI 318-99, continuous spans} \\
 n \leq 1.25h, & \quad \text{ACI 318-99, simple spans} \\
 n \leq 2h, & \quad \text{CSA A23.3-14, CSA A23.3-04 and CSA A23.3-94}
 \end{aligned}
 \tag{Eq. 2-9}$$

a warning is issued alerting the user that additional deep beam design and detailing is required. For cantilevers, the warning is issued only if their clear span is larger than overall depth.

2.4 Special Considerations for One and Two-Way Joist Systems

2.4.1 Rib Dimensions

Rib dimensions will be considered valid if the rib width is at least 4 in. [100 mm], the depth is no more than 3-1/2 times the rib width, and the clear spacing between ribs does not exceed 30 in. [800 mm]²³. If rib dimensions do not meet these requirements (e.g. wide module joist systems) the code requires such ribs to be designed as beams²⁴. The program treats the design of wide-spaced joists the same way as for valid slabs, regardless of code limitation. If the code limits are exceeded, the condition is flagged and the 10% increase of rib shear capacity is not used. The user is then responsible to validate the resulting design and reconcile the code requirements.

2.4.2 Minimum Thickness for Joist Systems

The minimum slab thickness allowed for joist slabs is one-twelfth the clear rib spacing, or 1.5 in [40 mm] for ACI code²⁵ and 50mm for CSA code²⁶.

21. ACI 318-14, 22.2.1.2; ACI 318-11, 10.2.2; ACI 318-08, 10.2.2; ACI 318-05, 10.2.2; ACI 318-02, 10.2.2; ACI 318-99, 10.2.2; CSA A23.3-14, 10.1.2; CSA A23.3-04, 10.1.2; CSA A23.3-94, 10.1.2

22. ACI 318-14, 9.9.1.2; ACI 318-11, 10.7.1; ACI 318-08, 10.7.1; ACI 318-05, 10.7.1; ACI 318-02, 10.7.1; ACI 318-99, 10.7.1; CSA A23.3-14; 10.7.1; CSA A23.3-04; 10.7.1; CSA A23.3-94, 10.7.1

23. ACI 318-14, 8.8.1.2, 8.8.1.4, 9.8.1.2, 9.8.1.4; ACI 318-11, 8.13.2, 8.13.3; ACI 318-08, 8.13.2, 8.13.3; ACI 318-05, 8.11.2, 8.11.3; ACI 318-02, 8.11.2, 8.11.3; ACI 318-99, 8.11.2, 8.11.3; CSA A23.3-14, 10.4.1; CSA A23.3-04, 10.4.1; CSA A23.3-94, 10.4.1

24. ACI 318-14, 8.8.1.8, 9.8.1.8; ACI 318-11, 8.13.4; ACI 318-08, 8.13.4; ACI 318-05, 8.11.4; ACI 318-02, 8.11.4; ACI 318-99, 8.11.4; CSA A23.3-14, 10.4.2; CSA A23.3-04, 10.4.2; CSA A23.3-94, 10.4.2

2.4.3 Joist System Analysis and Design

For the purposes of analysis and design, the program replaces the ribbed slab with solid slabs of equivalent moment of inertia, weight, punching shear capacity, and one-way shear capacity.

The equivalent thickness based on system weight is used to compute the system self-weight. This thickness, h_w , is given by

$$h_w = \frac{V_{mod}}{A_{mod}} \tag{Eq. 2-10}$$

where

- V_{mod} = the volume of one joist module,
- A_{mod} = the plan area of one joist module.

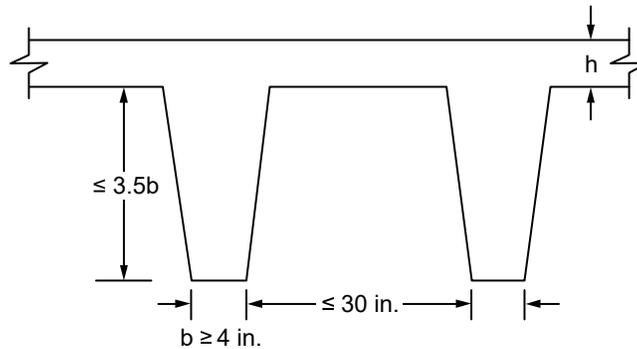


Figure 2.4 Valid Rib Dimensions

The equivalent thickness based on moment of inertia is used to compute slab stiffness. The ribs spanning in the transverse direction are not considered in the stiffness computations. This thickness, h_{MI} , is given by

$$h_{MI} = \left(\frac{12I_{rib}}{b_{rib}} \right)^{\frac{1}{3}} \tag{Eq. 2-11}$$

where

- I_{rib} = moment of inertia of one joist section between centerlines of ribs.
- b_{rib} = the center-to-center distance of two ribs (clear rib spacing plus rib width).

The drop panel depth for two-way joist (waffle) slab systems is set equal to the rib depth. The equivalent drop depth based on moment of inertia, d_{MI} , is given by

25.ACI 318-14, 8.8.2.1.1, 9.8.2.1.1; ACI 318-11, 8.13.5.2; ACI 318-08, 8.13.5.2; ACI 318-05, 8.11.5.2; ACI 318-02, 8.11.5.2; ACI 318-99, 8.11.5.2
 26.CSA A23.3-14, 10.4.1; CSA A23.3-04, 10.4.1; CSA A23.3-94, 10.4.1

$$d_{MI} = h_{MI} + h_{rib} \quad \text{Eq. 2-12}$$

where

- h_{rib} = rib depth below slab,
 h_{MI} = equivalent slab thickness based on moment of inertia.

A drop depth entered for a waffle slab system other than 0 will be added to d_{MI} , thus extending below the ribs.

One-way shear capacity, V_c (increased by 10% for ACI code²⁷), is calculated assuming the shear cross-section area consisting of ribs and the portion of slab above, decreased by concrete cover. For such section the equivalent shear width of single rib is calculated from the formula

$$b_v = b + \frac{d}{12} \quad \text{Eq. 2-13}$$

where

- b = rib width,
 d = distance from extreme compression fiber to tension reinforcement centroid.

The equivalent thickness based on shear area is used to compute the area of concrete section resisting punching shear transfer, A_c around drop panels in two-way joist (waffle) systems. The equivalent slab thickness, h_v , used to compute A_c , is given by

$$h_v = \frac{A_{rib}}{b_{rib}} + d_{reinf} \quad \text{Eq. 2-14}$$

where

- A_{rib} = the entire rib area below the slab plus the slab thickness minus the distance to the reinforcement centroid, d_{reinf} , within the rib width, i.e., the slab depth between the ribs is not considered as contributing to shear capacity,
 b_{rib} = the center-to-center distance of two ribs (clear rib spacing plus rib width),
 d_{reinf} = the distance to reinforcement centroid from the slab top at the support

When calculating flexural capacity for negative bending moments, the distance between center of top reinforcement to the soffit of the rib is used as an effective depth, \mathbf{d} , while assuming the width of compression zone as equal to the center-to-center distance of two ribs ($\mathbf{b_{rib}}$). This assumption results in higher estimates of negative moment capacity since the space between ribs is void. The user may switch to a single rib design or investigation as a beam in order to consider rib width only in the compression zone.

27. ACI 318-14, 8.8.1.5, 9.8.1.5; ACI 318-11, 8.13.8; ACI 318-08, 8.13.8; ACI 318-05, 8.11.8; ACI 318-02, 8.11.8; ACI 318-99, 8.11.8

2.5 Material Properties

By entering the concrete density and compressive strength of the members, default values for the other concrete properties are determined. The slabs/beams and columns may have different concrete properties.

The density of concrete is used to determine the type of concrete, modulus of elasticity, and self-weight.

The concrete type is determined in accordance with Table 2-1.

Type	ACI 318-14 ACI 318-11 ACI 318-08		ACI 318-05 ACI 318-02 ACI 318-99	
	w_c		w_c	
	pcf	kg/m ³	pcf	kg/m ³
Normal	$135 \leq w_c$	$2155 \leq w_c$	$130 \leq w_c$	$2000 \leq w_c$
Sand-Lightweight	$115 < w_c < 135$	$1840 < w_c < 215$ 5	$105 < w_c < 130$	$1700 < w_c < 200$ 0
All-Lightweight	$w_c \leq 115$	$w_c \leq 1840$	$w_c \leq 105$	$w_c \leq 1700$

Type	CSA A23.3-14 CSA A23.3-04		CSA A23.3-94	
	γ_c		γ_c	
	kg/m ³	pcf	kg/m ³	pcf
Normal	$2150 \leq \gamma_c$	$134.2 \leq \gamma_c$	$2000 \leq \gamma_c$	$124.8 \leq \gamma_c$
Low Density	$1850 < \gamma_c < 2150$	$115.5 < \gamma_c < 134.2$	$1700 < \gamma_c < 2000$	$106.1 < \gamma_c < 124.8$
Semi-low Density	$\gamma_c \leq 1850$	$\gamma_c \leq 115.5$	$\gamma_c \leq 1700$	$\gamma_c \leq 106.1$

Table 2.1 Concrete Weight Classification

Once the compressive strength of concrete f'_c is input, various parameters are set to their default values.

The modulus of elasticity is computed as²⁸

$$E_c = 33w_c^{1.5}\sqrt{f'_c} \quad \text{Eq. 2-15}$$

28.ACI 318-14,19.2.2.1 (a); ACI 318-11, 8.5.1; ACI 318-08, 8.5.1; ACI 318-05, 8.5.1; ACI 318-02, 8.5.1; ACI 318-99, 8.5.1; CSA A23.3-14, 8.6.2.2; CSA A23.3-04, 8.6.2.2; CSA A23.3-94, 8.6.2.2

where

w_c = the unit weight of concrete.

For CSA A23.3 standard²⁹

$$E_c = \left(3300\sqrt{f'_c} + 6900 \right) \left(\frac{\gamma_c}{2300} \right)^{1.5} \quad \text{Eq. 2-16}$$

where

γ_c = the density of concrete.

The square root of f'_c is limited to 100 psi for the computation of shear strength provided by concrete, V_c , and development lengths.³⁰

For CSA A23.3-14/04 standard the value of square root of f'_c used to calculate factored shear resistance v_r shall not exceed 8MPa.³¹

The modulus of rupture is used to determine the cracking moment when computing the effective moment of inertia in deflection calculations. For ACI 318 code, the default value of modulus of rupture, f_r , is set equal to³²

$$f_r = 7.5 \lambda \sqrt{f'_c} \quad \text{Eq. 2-17}$$

and for the CSA A23.3 standard, the default value of modulus of rupture f_r is³³

$$f_r = 0.6 \lambda \sqrt{f'_c} \quad \text{Eq. 2-18}$$

For two-way slabs analyzed in accordance with CSA A23.3-94 as well as for beams, one-way, and two-way slabs analyzed in accordance with CSA A23.3-14/04, the default value is reduced to its half value³⁴, i.e.

$$f_r = \frac{0.6 \lambda \sqrt{f'_c}}{2} \quad \text{Eq. 2-19}$$

29. CSA A23.3-14, 8.6.2.2; CSA A23.3-04, 8.6.2.2; CSA A23.3-94, 8.6.2.2

30. ACI 318-14, 22.5.3.1, 22.6.3.1; ACI 318-11, 11.1.2; ACI 318-08, 11.1.2; ACI 318-05, 11.1.2; ACI 318-05, 11.1.2; ACI 318-99, 11.1.2

31. CSA A23.3-14, 13.3.4.2; CSA A23.3-04, 13.3.4.2

32. ACI 318-14, 19.2.3.1; ACI 318-11, 9.5.2.3; ACI 318-08, 9.5.2.3; ACI 318-05, 9.5.2.3; ACI 318-02, 9.5.2.3; ACI 318-99, 9.5.2.3;

33. CSA A23.3-14, 8.6.4; CSA A23.3-04, 8.6.4; CSA A23.3-94, 8.6.4

34. CSA A23.3-14, 9.8.2.3; CSA A23.3-04, 9.8.2.3; CSA A23.3-94, 13.3.6

Factor λ reflecting the reduced mechanical properties of lightweight concrete is equal to³⁵ 1.00 for normal density concrete, 0.85 for sand-lightweight (structural semi-low-density) concrete, and 0.75 for all-lightweight (structural low-density) concrete. Refer to Table 2-1 for determination of concrete type.

There is no limit imposed on f_r . Entering a large value of f_r will produce deflections based on gross properties (i.e. uncracked sections).

The default values for the longitudinal reinforcement yield strength, f_y , and shear reinforcement yield strength, f_{yv} , if applicable, are set equal to 60 ksi [413 MPa] for ACI and 400 MPa for CSA.

2.6 Equivalent Frame Method

The equivalent frame method, as described in the code³⁶, is used by spSlab for both analysis and design. The code specifies procedures for the analysis and design of slab systems reinforced for flexure in more than one direction, with or without beams between the supports. A two-way slab³⁷ system, including the slab and its supporting beams, columns, and walls may be designed by either of the following procedures

- The Direct Design Method
- The Equivalent Frame Method

spSlab uses the Equivalent Frame Method of analysis which is based on extensive analytical and experimental studies conducted at the University of Illinois. Note also that there are no restrictions on the number of slab spans or on dead-to-live load ratios in this method of analysis.

The first step in the frame analysis is to divide the three-dimensional building into a series of two-dimensional frames extending to the full height of the building. Horizontal members for each frame are formed by slab strips as shown in Fig. 2-5. For vertical loads, each story (floor and/or roof) may be analyzed separately with the supporting columns being considered fixed at their remote ends (Figure 2-6).

The required reinforcing and resulting deflections for an interior or exterior panel in a floor system shall be combined from the analysis of two equivalent frames in orthogonal directions in order to arrive at the final design.

35. ACI 318-14, 19.2.4; ACI 318-11, 8.6; ACI 318-08, 8.6; ACI 318-05, 11.2.1.2; ACI 318-02, 11.2.1.2; ACI 318-99, 11.2.1.2; CSA A23.3-14, 8.6.5; CSA A23.3-04, 8.6.5; CSA A23.3-94, 8.6.5

36. ACI 318-14, 8.11; ACI 318-11, 13.7; ACI 318-08, 13.7; ACI 318-05, 13.7; ACI 318-02, 13.7; ACI 318-99, 13.7; CSA A23.3-14, 13.8; CSA A23.3-04, 13.8; CSA A23.3-94, 13.9

37. Implies a slab supported by isolated supports which permits the slab to bend in two orthogonal directions.

2.6.1 Stiffness Characteristics

The stiffness factors for the horizontal members (the slab beams) and the vertical members (the equivalent columns) are determined using segmental approach.

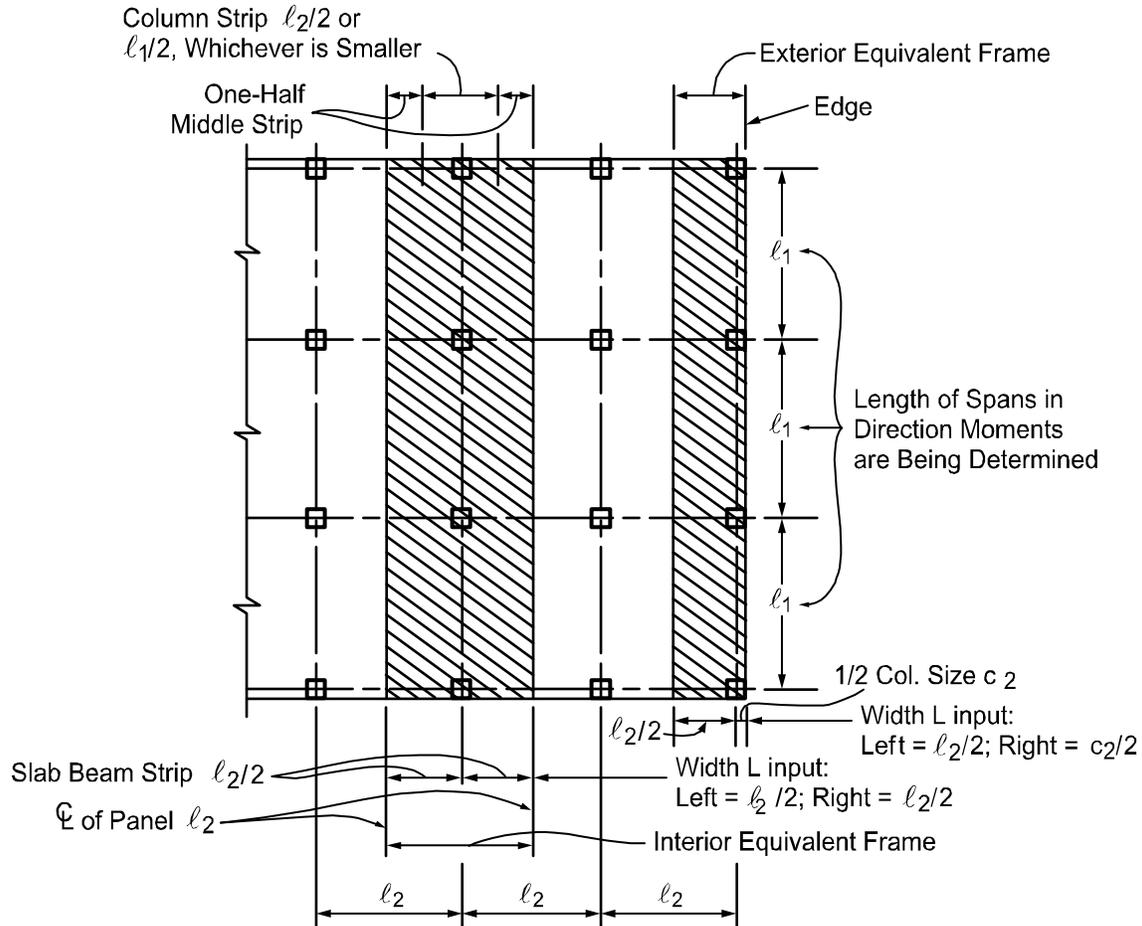


Figure 2.5 Design strips

2.6.2 Slab Beams

The moment of inertia of the slab beam elements between the faces of the columns (or column capitals) is based on the uncracked section of the concrete including beams or drop panels. The moment of inertia from the face of the column (or capital) to the centerline of the column (or capital) is considered finite and is dependent on the transverse dimensions of the panel and support. This reduced stiffness (as compared to the infinite stiffness assumed in previous codes) is intended to soften the slab at the joint to account for the flexibility of the slab away from the

support. This is consistent with provisions of the code.³⁸ Figure 2-7 shows the changes in stiffness between a slab, and a drop panel, and a column (or capital).

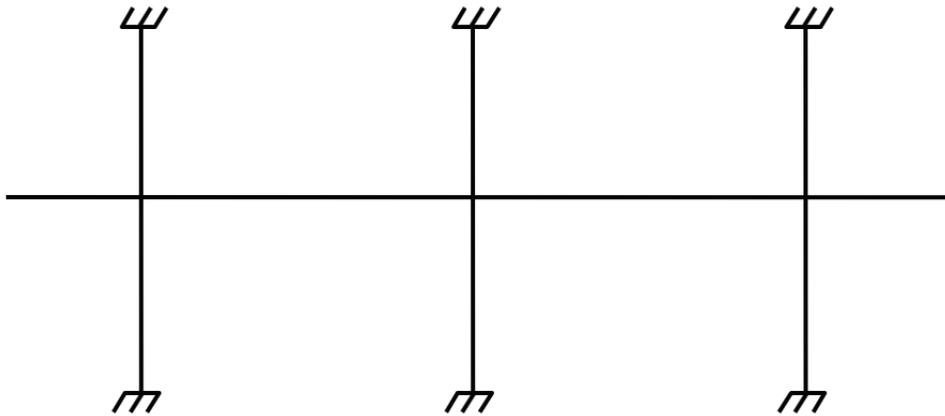


Figure 2.6 Analytical model for vertical loads for a typical story

2.6.3 Columns

The computation of the column stiffness is more complicated as it utilizes the concept of an equivalent column. Theoretical slab studies have shown that the positive moment in a slab may increase under pattern loads, even if rigid columns are used, because of the flexibility of the slab away from the column. However, if a two-dimensional frame analysis is applied to a structure with rigid columns, pattern loads will have little effect.

38. ACI 318-14, 8.11.3; ACI 318-11, 13.7.3; ACI 318-08, 13.7.3; ACI 318-05, 13.7.3; ACI 318-02, 13.7.3; ACI 318-99, 13.7.3; CSA A23.3-14, 13.8.2.3; CSA A23.3-04, 13.8.2.3; CSA A23.3-94, 13.9.2.3

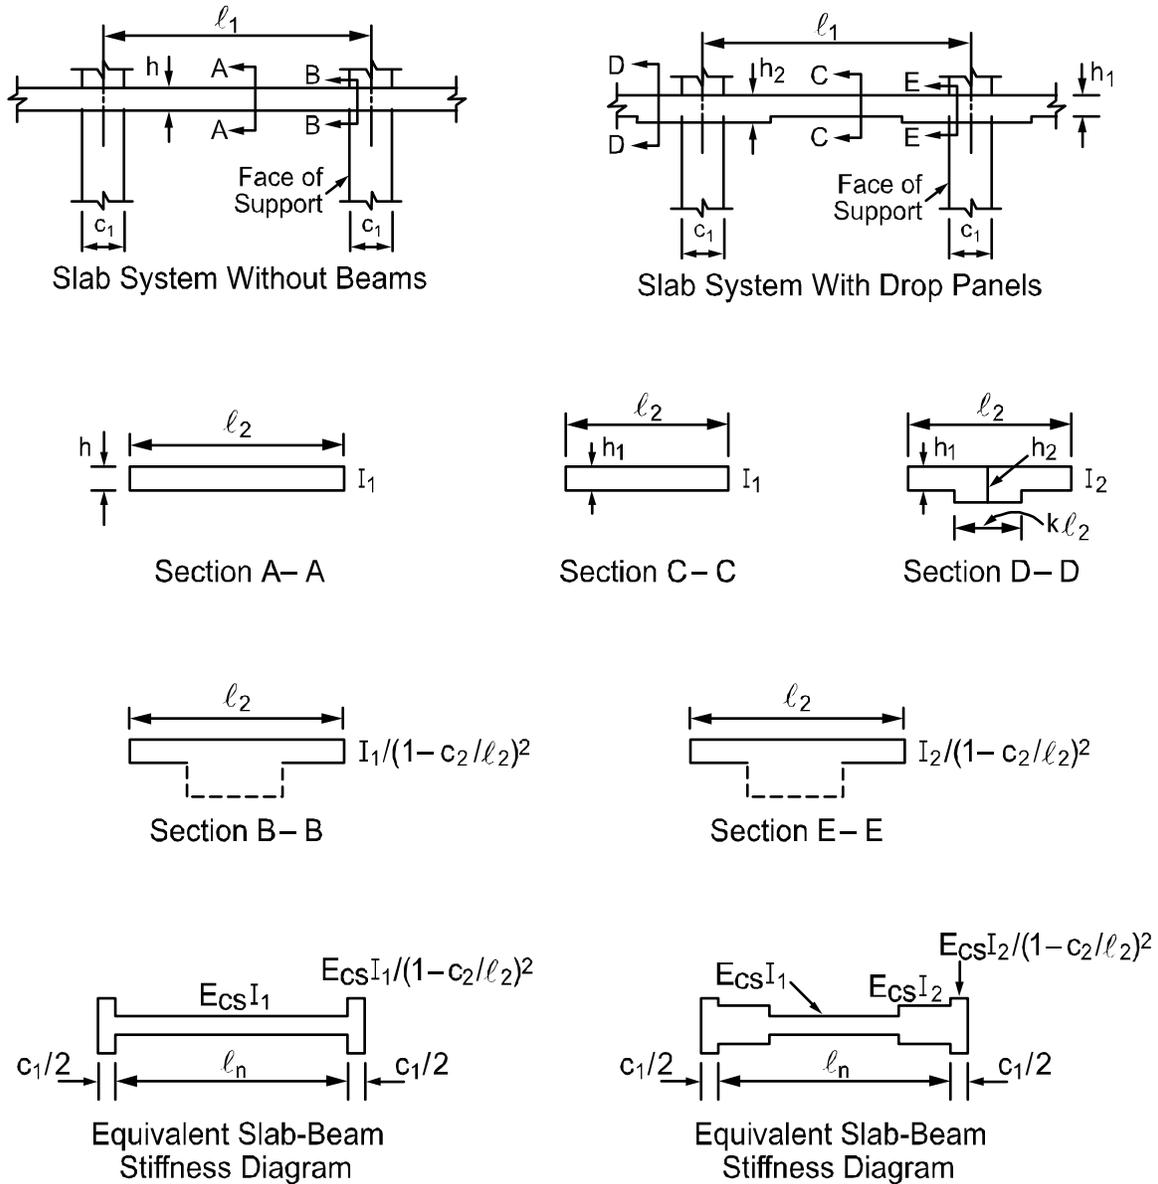


Figure 2.7 Sections for calculating slab-beam stiffness, K_{sb}

To account for this difference in behavior between slab structures and frames, the equivalent column torsional member, as shown in Figure 2-8, runs transverse to the direction in which the moments are being determined. The transverse slab beam can rotate even though the column may be infinitely stiff, thus permitting moment distribution between adjacent panels. It is seen that the stiffness of the equivalent column is affected by both the flexural stiffness of the columns and the torsional stiffness of the slabs or beams framing into the columns. Note that the method of

computation of column stiffness is in accordance with the requirements of the code³⁹. Figure 2-10 shows a schematic representation of the stiffness of typical columns.

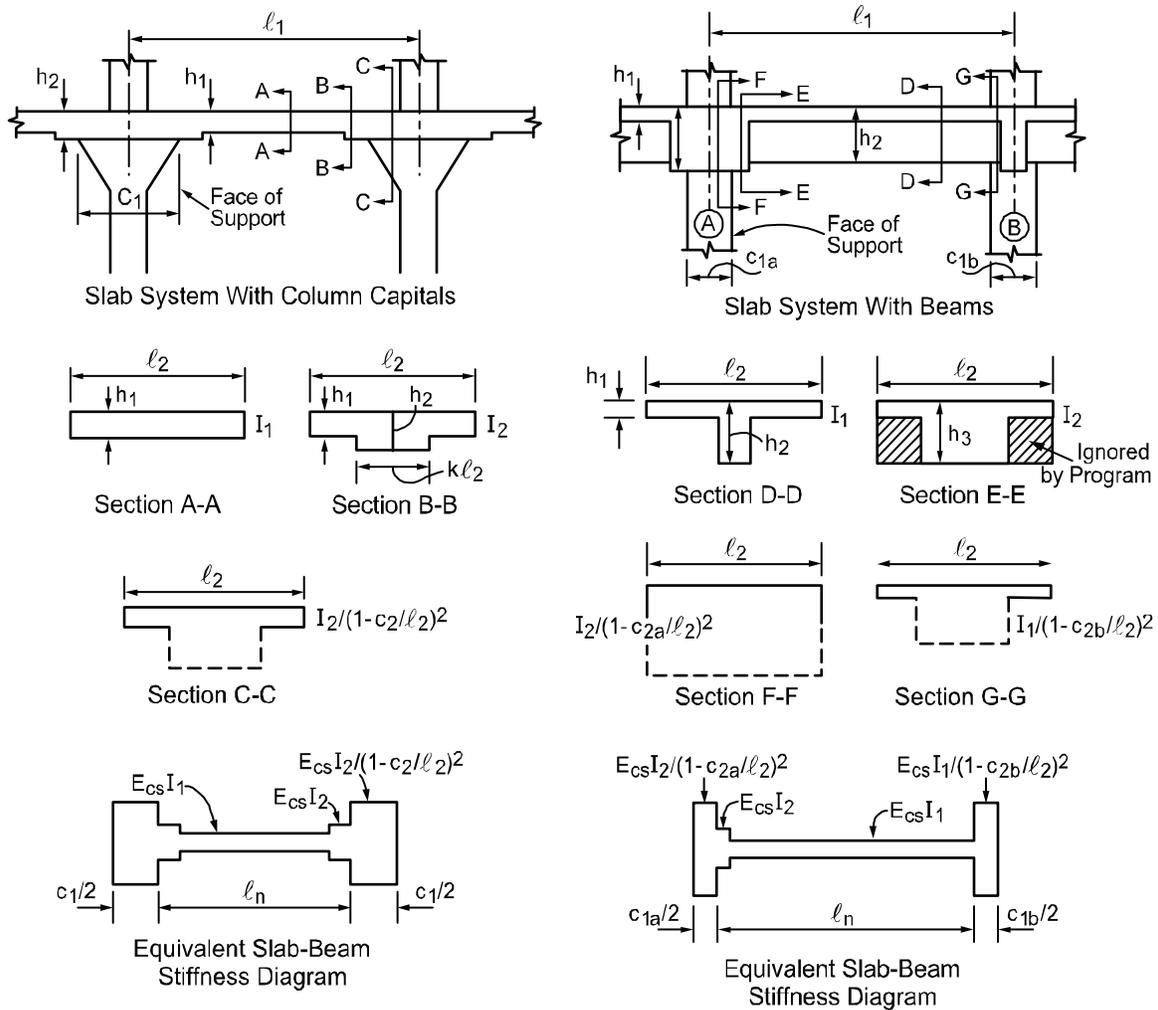


Figure 2.8 continued

The column stiffness is based on the column height, l_c , measured from mid-depth of the slab above, to the mid-depth of the slab below. spSlab calculates the stiffness of the column below the design slab, taking into account the design slab system at its top end. spSlab calculates the stiffness of the column above the design slab taking only the slab depth into account at its bottom end; column capitals, beams, or drops are ignored.

The computation of the torsional stiffness of the member requires several simplifying assumptions. The first step is to assume dimensions of the transverse torsional slab-beam members. Assumptions for dimensions of typical torsional members are shown in Figure 2-9.

39. ACI 318-14, 8.11.4; ACI 318-11, 13.7.4; ACI 318-08, 13.7.4; ACI 318-05, 13.7.4; ACI 318-02, 13.7.4; ACI 318-99, 13.7.4; CSA A23.3-14, 13.8; CSA A23.3-04, 13.8; CSA A23.3-94, 13.9

The stiffness, K_t , of the torsional member is given by the following expression⁴⁰

$$K_t = \sum \frac{9 E_{CS} C}{l_t \left(1 - \frac{c_2}{l_t}\right)^3} \quad \text{Eq. 2-20}$$

where

- Σ = denotes summation over left and right side torsional member,
- E_{cs} = modulus of elasticity for slab concrete,
- C = cross-sectional constant defined in Eq. 2-21
- c_2 = size of rectangular column or capital measured transverse to the direction in which moments are being determined,
- l_t = l_{2L} and l_{2R} , lengths of span transverse to l_1 , measured on each side of the column for ACI 318; for CSA A23.3 value of l_t is taken as the smaller of l_{1a} and l_{2a} where l_{1a} is the average l_1 and l_{2a} is the average l_2 on each side of an interior column. In case of an exterior columns, l_{1a} and l_{2a} are taken respectively as l_1 (if the column is exterior with respect to the direction of analysis) and l_2 (if column is exterior in the transverse direction) of the adjacent span, i.e. cantilevers, if any, are neglected.

40. ACI 318-14, 8.11.5; ACI 318-11, 13.7.5; ACI 318-08, 13.7.5; ACI 318-05, 13.7.5; ACI 318-02, 13.7.5; ACI 318-99, 13.7.5; CSA A23.3-14, 13.8.2.8; CSA A23.3-04, 13.8.2.8; CSA A23.3-94, 13.9.2.8

achieve uniform distribution of moments along the column and middle strips. If the width of the wall is less than 75% of the total design strip then no modification of distribution factors is applied. For column/wall widths between 75% and 100% of total strip widths, moment distribution factors are linearly interpolated between regular values and uniformly distributed values.

When beams frame into the column in the direction of analysis, the value of K_t as computed in Eq. 2-20 is multiplied by the ratio of the moment of inertia of the slab with the beam (I_{sb}) to the moment of inertia of the slab without the beam (I_s), as shown

$$K_{ta} = K_t \frac{I_{sb}}{I_s} \quad \text{Eq. 2-22}$$

With reference to Figure 2-8, I_s is computed from part A (slab without beam), whereas I_{sb} is computed from both parts A and B (slab with beam).

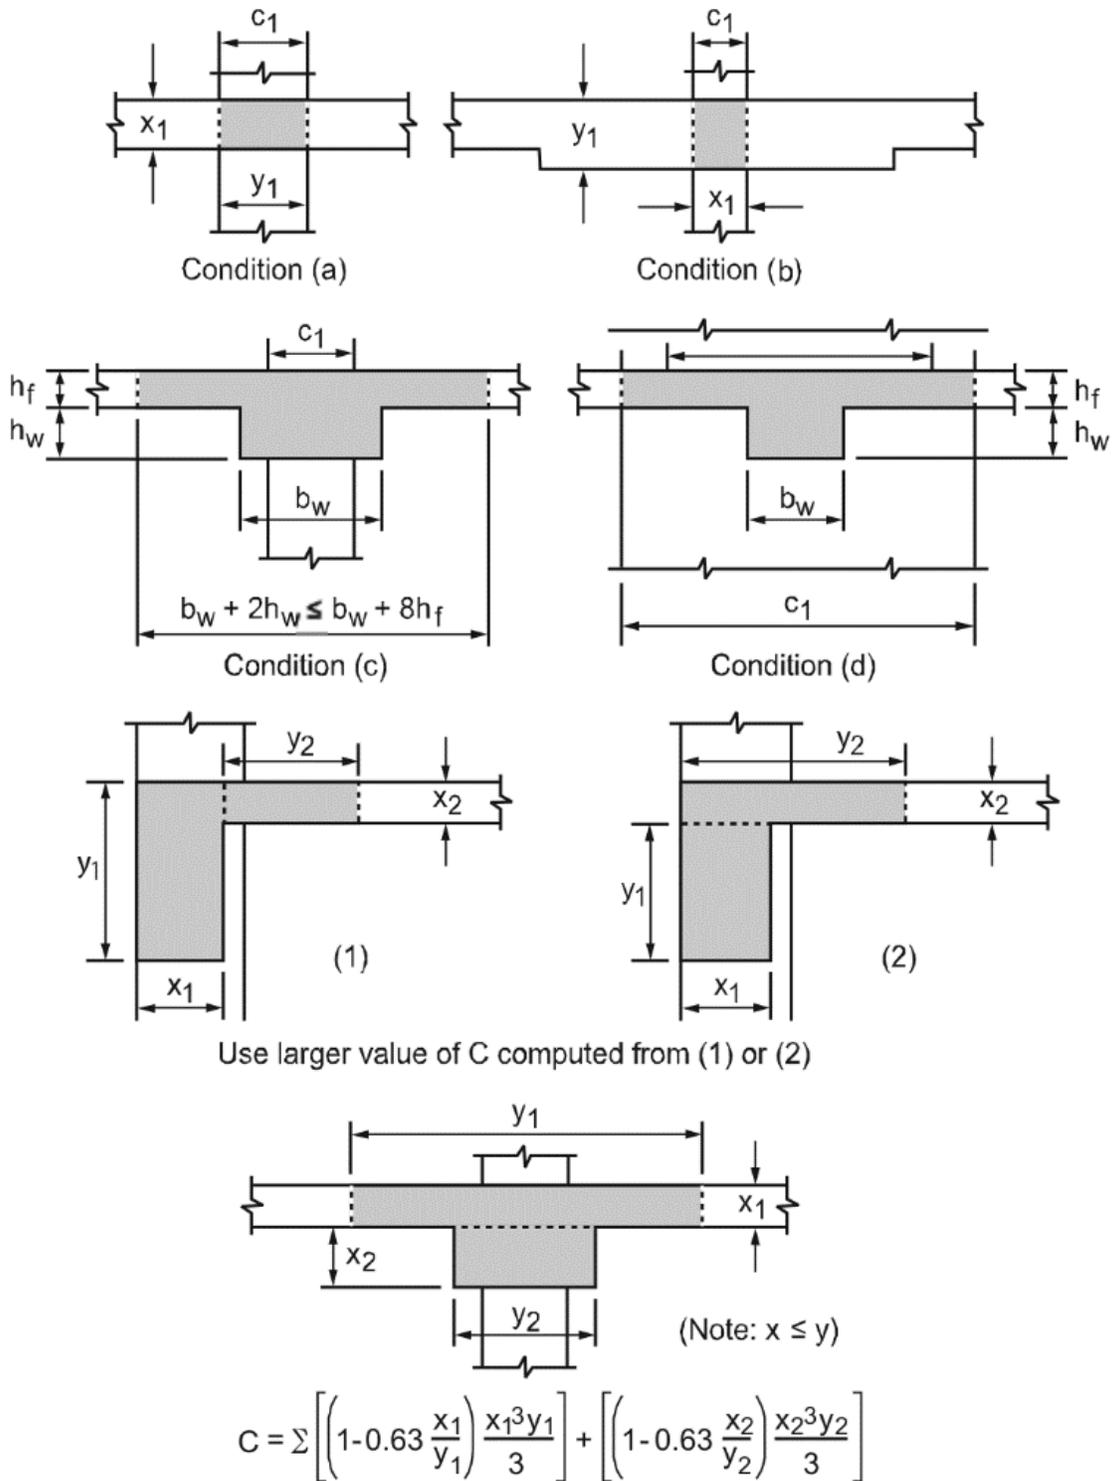


Figure 2.10 Section of the attached torsional members

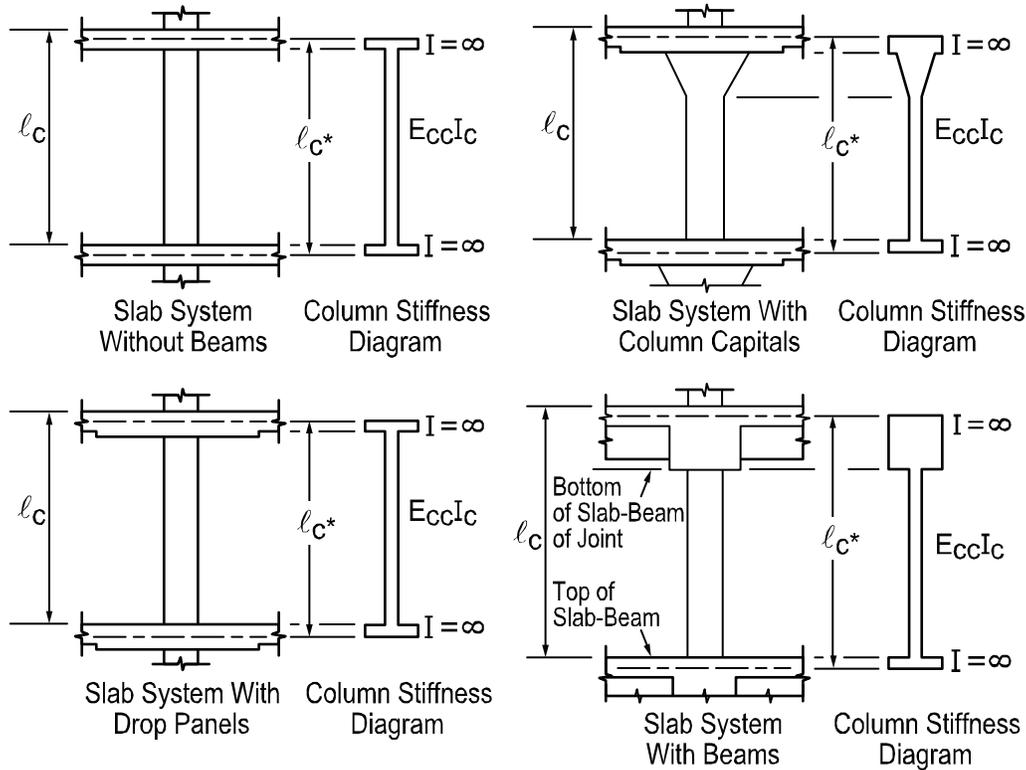


Figure 2.11 Sections for calculating the stiffness (K_c) of the column below the design floor (l_c -input, l_c^* -computed)

Having the column stiffness, K_c , and the stiffness of the attached torsional member, K_t , the stiffness of the equivalent column, K_{ec} , is computed from the equation

$$K_{ec} = \frac{K_{ct} + K_{cb}}{1 + \frac{K_{ct} + K_{cb}}{K_{ta}^l + K_{ta}^r}} \quad \text{Eq. 2-23}$$

where

- K_{ct} = top column stiffness,
- K_{cb} = bottom column stiffness,
- K_{ta} = torsional stiffness of the left (K_{ta}^l) and the right (K_{ta}^r) member.

2.7 Loading

All applied loads are input as unfactored loads. There are no limitations imposed on the ratio of dead to live loads in the Equivalent Frame Method. Results of gravity load and lateral load analyses may be combined, however, the effects of cracking and reinforcement on stiffness must be accounted for in the lateral load analysis.

2.7.1 Self-Weight

The self weight of the system is automatically calculated and assigned to the reserved load selfweight load case, SELF, which is by default defined in all new data files. The weights of the slabs, drops, and longitudinal and transverse beams are considered in the selfweight computations. Only the concrete weight is considered, the reinforcement weight is ignored. The weight of longitudinal beams is ignored starting at the column centerline, for a length equal to one-half c_1 , the column dimension in the direction of analysis. This will produce slightly less self-weight than actually present for beams wider than c_2 , the column's transverse dimension.

If load case SELF is removed then the program will ignore self weight in all ultimate load combinations as well as in internally defined service load combination used to calculate displacements.

2.7.2 Superimposed Loading

All superimposed vertical loading is considered to act over the entire transverse width of the slab. For slab systems with beams, loads supported directly by the beam (such as the weight of the beam stem or a wall supported directly by the beams) are also assumed to be distributed over the entire transverse width of the strip. An additional analysis may be required, with the beam section designed to carry these loads in addition to the portion of the slab moments assigned to the beam.

2.7.3 Lateral Loading

For lateral loads, each frame should be analyzed as a unit for the entire height of the building (Figure 2-11). Computer programs, such as spFrame, are available for performing such analyses. It should be realized that, for lateral load analysis, slab-beam elements may have a reduced stiffness due to cracking as well as other assumptions made for the effective slab width used for the lateral analysis. The moments obtained from such an analysis may then be input into the equivalent frame model using the program to determine the appropriate design moments under combined vertical and lateral loads.

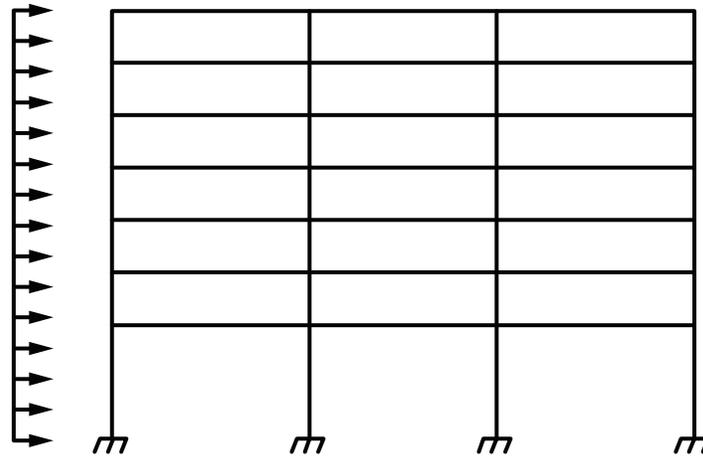


Figure 2.12 Analytical model for lateral loads

The program distributes the effect of the superimposed lateral load moments to the column strip and middle strip according to the moment distribution factors computed for gravity loads (see Table 2-2 through Table 2-4 later in this chapter).

2.7.4 Load Patterns

The analysis of floor systems requires the consideration of several loading configurations. For example, the two adjacent spans loaded may produce the maximum shear stress around a column, while the alternate spans loaded may produce the maximum flexural moments. To cover different loading scenarios the program generates live load case based on the following load patterns (Figure 2-12)

- Pattern No. 1 (All): All spans loaded with live load,
- Pattern No. 2 (Odd): Starting at span 1, alternate spans loaded with live load,
- Pattern No. 3 (Even): Starting at span 2, alternate spans loaded with live load,
- Pattern No. 3+N (SN): Two spans adjacent to support No. N loaded with live load.

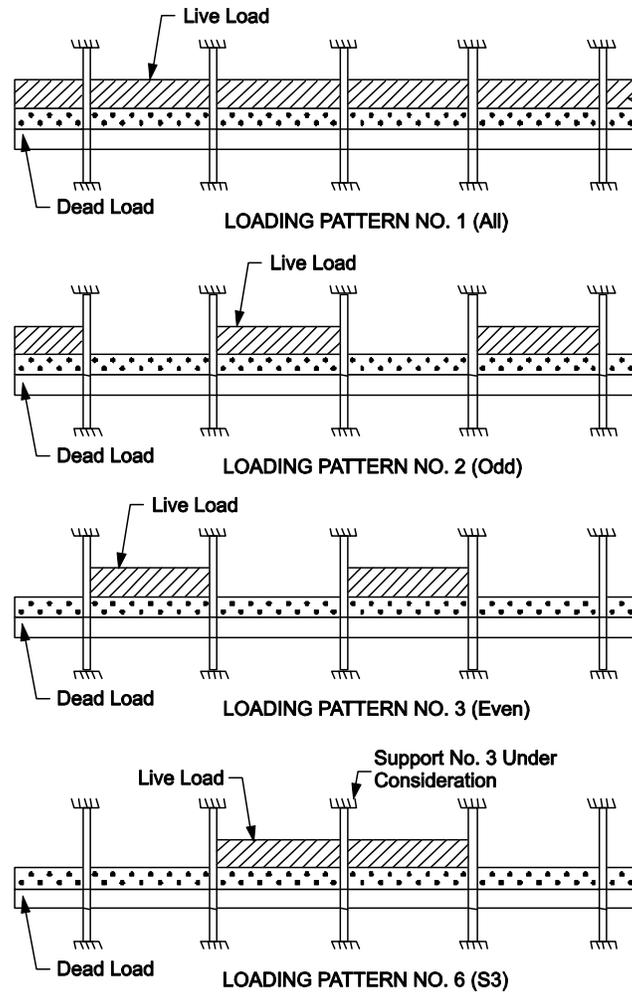


Figure 2.13 Live load patterns

The program reduces the magnitude of live load patterns No. 2 through No. (3+n) by a predefined ratio. For two-way systems, the default live load pattern ratio selected by the program equals 75% as permitted by the code⁴³. The user has the ability to select different value for the pattern ratio within the range 0-100%. If 0% is selected then load patterning effects will be neglected. However, the pattern No. 1 with all spans loaded (as specified by the user) is always considered with full unreduced magnitude.

2.7.5 Load Combinations

The program allows defining up to 50 load combinations. The user has full control over the combinations. The program contains predefined (built into the program) default primary load

43. ACI 318-14, 6.4.3.3; ACI 318-11, 13.7.6.3; ACI 318-08, 13.7.6.3; ACI 318-05, 13.7.6.3; ACI 318-02, 13.7.6.3; ACI 318-99, 13.7.6.3; CSA A23.3-14, 13.8.4; CSA A23.3-04, 13.8.4; CSA A23.3-94, 13.9.4

combinations for the supported codes. These default combinations are created when starting a new project.

For the ACI 318-14, ACI 318-11, ACI 318-08, ACI 318-05, and ACI 318-02 codes, the default combinations of the Self-weight (SW), Dead (D), Live (L), Snow (S), Wind (W) and Earthquake (E) loads considered by the program are⁴⁴

$$\begin{aligned}
 U_1 &= 1.4SW + 1.4D \\
 U_2 &= 1.2SW + 1.2D + 1.6L + 0.5S \\
 U_3 &= 1.2SW + 1.2D + 1.0L + 1.6S \\
 U_4 &= 1.2SW + 1.2D + 1.6S + 0.8W \\
 U_5 &= 1.2SW + 1.2D + 1.6S - 0.8W \\
 U_6 &= 1.2SW + 1.2D + 1.0L + 0.5S + 1.6W \\
 U_7 &= 1.2SW + 1.2D + 1.0L + 0.5S - 1.6W \\
 U_8 &= 0.9SW + 0.9D + 1.6W \\
 U_9 &= 0.9SW + 0.9D - 1.6W \\
 U_{10} &= 1.2SW + 1.2D + 1.0L + 0.2S + 1E \\
 U_{11} &= 1.2SW + 1.2D + 1.0L + 0.2S - 1E \\
 U_{12} &= 0.9SW + 0.9D + 1.0E \\
 U_{13} &= 0.9SW + 0.9D - 1.0E
 \end{aligned}$$

For the ACI 318-99 code, the default combinations of the Self-weight (SW), Dead (D), Live (L), Wind (W) and Earthquake (E) loads considered by the program are⁴⁵

$$\begin{aligned}
 U_1 &= 1.4SW + 1.4D + 1.7L \\
 U_2 &= 0.75(1.4SW + 1.4D + 1.7L + 1.7W) \\
 U_3 &= 0.75(1.4SW + 1.4D + 1.7L - 1.7W) \\
 U_4 &= 0.75(1.4SW + 1.4D + 1.7W) \\
 U_5 &= 0.75(1.4SW + 1.4D - 1.7W) \\
 U_6 &= 0.9 SW + 0.9D + 1.3W \\
 U_7 &= 0.9 SW + 0.9D - 1.3W \\
 U_8 &= 0.75(1.4SW + 1.4D + 1.7L + 1.7*1.1E) \\
 U_9 &= 0.75(1.4SW + 1.4D + 1.7L - 1.7*1.1E) \\
 U_{10} &= 0.75(1.4SW + 1.4D + 1.7*1.1E) \\
 U_{11} &= 0.75(1.4SW + 1.4D - 1.7*1.1E) \\
 U_{12} &= 0.9 SW + 0.9D + 1.43E \\
 U_{13} &= 0.9 SW + 0.9D - 1.43E
 \end{aligned}$$

44. ACI 318-14, 5.3.1; ACI 318-11, 9.2; ACI 318-08, 9.2; ACI 318-05, 9.2; ACI 318-02, 9.2; (assuming W based on service-level wind load and E based on ultimate-level forces)

45. ACI 318-99, 9.2

For the CSA A23.3-14 code load combinations are compliant with 2015 NBCC. The default combinations of the Self-weight (SW), Dead (D), Live (L), Snow (S), Wind (W) and Earthquake (E) loads considered by the program are⁴⁶

$$\begin{aligned}
 U_1 &= 1.4SW + 1.4D \\
 U_2 &= 1.25SW + 1.25D + 1.5L \\
 U_3 &= 0.9SW + 0.9D + 1.5L \\
 U_4 &= 1.25SW + 1.25D + 1.5L + 1.0S \\
 U_5 &= 0.9SW + 0.9D + 1.5L + 1.0S \\
 U_6 &= 1.25SW + 1.25D + 1.5L + 0.4W \\
 U_7 &= 1.25SW + 1.25D + 1.5L - 0.4W \\
 U_8 &= 0.9SW + 0.9D + 1.5L + 0.4W \\
 U_9 &= 0.9SW + 0.9D + 1.5L - 0.4W \\
 U_{10} &= 1.25SW + 1.25D + 1.5S \\
 U_{11} &= 0.9SW + 0.9D + 1.5S \\
 U_{12} &= 1.25SW + 1.25D + 1.0L + 1.5S \\
 U_{13} &= 0.9SW + 0.9D + 1.0L + 1.5S \\
 U_{14} &= 1.25SW + 1.25D + 0.4W + 1.5S \\
 U_{15} &= 1.25SW + 1.25D - 0.4W + 1.5S \\
 U_{16} &= 0.9SW + 0.9D + 0.4W + 1.5S \\
 U_{17} &= 0.9SW + 0.9D - 0.4W + 1.5S \\
 U_{18} &= 1.25SW + 1.25D + 1.4W \\
 U_{19} &= 1.25SW + 1.25D - 1.4W \\
 U_{20} &= 0.9SW + 0.9D + 1.4W \\
 U_{21} &= 0.9SW + 0.9D - 1.4W \\
 U_{22} &= 1.25SW + 1.25D + 0.5L + 1.4W \\
 U_{23} &= 1.25SW + 1.25D + 0.5L - 1.4W \\
 U_{24} &= 0.9SW + 0.9D + 0.5L + 1.4W \\
 U_{25} &= 0.9SW + 0.9D + 0.5L - 1.4W \\
 U_{26} &= 1.25SW + 1.25D + 1.4W + 0.5S \\
 U_{27} &= 1.25SW + 1.25D - 1.4W + 0.5S \\
 U_{28} &= 0.9SW + 0.9D + 1.4W + 0.5S \\
 U_{29} &= 0.9SW + 0.9D - 1.4W + 0.5S \\
 U_{30} &= 1.0SW + 1.0D + 1.0E \\
 U_{31} &= 1.0SW + 1.0D - 1.0E \\
 U_{32} &= 1.0SW + 1.0D + 0.5L + 1.0E + 0.25S \\
 U_{33} &= 1.0SW + 1.0D + 0.5L - 1.0E + 0.25S
 \end{aligned}$$

46. CSA A23.3-14, 8.3.2; CSA A23.3-04, 8.3.2; CSA A23.3-04, Annex C, Table C1; NBCC 2005 (Ref. [8]), Table 4.1.3.2

For the CSA A23.3-04 code load combinations are compliant with 2005 NBCC. The default combinations of the Self-weight (SW), Dead (D), Live (L), Snow (S), Wind (W) and Earthquake (E) loads considered by the program are⁴⁷

$$\begin{aligned}
 U_1 &= 1.4D \\
 U_2 &= 1.25D + 1.5L \\
 U_3 &= 0.9D + 1.5L \\
 U_4 &= 1.25D + 1.5L + 0.5S \\
 U_5 &= 0.9D + 1.5L + 0.5S \\
 U_6 &= 1.25D + 1.5L + 0.4W \\
 U_7 &= 1.25D + 1.5L - 0.4W \\
 U_8 &= 0.9D + 1.5L + 0.4W \\
 U_9 &= 0.9D + 1.5L - 0.4W \\
 U_{10} &= 1.25D + 1.5S \\
 U_{11} &= 0.9D + 1.5S \\
 U_{12} &= 1.25D + 0.5L + 1.5S \\
 U_{13} &= 0.9D + 0.5L + 1.5S \\
 U_{14} &= 1.25D + 0.4W + 1.5S \\
 U_{15} &= 1.25D - 0.4W + 1.5S \\
 U_{16} &= 0.9D + 0.4W + 1.5S \\
 U_{17} &= 0.9D - 0.4W + 1.5S \\
 U_{18} &= 1.25D + 1.4W \\
 U_{19} &= 1.25D - 1.4W \\
 U_{20} &= 0.9SW + 0.9D + 1.4W \\
 U_{21} &= 0.9D - 1.4W \\
 U_{22} &= 1.25D + 0.5L + 1.4W \\
 U_{23} &= 1.25D + 0.5L - 1.4W + 0.5S \\
 U_{24} &= 0.9D + 0.5L + 1.4W \\
 U_{25} &= 0.9D + 0.5L - 1.4W \\
 U_{26} &= 1.25D + 1.4W + 0.5S \\
 U_{27} &= 1.25D - 1.4W + 0.5S \\
 U_{28} &= 0.9D + 1.4W + 0.5S \\
 U_{29} &= 0.9D - 1.4W + 0.5S \\
 U_{30} &= 1.0D + 1.0E \\
 U_{31} &= 1.0D - 1.0E \\
 U_{32} &= 1.0D + 0.5L + 1.0E + 0.25S \\
 U_{33} &= 1.0D + 0.5L - 1.0E + 0.25S
 \end{aligned}$$

47. CSA A23.3-14, 8.3.2; CSA A23.3-04, 8.3.2; CSA A23.3-04, Annex C, Table C1; NBCC 2005 (Ref. [8]), Table 4.1.3.2

For the CSA A23.3-94 code, the default combinations of the Self-weight (SW), Dead (D), Live (L), Wind (W), Earthquake (E), and Snow (S) loads considered by the program are⁴⁸

$$\begin{aligned}
 U_1 &= 1.25SW + 1.25D + 1.5L \\
 U_2 &= 1.25SW + 1.25D + 1.5L + 1.5S \\
 U_3 &= 1.25SW + 1.25D + 0.7(1.5L + 1.5W) \\
 U_4 &= 1.25SW + 1.25D + 0.7(1.5L - 1.5W) \\
 U_5 &= 1.25SW + 1.25D + 0.7(1.5L + 1.5W + 1.5S) \\
 U_6 &= 1.25SW + 1.25D + 0.7(1.5L - 1.5W + 1.5S) \\
 U_7 &= 1.25SW + 1.25D + 1.5W \\
 U_8 &= 1.25SW + 1.25D - 1.5W \\
 U_9 &= 0.85SW + 0.85D + 1.5W \\
 U_{10} &= 0.85SW + 0.85D - 1.5W \\
 U_{11} &= 1.0SW + 1.0D + 0.5L + 1.0E \\
 U_{12} &= 1.0SW + 1.0D + 0.5L - 1.0E \\
 U_{13} &= 1.0SW + 1.0D + 0.5L + 1.0E + 0.5S \\
 U_{14} &= 1.0SW + 1.0D + 0.5L - 1.0E + 0.5S \\
 U_{15} &= 1.0SW + 1.0D + 1.0E \\
 U_{16} &= 1.0SW + 1.0D - 1.0E
 \end{aligned}$$

2.8 Column and Middle Strip Widths

The code⁴⁹ defines the width of the column strip on each side of the column centerline as being one-fourth of the smaller of either the transverse or the longitudinal span. These widths are printed as part of the design results.

The strip widths at a support are computed by (see Figure 2-13)

- column strip

$$w_{cs} = \min \left\{ \begin{array}{l} \min \left\{ \frac{l_{2,l}}{4}, \frac{l_1}{4} \right\}_i + \min \left\{ \frac{l_{2,r}}{4}, \frac{l_l}{4} \right\}_i \\ \min \left\{ \frac{l_{2,l}}{4}, \frac{l_l}{4} \right\}_{i+1} + \min \left\{ \frac{l_{2,r}}{4}, \frac{l_l}{4} \right\}_{i+1} \end{array} \right\} \quad \text{Eq. 2-24}$$

- middle strip

48. CSA A23.3-14, 8.3.2; CSA A23.3-94, 8.3.2 (assuming occupancies other than storage and assembly)

49. ACI 318-14, 8.4.1.5; ACI 318-11, 13.2.1; ACI 318-08, 13.2.1; ACI 318-05, 13.2.1; ACI 318-02, 13.2.1; ACI 318-99, 13.2.1; CSA A23.3-14, 2.2; CSA A23.3-04, 2.2; CSA A23.3-94, 13.1

$$w_{ms} = \min\{l_{2,i}, l_{2,i+1}\} - w_{cs} \quad \text{Eq. 2-25}$$

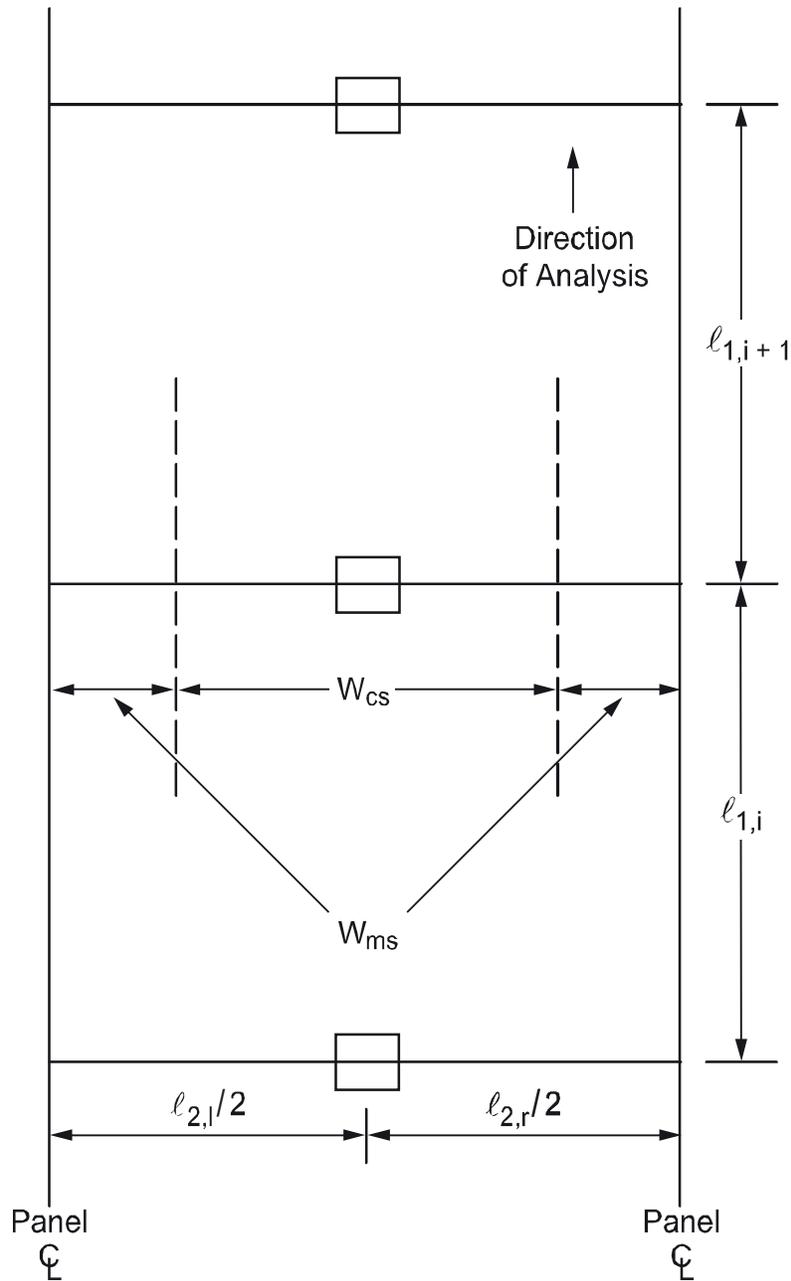


Figure 2.14 Strips widths at support

The strip widths in the span are defined as (see Figure 2-14)

- column strip

$$w_{cs} = \min\left\{\frac{l_{2,l}}{4}, \frac{l_1}{4}\right\} + \min\left\{\frac{l_{2,r}}{4}, \frac{l_1}{4}\right\} \quad \text{Eq. 2-26}$$

- middle strip

$$w_{ms} = l_2 - w_{cs} \tag{Eq. 2-27}$$

where

- l_1 = span length in the direction of analysis,
- $l_{2,l}$ = the input transverse strip widths on the left of column centerline,
- $l_{2,r}$ = the input transverse strip widths on the right of column centerline,
- l_2 = $l_{2,l}/2 + l_{2,r}/2$, the total input transverse strip width.

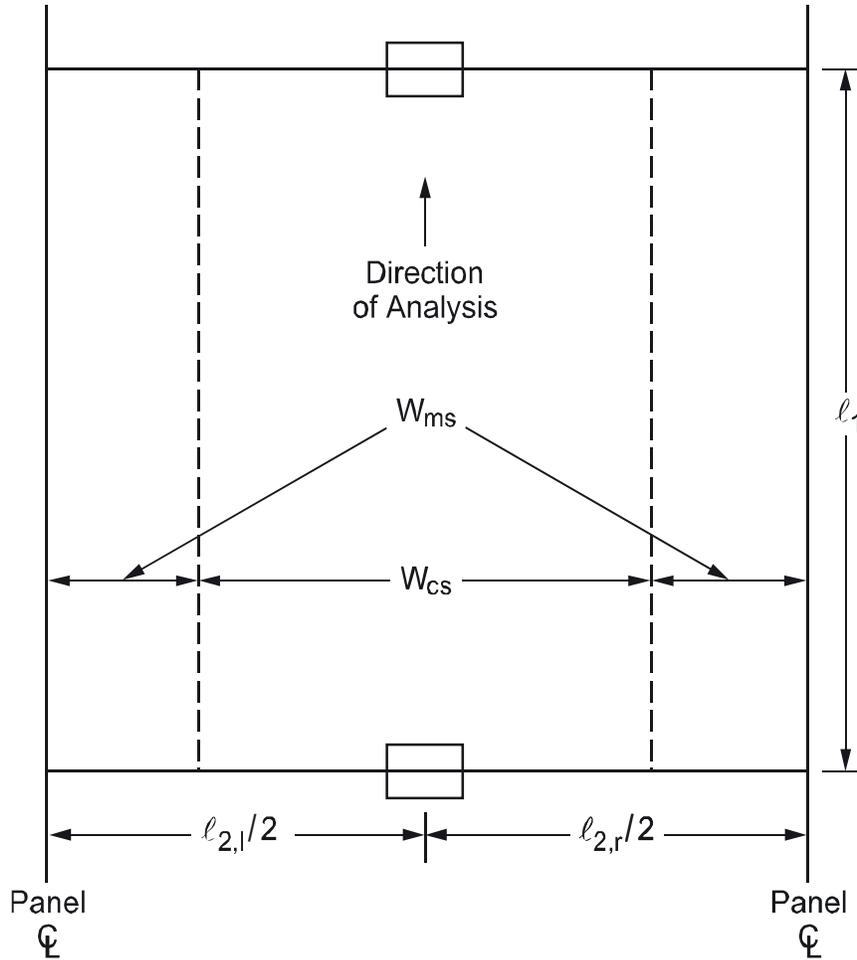


Figure 2.15 Strip widths in span

If a longitudinal slab band is defined (CSA A23.3-14/04 standard only) then the column strip width is automatically adjusted to be equal to the band width

$$w_{cs} = w_{band} \tag{Eq. 2-28}$$

If a longitudinal beam exists then the adjusted column strip width, \bar{w}_{cs} , is calculated by subtracting the beam width, w_{beam} , from the width of the column strip

$$\bar{w}_{cs} = w_{cs} - w_{beam} \quad \text{Eq. 2-29}$$

If the user selects the BEAM T-SECTION DESIGN option in **Solve Options**, the beam width, w_{beam} , used by the program will include portion of the slab on each side of the beam equal to projection of the beam below the slab, but not greater than slab thickness⁵⁰. Otherwise, only web width is used. If the beam width, w_{beam} , is greater than the column strip width, w_{cs} , then the adjusted column strip width is set to zero and moment distribution factors are adjusted to apply all column strip moment to the beam. This may occur when modeling a slab band with a wide longitudinal beam for codes other than CSA A23.3-14/04. In case of CSA A23.3-14/04 standard, the dedicated LONGITUDINAL SLAB BAND option in **General Information** dialog window is available to model slab band systems explicitly.

By selecting USER SLAB STRIP WIDTH and USER DISTRIBUTION FACTORS options in **Solve Options** dialog window, the user has the ability to manually override strip widths and moment distribution factors calculated automatically by the program and requires engineering judgment.

Note: For exterior frames, the edge width should be specified to the edge of the slab from the column centerline. Entering edge width greater than $l_1/4$ involves engineering judgment regarding two-way behavior of the system and the applicability of the equivalent frame method.

2.9 Strip Design Moments

For design purposes⁵¹, spSlab considers negative moments as those producing tension at the top of the slab and positive moments as those producing tension at the bottom of the slab. The negative design moment is taken at the face of the column below the slab, or at the face of the column capital, but in no case is it considered at a location greater than 0.175 of the longitudinal span length, l_1 , away from the center of the column.⁵² This imposes a limit on long narrow supports, in order to prevent undue reduction in the design moment. For slab systems with transverse beams, the face of a beam is not considered as the face of support. For end columns with capitals, the negative moments are taken at the midpoint of the capital extension.⁵³ If a positive moment occurs at a support then its value at the face of the column above the slab is considered (or at the support centerline if there is no column above the slab).

50. ACI 318-14, 8.4.1.8; ACI 318-11, 13.2.4; ACI 318-08, 13.2.4; ACI 318-05, 13.2.4; ACI 318-02, 13.2.4; ACI 318-99, 13.2.4; CSA A23.3-04 Figure N13.1.2.(a) in Ref. [12], CSA A23.3-94, 13.1

51. ACI and CSA provisions for the location of critical section for flexure referred to in this paragraph apply to two-way systems. Due to lack of similar provisions for one-way systems and beams in ACI and CSA standards, the program consistently applies the same rules (with the exception of $0.175l_1$ limitation) to one-way systems and beams.

52. ACI 318-14, 8.11.6.1; ACI 318-11, 13.7.7.1; ACI 318-08, 13.7.7.1; ACI 318-05, 13.7.7.1; ACI 318-02, 13.7.7.1; ACI 318-99, 13.7.7.1; CSA A23.3-14, 13.8.5.1; CSA A23.3-04, 13.8.5.1; CSA A23.3-94, 13.9.5.1

spSlab computes the amount of reinforcement for the moments on the left and the right side of the support. The negative design moment is the moment which requires the most area of reinforcement to be resisted. The location, left or right of the support, of the maximum moment may vary when systems differ on each side of the support (for example, a system with beams on one side only).

spSlab automatically calculates the values of strip moment distribution factors for column strips and longitudinal beams (if present). Portion of the total factor moment not assigned to a column strip or a beam is then proportionally assigned to the remaining middle strip.

Note: By checking USER DISTRIBUTION FACTORS option in **Solve Options** dialog window, the user has the ability to manually adjust strip moment distribution factors calculated automatically by the program.

2.9.1 ACI 318 and CSA A23.3-94⁵⁴

The column strips are proportioned to resist the portions in percent of interior negative factored moments according to Table 2-2.⁵⁵

l_2/l_1	0.5	1.0	2.0
$(\alpha_{f1} l_2/l_1) = 0$	75	75	75
$(\alpha_{f1} l_2/l_1) \geq 1.0$	90	75	45

Table 2.2 Column Strip Percent of Interior Negative Factored Moments at Supports

The column strips are proportioned to resist the portions in percent of exterior negative factored moments according to Table 2-3.⁵⁶

l_2/l_1		0.5	1.0	2.0
$(\alpha_{f1} l_2/l_1) = 0$	$\beta_t = 0$	100	100	100
	$\beta_t \geq 2.5$	75	75	75
$(\alpha_{f1} l_2/l_1) \geq 1.0$	$\beta_t = 0$	100	100	100
	$\beta_t \geq 2.5$	90	75	45

Table 2.3 Column Strip Percent of Exterior Negative Factored Moments at Supports

53. ACI 318-14, 8.11.6.2, 8.11.6.3; ACI 318-11, 13.7.7.2; ACI 318-08, 13.7.7.2; ACI 318-05, 13.7.7.2; ACI 318-02, 13.7.7.2; ACI 318-99, 13.7.7.2; CSA A23.3-14, 13.8.5.2; CSA A23.3-04, 13.8.5.2; CSA A23.3-94, 13.9.5.2

54. For CSA A23.3-94 standard, the program assumes by default values given by ACI code which fall within the ranges specified in CSA A23.3-94, 13.12.2

55. ACI 318-14, 8.10.5.1; ACI 318-11, 13.6.4.1; ACI 318-08, 13.6.4.1; ACI 318-05, 13.6.4.1; ACI 318-02, 13.6.4.1; ACI 318-99, 13.6.4.1; CSA A23.3-14, 13.9.5; CSA A23.3-04, 13.9.5; CSA A23.3-94, 13.9.5.1; CSA A23.3-94, 13.8.5.1

56. ACI 318-14, 8.10.5.2, 8.10.5.3; ACI 318-11, 13.6.4.2; ACI 318-08, 13.6.4.2; ACI 318-05, 13.6.4.2; ACI 318-02, 13.6.4.2; ACI 318-99, 13.6.4.2;

The values α_1 in Table 2-2 and Table 2-3 and β_t in Table 2-3 are defined as

α_{f1} = ratio of flexural stiffness of the beam section to flexural stiffness of a width of slab bounded by centerlines of adjacent panels (if any) on each side of the beam in the direction of analysis. For flat plates, flat slabs, and waffle ($\alpha_{f1} \ell_2 / \ell_1$) = 0

β_t = ratio of torsional stiffness of an edge beam section to flexural stiffness of a width of slab equal to the span length of the beam, center-to-center of supports.⁵⁷ When no transverse beams are present, $\beta_t = 0$, otherwise

$$\beta_t = \frac{E_{cb}C}{2E_{cs}I_s} \quad \text{Eq. 2-30}$$

where

E_{cb} = modulus of elasticity of beam concrete,
 E_{cs} = modulus of elasticity of slab concrete,
 C = cross-sectional constant, see Eq. 2-21
 I_s = moment of inertia of the gross section of the slab about its centroidal axis.

For intermediate values of (ℓ_2/ℓ_1) , $(\alpha_{f1}\ell_2/\ell_1)$ and β_t the values in Table 2-2 and Table 2-3 are interpolated using equations Eq. 2-31 and Eq. 2-32.

Percentage of negative factored moment at interior support to be resisted by column strip

$$75 + 30 \left(\frac{\alpha_{f1}\ell_2}{\ell_1} \right) \left(1 - \frac{\ell_2}{\ell_1} \right) \quad \text{Eq. 2-31}$$

Percentage of negative factored moment at exterior support to be resisted by column strip

$$100 - 10\beta_t + 12\beta_t \left(\frac{\alpha_{f1}\ell_2}{\ell_1} \right) \left(1 - \frac{\ell_2}{\ell_1} \right) \quad \text{Eq. 2-32}$$

When a column width, c_2 , is equal to or greater than 75 percent of the tributary strip width ℓ_2 , the distribution factor for negative column strip moment is linearly interpolated between the factor for regular support, and the factor equal 0.50 (moment uniformly distributed across ℓ_2). This extends the requirement of the design code⁵⁸, by providing continuous linear transition between standard and uniform moment distributions, depending on the relative dimension of the support with respect to strip width. User may override software assumptions by selecting user defined distribution factors.

57. ACI 318-14, 8.10.5.2, 8.10.5.3; ACI 318-11, 13.6.4.2; ACI 318-08, 13.6.4.2; ACI 318-05, 13.6.4.2; ACI 318-02, 13.0; ACI 318-99, 13.0; CSA A23.3-94, 13.0

58. ACI 318-14, 8.10.5.4; ACI 318-11, 13.6.4.3; ACI 318-08, 13.6.4.3; ACI 318-05, 13.6.4.3; ACI 318-02, 13.6.4.3; ACI 318-99, 13.6.4.3

When designing by the CSA A23.3-94 code, a portion of the total positive or interior negative moment equivalent to⁵⁹

$$\frac{\alpha_{fl}}{1 + \left(\frac{l_2}{l_1}\right)^2} \quad \text{Eq. 2-33}$$

is resisted by the beam. For exterior supports, the beam is proportioned to resist 100% of the negative moment.

That portion of the moment not resisted by the beam is resisted by the slab. The reinforcement required to resist this moment is distributed evenly across the slab.

For ACI designs the longitudinal beams are proportioned to resist 85 percent of the column strip moments if $\alpha_{fl}l_2/l_1$ is equal to or greater than 1.0. For values of $\alpha_{fl}l_2/l_1$ between 0 and 1.0, the beam is designed to resist a proportionate percentage of the column strip moment between 0 and 85.⁶⁰

The middle strips are proportioned to resist the portion of the total factored moments that is not resisted by the column strips.

The column strips are proportioned to resist the portions in percent of positive factored moments according to Table 2-4.⁶¹

l_2/l_1	0.5	1.0	2.0
$(\alpha_{fl}l_2/l_1) = 0$	60	60	60
$(\alpha_{fl}l_2/l_1) \geq 1.0$	90	75	45

For intermediate values of (l_2/l_1) and $(\alpha_{fl}l_2/l_1)$ the values in Table 2-4 are interpolated using Eq. 2-34 follows

$$60 + 30 \left(\frac{\alpha_{fl}l_2}{l_1} \right) \left(1.5 - \frac{l_2}{l_1} \right) \quad \text{Eq. 2-34}$$

Note: For flat plates, flat slabs, and waffle slabs, $\alpha_{fl}l_2/l_1 = 0$.

2.9.2 CSA A23.3-14/04

For slabs without drop panels (with or without transverse beams) the following moment factors are used⁶²

59. CSA A23.3-94, 13.13.2.1

60. ACI 318-14, 8.10.5.7; ACI 318-11, 13.6.5; ACI 318-08, 13.6.5; ACI 318-05, 13.6.5; ACI 318-02, 13.6.5; ACI 318-99, 13.6.5

61. ACI 318-14, 8.10.5.5; ACI 318-11, 13.6.4.4; ACI 318-08, 13.6.4.4; ACI 318-05, 13.6.4.4; ACI 318-02, 13.6.4.4; ACI 318-99, 13.6.4.4

- Negative moment at interior column, factor = 0.80
- Negative moment at exterior column, factor = 1.00
- Positive moment at all spans, factor = 0.60

For slabs with drop panels (with or without transverse beams) the following moment factors are used⁶³

- Negative moment at interior column, factor = 0.825
- Negative moment at exterior column, factor = 1.00
- Positive moment at all spans, factor = 0.60

For slabs with longitudinal slab bands⁶⁴

- Negative moment at interior column, factor = 0.90
- Negative moment at exterior column, factor = 1.00
- Positive moment at all spans, factor = 0.90

For slabs with transverse slab bands⁶⁵

- Negative moment at interior column in width b_b , factor from 0.05 to 0.15 range is selected so that the remaining moment is distributed evenly over the entire frame width (including b_b width) and at least one-third of the total factored moment⁶⁶ is applied to the band width b_b .
- Negative moment at exterior column, factor = 1.00
- Positive moment at all spans where $(\ell_1/\ell_2) \geq 1.0$, factor = 0.55
- Positive moment at all spans where $(\ell_1/\ell_2) < 1.0$, factor = 0.55 (ℓ_1/ℓ_2)

For slabs with beams between all the supports⁶⁷, the positive and interior negative factored moments are distributed as follows

$$\frac{\alpha_1}{0.3 + \alpha_1} \left(1 - \frac{l_2}{3l_1} \right) \quad \text{Eq. 2-35}$$

Factored negative moments at exterior supports are assigned in 100% proportion to beams.

62. CSA A23.3-14, 13.11.2.2; CSA A23.3-04, 13.11.2.2

63. CSA A23.3-14, 13.11.2.3; CSA A23.3-04, 13.11.2.3

64. CSA A23.3-14, 13.11.2.4; CSA A23.3-04, 13.11.2.4

65. CSA A23.3-14, 13.11.2.5; CSA A23.3-04, 13.11.2.5

66. CSA A23.3-14, 13.11.2.7; CSA A23.3-04, 13.11.2.7

67. CSA A23.3-14, 13.12.2; CSA A23.3-04, 13.12.2

CSA A23.3-14/04 does not stipulate requirement for distributing moments in slab systems with beams between some (but not all) supports. For estimation of the moment resisted by the beams in this case, the program applies the ACI approach described in the previous section where longitudinal beams are proportioned to resist 85 percent of the column strip moments if $\alpha_{fl}l_2/l_1$ is equal to or greater than 1.0. For values of $\alpha_{fl}l_2/l_1$ between 0 and 1.0, the beam is designed to resist a proportionate percentage of the column strip moment between 0 and 85%.

2.10 Moment Redistribution

Redistribution of negative moments applies to one-way and beam systems only. It can be engaged using the **Input Redistribution** option on the **Solve Options** tab in the **General Information** dialog box.

The program allows for redistribution of negative moments at supports. Only reduction in negative moments is considered. Increase of negative moments at the support is not taken into account even though it is allowed by the code⁶⁸. Static equilibrium is maintained meaning that bending moments and shear forces along the span are adjusted in accordance with the reduction of moments applied at the supports. The following procedure is followed to obtain moment redistribution factors at the supports.

From elastic static analysis, the largest moments from all load combinations and load patterns are determined at support faces on both ends of each span except cantilevers. These moments are used to calculate the maximum percentage adjustment of moments, δ , allowed by the codes.

For ACI 318-14, ACI 318-11, ACI 318-08, ACI 318-05, and ACI 318-02⁶⁹

$$\delta = \begin{cases} 0, & \text{if } \varepsilon_t < 0.0075, \\ 1000 \cdot \varepsilon_t, & \text{if } \varepsilon_t \geq 0.0075, \end{cases} \quad \text{Eq. 2-36}$$

where ε_t is net tensile strain in extreme tension steel at nominal strength.

For ACI 318-99⁷⁰

$$\delta = \begin{cases} 0, & \text{if } (\rho - \rho') > 0.5\rho_b, \\ 20 \left(1 - \frac{\rho - \rho'}{\rho_b} \right), & \text{if } (\rho - \rho') \leq 0.5\rho_b, \end{cases} \quad \text{Eq. 2-37}$$

68. ACI 318-14, 6.6.5.1; ACI 318-11, 8.4.1; ACI 318-08, 8.4.1; ACI 318-05, 8.4.1; ACI 318-02, 8.4.1; ACI 318-99, 8.4.1; CSA A23.3-14, 9.2.4; CSA A23.3-04, 9.2.4; CSA A23.3-94, 9.2.4

69. ACI 318-14, 6.6.5.3; ACI 318-11, 8.4.1 and 8.4.3; ACI 318-08, 8.4.1 and 8.4.3; ACI 318-05, 8.4.1 and 8.4.3; ACI 318-02, 8.4.1 and 8.4.3

70. ACI 318-99, 8.4.1 and 8.4.3

where

ρ	=	tension reinforcement ratio,
ρ'	=	compression reinforcement ratio,
ρ_b	=	balanced reinforcement ratio.

For CSA A23.3⁷¹

$$\delta = 30 - 50 \frac{c}{d} \quad \text{Eq. 2-38}$$

where

c	=	distance from extreme compression fiber to neutral axis,
d	=	distance from extreme compression fiber to centroid of tension reinforcement.

In the investigation mode, program uses the area of provided reinforcement to obtain redistribution factors. In the design mode the required reinforcement area is used. Additionally, δ is limited to 20% and not to exceed the maximum values specified by the user. Negative moments at span ends are reduced by the amount of redistribution factors and new moment values are iteratively used to obtain new redistribution factors. This iterative procedure is repeated until the change in distribution factor is negligible (does not exceed 0.01%), but no more than 10 times.

2.11 Shear Analysis of Slabs

Shear analysis in spSlab takes into account one way shear and two-way shear. For two-way shear, the program considers contributions of factored shear force⁷², V_u , and fraction of unbalanced moment transferred by shear⁷³, $\gamma_v M_{unbal}$. spSlab does not consider torsional stresses in the slab. If in the engineer's judgment this may control, it must be computed manually.

spSlab checks one-way shear at a critical section located at a distance not less than the effective depth away from the face of the support⁷⁴. If a concentrated load is applied closer than the effective depth away from the face of the support then critical section is located at the face of the

71. CSA A23.3-14, 9.2.4; CSA A23.3-04, 9.2.4; CSA A23.3-94, 9.2.4

72. ACI 318-14, 8.4.4.2.3; ACI 318-11, 11.11.7.2; ACI 318-08, 11.11.7.2; ACI 318-05, 11.12.6.2; ACI 318-02, 11.12.6.2; ACI 318-99, 11.12.6.2; CSA A23.3-14, 13.3.5.2; CSA A23.3-04, 13.3.5.2; CSA A23.3-94, 13.4.5.2

73. ACI 318-14, 8.4.4.2.1; ACI 318-11, 11.11.7.1; ACI 318-08, 11.11.7.1; ACI 318-05, 11.12.6.1; ACI 318-02, 11.12.6.1; ACI 318-99, 11.12.6.1; CSA A23.3-14, 13.4.5.3; CSA A23.3-04, 13.4.5.3; CSA A23.3-94, 13.4.5.3

74. ACI 318-14, 7.4.3.2, 8.4.3.2, 9.4.3.2; ACI 318-11, 13.5.4, 11.1.3; ACI 318-08, 13.5.4, 11.1.3; ACI 318-05, 13.5.4, 11.1.3; ACI 318-02, 13.5.4, 11.1.3; ACI 318-99, 13.5.4, 11.1.3; CSA A23.3-14, 13.3.6.1, 11.3.2; CSA A23.3-04, 13.3.6.1, 11.3.2; CSA A23.3-94, 13.4.6.1; CSA A23.3-94, 13.4.6.1; 11.3.2

support. Factored shear force at the critical section is obtained from the analysis of the equivalent frame⁷⁵.

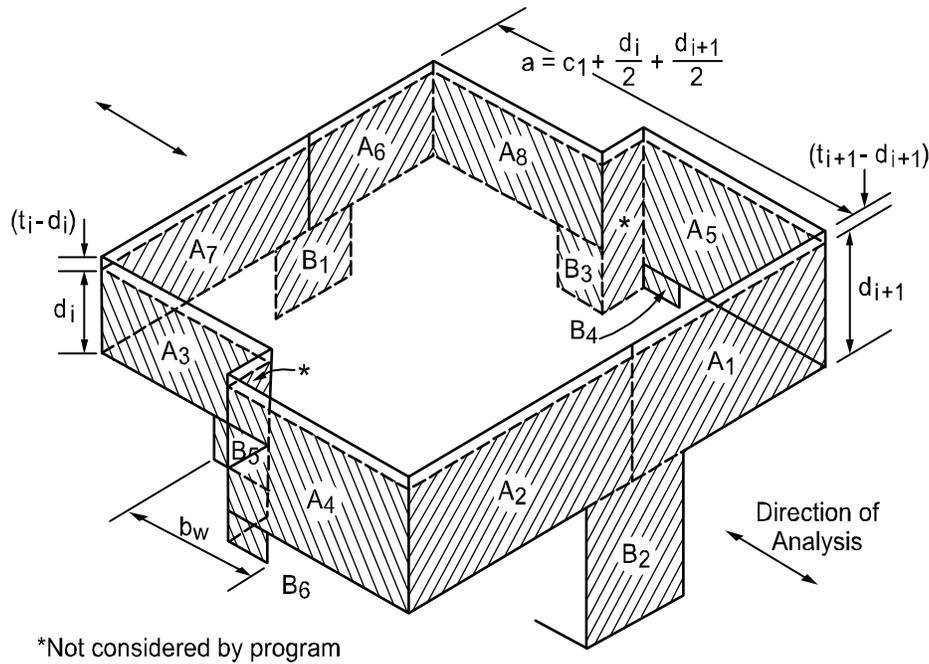


Figure 2.16 Critical section for two-way shear

Figure 2-15 shows the general two-way shear area⁷⁶ used by spSlab. Note that the shaded area represents the general case and is modified for special considerations as explained below.

Beams are considered in the two-way shear as indicated in Figure 2-15 by areas B₁, B₂, B₃, B₄, B₅, and B₆. Ordinarily, transverse beams transfer unbalanced moment to the column through torsion along the beam and not through shear between the slab and column. However, the code leaves the transfer method to the engineer’s judgment concerning the point at which punching shear is no longer applicable and beam shear becomes the dominate element in shear transfer to the column. spSlab makes no such distinction and computes unbalanced moment transfer stress without regard to any beams framing into the column. When a beam is present, the depth of the beam increases the depth of the critical section where it intersects with the beam. The distances from the face of the support to the critical section will also be increased, i.e. effective depth of the beam will be used to calculate the distance instead of effective depth of the slab, if it results in a critical section that is still within the beam. Otherwise, distances to the critical section are not increased.

75. ACI 318-14, 8.11.1.1; ACI 318-11, 13.7.1; ACI 318-08, 13.7.1; ACI 318-05, 13.7.1; ACI 318-02, 13.7.1; ACI 318-99, 13.7.1; CSA A23.3-04, 13.8.1.1; CSA A23.3-94, 13.9.1.1

76. ACI 318-14, 22.6.4.1; ACI 318-11, 11.11.1.2; ACI 318-08, 11.11.1.2; ACI 318-05, 11.12.1.2; ACI 318-02, 11.12.1.2; ACI 318-99, 11.12.1.2; CSA A23.3-14, 13.3.3; CSA A23.3-04, 13.3.3; CSA A23.3-94, 13.4.3

For circular supports (column or column capital), ACI code and CSA standard differ in their treatment and do not provide clear guidance towards the applicability of an equivalent rectangular section for checking punching shear around circular supports. Therefore, spSlab provides as a default option the calculation of properties of the critical section for punching shear based on circular critical shear perimeter. This option is possible given that both the soffit around the perimeter of circular support and the soffit around the perimeter of circular critical shear perimeter are flat & critical shear perimeter stays circular.

If circular critical shear perimeter is not achievable or possible, then, the program calculates properties of the critical section for punching shear based on an equivalent rectangular support with the same centroid and equal perimeter length⁷⁷. The equivalent rectangular support is a square with side length equal to $\pi D/4 \approx 0.785 D$ where D is the diameter of the circular support as shown in Figure 2-15.

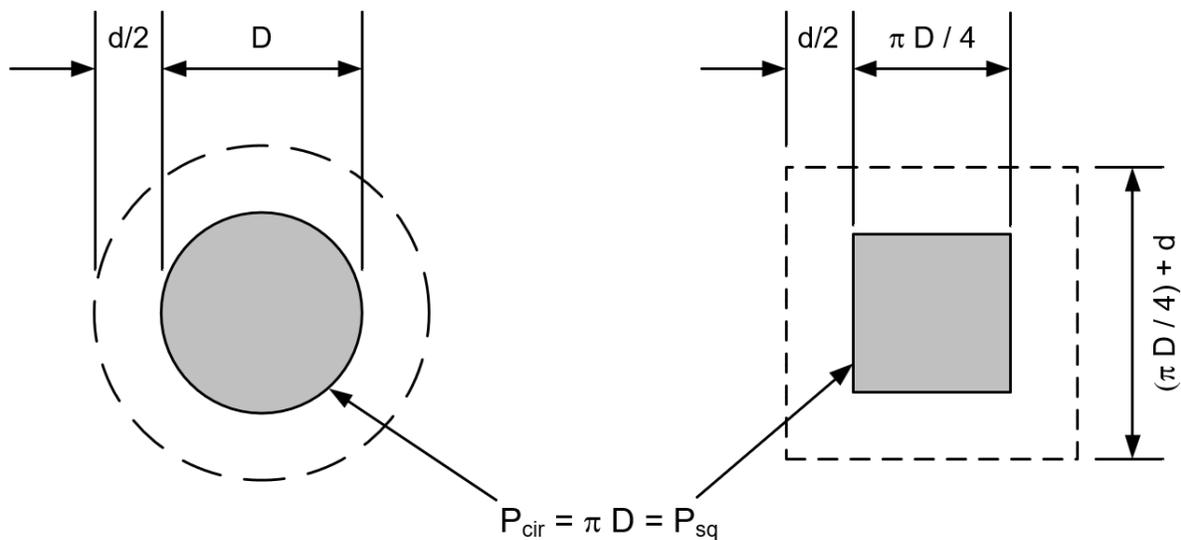


Figure 2.17 Critical section for circular column

While this approach is widely used, it produces an equivalent section but not an equivalent shear perimeter. It is, therefore, left to the end-user discretion to judge the use of the circular shear perimeter as it produces more conservative results compared with the traditional equivalent square option.

The critical section is considered closed if the concrete slab around a column extends to a distance greater than or equal to the specified threshold value. In spSlab, the user may define the distance extended beyond the column face in order to consider the section closed. If the critical section does not meet the distance requirement, it is considered open.

77. See Fig.13-38(b) and Fig. 13-57 in Ref. [16], and Fig. 10.5(f) in Ref. [25]

ACI 318-08 code introduced the definition of the shear cap⁷⁸ which, alternatively to column capital, can be used to increase the critical section around the column. spSlab users can use the capital geometry to model a shear cap and calculate the punching shear through the thickness of the slab itself (shear cap acting as capital). Other failure modes, such as punching within the perimeter of the shear cap, need to be verified by the user manually. The dimensions of the substitute capital have to be selected such that the resulting critical section is equivalent to critical section for a column with a shear cap. ACI code⁷⁹ requires shear caps to extend beyond the face of the column by at least the distance equal to cap depth, and so depth/extension ratio should not exceed 1.0. For column capitals depth/extension ratio should not be less than 1.0. Therefore to model shear cap acting as capital, the substituted capital should have depth/extension ratio equal to 1.0.

2.11.1 Critical Section for Interior Supports of Interior Frames

The critical section (Figure 2-17) consists of four vertical surfaces through the slab, located at distances of $d/2$ beyond the support faces.

The critical section for interior supports of interior frames is always closed. A closed section will have all its faces defined in Figure 2-15 resisting shear as indicated by Eq. 2-39

$$A_C = \sum_{i=1}^8 A_i \quad \text{Eq. 2-39}$$

If beams frame⁸⁰ into the column, then the critical section includes the dimensions of the beams (B_1 through B_6 in Figure 2-15).

78. ACI 318-14, 2.3; ACI 318-11, 2.2; ACI 318-08, 2.2

79. ACI 318-14, 8.2.5; ACI 318-11, 13.2.6; ACI 318-08, 13.2.6

80. A beam is considered as framing into the column if the beam is within a face of the column.

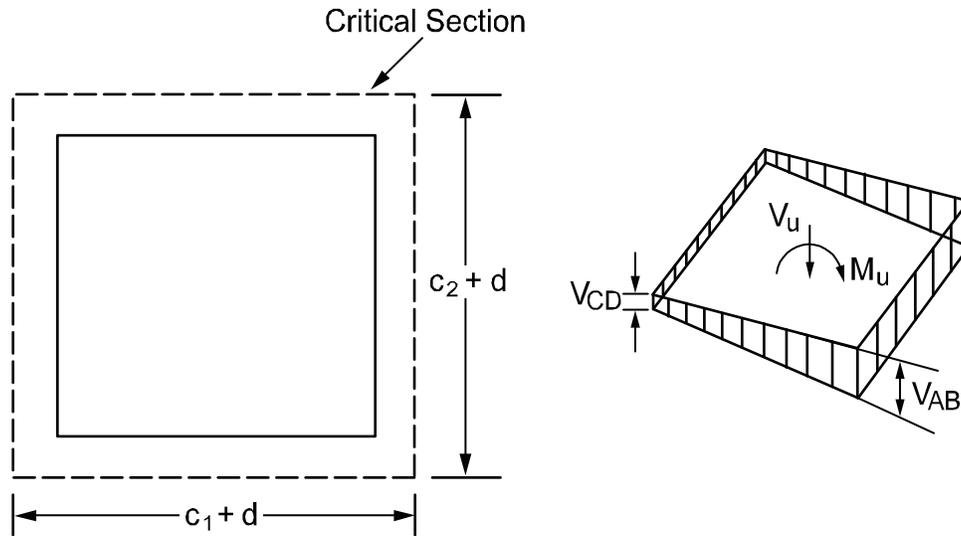


Figure 2.18 Interior supports of interior frames

2.11.2 Critical Section for Exterior Supports of Interior Frames

The critical section for exterior supports of interior frames (Figure 2-18) will be either closed (full A_7 and A_6 for the first column or A_1 and A_2 for the last column in Figure 2-15) or open, depending upon the length of the cantilever in relation to slab thickness. The critical section will be considered closed when the clear cantilever span, ℓ_c , is greater than or equal to the distance defined by the user beyond the column face. The default value of the distance is 4 h when an ACI code is selected⁸¹ and 5 d for the CSA standard⁸². The user can modify the default value to accommodate scenarios when larger distances are required, e.g. 10 h for slabs with openings⁸³. If beams frame into the column then the critical section includes the contributions from the beam dimensions (B_1 through B_6 in Figure 2-16).

81. Critical Sections near Holes and at Edges in Ref.[15], pp.672, Fig 13-59 (b) and (c)

82. CSA A23.3-04 Figure N13.3.3.4 (b) in Ref. [12]; CSA A23.3-94 Figure N13.4.3.4 (b) in Ref. [14]

83. ACI 318-14, 22.6.4.3; ACI 318-11, 11.11.6; ACI 318-08, 11.11.6; ACI 318-05, 11.12.5; ACI 318-05, 11.12.5; ACI 318-05, 11.12.5; CSA A23.3-14, 13.3.3.4; CSA A23.3-04, 13.3.3.4; CSA A23.3-94, 13.4.3.4

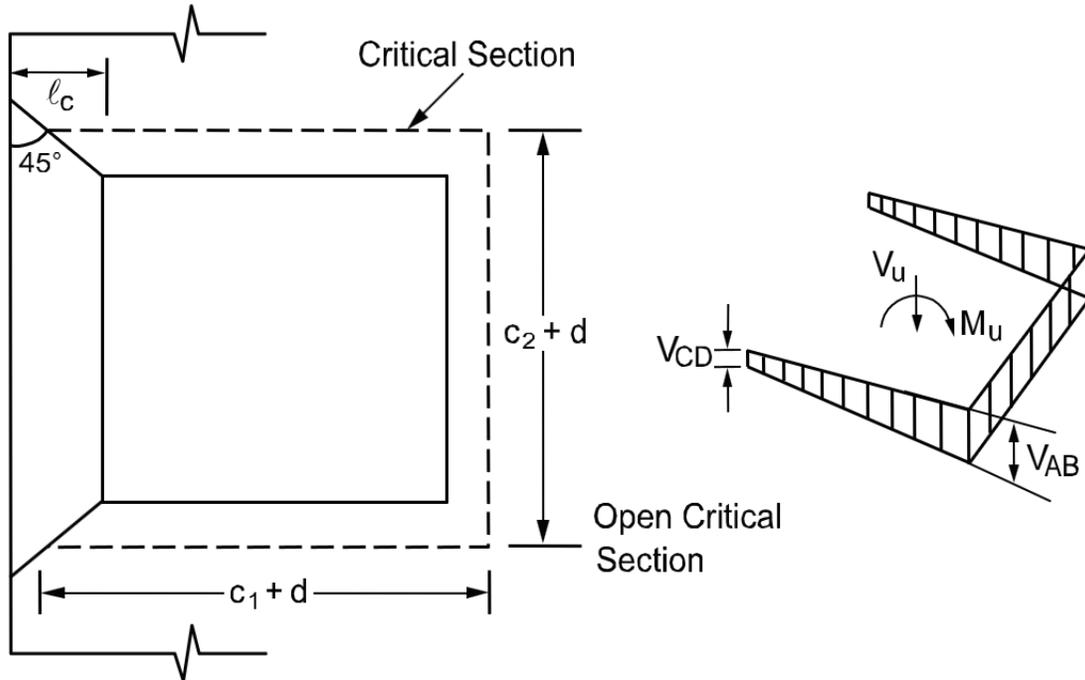


Figure 2.19 Exterior supports of interior frames

2.11.3 Critical Section for Interior Supports of Exterior Frames

Figure 2-19 shows the critical section for shear for an interior support of an exterior frame. Note that the section is considered as U-shaped ($A_5 = 0$, $A_8 = 0$, $B_3 = 0$, $B_4 = 0$ in Figure 2-15) and it extends up to the edge of the exterior face of the support. If beams frame into the column, then the critical section includes the contribution from the beam dimensions (B_1 through B_6 in Figure 2-15). If the exterior cantilever span, l_c , is greater than or equal to the distance defined by the user beyond the column face (the default value is $4h$ when an ACI code is selected⁸¹ and $5d$ for the CSA standard⁸²), the section is treated as closed, that is, the support is treated as an interior support of an interior frame.

2.11.4 Critical Section for Exterior Supports of Exterior Frames

The critical section for an exterior support of an exterior frame will typically be L-shaped ($A_5 = 0$, $A_6 = 0$, $A_7 = 0$, $A_8 = 0$, $B_1 = 0$, $B_3 = 0$, and $B_4 = 0$ in Figure 2-15).

If the cantilever span, l_c , (in the direction of analysis) is greater than or equal to the distance defined by the user beyond the column face (the default value is $4h$ when an ACI code is selected⁸¹ and $5d$ for the CSA standard⁸²), then the section is treated as a U-shaped interior support. If, in addition, the cantilever span in transverse direction is greater than or equal to the distance defined by the user beyond the column face, the section is treated as closed. If beams

frame into the column, then the critical section includes the contributions from the beam dimensions.

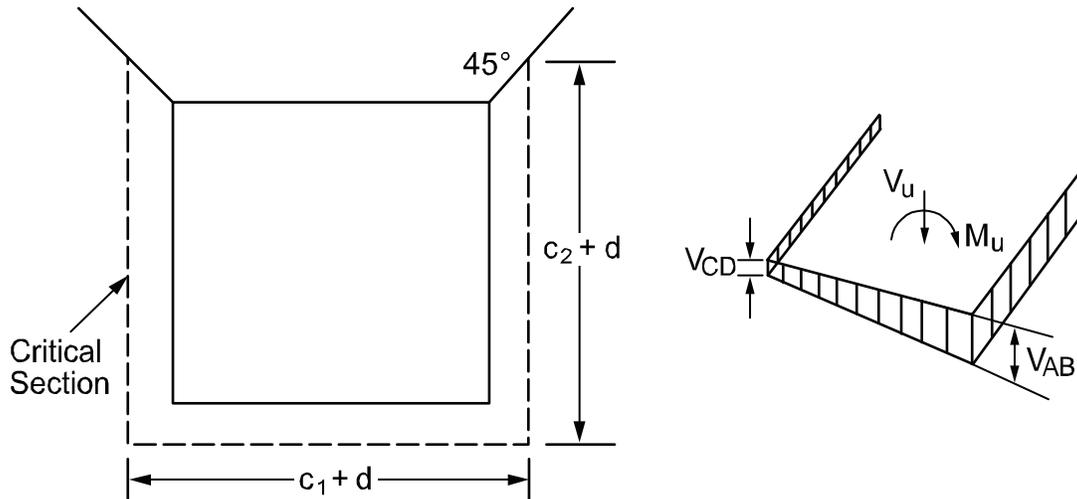


Figure 2.20 Interior supports of exterior frames

2.11.5 Computation of Allowable Shear Stress at Critical Section

One-way shear strength of slabs is limited⁸⁴ to $2\lambda\sqrt{f'_c}$. Two-way shear strength of slabs is affected by concrete strength, relationship between size of loaded area and slab thickness, loaded area aspect ratio, and shear-to-moment ratio at slab-column connections.

These variables are taken into account in the allowable shear stress, v_c , computed at distances of $d/2$ around the columns and drops (if applicable). For the ACI 318 code, v_c is taken as the smallest of the 3 quantities⁸⁵

$$v_c = \left(2 + \frac{4}{\beta_c}\right)\lambda\sqrt{f'_c} \quad \text{Eq. 2-40}$$

$$v_c = \left(2 + \frac{\alpha_s d}{b_0}\right)\lambda\sqrt{f'_c} \quad \text{Eq. 2-41}$$

$$v_c = 4\lambda\sqrt{f'_c} \quad \text{Eq. 2-42}$$

84. ACI 318-14, 22.5.5.1; ACI 318-11, 11.2.1.1; ACI 318-08, 11.2.1.1; ACI 318-05, 11.3.1.1; ACI 318-02, 11.3.1.1; ACI 318-99, 11.3.1.1

85. ACI 318-14, 22.6.5.2, 22.6.5.3; ACI 318-11, 11.11.2.1; ACI 318-08, 11.11.2.1; ACI 318-05, 11.12.2.1; ACI 318-02, 11.12.2.1; ACI 318-99, 11.12.2.1

where

- β_c = the ratio of the long to the short side of the column.
- α_s = a constant dependent on the column location, (40 for an interior 4-sided effective critical area, 30 for an exterior 3-sided critical area, 20 for a corner 2-sided effective critical area.)
- d = distance from the slab bottom to centroid of the slab tension reinforcement at support (average value is used if d changes along critical section perimeter)
- b_0 = the perimeter of the critical section
- λ = factor⁸⁶ reflecting the reduced mechanical properties of lightweight concrete equal to 0.75 for all-lightweight concrete, 0.85 for sand-lightweight concrete and 1.0 for normal weight concrete. Refer to Table 2-1 for determination of concrete type.

For the CSA A23.3⁸⁷, the allowable shear stresses are calculated as the minimum of the following metric equations

$$v_c = \left(1 + \frac{2}{\beta_c} \right) \eta \lambda \phi_c \sqrt{f'_c} \quad \text{Eq. 2-43}$$

$$v_c = \left(\frac{\alpha_s d}{b_0} + \eta \right) \lambda \phi_c \sqrt{f'_c} \quad \text{Eq. 2-44}$$

$$v_c = 2 \eta \lambda \phi_c \sqrt{f'_c} \quad \text{Eq. 2-45}$$

where

- η = 0.19 for CSA A23.3-14/04 and 0.20 for CSA A23.3-94
- α_s = a constant dependent on the column location, (4 for an interior 4-sided effective critical area, 3 for an edge column, 2 for a corner column)
- d = distance from the slab bottom to centroid of the slab tension reinforcement at support (average value is used if d changes along critical section perimeter)
- ϕ_c = resistance factor for concrete⁸⁸ equal to 0.60 for CSA A23.3-94 and for CSA A23.3-14/04 it is equal to 0.65 for regular and 0.70 for precast concrete
- λ = factor⁸⁹ reflecting the reduced mechanical properties of lightweight concrete equal to 0.75 for structural low-density concrete, 0.85 structural semi-low-

86. ACI 318-14, 22.6.5.2, 22.6.5.3; ACI 318-11, 11.11.2.1; ACI 318-08, 11.11.2.1; ACI 318-05, 11.2.1.2; ACI 318-02, 11.2.1.2; ACI 318-99, 11.2.1.2

87. CSA A23.3-14, 13.3.4; CSA A23.3-04, 13.3.4; CSA A23.3-94, 13.4.4

88. CSA A23.3-14 8.4.2, 16.1.3; CSA A23.3-04 8.4.2, 16.1.3; CSA A23.3-94 8.4.2

89. CSA A23.3-14, 8.6.5; CSA A23.3-04, 8.6.5; CSA A23.3-94, 8.6.5

density concrete and 1.0 for normal density concrete. Refer to Table 2-1 for determination of concrete type.

$$\sqrt{f'_c} \leq 8 \text{ MPa.}$$

When the value of d is greater than 300mm, allowable stress v_c obtained from the above three equations shall be multiplied by $1300/(1000+d)$ as required by CSA A23.3-14/04 code⁹⁰.

The allowable shear stress around drops when waffle slabs are used is computed as

$$v_c = \begin{cases} 2\lambda\sqrt{f'_c} & \text{for ACI,} \\ 0.20 \phi_c \lambda \sqrt{f'_c} & \text{for CSA A23.3-94,} \\ 0.19 \phi_c \lambda \sqrt{f'_c} & \text{for CSA A23.3-04.} \end{cases} \quad \text{Eq. 2-46}$$

For waffle slab systems with valid ribs defined earlier in this chapter, the allowable shear stress is increased by 10% for ACI designs.⁹¹

2.11.6 Computation of Factored Shear Force at Critical Section

The factored shear force V_u in the critical section, is computed as the reaction at the centroid of the critical section (e.g., column centerline for interior columns) minus the self-weight and any superimposed surface dead and live load acting within the critical section. If the section is considered open, two 45 degree lines are drawn from the column corners to the nearest slab edge (lines AF and DE in Figure 2-19) and the self-weight and superimposed surface dead and live loads acting on the area ADEF are omitted from V_u .

2.11.7 Computation of Unbalanced Moment at Critical Section

The factored unbalanced moment used for shear transfer, M_{unbal} , is computed as the sum of the joint moments to the left and right. Moment of the vertical reaction with respect to the centroid of the critical section is also taken into account by

$$M_{unbal} = (M_{u,left} - M_{u,right}) - V_u c_g \quad \text{Eq. 2-47}$$

90. CSA A23.3-14, 13.3.4.3; CSA A23.3-04, 13.3.4.3

91. ACI 318-14, 8.8.1.5, 9.8.1.5; ACI 318-11, 8.13.8; ACI 318-08, 8.13.8; ACI 318-05, 8.11.8; ACI 318-02, 8.11.8; ACI 318-99, 8.11.8

where

$M_{u,left}$	=	factored bending moment at the joint on the left hand side of the joint,
$M_{u,right}$	=	factored bending moment at the joint on the right hand side of the joint,
V_u	=	factored shear force in the critical section described above,
c_g	=	location of the centroid of the critical section with respect to the column centerline (positive if the centroid is to the right in longitudinal direction with respect to the column centerline).

2.11.8 Computation of Shear Stresses at Critical Section

The punching shear stress computed by the program is based on the following⁹²

$$v_u = \frac{V_u}{A_c} \quad \text{Eq. 2-48}$$

where

V_u	=	factored shear force in the critical section described above,
A_c	=	area of concrete, including beam if any, resisting shear transfer.

Under conditions of combined shear, V_u , and unbalanced moment, M_{unbal} , $\gamma_v M_{unbal}$ is assumed to be transferred by eccentricity of shear about the centroidal axis of the critical section. The shear stresses computed by the program for this condition correspond to⁹³

$$v_{AB} = \frac{V_u}{A_c} + \frac{\gamma_v M_{unbal} c_{AB}}{J_c} \quad \text{Eq. 2-49}$$

$$v_{CD} = \frac{V_u}{A_c} - \frac{\gamma_v M_{unbal} c_{CD}}{J_c} \quad \text{Eq. 2-50}$$

92. ACI 318-14, 8.4.4.2.3; ACI 318-11, 11.11.7.2; ACI 318-08; 11.11.7.2; ACI 318-05, 11.12.6.2; ACI 318-02, 11.12.6.2; ACI 318-99, 11.12.6.2; CSA A23.3-14, 13.3.5; CSA A23.3-04, 13.3.5; CSA A23.3-94, 13.4.5

93. ACI 318-14, R8.4.4.2.3; ACI 318-11, R11.11.7.2; ACI 318-08, R11.11.7.2; ACI 318-05, R11.12.6.2; ACI 318-02, R11.12.6.2; ACI 318-99, R11.12.6.2; CSA A23.3-14, 13.3.5.5; CSA A23.3-04, 13.3.5.5; CSA A23.3-94, 13.4.5.5; Ref. [24]

where

- M_{unbal} = factored unbalanced moment transferred directly from slab to column, as described above,
 γ_v = $(1 - \gamma_f)$ Eq 2-51
 is a fraction of unbalanced moment considered transferred by the eccentricity of shear about the centroid of the assumed critical section,⁹⁴
 c = distance from centroid of critical section to the face of section where stress is being computed,
 J_c = property of the assumed critical section analogous to polar moment of inertia.

Factor γ_f in Eq. 2-51 is calculated as⁹⁵

$$\gamma_f = \frac{1}{1 + (2/3)\sqrt{b_1/b_2}} \quad \text{Eq. 2-52}$$

where

- b_1 = width of critical section in the direction of analysis,
 b_2 = width of the critical section in the transverse direction.

If an ACI 318 standard is selected then the program provides an option to use an increased value⁹⁶ of γ_f . For edge and corner columns with unbalanced moment about an axis parallel to the edge, the value can be increased to 1.0 if the factored shear force at the support doesn't exceed $0.75\phi V_c$ for edge columns and $0.5\phi V_c$ for corner columns. For ACI 318-99, ACI 318-02, and ACI 318-05, condition that reinforcement ratio in the effective slab width doesn't exceed $0.375\rho_b$ must also be satisfied to apply the increase. For interior columns and for edge columns with unbalanced moment perpendicular to the edge, γ_f can be increased 25% but the final value of γ_f cannot exceed 1.0. The increase can be applied if the shear doesn't exceed $0.4\phi V_c$. Also, the net tensile strain in the effective slab has to exceed 0.010 for the ACI 318-08, ACI 318-11, and ACI 318-14. For earlier ACI 318 editions, the condition that reinforcement ratio does not exceed $0.375\rho_b$ applies.

spSlab calculates v_u as the absolute maximum of v_{AB} and v_{CD} . Local effects of concentrated loads are not computed by spSlab and must be calculated manually.

94. ACI 318-14, 8.4.4.2.1, 8.4.4.2.2; ACI 318-11, 11.11.7.1; ACI 318-08, 11.11.7.1; ACI 318-05, 11.12.6.1; ACI 318-02, 11.12.6.1; CSA A23.3-04, Eq. 13-8; CSA A23.3-94, Eq. 13-8

95. ACI 318-14, 8.4.2.3.2; ACI 318-11, 13.5.3.2; ACI 318-08, 13.5.3.2; ACI 318-05, 13.5.3.2; ACI 318-02, 13.5.3.2; CSA A23.3-04, Eq. 13-8; CSA A23.3-94, Eq. 13-7

96. ACI 318-14, 8.4.2.3.4; ACI 318-11, 13.5.3.3; ACI 318-08, 13.5.3.3; ACI 318-05, 13.5.3.3; ACI 318-02, 13.5.3.3; ACI 318-99, 13.5.3.3;

2.11.9 Shear Resistance at Corner Columns

For the CSA A23.3 code in design mode, the program performs one-way shear resistance check in the vicinity of corner columns. A corner column is determined in spSlab as the exterior support along an exterior left or exterior right equivalent frame. For slabs with edge beams or drop panels a supplementary check including the contribution of these components should be performed manually.

For the CSA A23.3-94 edition, a critical shear section is located $d/2$ from the column corner. The minimum length section is selected using an optimization algorithm which analyzes sections at different angles. The extension to the cantilevered portion is considered by a length not to exceed effective slab thickness d .

For the CSA A23.3-14/04 edition, a critical shear section is located not further than $d/2$ from the edge of the column or column capital. The extension to the cantilevered portion is considered by a length not to exceed effective slab thickness d . The factored shear resistance is calculated as follows⁹⁷

$$v_c = \beta \lambda \phi_c \sqrt{f'_c} \quad \text{Eq. 2-53}$$

where

β = factor accounting for shear resistance of cracked concrete⁹⁸

2.11.10 Shear Resistance in Slab Bands

When performing two-way shear analysis for models with non-continuous longitudinal slab bands a non-standard partial drop panel is anticipated to close the slab band and the calculations are performed as follows. Punching shear around the column is checked using effective depth of the slab band on one side of the column and the depth of the extension drop panel on the other side of the column. On each four sides of the column the critical section is located $1/2$ of the respective depth from the face of the column. Punching shear calculation around the drop panel/slab band assumes that the plane of critical section, which cuts perpendicularly through slab band, is located $1/2d$ of the slab band from the face of column. For three remaining column faces critical section is located $1/2d$ of the slab measured from the respective edges of drop panel or slab band.

97. CSA A23.3-14, 13.3.6.2; CSA A23.3-04, 13.3.6.2

98. CSA A23.3-14, 11.3.6.2 and 11.3.6.3; CSA A23.3-04, 11.3.6.2 and 11.3.6.3

2.12 One-Way Shear Analysis of Longitudinal Beams and Slabs

When longitudinal beams are present in a span, the program computes the shear reinforcement requirements for the beams. Table “Longitudinal Beam Shear Reinforcement Required” in the program output provides values of V_u , V_c , and A_v/s for selected segment locations of each span. Segment lengths are chosen not to exceed the beam section depth. The beginning of first segment and the end of last segment correspond to the locations of critical sections on the left and right support respectively. The critical sections are located at a distance d , the effective beam depth, away from the column face at both the left and the right ends of the beam. However, if concentrated loads are present within distance d from the column face, critical section is selected at the column face.

V_u is computed from the load acting over the entire width of the design strip. The program makes no distinction between shallow beams ($\alpha_{fl}l_2/l_1 < 1$) and deeper beams ($\alpha_{fl}l_2/l_1 > 1$).

2.12.1 Shear Calculations for ACI 318 and CSA A23.3-94

Shear strength provided by concrete, V_c , is computed by⁹⁹

$$V_c = \begin{cases} 2\lambda\sqrt{f'_c} b_w d & \text{for ACI 318,} \\ 0.17\lambda\sqrt{f'_c} b_w d & \text{for ACI 318M-11/08/05,} \\ \lambda\sqrt{f'_c} b_w d / 6 & \text{for ACI 318M-02/99,} \\ 0.20 \phi_c \lambda \sqrt{f'_c} b_w d & \text{for CSA A23.3-94.} \end{cases}$$

where

ϕ_c = resistance factor for concrete¹⁰⁰ equal to 0.60.

In CSA A23.3-94 design, for beams without minimum stirrup reinforcement and greater than 300 mm deep, V_c is calculated from the following equation¹⁰¹

99. ACI 318-14, 22.5.5.1; ACI 318-11, 11.2.1.1; ACI 318-08, 11.2.1.1; ACI 318-05, 11.3.1.1; ACI 318-02, 11.3.1.1; ACI 318-99, 11.3.1.1; ACI 318M-08, 11.2.1.1; ACI 318M-05, 11.3.1.1; ACI 318M-02, 11.3.1.1; ACI 318M-99, 11.3.1.1; CSA A23.3-94, 11.3.5.1

100. CSA A23.3-94, 8.4.2

101. CSA A23.3-94, 11.3.5.2

$$V_c = \left(\frac{260}{1000 + d} \right) \lambda \phi_c \sqrt{f'_c} b_w d \geq 0.10 \lambda \phi_c \sqrt{f'_c} b_w d \quad \text{Eq. 2-55}$$

When $V_u > \phi V_c / 2$, the beam must be provided with at least a minimum shear reinforcement of¹⁰²

$$A_{v,\min} = \frac{b_w s}{f_{yt}} \times \begin{cases} \max(0.75 \sqrt{f'_c}, 50) & \text{for ACI 318-11/08/05/02,} \\ 50 & \text{for ACI 318-99,} \\ \max(0.062 \sqrt{f'_c}, 0.35) & \text{for ACI 318M-11/08/05,} \\ \max(\sqrt{f'_c} / 16, 0.33) & \text{for ACI 318M-02,} \\ 1 / 3 & \text{for ACI 318M-99,} \\ 0.06 \sqrt{f'_c} & \text{for CSA A23.3-94,} \end{cases} \quad \text{Eq2-56}$$

where

- A_v = area of all stirrup legs,
- s = stirrups spacing,
- b_w = longitudinal beam width,
- f_{yt} = yield strength of the shear reinforcement.

In the investigation mode, if the ACI-318 spacing requirement for shear reinforcement¹⁰³ or minimum shear reinforcement requirement are not met, the shear strength of the section is taken as one-half of the shear strength provided by concrete.

When $V_u > \phi V_c$, shear reinforcement must be provided so that

$$\frac{A_v}{s} = \begin{cases} \frac{V_u - \phi V_c}{\phi f_{yt} d} = \frac{V_s}{\phi f_{yt} d} & \text{for ACI 318-11/08/05/02,} \\ \frac{V_u - V_c}{\phi_s f_{yt} d} = \frac{V_s}{\phi_s f_{yt} d} & \text{for CSA A23.3-94,} \end{cases} \quad \text{Eq. 2-57}$$

102. ACI 318-14, 9.6.3.3; ACI 318-11, 11.4.6.3; ACI 318-08, 11.4.6.3; ACI 318-05, 11.5.6.3; ACI 318-02, 11.5.5.2; ACI 318-99, 11.5.5.2; ACI 318M-08, 11.4.6.3; ACI 318M-05, 11.5.6.3; ACI 318M-02, 11.5.5.2; ACI 318M-99, 11.5.5.2; CSA A23.3-94, 11.2.8.4

103. ACI 318-14, 9.7.6.2.2, 9.7.6.2.3; ACI 318-11, 11.4.5; ACI 318-08, 11.4.5; ACI 318-05, 11.5.5; ACI 318-02, 11.5.4; ACI 318-99, 11.5.4

where

- V_u = factored shear force at the section being considered
 V_s = shear strength provided by shear reinforcement
 d = effective depth of the beam at the same location
 ϕ = strength reduction factor for shear calculations¹⁰⁴ equal to 0.85 for ACI 318-99 and equal to 0.75 for ACI 318-14, ACI 318-11, ACI 318-08, ACI 318-05, and ACI 318-02
 ϕ_s = resistance factor for reinforcement¹⁰⁵ equal to 0.85

The capacity of shear reinforcement V_s is limited to $V_{s,max} = 8\sqrt{f'_c} b_w d$ ($V_{s,max} = 0.8\lambda\phi_c\sqrt{f'_c} b_w d$ for CSA A23.3-94). When V_u exceeds $\phi V_c + \phi V_{s,max}$ ($V_c + V_{s,max}$ for CSA A23.3-94), the beam section dimensions must be increased or a higher concrete strength must be provided.¹⁰⁶

When $V_u \leq \phi 10\sqrt{f'_c} b_w d$, the spacing is computed as

$$s = \frac{1}{\frac{A_v}{s}} (n A_{sb}) \quad \text{Eq. 2-58}$$

where

- A_{sb} = stirrup bar area (one leg)
 n = number of stirrup legs

The maximum stirrup spacing for ACI codes¹⁰⁷ must not exceed $d/2$ or 24 in when $V_s \leq 4\sqrt{f'_c} b_w d$. $[V_s \leq 0.33\sqrt{f'_c} b_w d]$. When $V_s > 4\sqrt{f'_c} b_w d$, the maximum stirrup spacing must be reduced by half, to $d/4$ or 12 in. For the CSA A23.3-94 standard¹⁰⁸, maximum spacing must not exceed the smaller of $0.7d$ and 600 mm when $V_u < 0.1\lambda\phi_c f'_c b_w d$ or the smaller of $0.35d$ and 300 mm when $V_u \geq 0.1\lambda\phi_c f'_c b_w d$.

104. ACI 318-14, 21.2.1; ACI 318-11, 9.3.2.3; ACI 318-08, 9.3.2.3; ACI 318-05, 9.3.2.3; ACI 318-02, 9.3.2.3; ACI 318-99, 9.3.2.3

105. CSA A23.3-94, 8.4.3

106. ACI 318-14, 22.5.1.2; ACI 318-11, 11.4.7.9; ACI 318-08, 11.4.7.9; ACI 318-05, 11.5.7.9; ACI 318-02, 11.5.6.9; ACI 318-99, 11.5.6.9; CSA A23.3-94, 11.3.4

107. ACI 318-14, 9.7.6.2.2, 9.7.6.2.3; ACI 318-11, 11.4.5; ACI 318-08, 11.4.5; ACI 318-05, 11.5.5; ACI 318-02, 11.5.4; ACI 318-99, 11.5.4; CSA A23.3-94, 11.2.11

108. CSA A23.3-94, 11.2.11

When $V_s > 8\sqrt{f'_c} b_w d$ [$V_s \leq 0.66\sqrt{f'_c} b_w d$] for ACI codes and $V_s > 0.8\lambda\phi_c\sqrt{f'_c} b_w d$ for CSA A23.3-94 code, the beam section dimensions must be increased or a higher concrete strength must be provided¹⁰⁹.

The minimum shear reinforcement requirement is waived¹¹⁰ for joist construction and for beams satisfying the following criteria

For ACI 318-14, ACI 318-11 and ACI 318-08

- Beams with depth not exceeding 10 in. [250 mm].
- Beams integral with slabs (assumed by the program for all beams in two-way systems and beams within one-way slabs with overall width larger than effective beam flange width), with beam depth not exceeding 24 in. [600 mm] and not greater than the larger of 2.5 times flange thickness and 0.5 times web width.

For ACI 318-05/02/99

- Beams with depth not exceeding the largest of 10 in. [250 mm], 2.5 times flange thickness, and half of web width (rectangular beams are assumed by the program to have flange thickness equal to zero and web width equal to beam width).

For CSA A23.3-94

- Beams with depth not exceeding 250 mm.
- Beams integral with slabs (assumed by the program for all beams in two-way systems and beams within one-way slabs with overall width larger than effective beam flange width), with beam depth not exceeding the larger of 600 mm and 0.5 times web width.

2.12.2 Shear Calculations for CSA A23.3-14/04

For CSA A23.3-04 code, the program calculates shear strength V_c provided by concrete from the following equation¹¹¹

$$V_c = \phi_c \lambda \beta \sqrt{f'_c} b_w d_v \quad \text{Eq. 2-59}$$

109. ACI 318-14, 22.5.1.2; ACI 318-11, 11.4.7.9; ACI 318-08, 11.4.7.9; ACI 318-08, ACI 318-05, 11.5.7.9; ACI 318-02, 11.5.6.9; ACI 318-99, 11.5.6.9, CSA A23.3-94, 11.3.4

110. ACI 318-14, 7.6.3.1, 9.6.3.1; ACI 318-11, 11.4.6.1; ACI 318-08, 11.4.6.1; ACI 318-05, 11.5.6.1; ACI 318-02, 11.5.5.1; ACI 318-99, 11.5.5.1; ACI 318M-08, 11.4.6.1; ACI 318M-05, 11.5.6.1; ACI 318M-02, 11.5.5.1; ACI 318M-99, 11.5.5.1; CSA A23.3-94, 11.2.8.1

111. CSA A23.3-14, 11.3.4; CSA A23.3-04, 11.3.4

where

ϕ_c	=	resistance factor for concrete equal to 0.65 for regular and 0.70 for precast concrete
λ	=	factor to account for low-density concrete
b_w	=	beam web width
d_v	=	effective shear depth equal to greater of 0.9d or 0.72h
β	=	factor accounting for shear resistance of cracked concrete
$\sqrt{f'_c}$	≤	8 MPa.

When $V_u > V_c$, the beam must be provided with at least minimum shear reinforcement¹¹². Additionally minimum shear reinforcement is required for beam sections with overall thickness exceeding 750mm. Minimum area of shear reinforcement is calculated from the following formula¹¹³

$$A_v = 0.06 \sqrt{f'_c} \frac{b_w s}{f_y} \quad \text{Eq. 2-60}$$

Shear strength provided by shear reinforcement, V_s , is calculated from the following equation¹¹⁴

$$V_s = \frac{\phi_s A_v f_y d_v \cot(\theta)}{s} \quad \text{Eq. 2-61}$$

where

ϕ_s	=	resistance factor for reinforcement steel ¹¹⁵ equal to 0.85
A_v	=	area of shear reinforcement within distance s
f_y	=	yield strength of reinforcement
d_v	=	effective shear depth equal greater of 0.9d or 0.72h
s	=	spacing of transverse reinforcement
θ	=	the angle of inclination of diagonal compressive stresses.

Spacing of transverse reinforcement, s, must not exceed the smaller¹¹⁶ of 0.7 d and 600 mm when $V_u \leq 0.125\lambda\phi_c f'_c b_w d$ or the smaller¹¹⁷ of 0.35 d and 300 mm when $V_u > 0.125\lambda\phi_c f'_c b_w d$.

112. CSA A23.3-14, 11.2.8.1; CSA A23.3-04, 11.2.8.1

113. CSA A23.3-14, 11.2.8.2; CSA A23.3-04, 11.2.8.2

114. CSA A23.3-14, 11.3.5.1; CSA A23.3-04, 11.3.5.1

115. CSA A23.3-14, 8.4.3(a); CSA A23.3-04, 8.4.3(a)

116. CSA A23.3-14, 11.3.8.1; CSA A23.3-04, 11.3.8.1

117. CSA A23.3-14, 11.3.8.3; CSA A23.3-04, 11.3.8.3

When $V_u > 0.25\lambda\beta\sqrt{f'_c}b_wd_v$, the beam section dimensions must be increased or a higher concrete strength must be provided¹¹⁸.

The program recognizes special member types and assumes values of $\beta = 0.21$ and $\theta = 42\text{deg}$ in the following cases¹¹⁹

- Slabs (including slab bands for CSA code) having thickness not exceeding 350 mm.
- Beams having thickness not exceeding 250 mm.
- Concrete joist construction.
- Beams cast monolithically with the slab and having the depth below the slab not exceeding one-half of the width or 350mm.

For other general cases the program utilizes the so called simplified method. The value of θ is assumed as 35deg. For sections having or requiring at least minimum transverse reinforcement $\beta = 0.18$ is assumed. For sections with no transverse reinforcement the value of β is calculated as follows¹²⁰

$$\beta = \frac{230}{1000 + d_v} \quad \text{Eq. 2-62}$$

2.12.3 Shear Distribution

When no ribs are present, one way shear is proportioned to the slab and beam according to the following ratios

$$\alpha_{fl}l_2 / l_1, \quad 1 - \alpha_{fl}l_2 / l_1 \quad \text{Eq. 2-63}$$

When ribs are present (joist systems), one way shear is proportioned to the slab and beam according to the following ratios of cross-section areas

$$\frac{A_{\text{ribs}}}{A_{\text{ribs}} + A_{\text{beam}}}, \quad \frac{A_{\text{beam}}}{A_{\text{ribs}} + A_{\text{beam}}} \quad \text{Eq. 2-64}$$

Per requirement¹²¹ of CSA A23.3-14/04, the program allows distributing one-way shear in the slab between column and middle strips using the distribution factors which are proportional to the factors used for negative moment distribution. The fraction of the shear transferred to the beam remains unchanged irrespective of the use of this feature. This functionality is also provided for other design codes, to be selected at engineer's discretion.

118. CSA A23.3-94, 11.3.3

119. CSA A23.3-14, 11.3.6.2; CSA A23.3-04, 11.3.6.2

120. CSA A23.3-14, 11.3.6.3(b); CSA A23.3-04, 11.3.6.3(b)

121. CSA A23.3-14, 13.3.6.1; CSA A23.3-04, 13.3.6.1

2.12.4 One-Way Shear in Slab Bands (CSA A23.3-14/04)

One-way shear calculations in slab bands are done similar to shear in two-way slabs, except the column strip is substituted by the band strip. Shear forces are distributed between the band and the middle strip proportionally to negative moment distribution factors. Transverse reinforcement is not considered.

2.12.5 Shear in Drop Panels

When calculating one-way shear capacity for two-way solid and waffle slabs, the contribution of the drop panel cross-section can be optionally selected. For such slabs, the shear capacity is calculated in three regions, with increased V_c values in support (drop panel) locations. In case shear is distributed into column and middle strips, drop panel contribution is divided according to the share of drop panel cross-section area in each strip.

2.13 Torsion and Shear

Torsion analysis can be engaged for beam and one way systems using the **Torsion Analysis and Design** check box located on the **Solve Options** tab in the **Input | General Information** dialog box.

As far as torsional analysis is concerned, it is assumed that columns provide perfectly rigid supports so there is no transfer of torsional moments between spans. Within a span, torsional moments are considered only if a longitudinal beam is present. Torsion can be induced by concentrated and redistributed torsional loads and also, in the case of a beam with unsymmetrical cross sections, by self weight and area loads. A T-section with different flange widths is an example of a cross section which is not symmetrical. It can be obtained if a beam and a slab with different left and right widths are combined in the same span. However, in order for a flange to be considered in the torsional analysis its thickness has to be greater than twice the cover. If a flange is wider than the effective width then only the effective width is taken into account.

The design for torsion is based on a thin-walled tube, space truss analogy. For the Canadian code the simplified method is used. The program allows both equilibrium and compatibility torsion conditions. In the equilibrium mode, which is assumed by default, unreduced total value of the torsional design moment is used in the design. In the compatibility mode¹²², factored torsional moments that exceed cracking moment T_{er} ($0.67 T_{er}$ for CSA) are reduced to the value of T_{er} (0.67

122. ACI 318-14, 22.7.5.1; ACI 318-11, 11.5.2.2; ACI 318-08, 11.6.2.2; ACI 318-05, 11.6.2.2; ACI 318-02, 11.6.2.2; ACI 318-99, 11.6.2.2; CSA A23.3-14, 11.2.9.2; CSA A23.3-04, 11.2.9.2; CSA A23.3-94, 11.2.9.2

T_{cr} for CSA). However, it is user's responsibility to determine which mode is appropriate and the program does not perform any redistribution of internal forces if compatibility torsion is selected.

If torsion analysis is engaged then both torsion and shear actions contribute to the amount of required transverse (stirrup) reinforcement. However, additional longitudinal bars distributed along the perimeter of a cross-section are also required to provide torsional capacity.

For torsion design a span is divided into segments in the same way as for shear design. Governing values within a segment are used to design the whole segment. For stirrups, the governing values of torsional moment and shear force (acting simultaneously) will be these that produce the highest intensity of required stirrup area. On the other hand, the required area of longitudinal bars depends only on the torsional moment so the highest absolute value of torsional moment will govern. Since stirrup area depends both on shear and torsion whereas longitudinal bar area depends only on torsion, the governing values for stirrups and longitudinal bars can occur at different locations within a segment and for different load combinations. Governing values along with their location and associated load combination are provided in the design results report.

Effect of torsion within a segment will be neglected if the factored torsional moment, T_u , at every segment location is less than one fourth of the torsion cracking moment, T_{cr} , which equals

for ACI code¹²³

$$T_{cr} = 4 \phi \lambda \sqrt{f'_c} \frac{A_{cp}^2}{p_{cp}} \quad \text{Eq. 2-65}$$

for CSA A23.3-94 code¹²⁴

$$T_{cr} = 0.4 \phi_c \lambda \sqrt{f'_c} \frac{A_{cp}^2}{p_{cp}} \quad \text{Eq. 2-66}$$

for CSA A23.3-14/04 code¹²⁵

$$T_{cr} = 0.38 \phi_c \lambda \sqrt{f'_c} \frac{A_{cp}^2}{p_{cp}} \quad \text{Eq. 2-67}$$

A_{cp} denotes the area enclosed by outside perimeter of concrete section and p_{cp} is equal to the outside perimeter of concrete section.

123. ACI 318-08, R11.5.1; ACI 318-05, R11.6.1; ACI 318-02, R11.6.1; ACI 318-99, R11.6.1;

124. CSA A23.3-94, 11.2.9.1

125. CSA A23.3-04, 11.2.9.1

To be adequate for torsion design, a section has to be proportioned in such a way that combined shear stress due to shear and torsion does not exceed the limit value specified by the code. In ACI code this condition reads as¹²⁶

$$\sqrt{\left(\frac{V_u}{b_w d}\right)^2 + \left(\frac{T_u p_h}{1.7 A_{oh}^2}\right)^2} \leq \phi \left(\frac{V_c}{b_w d} + 8 \sqrt{f'_c}\right) \quad \text{Eq. 2-68}$$

The simplified method of CSA A23.3-94 standard defines this relation as¹²⁷

$$\frac{V_u}{b_w d} + \frac{T_u p_h}{A_{oh}^2} \leq 0.25 \phi_e f'_c \quad \text{Eq. 2-69}$$

Similar requirement for CSA A23.3-04 reads as follows¹²⁸

$$\sqrt{\left(\frac{V_u}{b_w d}\right)^2 + \left(\frac{T_u p_h}{1.7 A_{oh}^2}\right)^2} \leq 0.25 \phi_e f'_c \quad \text{Eq. 2-70}$$

In above relations, A_{oh} is the area enclosed by centerline of the outermost closed transverse reinforcement and p_h is the perimeter of that area. By default, flanges do not contribute to A_{oh} and p_h . For sections with flanges, flanges will only be taken into account for A_{oh} and p_h if the option to include stirrups in flanges is engaged in the torsion design. In the program output, the combined stress (left hand side of the above inequalities) is denoted as v_f and the limit value as ϕs_{vt} .

The required intensity of stirrup area to provide required torsional capacity is calculated from the following formula¹²⁹

$$\frac{A_t}{s} = \begin{cases} \frac{T_u}{2 \phi A_o f_{yt}} & \text{for ACI-318,} \\ \frac{T_u}{2 \phi_s A_o f_{yt}} & \text{for CSA A23.3-94,} \\ \frac{T_u}{2 \phi_s A_o f_{yt} \cot \theta} & \text{for CSA A23.3-14/04,} \end{cases} \quad \text{Eq. 2-71}$$

126. ACI 318-14, 22.7.7.1; ACI 318-11, 11.5.3.1; ACI 318-08, 11.5.3.1; ACI 318-05, 11.6.3.1; ACI 318-02, 11.6.3.1; ACI 318-99, 11.6.3.1;

127. CSA A23.3-94, 11.3.9.8

128. CSA A23.3-14, 11.3.10.4(b); CSA A23.3-04, 11.3.10.4(b)

129. ACI 318-14, 22.7.6.1; ACI 318-11, 11.5.3.6; ACI 318-08, 11.5.3.6; ACI 318-05, 11.6.3.6; ACI 318-02, 11.6.3.6; ACI 318-99, 11.6.3.6; CSA A23.3-14, 11.3.10.3; CSA A23.3-04, 11.3.10.3; CSA A23.3-94, 11.3.9.4

where the gross area enclosed by the shear path¹³⁰, A_o , is taken as $0.85A_{oh}$. A_t/s is the quantity per stirrup leg. Concrete shear and torsion strength reduction factor¹³¹, ϕ , for ACI-318 codes is equal to 0.75 for the 99 edition and 0.75 for later editions.

The total requirement for stirrup intensity combining shear and torsion equals¹³²

$$\frac{A_{v+2t}}{s} = \frac{A_v}{s} + 2\frac{A_t}{s} \quad \text{Eq. 2-72}$$

This value cannot be taken less than minimum stirrup area required by the codes. The minimum code requirements can be written in the following form¹³³

$$A_{v+2t} = \frac{b_w s}{f_{yt}} \times \begin{cases} \max(0.75\sqrt{f'_c}, 50) & \text{for ACI 318-11/08/05/02,} \\ 50 & \text{for ACI 318-99,} \\ \max(0.062\sqrt{f'_c}, 0.35) & \text{for ACI 318M-11/08/05,} \\ \max(\sqrt{f'_c} / 16, 0.33) & \text{for ACI 318M-02,} \\ 0.33 & \text{for ACI 318M-99,} \\ 0.06\sqrt{f'_c} & \text{for CSA A23.3-04/94.} \end{cases} \quad \text{Eq. 2-73}$$

In addition to stirrup spacing requirement defined for shear, program imposes one more torsion specific requirement for all ACI codes¹³⁴ which limits the spacing to the smallest of $p_h / 8$, and 12 in [300 mm]. Based on the total required stirrup area intensity and spacing requirements, the program attempts to select stirrups taking also into account that if stirrups with more than two legs have to be used then the area of an outer leg must not be less than A_t .

2.13.1 Additional Longitudinal Reinforcement for ACI 318 and CSA A23.3-94

The area of additional longitudinal reinforcement, A_ℓ , is calculated from¹³⁵

130. CSA A23.3-14, 11.3.10.3; CSA A23.3-04, 11.3.10.3; CSA A23.3-94, 11.3.9.7

131. ACI 318-14, 21.2.1; ACI 318-11, 9.3.2.3; ACI 318-08, 9.3.2.3; ACI 318-05, 9.3.2.3; ACI 318-02, 9.3.2.3; ACI 318-99, 9.3.2.3

132. ACI 318-14, R9.5.4.3; ACI 318-11, R11.5.2.8; ACI 318-08, R11.5.3.8; ACI 318-05, R11.6.3.8; ACI 318-02, R11.6.3.8; ACI 318-99, R11.6.3.8

133. ACI 318-14, 9.6.4.2; ACI 318-11, 11.5.5.2; ACI 318-08, 11.5.5.2; ACI 318-05, 11.6.5.2; ACI 318-02, 11.6.5.2; ACI 318-99, 11.6.5.2; ACI 318M-11, 11.5.5.2; ACI 318M-08, 11.5.5.2; ACI 318M-05, 11.6.5.2; ACI 318M-02, 11.6.5.2; ACI 318M-99, 11.6.5.2; CSA A23.3-14, 11.2.8.2; CSA A23.3-04, 11.2.8.2; CSA A23.3-94, 11.2.8.4

134. ACI 318-14, 9.7.6.3.3; ACI 318-11, 11.5.6.1; ACI 318-08, 11.5.6.1; ACI 318-05, 11.6.6.1; ACI 318-02, 11.6.6.1; ACI 318-99, 11.6.6.1

$$A_l = \frac{T_u p_h}{2 \phi A_o f_y} \quad \text{Eq. 2-74}$$

For ACI code it is also checked against the following minimum value¹³⁶

$$A_{l,min} = \frac{5 \sqrt{f'_c} A_{cp}}{f_y} - \left(\frac{A_t}{s} \right) p_h \frac{f_{yt}}{f_y} \quad \text{Eq. 2-75}$$

where A_t / s is calculated from Eq. 2-56 but is not taken less than $25b_w / f_{yt}$. Longitudinal bars are selected in such a way that their area is not less than $A_l \geq A_{l,min}$ and that number of longitudinal bars in a section is enough to provide a bar in every corner of a stirrup and preserve spacing between bars not higher than 12 in [300 mm]. Also, bar sizes are selected not to have diameter less than No. 3 bar and not less than 1/24 of stirrup spacing for ACI codes¹³⁷ and 1/16 for CSA standard¹³⁸.

2.13.2 Additional Longitudinal Reinforcement for CSA A23.3-14/04

The additional longitudinal reinforcement, A_l , will only be calculated for CSA A23.3-14/04 if option COMBINED M-V-T REINF. DESIGN is unchecked in the **Solve Options** dialog window. If this option is checked (default setting) then no additional longitudinal reinforcement is calculated because the regular top and bottom reinforcement will automatically be proportioned to resist combined action of flexure, shear and torsion.

Proportioning of longitudinal reinforcement for sections subjected to combined shear and torsion in flexural regions is based on the requirement that the resistance of the longitudinal reinforcement has to be greater or equal to the axial force that can be developed in this reinforcement. In sections with no axial action ($N_f = 0$ and $V_p = 0$) that force is equal to¹³⁹

- flexural tension side

$$F_{lt} = F_{lt,flexure} + F_{lt,shear}$$

$$F_{lt,flexure} = \frac{M_f}{d_v} \quad \text{and} \quad F_{lt,shear} = \cot \theta \sqrt{\left(V_f - 0.5 V_s \right)^2 + \left(\frac{0.45 p_h T_f}{2 A_o} \right)^2}$$

135. ACI 318-14, 22.7.6.1; ACI 318-11, 11.5.3.7; ACI 318-08, 11.5.3.7; ACI 318-05, 11.6.3.7; ACI 318-02, 11.6.3.7; ACI 318-99, 11.6.3.7; CSA A23.3-94, 11.3.9.5

136. ACI 318-14, 9.6.4.3, 9.7.5.1; ACI 318-11, 11.5.5.3; ACI 318-08, 11.5.5.3; ACI 318-05, 11.6.5.3; ACI 318-02, 11.6.5.3; ACI 318-99, 11.6.5.3

137. ACI 318-14, 9.7.5.1, 9.7.5.2; ACI 318-11, 11.5.6.2; ACI 318-08, 11.5.6.2; ACI 318-05, 11.6.6.2; ACI 318-02, 11.6.6.2; ACI 318-99, 11.6.6.2

138. CSA A23.3-14, 11.2.7; CSA A23.3-04, 11.2.7; CSA A23.3-94, 11.2.7

139. CSA A23.3-14, 11.3.9.2, 11.3.9.3, 11.3.10.6; CSA A23.3-04, 11.3.9.2, 11.3.9.3, 11.3.10.6

$$F_{lt} = \frac{M_f}{d_v} + \cot\theta \sqrt{\left(V_f - 0.5V_s\right)^2 + \left(\frac{0.45p_h T_f}{2A_o}\right)^2} \quad \text{Eq. 2-76}$$

- flexural compression side

$$F_{lc} = F_{lc,flexure} + F_{lc,shear}$$

$$F_{lc,flexure} = -\frac{M_f}{d_v} \text{ and } F_{lc,shear} = \cot\theta \sqrt{\left(V_f - 0.5V_s\right)^2 + \left(\frac{0.45p_h T_f}{2A_o}\right)^2}$$

$$F_{lc} = -\frac{M_f}{d_v} + \cot\theta \sqrt{\left(V_f - 0.5V_s\right)^2 + \left(\frac{0.45p_h T_f}{2A_o}\right)^2} \quad \text{Eq. 2-77}$$

These forces can be decomposed¹⁴⁰ into flexure and shear components. The flexure components, $F_{lt,flexure}$ and $F_{lc,flexure}$, account for the action of the bending moment, M_f , whereas the shear components, $F_{lt,shear}$ and $F_{lc,shear}$, account for the action of the shear force, V_f , and the torsional moment, T_f . The amounts of reinforcement needed to resist the flexure components are calculated separately in the flexure design procedure. The total amount of the additional longitudinal reinforcement, A_ℓ , needed to resist shear and torsion will be determined as follows

$$A_l = \frac{F_{lt,shear} + F_{lc,shear}}{\phi_s f_y} = \frac{2\cot\theta \sqrt{\left(V_f - 0.5V_s\right)^2 + \left(\frac{0.45p_h T_f}{2A_o}\right)^2}}{\phi_s f_y} \quad \text{Eq. 2-78}$$

If only torsion is present ($V_f = 0$ and $V_s = 0$), then (assuming¹⁴¹ $\theta = 35^\circ$) A_ℓ would reduce to

$$A_l = 2\cot 35^\circ \frac{\left(\frac{0.45p_h T_f}{2A_o}\right)}{\phi_s f_y} = 1.285 \frac{p_h T_f}{2A_o \phi_s f_y} \quad \text{Eq. 2-79}$$

which is comparable (and conservative) to the additional amount of longitudinal reinforcement due to torsion required in accordance with the previous edition of the CSA A23.3 standard¹⁴².

2.13.3 Investigation Mode

In the investigation mode when transverse and longitudinal reinforcement is input by the user, the program checks the combined shear and torsional capacity of the system in terms of required and provided reinforcement area. In other words, the provided area of reinforcement is compared to

140. See Eq. 7-42, pp 294 in Ref. [7]

141. CSA A23.3-14, 11.3.6.3; CSA A23.3-04, 11.3.6.3

142. CSA A23.3-94, 11.3.9.5

the area of reinforcement required to resist applied loads. This is a different approach than for flexure and shear actions without coupling where design forces are directly compared to capacity. In the case where torsion and shear stirrup requirements are combined, the approach of comparing total reinforcement area is more convenient since it does not require dividing stirrup area into a part that resists torsion only and a part that resists shear only. For consistency, additional longitudinal reinforcement required for torsion and shear is also checked in terms of provided and required area. Other requirements, e.g. bar or stirrup spacing, number of longitudinal bars, area of stirrup outer leg, and combined stresses in concrete due to shear and torsion are checked also. Exceeded capacity and other conditions are flagged in the **Design Results** section of the report.

2.14 Area of Reinforcement

The program calculates the required area of reinforcement (top and bottom) based on the values of bending moment envelope within the clear span. For rectangular sections with no compression reinforcement, the design flexural strength of the column strip, middle strip and beam must equal the factored design moment

$$M_u = \phi f_y A_s \left(d - \frac{A_s f_y}{2(0.85 f'_c) b} \right) \quad \text{Eq. 2-80}$$

The reinforcement can therefore be computed from

$$A_s = \frac{0.85 f'_c b}{f_y} \left(d - \sqrt{d^2 - \frac{2M_u}{\phi 0.85 f'_c b}} \right) \quad \text{Eq. 2-81}$$

For CSA A23.3

$$M_r = \phi_s f_y A_s \left(d - \frac{\phi_s A_s f_y}{2\alpha_1 \phi_e f'_c b} \right) \quad \text{Eq. 2-82}$$

The effective depth of the section is taken as the overall section depth minus the distance from the extreme tension fiber to the tension reinforcement centroid. The column strip depth may include all or part of the drop panel depth. The drop depth will not be included in the effective depth of the column strip when the drop does not extend at least one-sixth the center-to-center span length in all directions, or when the drop depth below the slab is less than one-quarter the slab depth. If the drop extends at least one-sixth the center-to-center span length and the drop depth is greater than one-quarter the distance from the edge of the drop panel to the face of the column or column capital, the excess depth will not be included in the column strip effective depth. If the drop width is less than the column strip width, the drop width will be used in the computation of the required reinforcement.

When computing negative slab reinforcement and additional reinforcement for negative unbalanced moments over the supports, the contribution of the depth of transverse beam can be optionally selected. The contribution of transverse beam will be considered, if it extends beyond the critical section and if its depth exceeds the depth of the drop panel. The increase of the slab thickness is limited to $\frac{1}{4}$ of the extent of the transverse beam beyond the face of support, identical to design depth limitations for drop panels. If transverse beam depth exceeds the limit, excess depth is disregarded in the reinforcement calculations.

For two-way slabs with beams, an option exists when designing reinforcement for positive bending moments, to include a portion of slab as beam flanges¹⁴³

(T-Section). The width of the column strip is then decreased accordingly. The extent of the flanges on each side is limited to four times slab thickness and not more than the projection of the beam under the slab. When this option is not selected, beam geometry is treated as rectangular. When calculating required reinforcement for negative bending moments the geometry of the beam is treated as rectangular, having beam width equal to web width. However, when a T-Section is selected, reinforcing bar design is performed assuming that they are distributed across the beam width including the flanges.

For the ACI 318-99 code the strength reduction factor for flexure calculations is specified as $\phi=0.90$.¹⁴⁴ For the ACI 318-14, ACI 318-11, ACI 318-08, ACI 318-05, and ACI 318-02 codes the strength reduction factor for tension-controlled sections ($\epsilon_t \geq 0.005$) is equal $\phi=0.90$. For transition sections ($f_y / E_s < \epsilon_t < 0.005$) the strength reduction factor can be linearly interpolated by the formula¹⁴⁵

$$\phi = 0.65 + \frac{0.90 - 0.65}{0.005 - f_y / E_s} (\epsilon_t - f_y / E_s) \quad \text{Eq. 2-83}$$

ACI 318-14, ACI 318-11, ACI 318-08, ACI 318-05, and ACI 318-02 codes specify the strength reduction factor for compression controlled sections ($\epsilon_t < f_y / E_s$) as equal $\phi=0.65$. The reduction factors for transition or compression controlled sections have application primarily in investigation mode of the program. In design mode the program performs the calculations assuming a tension controlled section ($\epsilon_t \geq 0.005$) or a section with compressive reinforcement (if enabled).

The ACI 318-99 code¹⁴⁶ requires keeping the steel ratio below the maximum value, ρ_{max} , equal to 75% of steel ratio producing balanced strain condition, ρ_b , where¹⁴⁷

143. See footnote 50

144. ACI 318-99, 9.3.2

145. ACI 318-14, 21.2.1; ACI 318-11, 9.3.2; ACI 318-08, 9.3.2; ACI 318-05, 9.3.2; ACI 318-02, 9.3.2

146. ACI 318-99, 10.3.3

147. ACI 318-99, 8.4.3

$$\rho_b = 0.85\beta_1 \frac{f'_c}{f_y} \frac{87}{87 + f_y} \quad \text{Eq. 2-84}$$

with

$$\beta_1 = \begin{cases} 0.85 & \text{for } f'_c \leq 4 \text{ ksi,} \\ 0.65 & \text{for } f'_c \geq 8 \text{ ksi,} \\ 1.05 - 0.05f'_c & \text{for } 4 \text{ ksi} < f'_c < 8 \text{ ksi.} \end{cases}$$

For CSA code the value of ρ_{max} equals ρ_b and is calculated as follows¹⁴⁸

$$\rho_{max} = \rho_b = \alpha_1 \beta_1 \frac{\phi_c f'_c}{\phi_s f_y} \frac{700}{700 + f_y} \quad \text{Eq. 2-85}$$

where

$$\begin{aligned} \alpha_1 &= 0.85 - 0.0015 f'_c \geq 0.67_1 \\ \beta_1 &= 0.97 - 0.0025 f'_c \geq 0.67 \end{aligned}$$

The ACI 318-14, ACI 318-11, ACI 318-08, ACI 318-05, and ACI 318-02 codes control the amount of reinforcement by limiting the value of net tensile strain ($\epsilon_t \geq 0.004$)¹⁴⁹. The program satisfies this condition by assuming a tensioned controlled section with $\epsilon_t \geq 0.005$. From this assumption the equivalent maximum reinforcement ratio for rectangular section can be written as

$$\rho_{max} = \frac{0.003}{0.003 + 0.005} \frac{0.85\beta_1 f'_c}{f_y} \quad \text{Eq. 2-86}$$

If the calculated reinforcement exceeds the maximum allowed, a message will appear in the output. In such cases, it is recommended that the engineer review the slab thickness to ensure a more satisfactory design. If compression reinforcement calculations are enabled, the program will attempt to add compression reinforcement to the section. The program is capable to design compressive reinforcement for any design strip (column, middle, and beam) including also unbalanced moment strip¹⁵⁰.

148. CSA A23.3-14, 10.5.2; CSA A23.3-04, 10.5.2; CSA A23.3-94, 10.5.2; Eq. 4-24, pp 110 in Ref. [16]

149. ACI 318-14, 7.3.3.1, 8.3.3.1, 9.3.3.1; ACI 318-11, 10.3.5; ACI 318-08, 10.3.5; ACI 318-05, 10.3.5; ACI 318-02, 10.3.5

150. ACI 318-14, 8.4.2.3.2, 8.4.2.3.3; ACI 318-11, 13.5.3.2; ACI 318-08, 13.5.3.2; ACI 318-05, 13.5.3.2; ACI 318-02, 13.5.3.2; ACI 318-99, 13.5.3.2; CSA A23.3-14, 13.3.5.3; CSA A23.3-04, 13.3.5.3; CSA A23.3-94, 13.11.2

The amount of reinforcement provided will not be less than the code prescribed minimum. For the ACI 318 code, the minimum ratio of reinforcement area to the gross sectional area of the slab strip using Grade 60 reinforcement is taken as 0.0018. When reinforcement yield strength exceeds 60 ksi, the minimum ratio is set to $0.0015 \times 60 / f_y$. For reinforcement with yield strength less than 60 ksi, the minimum ratio is set to 0.0020. In no case will this ratio be less than 0.0014 (See Table 2-5)¹⁵¹. The CSA Standard requires a minimum ratio of slab reinforcement area to gross sectional area of the slab strip equal to 0.002 for all grades of reinforcement¹⁵².

f_y (ksi)	A_s/A_g
< 60	0.0020
≥ 60	$\frac{0.0018 \times 60}{f_y} \geq 0.0014$

Table 2.4 Minimum Ratios of Reinforcement to Gross Concrete Area

According to ACI code for beams and positive moment regions of joist slabs, minimum reinforcement provided will not be less than¹⁵³

$$A_{s,\min} = \frac{3\sqrt{f'_c}}{f_y} b_w d \quad \text{Eq. 2-87}$$

and not less than $200b_w d/f_y$ where b_w is the web width of the section. For statically determinate sections with flange in tension, b_w is replaced by the smaller of $2b_w$ and the width of the flange.

Similar equation prescribed by CSA A23.3 code has the form¹⁵⁴

$$A_{s,\min} = \frac{0.2\sqrt{f'_c}}{f_y} b_t h \quad \text{Eq. 2-88}$$

where b_t is the width of the tension zone of the section. Additionally, for T-sections having flange in tension the CSA code limits value of b_t to $1.5b_w$ for single sided flanges and to $2.5b_w$ for double sided flanges.

When designing reinforcement for longitudinal slab bands according to CSA code, program assumes identical minimum steel requirements as for beams.

151. ACI 318-14, 7.6.1.1, 8.6.1.1; ACI 318-11, 7.12.2.1; ACI 318-08, 7.12.2.1; ACI 318-05, 7.12.2.1; ACI 318-02, 7.12.2.1; ACI 318-99, 7.12.2.1

152. CSA A23.3-14, 7.8.1; CSA A23.3-04, 7.8.1; CSA A23.3-94, 7.8.1

153. ACI 318-14, 9.6.1.1, 9.6.1.2; ACI 318-11, 10.5.1; ACI 318-08, 10.5.1; ACI 318-05, 10.5.1; ACI 318-02, 10.5.1; ACI 318-99, 10.5.1

154. CSA A23.3-14, 10.5.1.2(b); CSA A23.3-04, 10.5.1.2(b); CSA A23.3-94, 10.5.1.2(b)

2.14.1 Design for Combined Flexure, Shear, and Torsion

CSA A23.3-14/04 requires, in proportioning of longitudinal reinforcement, to include additional tension forces caused by shear and torsion¹⁵⁵. To achieve this, the program calculates forces developed in the longitudinal reinforcement due to flexure, shear, and torsion.

On the flexural tension side the force in longitudinal reinforcement is equal to¹⁵⁶

$$F_{lt} = \frac{|M_f|}{d_v} + \cot\Theta \sqrt{\left(|V_f| - 0.5V_s\right)^2 + \left(\frac{0.45p_h T_f}{2A_o}\right)^2} \quad \text{Eq. 2-89}$$

On the flexural compression side the force in longitudinal reinforcement is equal to¹⁵⁷

$$F_{lc} = \cot\Theta \sqrt{\left(|V_f| - 0.5V_s\right)^2 + \left(\frac{0.45p_h T_f}{2A_o}\right)^2} - \frac{|M_f|}{d_v} \quad \text{Eq. 2-90}$$

but not less than zero.

For these forces, longitudinal reinforcement area is calculated from the following equations¹⁵⁸

$$A_{lt} = \frac{F_{lt}}{\phi f_y} \quad \text{Eq. 2-91}$$

$$A_{lc} = \frac{F_{lc}}{\phi f_y} \quad \text{Eq. 2-92}$$

Taking into account both positive and negative bending moments (resulting from all load combinations and load patterns) and checking against area of steel required for flexure only, the final areas of top and bottom reinforcement can be calculated from

$$A_{top} = \begin{cases} \max\{A'_s, A_{lc}\} & \text{if } M_f \geq 0 \\ \max\{A_s, A_{lt}\} & \text{if } M_f < 0 \end{cases} \quad \text{Eq. 2-93}$$

$$A_{bot} = \begin{cases} \max\{A_s, A_{lt}\} & \text{if } M_f \geq 0 \\ \max\{A'_s, A_{lc}\} & \text{if } M_f < 0 \end{cases} \quad \text{Eq. 2-94}$$

155. CSA A23.3-14, 11.3.9; CSA A23.3-04, 11.3.9

156. CSA A23.3-14, 11.3.9.2 and 11.3.10.6; CSA A23.3-04, 11.3.9.2 and 11.3.10.6

157. CSA A23.3-14, 11.3.9.3 and 11.3.10.6; CSA A23.3-04, 11.3.9.3 and 11.3.10.6

158. CSA A23.3-14, 11.3.9.1; CSA A23.3-04, 11.3.9.1

2.15 Reinforcement Selection

According to ACI-318 code¹⁵⁹, the default minimum clear spacing of reinforcement for both slabs and beams is taken as the larger of the two prescribed minima of one bar diameter, d_b , or 1 in.

According to CSA code¹⁶⁰, the default minimum clear spacing of reinforcement for both slabs and beams is taken as the larger of the two prescribed minima of 1.4 times the bar diameter, d_b , or 1.2 in (30mm). The user may select a clear spacing greater than the default value to take into account tolerances for reinforcement placement¹⁶¹ and other project specific considerations.

For two-way systems, the maximum spacing of reinforcement is kept at two times the slab thickness for the ACI code¹⁶² and three times the slab thickness for the CSA code¹⁶³, but no more than 18 in. or 500 mm respectively. For joist systems the limit is increased to 5 times the slab thickness¹⁶⁴. When calculating negative support reinforcement for the CSA code¹⁶⁵, the program assumes that banded reinforcement over supports is spaced at a maximum of $1.5 h_c$ and no more than 250 mm.

For one-way slabs, the maximum spacing is limited to¹⁶⁶ the smaller of three times the slab thickness and 18 in. [500 mm]. Additionally, the maximum spacing of reinforcement, s , in beams and one-way slabs is selected so that the following crack control requirements of the ACI and the CSA codes¹⁶⁷ are met

159. ACI 318-14, 25.2.1; ACI 318-11, 7.6.1; ACI 318-08, 7.6.1; ACI 318-05, 7.6.1; ACI 318-02, 7.6.1; ACI 318-99, 7.6.1

160. CSA A23.3-14, Annex A, 6.6.5.2; CSA A23.3-04, Annex A, 6.6.5.2; CSA A23.3-94, Annex A, A12.5.2

161. See ACI 317-06 (Ref. [7])

162. ACI 318-14, 8.7.2.2; ACI 318-11, 13.3.2; ACI 318-08, 13.3.2; ACI 318-05, 13.3.2; ACI 318-02, 13.3.2; ACI 318-99, 13.3.2

163. CSA A23.3-14, 13.10.4; CSA A23.3-04, 13.10.4; CSA A23.3-94, 13.11.3(b)

164. ACI 318-14, 7.7.6.2.1, 8.7.2.2; ACI 318-11, 7.12.2.2; ACI 318-08, 7.12.2.2; ACI 318-05, 7.12.2.2; ACI 318-02, 7.12.2.2; ACI 318-99, 7.12.2.2; CSA A23.3-14, 7.8.3; CSA A23.3-04, 7.8.3; CSA A23.3-94, 7.8.3

165. CSA A23.3-14, 13.10.4; CSA A23.3-04, 13.10.4; CSA A23.3-94, 13.11.3(a)

166. ACI 318-14, 7.7.2.3, 8.7.2.2; ACI 318-11, 7.6.5; ACI 318-08, 7.6.5; ACI 318-05, 7.6.5; ACI 318-02, 7.6.5; ACI 318-99, 7.6.5; CSA A23.3-14, 7.4.1.2; CSA A23.3-04, 7.4.1.2; CSA A23.3-94, 7.4.1.2

167. ACI 318-14, 24.3.2, 24.3.3; ACI 318-11, 10.6.4; ACI 318-08, 10.6.4; ACI 318-05, 10.6.4; ACI 318-02, 10.6.4; ACI 318-99, 10.6.4; CSA A23.3-14, 10.6.1; CSA A23.3-04, 10.6.1; CSA A23.3-94, 10.6.1

$$s \leq \min\left(\frac{900,000}{f_y} - 2.5 c_c, \frac{480,000}{f_y}\right) \quad (\text{ACI 318-11/08/05})$$

$$s \leq \min\left(\frac{900}{f_y} - 2.5 c_c, \frac{432}{f_y}\right) \quad (\text{ACI 318-02/99}) \quad \text{Eq. 2-95}$$

$$0.6 f_y (d_c A)^{\frac{1}{3}} \leq z_{\max} \quad (\text{CSA A23.3-14/04/94})$$

where

- c_c = least distance from the surface of bar to the tension face,
- d_c = distance from extreme tension fiber to center of the closest longitudinal bar
- A = effective tension area of concrete surrounding the flexural tension reinforcement and extending from the extreme tension fiber to the centroid of the flexural tension reinforcement and an equal distance past that centroid, divided by the number of bars or wires
- z_{\max} = 30 000 N/mm for interior exposure or 25 000 N/mm for exterior exposure, multiplied by a factor of 1.2 for epoxy-coated reinforcement

An iterative process is performed to determine the number of bars and bar size. The initial number of bars is determined by dividing the total reinforcement area required, A_s , by the area of one bar, A_{sb} , of the input minimum bar size. Next, the spacing is determined. If the minimum spacing limitations are violated, the bar size is increased and the iterative process is repeated until all bars sizes have been checked. If the maximum spacing limitations are not met, the number of bars required to satisfy these limitations is computed and the iteration process terminates.

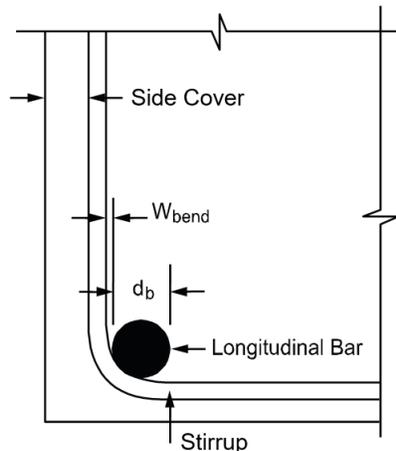


Figure 2.21 Width due to stirrup bend

For beams, layered reinforcement is provided if sufficient beam width is not available. The clear distance between layers is assumed 1.0 in [30 mm] but the user can change this value. By default, the program assumes a 1.5 in [40 mm] side cover to stirrup for width calculations and this value can also be changed by the user. The program also assumes that the longitudinal bar makes contact

at the middle of the stirrup bend where the minimum inside diameter of the bend is four times stirrup diameter¹⁶⁸. Therefore, an additional width is added to the cover for longitudinal bars less than size #14 (#45 for CAN/CSA-G30.18) (Figure 2-21). This additional width due to the bend, w_{bend} is equal to

$$w_{bend} = \left(1 - \frac{\sqrt{2}}{2}\right) \left(r - \frac{d_b}{2}\right) \tag{Eq. 2-96}$$

where

- d_b = diameter of the longitudinal bar
- r = inside radius of bend for stirrup

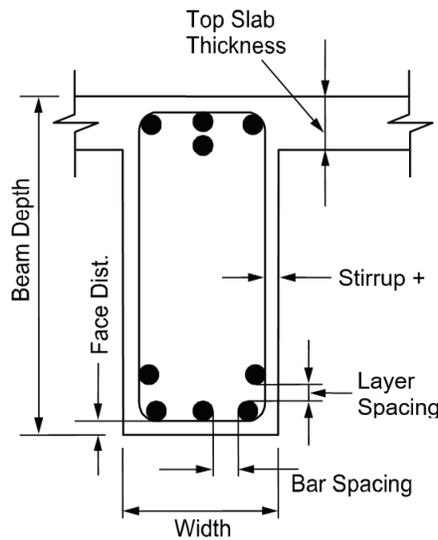


Figure 2.22 Detail reinforcement in longitudinal beams

Bar-length computations are performed for two-way slabs and longitudinal beams. For top reinforcement at the supports, the length for long bars is given by

$$l_{long} = \max \begin{cases} \max(l_{50\%}) + l_{d,long}, \\ \max(l_{pi}) + \max\{d, 12d_b, l_n / 16\}, \\ l_{fos} + l_{cr,long}, \end{cases} \tag{Eq. 2-97}$$

and the length for short bars is given by

168. ACI 318-14, 25.3.2; ACI 318-11, 7.2.2; ACI 318-08, 7.2.2; ACI 318-05, 7.2.2; ACI 318-02, 7.2.2; ACI 318-99, 7.2.2; CSA A23.3-04, 7.1.1 and Table 16 in Annex A; CSA A23.3-94, 7.1.1 and Table 16 in Annex A

$$l_{short} = \max \left\{ \begin{array}{l} \max(l_{50\%}) + \max\{d, 12d_b\}, \\ l_{fos} + \max\{l_{d,short}, l_{cr,short}\}, \end{array} \right. \quad \text{Eq. 2-98}$$

where

$\max(l_{50\%})$	=	maximum distance to the points of 50% demand,
$\max(l_{pi})$	=	maximum distance to the points of inflection (P.I.),
l_d	=	bar development length ¹⁶⁹ ,
d	=	effective depth,
d_b	=	bar diameter,
l_n	=	clear span length,
l_{fos}	=	distance to the face of support (column),
l_{cr}	=	minimum code prescribed extension.

These bar lengths are then compared and adjusted if necessary to meet the minimum extension requirements for reinforcement specified by the code.¹⁷⁰ Additionally the program may select continuous top bars in those spans where steel is required by calculation in mid-span at top.

If the computed bar lengths overlap, it is recommended that such reinforcement be run continuously. The printed bar lengths do not include hooks or portions of bars bent down into spandrel beams or other bar-bend configurations. If a bar starts (or ends) at a column support the length of the bar is measured from (or to) the center line of the column. The selection of bar lengths for positive reinforcement for flat plates, flat slabs, and beam-supported slabs, is based strictly on the minimum values of the code.

The development length depends on the following factors: concrete cover, minimum transverse reinforcement, special transverse reinforcement, layer location bar size and bar clear spacing. The development length is calculated from the general expression¹⁷¹ below, but not less¹⁷² than 12 in [300 mm]

169. Chapter 25 in ACI 318-14; Chapter 12 in ACI 318-11, ACI 318-08, ACI 318-05, ACI 318-02, and ACI 318-99; CSA A23.3-14, Clause 12.2; CSA A23.3-04, Clause 12.2; CSA A23.3-94, Clause 12.2

170. Figure 8.7.4.3a in ACI 318-14; Figure 13.3.8 in ACI 318-11, ACI 318-08, ACI 318-05, ACI 318-02, and ACI 318-99; CSA A23.3-14, Figure 13.1; CSA A23.3-04, Figure 13.1; CSA A23.3-94, Figure 13.1

171. ACI 318-14, 25.4.2.3; ACI 318-11, 12.2.3; ACI 318-08, 12.2.3; ACI 318-05, 12.2.3; ACI 318-02, 12.2.3; ACI 318-99, 12.2.3; ACI 318M-11, 12.2.3; ACI 318M-08, 12.2.3; ACI 318M-05, 12.2.3; ACI 318M-02, 12.2.3; ACI 318M-99, 12.2.3; CSA A23.3-14, 12.2.2; CSA A23.3-04, 12.2.2; CSA A23.3-94, 12.2.2

172. ACI 318-14, 25.4.2.1; ACI 318-11, 12.2.1; ACI 318-08, 12.2.1; ACI 318-05, 12.2.1; ACI 318-02, 12.2.1; ACI 318-99, 12.2.1; CSA A23.3-14, 12.2.1; CSA A23.3-04, 12.2.1; CSA A23.3-94, 12.2.1

$$l_d = d_b \frac{f_y}{\sqrt{f'_c}} \frac{\psi_t \psi_e \psi_s}{\left(\frac{c_d + K_{tr}}{d_b} \right)} \times \begin{cases} \frac{3}{40\lambda} & \text{for ACI 318-11/08,} \\ \frac{1}{1.1\lambda} & \text{for ACI 318M-11/08,} \\ \frac{3\lambda}{40} & \text{for ACI 318-05/02/99,} \\ \frac{\lambda}{1.1} & \text{for ACI 318M-05/02/99,} \\ \frac{1.15\pi\lambda}{4} & \text{for CSA A23.3-14/04/94,} \end{cases} \quad \text{Eq. 2-99}$$

where

- ψ_t = reinforcement location factor equal to 1.3 if more than 12 in [300 mm] of fresh concrete is cast in the member below the development length or splice, or equal to 1.0 otherwise,
- ψ_e = coating factor equal to 1.0 for uncoated reinforcement; for epoxy coated reinforcement with covers less than $3d_b$ or clear spacing less than $6d_b$ the factor is equal to 1.5 and for all other epoxy coated bars it equals 1.2,
- ψ_s = reinforcement size factor equal to 1.0 for bars #7 [22] and larger or equal to 0.8 for bars #6 [19] and smaller if ACI 318 [ACI 318M] is selected; for CSA A23.3 the factor is equal to 1.0 for bars 25M and larger or equal to 0.8 for bars 20M and smaller,
- λ = lightweight aggregate concrete factor equal to 1.0 for normal concrete and: 0.75 for lightweight concrete per ACI 318-14, ACI 318-11 and ACI 318-08 1.3 for lightweight concrete per ACI 318-05/02/99 1.3 for low density concrete per CSA A23.3-14/04/94 1.2 for semi low density concrete per CSA A23.3-14/04/94
- K_{tr} = transverse reinforcement index conservatively assumed zero,
- c_b = smaller of the distance from bar surface to the closest concrete surface and one-half (two thirds for CSA¹⁷³) center-to-center bar spacing.¹⁷⁴

Additionally, the product of $\psi_t \psi_e$ is not taken greater than 1.7 and the development length, ℓ_d , is reduced¹⁷⁵ by the factor of $A_{s,req}$ to $A_{s,prov}$ where the provided area of flexural reinforcement, $A_{s,prov}$, exceeds the area required by analysis, $A_{s,req}$.

The final calculated or minimum development length for each bar is tabulated in the design results section of the program results report. In two-way slab systems without beams, the development length presented is often controlled by the minimum development length.

Where flexural reinforcement is terminated in a tension zone, spSlab and spBeam provide a warning to require an extension of the bar beyond what is required for flexure. For ACI code, the

173. Denoted as d_{cs} in CSA A23.3-14, 3.2; CSA A23.3-04, 2.3 and CSA A23.3-94, 12.0

174. ACI 318-05, 2.1; ACI 318-02, 12.2.4; ACI 318-99, 12.2.4

175. ACI 318-14, 25.4.10.1; ACI 318-11, 12.2.5; ACI 318-08, 12.2.5; ACI 318-05, 12.2.5; ACI 318-02, 12.2.5; ACI 318-99, 12.2.5; CSA A23.3-14, 12.2.5; CSA A23.3-04, 12.2.5; CSA A23.3-94, 12.2.5

shear capacity at the cutoff point for each bar is evaluated for satisfying the shear demand does not exceed permissible shear limit in 12.10.5.1. Final bar length shall be extended beyond the minimum reported to meet one of the three conditions outlined in 12.10.5

2.16 Concentration and Additional Reinforcement

spSlab computes the fraction of the unbalanced moment, $\gamma_f M_u$, that must be transferred by flexure within an effective slab width (a band) equal to the column width plus one and one-half the slab or drop panel depth ($1.5h$) on either side of the column where¹⁷⁶

$$\gamma_f = \frac{1}{1 + \frac{2}{3} \sqrt{b_1 / b_2}} \quad \text{Eq. 2-100}$$

The amount of reinforcement required to resist this moment is computed. The amount of reinforcement already provided for flexure is then computed from the bar schedule (i.e. the number of bars that fall within the effective slab width multiplied by the area of each bar). Depending on load conditions, additional negative or positive reinforcement may be required. If the reinforcement area provided for flexure is greater than or equal to the reinforcement requirements to resist moment transfer by flexure, no additional reinforcement is provided, and the number of additional bars will be set to 0. If the amount of reinforcement provided for flexure is less than that required for moment transfer by flexure, additional reinforcement is required. The additional reinforcement is the difference between that required for unbalanced moment transfer by flexure and that provided for design bending moment in the slab, and it is selected based on the bar size already provided at the support.

For ACI codes the value of γ_f on selected supports can be automatically adjusted to the maximum permitted value. The corresponding value of $\gamma_v = 1 - \gamma_f$ is adjusted accordingly. This option allows relaxing stress levels for two-way shear around the columns by transferring increased part of the unbalanced moment through flexure. The adjustment is performed independently for each load case and pattern. If for given load case the corresponding two-way shear V_u exceeds the appropriate limits $0.75\phi V_c$ at an edge support, $0.5\phi V_c$ at a corner support, or $0.4\phi V_c$ at an interior support, adjustment of both factors is not performed. When the adjustment of γ_f and γ_v factors is selected, the reinforcement calculated within the transfer width should be limited according to the code to reinforcement ratio $\rho < 0.375\rho_b$, as stipulated in ACI 318-99/02/05¹⁷⁷, or limitation of net

176. ACI 318-14, 8.4.2.3.2, 8.4.2.3.3; ACI 318-11, 13.5.3.2; ACI 318-08, 13.5.3.2; ACI 318-05, 13.5.3.2; ACI 318-02, 13.5.3.2; ACI 318-99, 13.5.3.2; CSA A23.3-14, 13.3.5.3; CSA A23.3-04, 13.3.5.3; CSA A23.3-94, 13.11.2 and 13.4.5.3

177. ACI 318-14, 8.4.2.3.4; ACI 318-11, 13.5.3.3; ACI 318-05, 13.5.3.3; ACI 318-02, 13.5.3.3; ACI 318-99, 13.5.3.3

tensile strain $\varepsilon_t > 0.010$, as required by ACI 318-14, ACI 318-11 and ACI 318-08¹⁷⁸. Violation of this requirement is reported by the software as exceeding maximum allowable reinforcement indicating that the option to adjust the factor γ_f should be turned off by the user at the support where the violation occurs.

It should be noted that the ACI code¹⁷⁹ requires either concentration of reinforcement over the column by closer spacing, or additional reinforcement, to resist the transfer moment within the effective slab width. spSlab satisfies this requirement by providing additional reinforcement without concentrating existing reinforcement.

When computing additional reinforcement for the transfer of negative and positive unbalanced moments over the supports through flexure in systems with longitudinal beams, the contribution of the longitudinal beam cross-section can be optionally selected. If selected, this contribution will be considered. For CSA designs this functionality extends also to design of banded reinforcement in b_b strip.

The CSA A23.3 code requires at least one-third of the total negative reinforcement for the entire design strip at interior supports to be concentrated in the band width, b_b , extending $1.5 h_s$ from the sides of the columns¹⁸⁰. The program fulfills this requirement by concentrating a portion of reinforcement assigned to the design strip that includes width b_b . This strip will typically be the column strip. However, if longitudinal slab bands or slab-band-like beams wider than band width b_b are present, then reinforcement assigned to these elements is concentrated. At exterior supports, the total negative reinforcement is placed in the b_b band width¹⁸¹ or if a beam narrower than b_b is present, then the total reinforcement is placed within the beam width¹⁸². The reinforcement in the b_b and the remaining portions of the design strip is also checked for compliance with spacing and minimum reinforcement requirements.

2.17 Structural Integrity Reinforcement

Enhancing redundancy and ductility is necessary in the event of damage to a major supporting element resulting from an abnormal shock or blast loading event.

178. ACI 318-14, 8.4.2.3.4; ACI 318-11, 13.5.3.3; ACI 318-08, 13.5.3.3

179. ACI 318-14, 8.4.2.3.5; ACI 318-11, 13.5.3.4; ACI 318-08, 13.5.3.4; ACI 318-05, 13.5.3.4; ACI 318-02, 13.5.3.4; ACI 318-99, 13.5.3.4

180. CSA A23.3-14, 13.11.2.7; CSA A23.3-04, 13.11.2.7; CSA A23.3-94, 13.12.2.1

181. CSA A23.3-14, 13.10.3; CSA A23.3-04, 13.10.3; CSA A23.3-94, 13.12.2.2, 13.13.4.2

182. CSA A23.3-04, 13.12.2.2; CSA A23.3-04, 13.12.2.2; CSA A23.3-94, 13.13.2.2

Minor changes in reinforcement detailing typically result in substantial enhancement in the overall integrity of a structure by confining the resulting damage to a small area and improving the resistance to progressive collapse.

The ACI code requires all bottom bars in the column strip to extend continuously (or with splices) in the entire span and at least two of these bars to pass within the column core and to be anchored at exterior supports¹⁸³. In continuous beams, including longitudinal beams in two-way slab systems, spSlab and spBeam produce, in design mode, reinforcement that satisfies ACI requirements for structural integrity. In perimeter (exterior) beams, at least one sixth of the negative tension reinforcement and not less than two bars are continuous¹⁸⁴. Also, at least one fourth of the positive tension reinforcement and not less than two bars are continuous in all beams¹⁸⁵.

For the CSA code, the program performs calculation of the amount of integrity reinforcement at slab column connections in design mode. The integrity reinforcement is required for slabs without beams. Integrity reinforcement is not required if there are beams containing shear reinforcement in all spans framing into the column. Otherwise, the sum of all bottom reinforcement connecting the slab to the column on all faces of the periphery should consist of at least two bars and meet the condition¹⁸⁶

$$\sum A_{sb} \geq \frac{2V_{se}}{f_y} \quad \text{Eq. 2-101}$$

where V_{se} is the larger of shear force transmitted to column or column capital due to specified (unfactored) loads and shear force corresponding to twice the self-weight of the slab.

2.18 Corner Reinforcement

The program performs calculation of the amount of reinforcement in exterior corners of slabs with stiff edge beams (α greater than 1.0)¹⁸⁷. This reinforcement is required within a region equal to 1/5 of the shorter span. The amount of corner reinforcement is calculated from the moment per unit

183. ACI 318-14, 8.7.4.2.1, 8.7.4.2.2; ACI 318-11, 13.3.8.5; ACI 318-08, 13.3.8.5; ACI 318-05, 13.3.8.5; ACI 318-02, 13.3.8.5; ACI 318-99, 13.3.8.5

184. ACI 318-14, 9.7.7.1(a); ACI 318-11, 7.13.2.2(a); ACI 318-08, 7.13.2.2(a); ACI 318-05, 7.13.2.2(a); ACI 318-02, 7.13.2.2(a); ACI 318-99, 7.13.2.2

185. ACI 318-14, 9.7.7.1(b); ACI 318-11, 7.13.2.2(b) and 7.13.2.4; ACI 318-08, 7.13.2.2(b) and 7.13.2.4; ACI 318-05, 7.13.2.2(b) and 7.13.2.4; ACI 318-02, 7.13.2.2(b) and 7.13.2.4; ACI 318-99, 7.13.2.2 and 7.13.2.3

186. CSA A23.3-14, 13.10.6.1 and 13.10.6.2; CSA A23.3-04, 13.10.6.1 and 13.10.6.2; CSA A23.3-94, 13.11.5.1 and 13.11.5.2

187. ACI 318-14, 8.7.3.1; ACI 318-11, 13.3.6; ACI 318-08, 13.3.6; ACI 318-05, 13.3.6; ACI 318-02, 13.3.6; ACI 318-99, 13.3.6; CSA A23.3-14, 13.12.5; CSA A23.3-04, 13.12.5; CSA A23.3-94, 13.13.5

width intensity corresponding to the maximum positive moment in span. The code allows the corner reinforcement to be placed at top and bottom of the slab in bands parallel to the sides of the slab edges.

2.19 Deflections

2.19.1 Instantaneous Deflections

Instantaneous deflections are obtained directly by the program from elastic analysis of the defined system for three load levels. The first corresponds to dead load only, the second corresponds to dead load plus sustained part of live load only, and the third corresponds to dead load plus live load on all spans (total deflection). The deflection occurring when the live load is applied can be computed as the total load deflection (due to the dead and the live load) minus the dead load only deflection¹⁸⁸. Depending on the option selected by the user, the program will calculate flexural stiffness of the members based on either gross moment of inertia or the effective moment of inertia which takes cracking into account.

$$\Delta_{Live} = \Delta_{Total} - \Delta_{Dead}$$

The program results section provides detailed summary of the frame section properties, frame effective section properties, column and middle strip properties at midspan, and a summary of extreme deflection values for each load level along the span.

2.19.2 Cracking

When calculating the deflections for effective (cracked) section properties, the frame solution is obtained for three load levels: dead load, dead load plus sustained part of live load, and dead load plus full live load on all spans. Flexural stiffness is assumed corresponding to the load level.

A reduction in the flexural stiffness caused by cracking leads to an increase in deflections. Several methods of deflection analyses taking cracking into account are reviewed in Ref. [22]. The program uses the approach based on the effective moment of inertia as permitted by the code.¹⁸⁹

The effective moment of inertia, I_e , developed by Branson (Ref. [17]) and incorporated into the code equals

188. Example 9-5 Calculation of Immediate Deflections in Ref. [15], pp. 443, Step 5

189. ACI 318-14, 19.2.3.1, 24.2.3.5; ACI 318-11, 9.5.2.3; ACI 318-08, 9.5.2.3; ACI 318-05, 9.5.2.3; ACI 318-02, 9.5.2.3; ACI 318-99, 9.5.2.3; CSA A23.3-14, 9.8.2.3; CSA A23.3-04, 9.8.2.3; CSA A23.3-94, 9.8.2.3

$$I_e = \left(\frac{M_{cr}}{M_{max}} \right)^3 I_g + \left[1 - \left(\frac{M_{cr}}{M_{max}} \right)^3 \right] I_{cr} \quad \text{Eq. 2-102}$$

where

- I_g = moment of inertia of the gross uncracked concrete section,
 I_{cr} = moment of inertia of the cracked transformed concrete section¹⁹⁰
 M_{cr} = cracking moment
 M_{max} = maximum bending moment at the load level for which the deflection is computed.

To calculate I_e for two-way slabs, the values of all terms for the full width of the equivalent frame are used in Eq. 2-102. This approach averages the effects of cracking in the column and middle strips.

The value of I_e at midspan for a simple span and at support for a cantilever is taken¹⁹¹ to calculate flexural stiffness of a member. For other conditions, an averaged effective moment of inertia, $I_{e,avg}$ is used. For spans with both ends continuous, I_{frame} is given by¹⁹²

$$I_{e,avg} = 0.70 I_e^+ + 0.15 (I_{e,l}^- + I_{e,r}^-) \quad \text{Eq. 2-103}$$

where

- I_e^+ = effective moment of inertia for the positive moment region,
 $I_{e,l}^-$ = effective moment of inertia for the negative moment region at the left support,
 $I_{e,r}^-$ = effective moment of inertia for the negative moment region at the right support.

For spans with one end continuous the value of I_{frame} is given by¹⁹³

$$I_{e,avg} = 0.85 I_e^+ + 0.15 I_e^- \quad \text{Eq. 2-104}$$

190. See formulas for various cross sections in Table 10-2 in Ref. [18]

191. ACI 318-14, 24.2.3.6, 24.2.3.7; ACI 318-11, 9.5.2.4; ACI 318-08, 9.5.2.4; ACI 318-05, 9.5.2.4; ACI 318-02, 9.5.2.4; ACI 318-99, 9.5.2.4

192. ACI 435R-95 (Ref. [19]), 2.5.1, Eq. (2.15a); CSA A23.3-14, 9.8.2.4(a); CSA A23.3-04, 9.8.2.4(a); CSA A23.3-94, 9.8.2.4, Eq. 9.3

193. ACI 435R-95 (Ref. [19]), 2.5.1, Eq. (2.15b); CSA A23.3-14, 9.8.2.4(b); CSA A23.3-04, 9.8.2.4(b); CSA A23.3-94, 9.8.2.4, Eq. 9.4

where

I_e^+ = effective moment of inertia for the positive moment region,
 I_e^- = effective moment of inertia for the negative moment region at the continuous end.

2.19.3 Long-Term Deflections

The program estimates additional long-term deflection resulting from creep and shrinkage, Δ_{cs} , by multiplying the immediate deflection due to sustained load, Δ_{sust} , by the factor, λ_{Δ} , equal to¹⁹⁴

$$\lambda_{\Delta} = \frac{\xi}{1 + 50\rho'} \quad \text{Eq. 2-105}$$

where

ξ = time dependent factor with the maximum value of 2.0 (the actual value is interpolated from the values and the chart given in the code¹⁹⁵ based on the load duration specified by the user in the input)
 ρ' = ratio of compressive reinforcement at midspan for simple and continuous spans and at support for cantilevers.

Deflection due to the sustained load, Δ_{sust} , is the deflection induced by the dead load (including self weight), plus sustained portion of the live load.

And long-term deflection resulting from creep and shrinkage equals

$$\Delta_{cs} = \Delta_{sust}\lambda_{\Delta} \quad \text{Eq. 2-106}$$

The program calculates incremental deflection which occurs after partitions are installed in two ways. In the first approach, it is assumed that the live load has been applied before installing the partitions and the incremental deflection equals¹⁹⁶

$$\Delta_{cs+lu} = \Delta_{cs} + (\Delta_{total} - \Delta_{sust}) \quad \text{Eq. 2-107}$$

In the second approach, the assumption is that the full live load, including the sustained portion of the live load, has been applied after the partitions are installed which results in the incremental deflection equal to¹⁹⁷

194. ACI 318-14, 24.2.4.1.1, 24.2.4.1.2, 24.2.4.1.3; ACI 318-11, 9.5.2.5; ACI 318-08, 9.5.2.5; ACI 318-05, 9.5.2.5; ACI 318-02, 9.5.2.5; ACI 318-99, 9.5.2.5; CSA A23.3-14, 9.8.2.5; CSA A23.3-04, 9.8.2.5; CSA A23.3-94, 9.8.2.5A23.3

195. Fig. R24.2.4.1; Fig. R9.5.2.5 in ACI 318-11, ACI 318-08; ACI 318-05; ACI 318-02, and ACI 318-99; Fig. N9.8.2.6 in CSA A23.3-04 and CSA A23.3-94

196. CSA A23.3-04 N9.8.2.5, CSA A23.3-94 N9.8.2.5

197. See Example 10.1 in Ref. [18]

$$\Delta_{cs+l} = \Delta_{cs} + \Delta_{live} \quad \text{Eq. 2-108}$$

The total long-term deflection $(\Delta_{total})_{lt}$ is also calculated as¹⁹⁸

$$(\Delta_{total})_{lt} = \Delta_{sust}(1 + \lambda_{\Delta}) + (\Delta_{total} - \Delta_{sust}) \quad \text{Eq. 2-109}$$

2.19.4 Deflections of two-way systems

Calculation of deflections of reinforced concrete two-way slabs is complicated by a large number of significant parameters such as: the aspect ratio of the panels, the vertical and torsional deflection of supporting beams, the stiffening effect of drop panels and column capitals, cracking, and the time-dependent nature of the material response. Based on studies (Ref. [20]-[22]), an approximate method consistent with the equivalent frame method was developed (Ref. [23]) to estimate the column and middle strip deflections.

Under vertical loads, Reference 20 indicates that the midspan deflection of an equivalent frame can be considered as the sum of three parts: that of the panel assumed to be fixed at both ends of its span, $\Delta_{f,ref}$ and those due to the known rotation at the two support lines, $\Delta_{\theta,L}$ and $\Delta_{\theta,r}$.

Calculation of midspan deflection of the column strip or the middle strip under fixed-end conditions is based on M/EI ratio of the strip to that of the full-width panel

$$\Delta_{f,strip} = \Delta_{f.ref} \frac{M_{strip}}{M_{frame}} \frac{E_c I_{frame}}{E_c I_{strip}} \quad \text{Eq. 2-110}$$

The ratio (M_{strip}/M_{frame}) can be considered as a lateral distribution factor, **LDF**.

For ACI and CSA A23.3-94 codes the lateral distribution factor, **LDF**, at an exterior negative moment region is

$$LDF_{neg,ext} = 100 - 10\beta_t + 12\beta_t \left(\alpha_{f1} \frac{l_2}{l_1} \right) \left(l - \frac{l_2}{l_1} \right) \quad \text{Eq. 211}$$

The **LDF** at an interior negative moment region is

$$LDF_{neg,int} = 75 - 30 \left(\alpha_{f1} \frac{l_2}{l_1} \right) \left(l - \frac{l_2}{l_1} \right) \quad \text{Eq. 2-112}$$

The **LDF** at a positive moment region is

$$LDF_{pos} = 60 + 30 \left(\alpha_{f1} \frac{l_2}{l_1} \right) \left(1.5 - \frac{l_2}{l_1} \right) \quad \text{Eq. 2-113}$$

198. CSA A23.3-04 N9.8.2.5; CSA A23.3-94 N9.8.2.5

where

- α_f = the ratio of flexure stiffness of a beam section to the flexural stiffness of a width of slab bounded laterally by centerlines of adjacent panels on either side of the beam,
- β_f = ratio of torsional stiffness of an edge beam section to the flexural stiffness of a width of slab equal to the span length of the beam, center-to-center of the supports (see Eq. 2-30).

For CSA A23.3-14/04 code lateral distribution factors are based on tabulated values presented earlier in the chapter.

When $\alpha_f l_2 / l_1$ is greater than 1.0, $\alpha_f l_2 / l_1$ will be set equal to 1.0.

The column and middle strip LDF's can be computed by

$$LDF_c = \frac{LDF_{pos} + \frac{LDF_{neg,l} + LDF_{neg,r}}{2}}{2} \quad \text{Eq. 2-114}$$

$$LDF_m = 100 - LDF_c \quad \text{Eq. 2-115}$$

where

- $LDF_{neg,l}$ = LDF for the negative moment region at the left end of the span
- $LDF_{neg,r}$ = LDF for the negative moment region at the right end of the span

The total midspan deflection for the column or middle strip is the sum of three parts

$$\Delta_{strip} = \Delta_{f,strip} + \Delta\theta_{,l} + \Delta\theta_{,r} \quad \text{Eq. 2-116}$$

where

$\Delta\theta_{,l}, \Delta\theta_{,r}$ = midspan deflection due to rotation of left and right supports, respectively.

The above procedure was implemented starting in v5.00 to follow the reference recommendations exactly and eliminate overestimation of the column strip deflection and underestimation of the middle strip deflection especially for the exterior span.

The deflections should be used in conjunction with the deflections obtained from an analysis in the transverse direction. For square panels ($l_1 = l_2$), the mid-panel deflection is obtained from the following equation as shown in Figure 2-22

$$\Delta = \Delta_{cy} + \Delta_{mx} = \Delta_{cx} + \Delta_{my} \quad \text{Eq. 2-117}$$

For rectangular panels, ($l_1 \neq l_2$), the mid panel deflection is obtained from

$$\Delta = \frac{(\Delta_{cy} + \Delta_{mx}) + (\Delta_{my} + \Delta_{cx})}{2} \tag{Eq. 2-118}$$

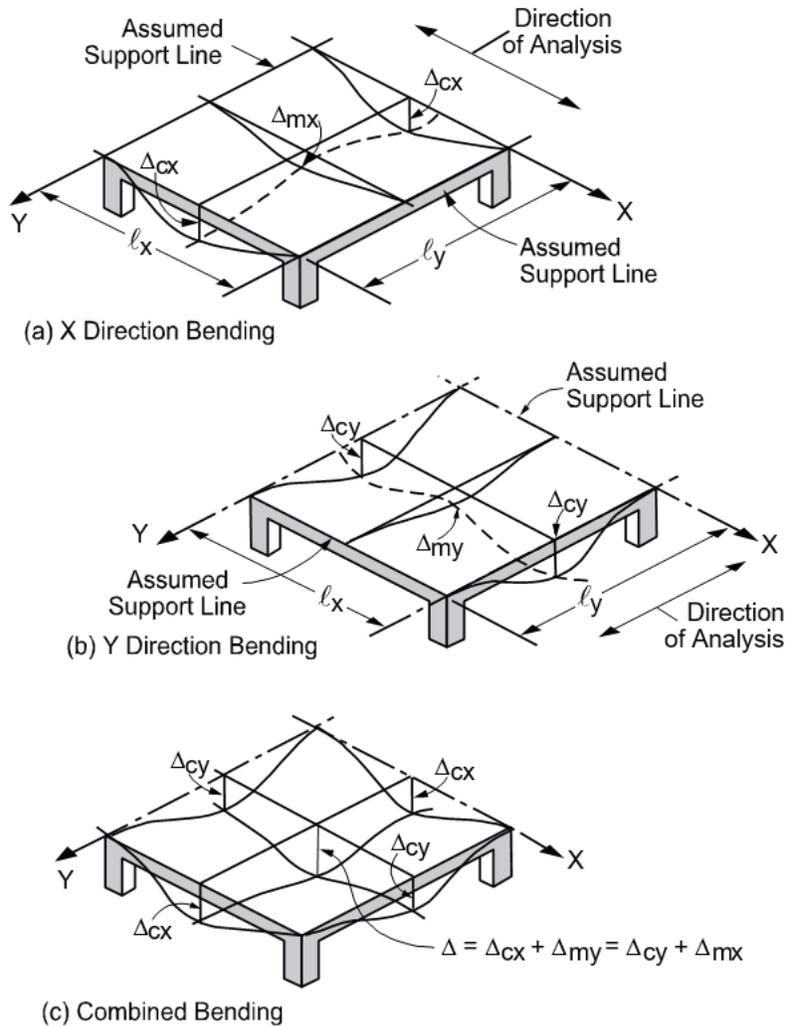


Figure 2.23 Deflection computation for a square panel

2.20 Material Quantities

The program computes concrete and reinforcing steel quantities. The quantity of concrete is based on an average of the slab, drop, and beam sizes. The total quantity of reinforcing steel computed by the program corresponds to the actual bar sizes and lengths required by design. No allowance is made for bar hooks, anchorage embedment, and so forth. It should be noted that the quantity of reinforcement printed by the program pertains to bending in one direction only. In practice, the total amount of reinforcement for the structure should also include the quantities obtained for the appropriate transverse equivalent frames.

2.21 References

- [1] Building Code Requirements for Structural Concrete (ACI 318-14) and Commentary (ACI 318R-14), American Concrete Institute, 2014
- [2] Building Code Requirements for Structural Concrete (ACI 318-11) and Commentary (ACI 318R-11), American Concrete Institute, 2011
- [3] Building Code Requirements for Structural Concrete (ACI 318-08) and Commentary (ACI 318R-08), American Concrete Institute, 2008
- [4] Building Code Requirements for Structural Concrete (ACI 318-05) and Commentary (ACI 318R-05), American Concrete Institute, 2005
- [5] Building Code Requirements for Structural Concrete (ACI 318-02) and Commentary (ACI 318R-02), American Concrete Institute, 2002
- [6] Building Code Requirements for Structural Concrete (ACI 318-99) and Commentary (ACI 318R-99), American Concrete Institute, 1999
- [7] Specification for Tolerances for Concrete and Materials and Commentary, An ACI Standard (ACI 117-06), American Concrete Institute, 2006
- [8] National Building Code of Canada 2010, Volume 2, Canadian Commission on Buildings and Fire Codes, National Research Council of Canada, 2010
- [9] National Building Code of Canada 2005, Volume 1, Canadian Commission on Buildings and Fire Codes, National Research Council of Canada, 2005
- [10] A23.3-14, Design of Concrete Structures, Canadian Standards Association, 2014.
- [11] A23.3-04, Design of Concrete Structures, Canadian Standards Association, 2004.
- [12] Explanatory Notes on CSA Standard A23.3-04 in Concrete Design Handbook, Third Edition, Cement Association of Canada, 2006
- [13] A23.3-94, Design of Concrete Structures, Canadian Standards Association, 1994 (Reaffirmed 2000).
- [14] Explanatory Notes on CSA Standard A23.3-94 in Concrete Design Handbook, Second Edition, Canadian Portland Cement Association, 1995
- [15] Wight J.K., MacGregor J.G., Reinforced Concrete, Mechanics and Design, Fifth Edition, Pearson Prentice Hall, 2009
- [16] MacGregor J.G., Bartlett F.M., Reinforced Concrete – Mechanics and Design, First Canadian Edition, Prentice Hall Canada Inc., 2000
- [17] Branson, D. E., Instantaneous and Time-Dependent Deflections of Simple and Continuous Reinforced Concrete Beams, HPR Report No. 7, Pt. I, Alabama Highway

Department in Cooperation with U.S. Department of Commerce, Bureau of Public Roads, August 1965.

- [18]Notes on ACI 318-05 Building Code Requirements for Structural Concrete with Design Applications, Edited by Mahmoud E. Kamara and Basile G. Rabbat, Portland Cement Association, 2005
- [19]Control of Deflection in Concrete Structures (ACI 435R-95), Reported by ACI Committee 435, American Concrete Institute, 1995 (Reapproved 2000).
- [20]ACI Committee 435, Subcommittee 7, Deflections of Continuous Concrete Beams, Journal of the American Concrete Institute, Proceedings V. 70, No. 12, December 1973, pp. 781-787.
- [21]Nilson, A. H., and Walters, D. B., Jr., Deflection of Two-Way Floor Systems by the Equivalent Frame Method, Journal of the American Concrete Institute, Proceedings, V. 72, No. 5, May, 1975, pp. 210-218.
- [22]ACI Committee 435, State-of-the-Art Report, Deflection of Two-Way Floor Systems, Special Publication SP43-3, American Concrete Institute, 1974.
- [23]Kripanarayanan, K. M., and Branson, D. E., Short-Time Deflections of Flat Plates, Flat Slabs and Two-Way Slabs, Journal of the American Concrete Institute, Proceedings, V. 73, No. 12, December 1976, pp. 686-690.
- [24]Wight, J. K., Falconer, D., Checking Punching Shear Strength by the ACI Code, Concrete International, November 2005, pp. 76.
- [25]Park, W. and Gamble, W. L., Reinforced Concrete Slabs, Second Edition, John Wiley & Sons, Inc., 2000

CHAPTER


3

spSlab/spBeam INTERFACE

3.1	spSlab/spBeam Interface	97
3.2	File Menu	99
3.3	Input Menu	103
3.4	Solve Menu	107
3.5	View Menu	108
3.6	Options Menu	111
3.7	Window Menu	113
3.8	Help Menu	114
3.9	Control Menu	115
3.10	Program Toolbar	116

3.1 spSlab/spBeam Interface

The **spSlab/spBeam Interface** will appear after the program is started as shown below. The **spSlab/spBeam Interface** consists of a **Control Menu**, **Title Bar**, **Menu Bar**, **Toolbar**, and a **Status Bar**. The program name and current data file name is shown in the **Title Bar**. All the menu commands can be accessed from the **Menu Bar** and some frequently used commands also can be accessed from the buttons in the **Toolbar**. The four view windows show the geometry of a floor system and the loads on it. Plan view, side view, elevated view and isometric view are available. The **Status Bar** shows the current state of the program.

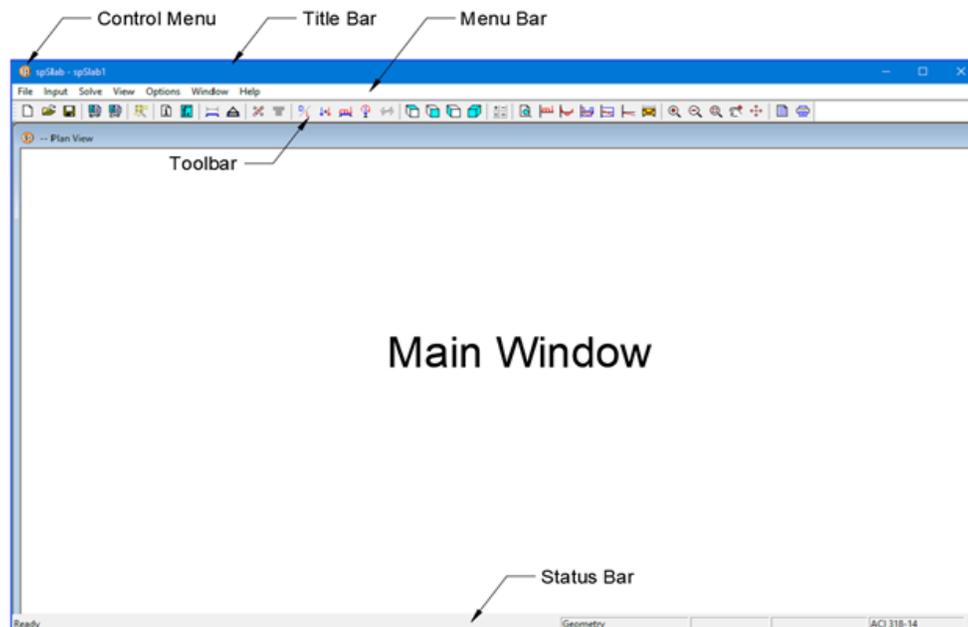

Control Menu

The **Control** menu is located in the upper-left corner of the window and includes commands for sizing, moving, enlarging, restoring, and closing the window, as well as switching to other applications. To access the **Control** menu using the mouse, click the left mouse button on the spSlab/spBeam logo; using the keyboard, press ALT+ ‘ (space).

Title Bar

The **Title Bar** displays the program name, and following the hyphen, displays the name of the current data file you are using. If the data you are currently working on has not been saved into a file, the word spSlab1 (spBeam1 for spBeam) is displayed in the **Title Bar**. If you start a new data file by clicking the **New** button on the most left of the **Toolbar**, the next data file is named as spSlab2 (spBeam2 for spBeam), and so on.

Menu Bar

Located directly below the **Title Bar** is the menu line. spSlab commands are listed in the pop-up menus located in the **Menu Bar**. These menu commands allow you to perform functions that create, view, and ultimately design the floor system.

In the spSlab program there are seven main pull-down menus: **File**, **Input**, **Solve**, **View**, **Options**, **Windows**, and **Help**. To access a menu item using the mouse, place the arrow cursor on the menu item you want and click the left mouse button. Each menu item can also be selected with the keyboard keys by simultaneously pressing the **ALT** key and the underlined letter of the menu you want to open. For example, to open the **File** menu, press **ALT + F**. To close a menu without selecting a command, move the cursor to any blank area on the screen and click the left mouse button. Press **ESC** key to close a menu using the keyboard keys.

To select a command from a menu with the mouse, place the arrow on the item you want, and click the left mouse button. In some cases, you will be told to double click on a selection, that is, press the mouse button twice, quickly. Anytime you have to wait, for example, when loading the program or designing the system, the mouse cursor becomes an hourglass cursor. It will return to its original state when the task is completed.

To select a command from a menu using the keyboard, use the down arrow key to highlight your choice and press **ENTER** key or press the keyboard key of the command's underlined letter. The space bar is also equivalent to pressing the left mouse button.

Special instructions for inputting with the keyboard keys are given wherever necessary.

Toolbar

Located directly below the **Menu Bar** is the tool bar. Some frequently used buttons can be found in the **Toolbar**. A description of the corresponding button is shown in the status bar (on the bottom of the window) when the mouse cursor is moving over this button. In addition to the description in the **Status Bar**, a brief tip is shown in a light yellow colored pop-up window close to the corresponding button when a mouse cursor is hanging over the button for a short period of time. Exactly the same functions or features can be accessed from either the menu items or **Toolbar** buttons.

The **Toolbar** can be changed from docking status to floating status by single clicking the left mouse button on the tool bar and dragging it away from the docking position to any other positions on the screen. A floating tool bar can be resized by clicking and dragging its borders.

To restore the **Toolbar** to the docking status, single click the left mouse button on the tool bar and drag it to the location that is directly below the menu line and release the mouse button.

View Windows


A total of 10 view windows can be used to show Plan, Elevated, Side and Isometric views of the geometry, as well as Loads, Shear and Moment, Moment Capacity, Shear Capacity, Deflection, and Reinforcement.

Status Bar

Status Bar is always on the bottom of the main window. The **Status Bar** shows the current status of the data file and the coordinate values of the mouse cursor position. Depending on the active view window, different information of the mouse cursor will appear in the **Status Bar**.

3.2 File Menu


The **File** menu is used for saving or retrieving data, printing, and exiting. The **File** menu contains the following commands: **New**, **Open**, **Close**, **Save**, **Save As**, **Classic Results**, **Print Preview**, **Print Setup**, **Recent Files** and **Exit**.

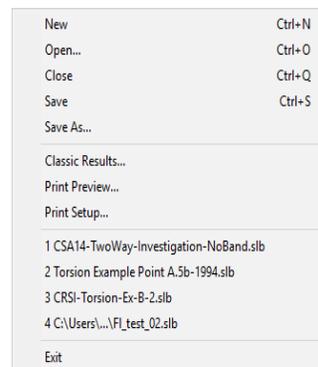

New

The **New** command clears any data input and returns to the default values. Thus, you are able to create a new data file. However, before you can begin a new data file, spSlab will ask whether you want to save the current data. Answering **Yes** will save the old data and begin a new data file. Answering **No** will discard any changes to the data and begin a new data file.

Answering **Cancel** will return you to spSlab so that you can continue to work with the current data.

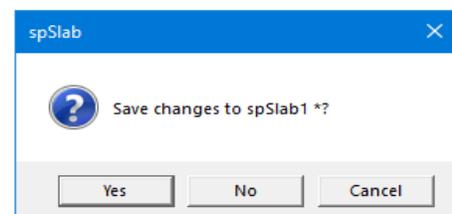

Open

The **Open** command allows you to load an existing spSlab data file. The dialog box that appears shows you a listing of all the files with the extension contained in the default data

directory or in the current directory (if a default data directory was not specified). This box also enables you to change the current drive and directory. If you are currently working on a data file and select the **Open** command, spSlab will ask whether you want to save the current data. Answering **Yes** will save the old data and display the **Open** dialog box. Answering **No** will discard any changes to the data and display the **Open** dialog box. Answering **Cancel** will return you to spSlab so that you can continue to work with the current data.

Close


The **Close** command allows you to close the current spSlab data file. If you are currently working on a data file and select the **Open** command, spSlab will ask whether you want to save the current data. Answering **Yes** will save the old data and display the **Open** dialog box. Answering **No** will discard any changes to the data and display the **Open** dialog box. Answering **Cancel** will return you to spSlab so that you can continue to work with the current data.

Save

The **Save** command saves the changes you've made to the current data under that same filename. The new data overwrites the old data, and you cannot retrieve the old data. It is a good practice to periodically save while inputting data. If a data file is untitled, the **Save As** dialog box will appear.

Save As

The **Save As** command allows you to name or rename a data file. Use **Save As** when you want to save both the original data and any changes you've currently made to the data. The original data remains under the old filename. If a file of the same name exists, the program will ask if you would like to overwrite the file.

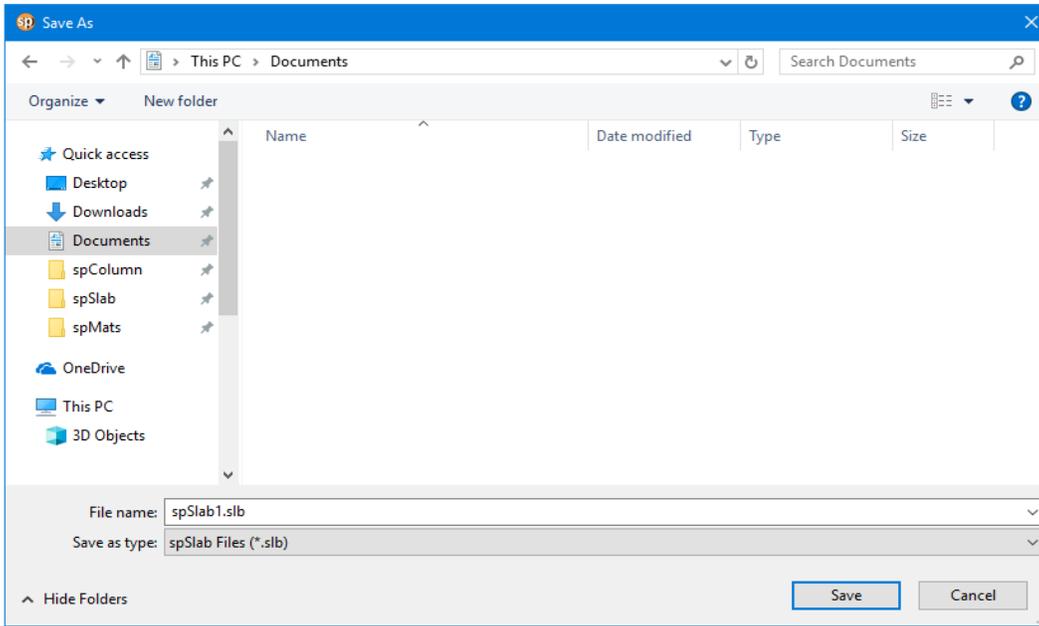


Classic Results

The **Classic Results** command allows you to execute the classical Results Report module to view and print the input and output data after a successful run has been performed.

Print Preview

The **Print Preview** command allows you to preview and print the current view window (floor system geometry in the plan, elevated, and isometric views, prints the shear and moment diagrams, and prints the deflected shapes). To obtain a view window you must first perform the design, then select what you want to view from the **View** menu. You may have more than one view windows opened. The current view window is the one activated and on top of the others on your screen. Selecting this command closes the spSlab main window and opens the print preview window as shown below. On the print preview window, press the **Zoom In** or **Zoom Out** buttons or simply click the left mouse button on the preview window to magnify or reduce the size of the preview paper. Press the **Next Page** button if more than one page needs to be printed. Press the **Print** button to print the view. The printer could be a local printer, which is connected to your computer directly, or a network printer. Press the **Close** button to close the preview window and go back to spSlab.

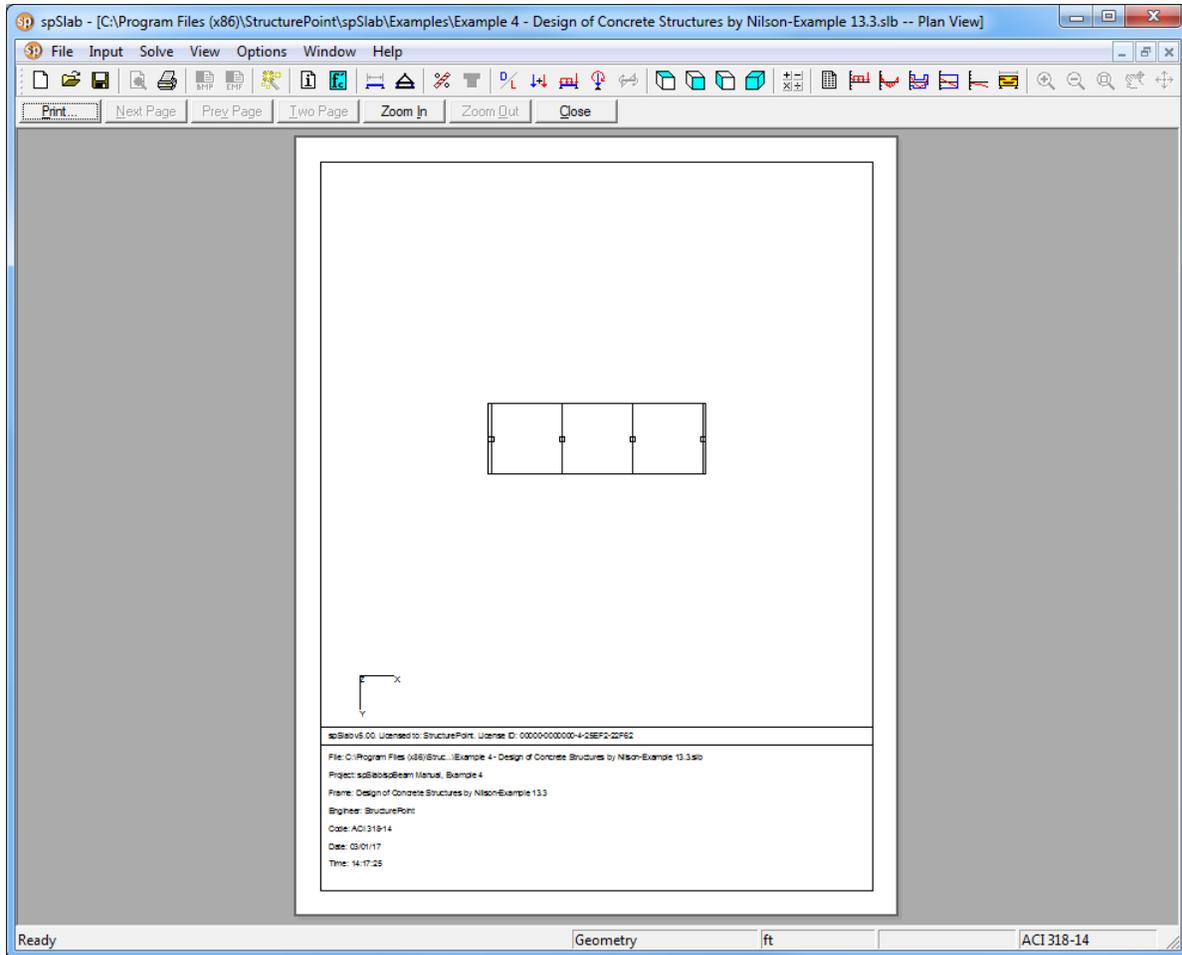

Print Setup...

The **Print Setup** command brings up the Windows print setup box which allows the user to select the printer to send the output to, and to change the settings of the printer.

Recent Files

This list contains the data files that are used recently and can be accessed quickly from the menu by a single click. The most recently used one is on the top of the list. Up to four files can be listed.

Exit

The **Exit** command ends the spSlab session and returns you to Windows. If you have made any changes to your data and have not saved them, spSlab will first ask whether you want to save or abandon any changes you've made before you exit.

3.3 Input Menu

The **Input Menu** allows you to enter and modify data for the floor system. The **Input Menu** contains the following commands: **Data Input Wizard, General Information, Material Properties, Spans, Supports, Reinforcement Criteria, Reinforcing Bars, Load Cases, Load Combinations, Span Loads, Support Loads and Displacements, and Lateral Effects.**


Data Input Wizard

The **Data Input Wizard** command is designed to make the inputting process easier. By selecting **Data Input Wizard**, a logical sequence of dialog boxes will automatically be displayed allowing you to enter data for your floor system.

General Information

The **General Information** consists of three tabs: **General Information, Solve Options, and Span Control.**

The **General Information** tab will allow you to enter the project name, frame name, engineer name, design code, reinforcement database, run mode, and number of supports. You must always use the **General Information** tab before doing any further inputting since it affects the availability of other commands in this menu.

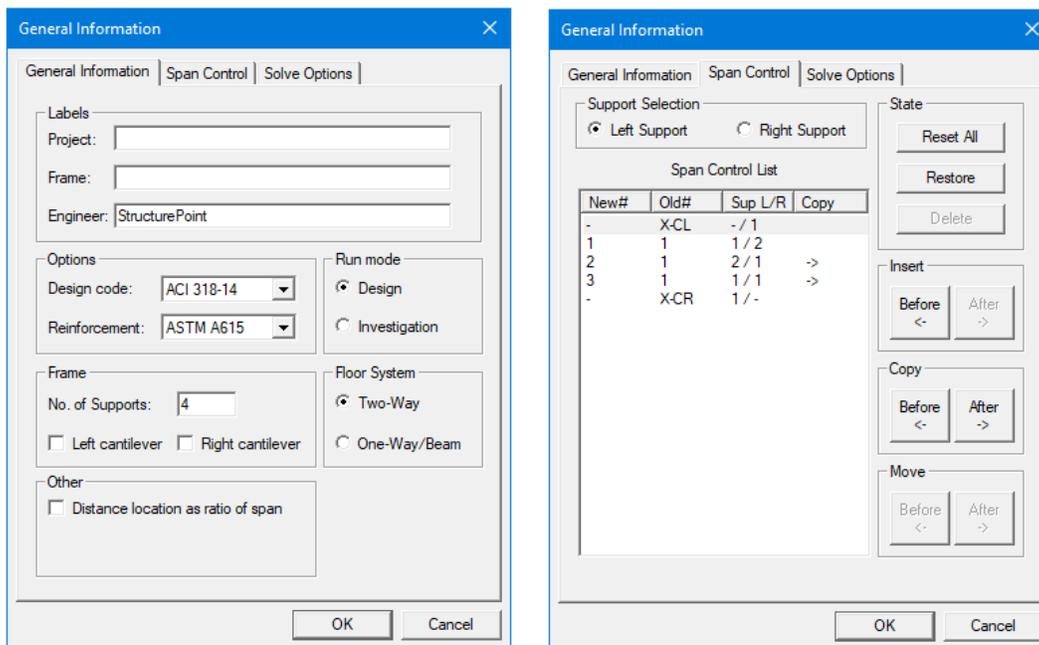

The **Span Control** tab provides commands for span manipulation such as inserting new spans, copying spans, moving spans, and deleting spans.

The **Solve Options** command allows you to specify design options, punching shear options, and deflection calculations options. Please note that design options for two-way systems are different from beams/one-way slab systems. To take effect, this command must be used prior to **Execute**.

Material Properties

The **Material Properties** command enables you to input material property requirements for concrete and reinforcement. Concrete density, compressive strength, Young's modulus, rupture modulus, as well as the longitudinal and shear reinforcement yield levels, are required.

Spans

The **Spans** menu allows you to input geometric dimensions for slabs, longitudinal beams, and ribs.

Supports

The **Supports** menu allows you to input geometric dimensions for columns, drop panels, column capitals, and transverse beams. The percentage of the actual column joint stiffness to be used in the analysis to determine the joint moments and shears can be modified on the **Columns** tab. The **Drop Panels** tab is available if two-way system is selected and the **Moment Redistribution** tab is available only for beams/one-way slab systems if moment redistribution is engaged in the **General Information** window.

Reinforcement Criteria

The **Reinforcement Criteria** menu allows you to specify the distance to reinforcement, reinforcement bar sizes, bar spacing, and reinforcing ratio for both slabs and beams. For beams it also allows you to specify criteria for stirrups, side cover and distance between layers of reinforcement if more than one layer is needed.


Reinforcement Bars

For two-way floor systems, the **Reinforcement Bars** menu allows you to specify the longitudinal reinforcement arrangement information for column strip, middle strip, and beam, as well as shear reinforcing information for beams.

For beams/one-way slab systems, flexural bars, stirrups, and torsional longitudinal reinforcement can be specified. The **Reinforcement Bars** menu is disabled if **Run Mode** of Design is selected from the **General Information** dialog box. Select the **Run Mode** of Investigation from the **General Information** dialog box to enable it.


Load Cases

The **Load Cases** menu allows you to specify load cases. Up to six load cases can be added and only one live load case is allowed.

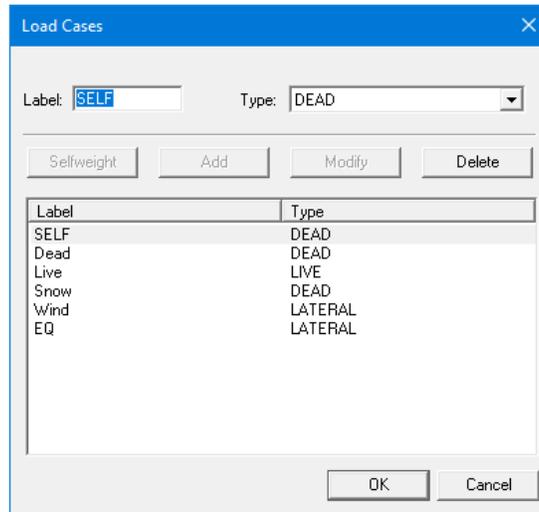


Load Combinations

The **Load Combinations** menu allows you to specify load combinations as shown. Up to fifty load combinations can be added.

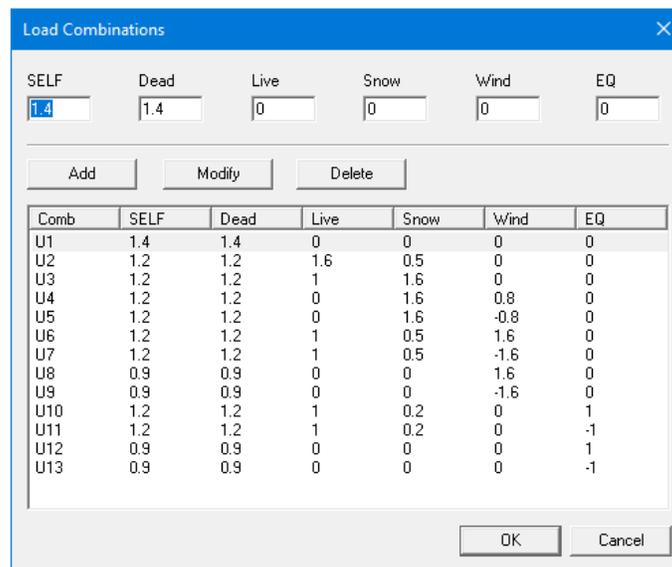


Span Loads

The **Span Loads** menu allows you to enter superimposed area loads, line loads, point loads, and moments.

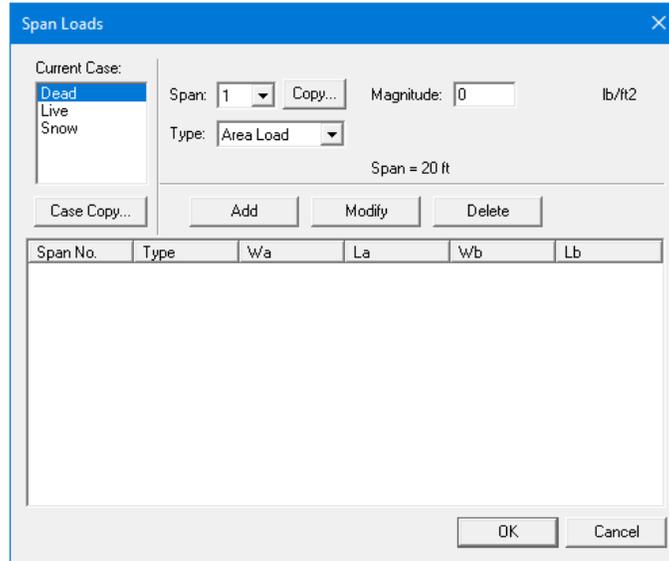


Support Loads and Displacements

The **Support Loads and Displacements** menu allows you to enter prescribed displacements and rotations of supports as well as concentrated loads applied directly at support locations.

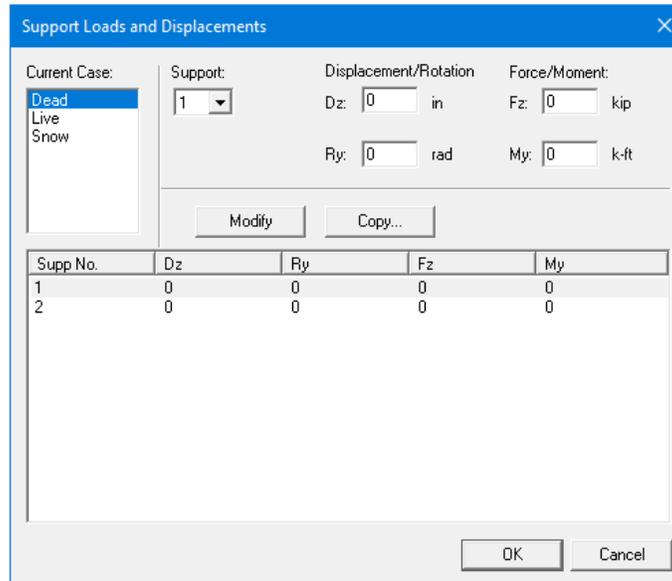


Lateral Effects

The **Lateral Effects** menu allows you to enter the lateral loads as moments acting on the two ends of each span.

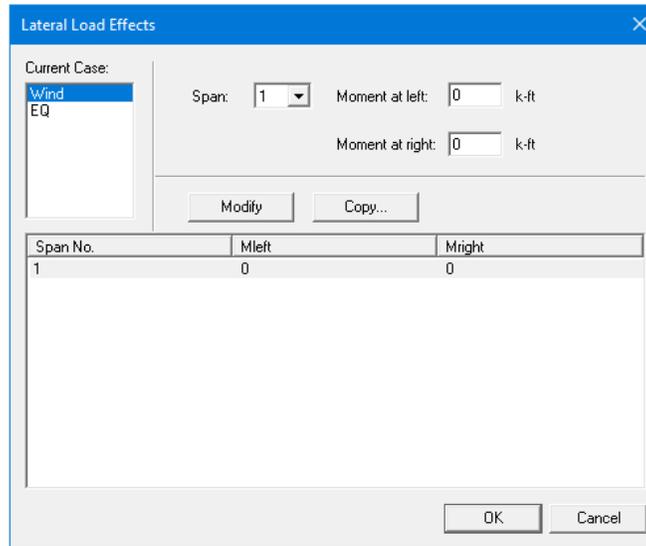


3.4 Solve Menu


The **Solve Menu** contains the **Execute**, **Results** and **Reporter** commands.

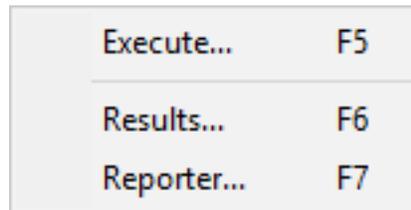

Execute

The **Execute** command executes the solver portion of spSlab. If some data is still required when this command is executed, spSlab will respond with an “Invalid Model!” error message. The missing data must be completed before execution. A status window pops up and shows the status during the execution. If the execution is not successful, an error message will be shown and the execution is terminated.

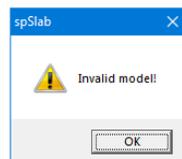

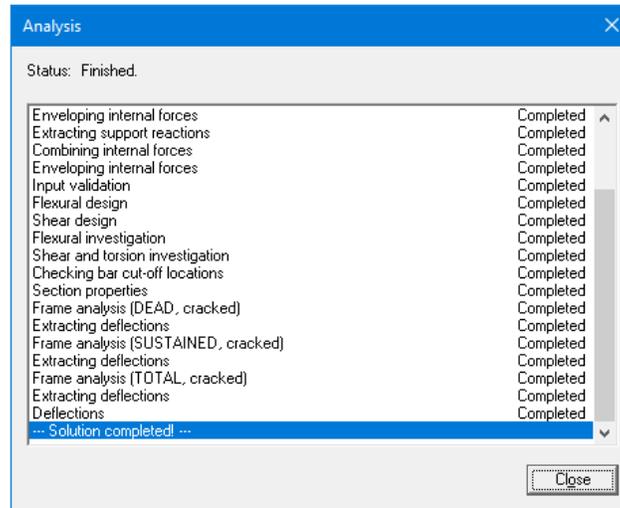

Results...


The **Results** command allows you to execute the spResults module to view the input and output data after a successful run has been performed.

Reporter...

The **Reporter** command allows you to execute the spReporter module to generate, view and print reports after a successful run has been performed.

3.5 View Menu

The **View** menu commands enable you to modify the floor system’s appearance on the screen to suit your viewing needs and enable you to view the result diagrams. The **View** menu contains the following commands: **Zoom, Pan, Restore, Plan View, Elevated View, Side View, Isometric View, Change View Angles, View Options, Loads, Internal Forces, Moment Capacity, Shear Capacity, Reinforcement, Deflection** and **Duplicate Active View**.

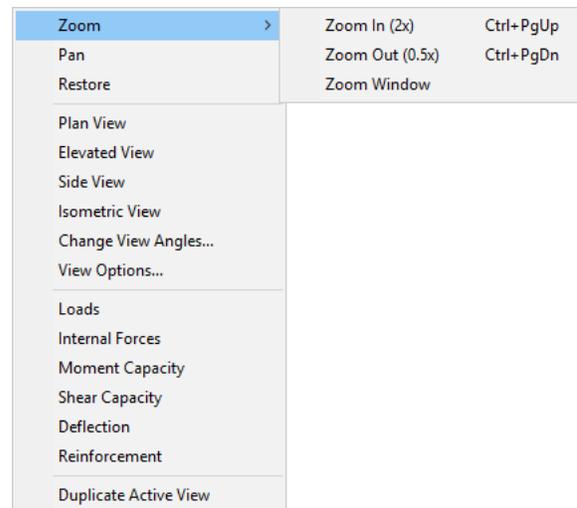

Zoom

The **Zoom** menu contains a cascade sub-menu, which enables you to zoom in and out on any portion of your floor system. Select **Window** from the sub-menu and use the mouse to specify

a zooming region; the program will enlarge the portion you select. Select the **In(2x)** or **Out(0.5x)** to enlarge or reduce the model by two times, respectively.

Pan

The **Pan** command allows you to move your model on the plane of the screen. You may move the model in any direction. The mouse cursor is changed to a palm shape once the **Pan** command is selected. Press and hold the left mouse button on the view window and drag to the new location. After the mouse button is released, the model is moved in the same distance and direction as the mouse cursor from the original position.

Restore

The **Restore** command will redraw the floor system in full size. If you have altered your screen view using the **Zoom** command, select **Restore** to restore the figure's original proportions.

Plan View

Select **Plan View** command to show the plan view window.

Elevated View

Select **Elevated View** command to show the elevated view window.

Side View

Select **Side View** command to show the side view window.

Isometric View


Select **Isometric View** command to show the isometric view window.

Change View Angles

The **Change View Angle** command allows you to modify the angle at which the floor system is displayed in the Isometric View. The default angles are set at -45 about the X axis and 45 about the Z axis. A more convenient way to change the view angle is to use the keyboard short cut CTRL + ARROW KEYS. To rotate around Z axis, press CTRL + ← or CTRL + →. To rotate around X axis, press CTRL + ↑ or CTRL + ↓.

View Options

The **View Options** command allows you to view selected members of the floor system in the view windows. Clicking the left mouse button on the check boxes next to the items in the dialog box, or tabbing to the member type and pressing the space bar will toggle the selection. spSlab will draw any members that contain a ✓ in the box.

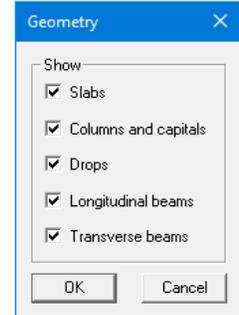


Loads

Select **Loads** command to show the load view window.

Internal Forces

Select **Internal Forces** command to show the shear, moment, and torsion (for beams/one-way slab systems only) diagram view window. The analysis and/or design must be performed before selecting this command. Otherwise “Problem Not Solved” message will be shown instead.

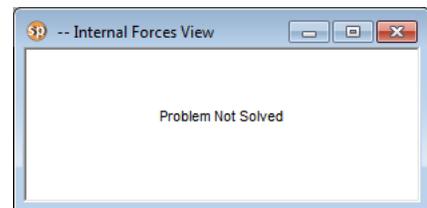

Moment Capacity

Select **Moment Capacity** command to show the moment capacity diagram view window. The analysis and/or design must be performed before selecting this command. Otherwise “Problem Not Solved” message will be shown instead.

Shear Capacity

Select **Shear Capacity** command to show the shear capacity diagram view window. The analysis and/or design must be performed before selecting this command. Otherwise “Problem Not Solved” message will be shown instead.

Reinforcement

Select **Reinforcement** command to show the reinforcement view window. The analysis and/or design must be performed before selecting this command. Otherwise “Problem Not Solved” message will be shown instead.


Deflection

Select **Deflection** command to show the deflection diagram view window. The analysis and/or design must be performed before selecting this command. Otherwise “Problem Not Solved” message will be shown instead.

Duplicate Active View

Select **Duplicate Active View** to make a copy of the current active view window.


3.6 Options Menu

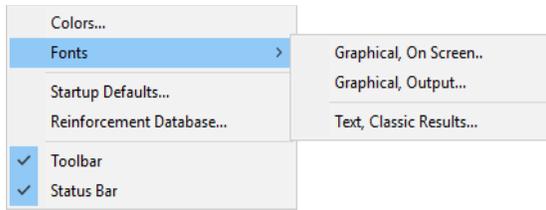

The **Options** menu allows you to change the startup options of the spSlab program to suit your needs. The **Options** menu contains the following commands: **Colors**, **Fonts**, **Startup Defaults**, **Reinforcement Database**, **Toolbar**, and **Status Bar**.



Colors

The **Colors** command allows you to change the background color, member color, load color, text color, diagram color, etc. You may save the new colors as default setting, which will be used when spSlab is executed in the future.

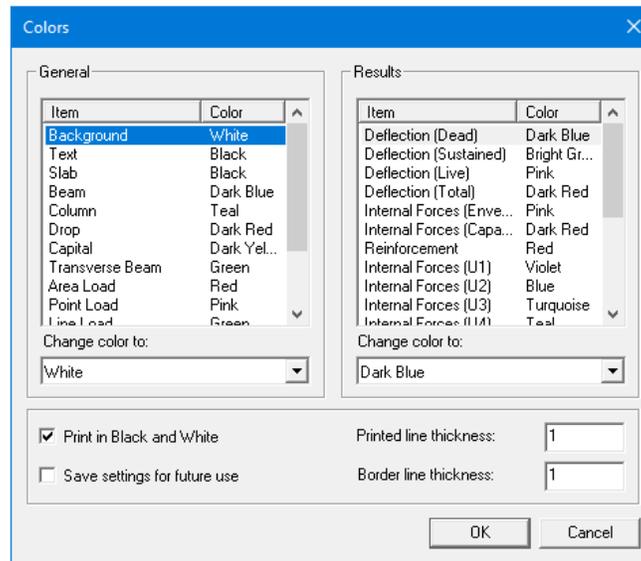


Fonts

The **Fonts** command allows you to select properties of the font that will be used in the on screen-graphical window, graphical print as well as in classic text result window and output. Please note that for the Classical text output only non-proportional (fixed width) fonts can be used

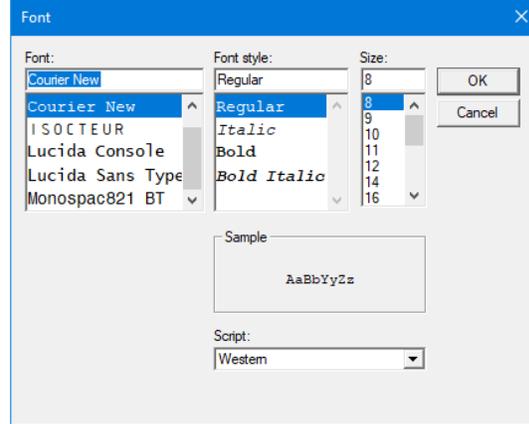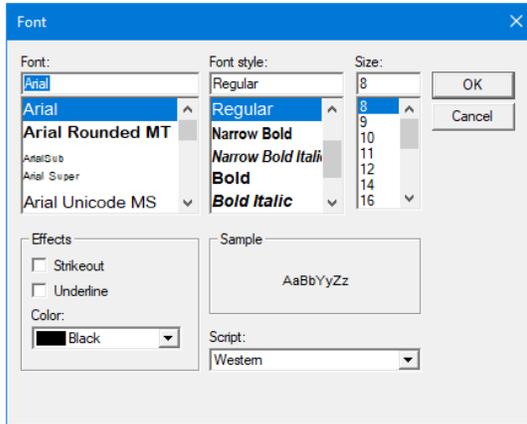

Startup Defaults


The **Startup Defaults** command allows you to enter engineer name, change the default design code, reinforcement database, and the data directory which is where the program looks for data when it is executed.

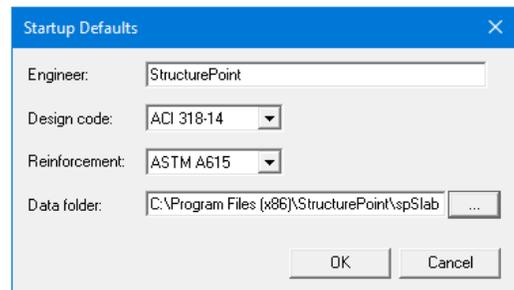

Note: Default values of various design parameters (e.g. minimum and maximum bar spacing and reinforcement ratio, Young modulus, rupture modulus, etc.) assumed by the program depend on the design code selected in this dialog box. Subsequent change of the design code in the General Information dialog box does not reset values of these parameters to the default values corresponding to the newly selected code. It may, however, convert these values to different units if the code change is accompanied by a change of units.

Reinforcement Database

The **Rebar Database** command allows you to view the pre-defined reinforcement information and define your own database. The user-defined database can be selected from the *General Information* dialog box.

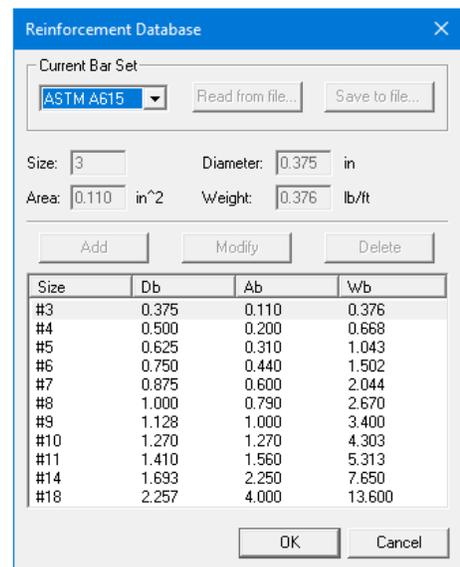

Toolbar

Check the **Toolbar** command with a ✓ sign to show the **Toolbar**. Select the command again to clear the ✓ sign to hide the **Toolbar**. The **Toolbar** is shown by default.

Status Bar


Check the **Status Bar** command with a ✓ sign to show the **Status Bar**. Select the command again to clear the ✓ sign to hide the **Status Bar**. The **Status Bar** is shown by default.

3.7 Window Menu

The **Window** menu enables you to arrange view windows shown on screen. The **Window** menu contains the following commands: **Cascade**, **Tile Horizontal** and **Tile Vertical**.

Cascade

The **Cascade** command displays all the open windows in the same size, arranging them on top of each other so that the title bar of each is visible. The current active view window will be on the top after the execution of the **Cascade** command.

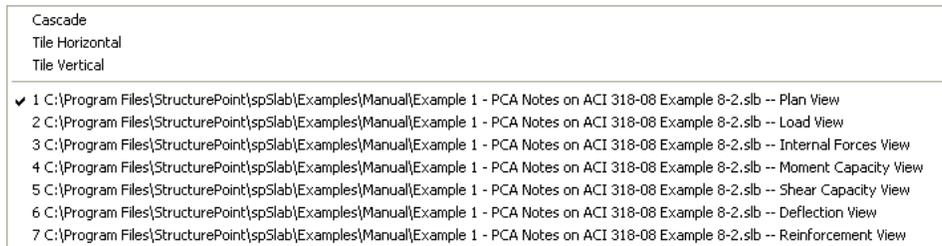

Tile Horizontal

The **Tile Horizontal** command arranges all open windows horizontally so that no window overlaps another. The current active view window will be on the most left or on the upper-left corner of the screen after the execution of the **Tile Horizontal** command.

Tile Vertical

The **Tile Vertical** command arranges all open windows vertically so that no window overlaps another. The current active view window will be on the most left or on the upper-left corner of the screen after the execution of the **Tile Vertical** command.

Window List

The remaining menu items are in a list of the windows that are available for viewing. Selecting any window from this menu will bring up or restore the window to its previous size and position if it was minimized.

3.8 Help Menu

The **Help** menu includes commands that enable you to obtain online help for the program and show the copyright and registration information about your software.

spSlab/spBeam Info

Opens information page for the current version of spSlab being used in the default browser. Internet connection is required.

Submit a Question

Opens the StructurePoint Submit a Question page in the default browser. Internet connection is required.

Manual

Opens spSlab/spBeam Manual in the default browser. Internet connection required.

Help

Uses the default browser to open spSlab/spBeam help. It provides access to all available help topics. Click on any topic and a help screen will appear with information about that item. Internet connection is required.

Tutorial Videos

Uses the default browser to open a page containing spSlab/spBeam tutorial videos. Internet connection is required.

Design Examples


Uses the default browser to open a page containing design examples for StructurePoint software. Internet connection is required.

Check for Updates

Checks if a newer version of spSlab is available. Internet connection is required.


Release Notes

Uses the default browser to open a page containing release notes for the version of spSlab being used. Internet connection is required.

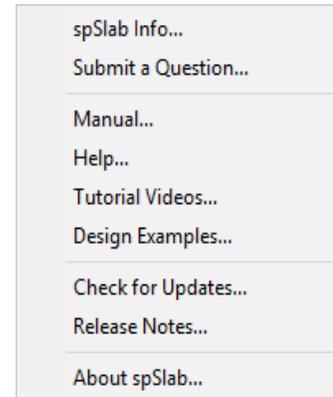

About spSlab

Shows the version number of the program, the licensing information, and the copyright information. In the case of a trial license, the expiration date is given as well as the locking code which is needed to obtain a standalone license.

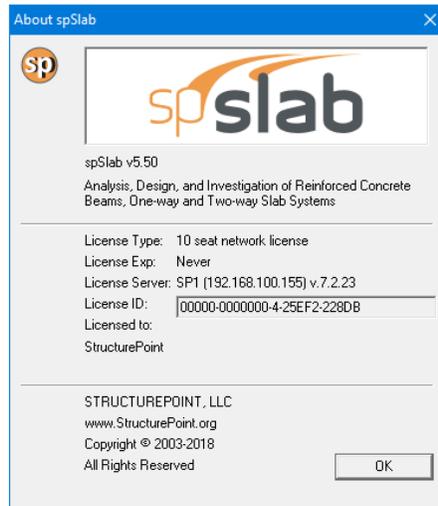


3.9 Control Menu

All the view windows have one pull-down menu located in the upper left hand corner of the open window. This is the **Control Menu**. To access the **Control Menu**, press CTRL + F6 to cycle through the windows and press ALT + – (hyphen), to open the **Control Menu** of the desired window. The following is a list and a brief description of the commands in this menu.

Restore

The **Restore** command will restore a window or an icon to its previous size and position. This menu item is available when the window is iconized or maximized.

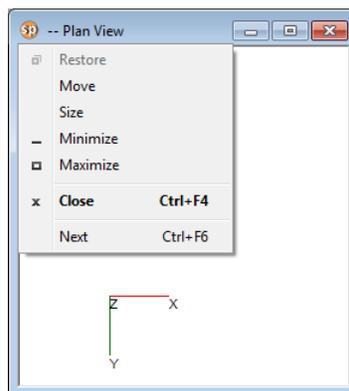

-  Open the Data Input Wizard. The Data Input Wizard will guide you to enter the necessary input to your project. The equivalent menu command is **Input/Data Input Wizard**.
-  Enter general information. The equivalent menu command is **Input/General Information**.
-  Enter material properties. The equivalent menu command is **Input/Material Properties**.
-  Enter span geometry information for slabs, longitudinal beams, and ribs. The equivalent menu command is **Input/Spans**.
-  Enter support information for columns, drop panels, column capitals, and transverse beams. The equivalent menu command is **Input/Support**.
-  Enter reinforcement criteria for slab and ribs, and beams. The equivalent menu command is **Input/Reinforcement Criteria**.
-  Enter reinforcing bar information for column strips, middle strips, beams, and beam stirrups. This button is disabled if **Design** run mode is selected from the **General Information** dialog box. The equivalent menu command is **Input/Bars**.
-  Enter load cases. The equivalent menu command is **Input/Load Cases**.
-  Enter load combinations. The equivalent menu command is **Input/Load Combinations**.
-  Enter span loads. The equivalent menu command is **Input/Span Loads**.
-  Enter support loads and displacements. The equivalent menu command is **Input/Support Loads and Displacements**.
-  Enter lateral effects. The equivalent menu command is **Input/Lateral Effects**.
-  View plan geometry. The equivalent menu command is **View/Plan View**.
-  View elevated geometry. The equivalent menu command is **View/Elevated View**.
-  View side geometry. The equivalent menu command is **View/Side View**.
-  View isometric geometry. The equivalent menu command is **View/Isometric View**.
-  Execute the analysis and/or design. The equivalent menu command is **Solve/Execute**.
-  Print preview window. the equivalent menu command is **File/Print Preview**.
-  View loads. The equivalent menu command is **View/Loads**.
-  View internal forces within the whole system or a single span. The equivalent menu command is **View/Internal Forces**.
-  View moment capacity of the whole geometry or a single span. The equivalent menu command is **View/Moment Capacity**.
-  View shear capacity of the whole geometry or a single span. The equivalent menu command is **View/Shear Capacity**.
-  View deflection of the whole geometry or a single span. The equivalent menu command is **View/Deflection**.

-  View flexure reinforcement for beam strip, middle strips, and column strips. View shear reinforcement for beam strips. The equivalent menu command is **View/Reinforcement**.
-  Zoom in view window to magnify the system. The equivalent menu command is **View/Zoom/In(2x)**.
-  Zoom out view window to reduce the system. The equivalent menu command is **View/Zoom/Out(0.5x)**.
-  Zoom any part of a view window. The equivalent menu command is **View/Zoom/Window**.
-  Move the model in the screen plane. The equivalent menu command is **View/Pan**.
-  Restore a view window. The equivalent menu command is **View/Redraw**.
-  View results. The equivalent menu command is **File/Results**.
-  View report. The equivalent menu command is **File/Reporter**.

CHAPTER

4

**OPERATING spSlab/
spBeam**

4.1 Introduction	121
4.2 Creating New File	121
4.3 Opening File	121
4.4 Saving File	122
4.4.1 Save the data with the same file name	122
4.4.2 Change the format or rename the file	123
4.5 Most Recently Used Files (MRU)	123
4.6 Specifying Model Data (Menu Input)	124
4.6.1 Data Input Wizard	124
4.7 Defining General Information	124
4.7.1 Defining Solve Option	125
4.7.2 Using Span Control	129
4.7.3 Defining Material Properties	133
4.7.4 Defining Slabs/Flanges	135
4.7.5 Defining Longitudinal Beams	137
4.7.6 Defining Ribs	138
4.7.7 Defining Longitudinal Slab Bands	140
4.7.8 User Defined Column Strip Widths	141
4.7.9 User Defined Moment Distribution Factors	142
4.7.10 Defining Columns	143
4.7.11 Defining Drop Panels	145
4.7.12 Defining Column Capitals	147
4.7.13 Defining Transverse Beams	149
4.7.14 Defining Transverse Slab Bands	150
4.7.15 Defining Boundary Conditions	151

4.7.16	Defining Moment Redistribution Factors	153
4.7.17	Defining Reinforcement Criteria for Slabs and Ribs	154
4.7.18	Defining Reinforcement Criteria for Beams	156
4.7.19	Defining Column Strip Bars for Two-Way Slab Systems	158
4.7.20	Defining Middle Strip Bars for Two-Way Slab Systems	159
4.7.21	Defining Beam Bars for Two-Way Slab Systems	161
4.7.22	Defining Beam Stirrups for Two-Way Slab Systems	162
4.7.23	Defining Flexure Bars for Beams and One-Way Slab Systems	164
4.7.24	Defining Stirrups for Beams and One-Way Slab Systems	164
4.7.25	Defining Torsional Longitudinal Bars for Beams	165
4.7.26	Defining Load Cases	167
4.7.27	Defining Load Combinations	168
4.7.28	Span Loads	169
4.7.29	Defining Area Load on Span	170
4.7.30	Defining Line Load on Span	171
4.7.31	Defining Point Force on Span	173
4.7.32	Defining Point Moment on Span	174
4.7.33	Defining Line Torque on Span	175
4.7.34	Defining Point Torque on Span	177
4.7.35	Defining Support Loads and Displacements	178
4.7.36	Defining Lateral Effects	180
4.8	Executing Calculations (menu Solve)	181
4.8.1	Execute	181
4.8.2	Viewing Results	181
4.9	View Program Output (menu View)	182
4.9.1	Zooming in on Floor System	182
4.9.2	Change Isometric View Angle	183
4.9.3	Viewing Specific Member Type	184
4.9.4	Plan View	185
4.9.5	Elevated View	186
4.9.6	Side View	188
4.9.7	Isometric View	189
4.9.8	Loads	191
4.9.9	View Graphical Results	192
4.9.10	Printing Results	201
4.9.11	Print Preview	203
4.9.12	Copy Graphs to Clipboard	204
4.10	Customizing Program (menu Options)	205
4.10.1	Changing Colors	205
4.10.2	Changing Fonts	206
4.11	Working with View Windows (menu Window)	208
4.12	Obtaining Help Information (menu Help)	208
4.12.1	Opening Table of Contents of the Help System	208
4.12.2	Displaying the Manual	208
4.12.3	Checking for Updates	209
4.12.4	Obtaining Information about the Program	209


4.1 Introduction

In this chapter, the sections follow the order in which commands and options appear beginning with those found under the **File** menu and ending with those under the **Help** menu.


Many of the commands and options that appear under these menus are also accessible by other methods. Consequently, these other methods are also explained.

4.2 Creating New File

When spSlab/spBeam is loaded, the program is ready to begin receiving input for a new project. Until you save the file, the data will not have a filename associated with it, and the title bar will display the word *spSlab1* or *spBeam1* as illustrated here:

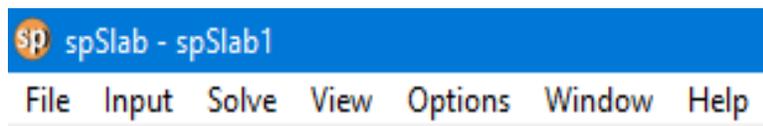

- From the **File** menu, choose **New**. This clears the screen in preparation for a new project or data entry file and returns the program to its default settings.
- If existing data on an open project has been changed prior to executing the **New** command, the program will display the following message box inquiring whether you wish to save the data on the open project or data file before creating a new file:

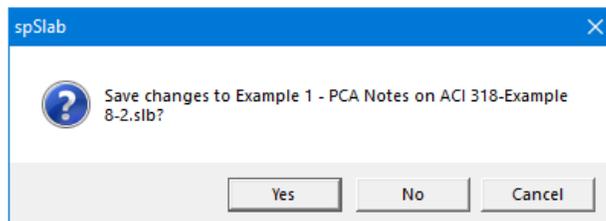

4.3 Opening File

spSlab allows you to open data files that were saved at an earlier time including files from previous versions of spSlab and spBeam as well as pcaSlab, pcaBeam, or ADOSS. Note that the extension name of an ADOSS .ADS and the extension name of a pcaBeam v1.01 file is .BMS. Both pcaSlab and pcaBeam v1.5x use files with the .SLB extension.

- From the **File** menu, choose **Open** and a dialog box will appear.

- All files with the .SLB extension contained in the current drive and directory are displayed in the FILE NAME list box. To view files with a different extension, use the file type drop-down menu to choose a different file extension.
- To open a file that exists in another drive or directory, select the drive or directory you want from the LOOK IN drop-down list.
- From the FILE NAME list box, select the file to be opened, or simply type its name in the text box.
- Choose the OK button.
- Alternatively, an input file can be opened by spSlab if the file is drag-and-dropped onto the program window or if the file pathname is provided as a command line parameter when invoking spSlab from the command prompt.

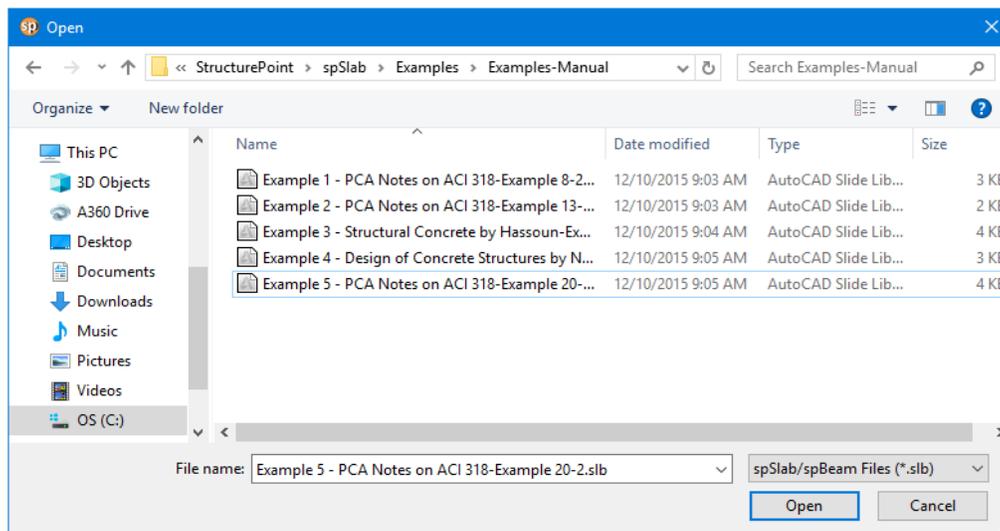


Figure 4-1 Open Dialog Box

4.4 Saving File

spSlab files are saved in a binary format with .SLB extensions.

4.4.1 Save the data with the same file name

- At any time while editing a data file that has previously been saved under a file name, choose File and Save to save the changes under the same file name, overwriting the old file. From the File menu, select the Save command before giving the data file a name displays the Save As dialog box.

4.4.2 Change the format or rename the file

- From the File menu, select Save As, and a dialog box will appear.
- All files with .SLB extensions contained in the current drive and directory are displayed in the File Name list box.
- To save the file to a drive or directory other than the default, select a different drive or directory from the Save In drop-down list.
- Choose OK button

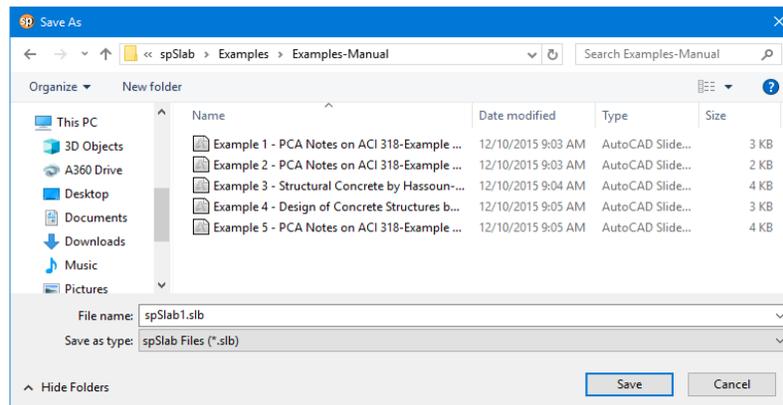


Figure 4-2 Save As Dialog Box

4.5 Most Recently Used Files (MRU)

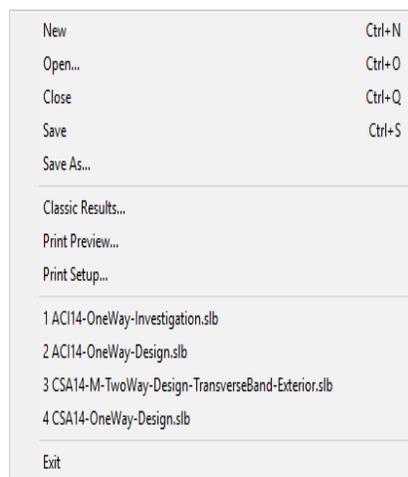


Figure 4-3 Most Recently Used File List (MRU)

The Most Recently Used Files (MRU) list shows the four data files that were opened most recently. Selecting a data file from this list makes it easier and faster to open the file. The list is empty when the program is executed for the first time.

4.6 Specifying Model Data (Menu Input)

4.6.1 Data Input Wizard

The **Data Input Wizard** is designed to make the inputting process easier. By selecting the **Data Input Wizard** from **Input** menu or selecting  from the tool bar, a logical sequence of dialog boxes will automatically be displayed allowing you to enter data for your floor system.

4.7 Defining General Information

The **General Information** command allows you to enter labels, design code, reinforcement database, run mode, and the frame information needed by spSlab to proceed with the input process. You must choose this command before doing any further inputting since this command affects the availability of the commands in the **Input** menu.

To enter general information:

- Select the **General Information** command from the **Input** menu or click the  button from the tool bar. The dialog box of Figure 4-4 will appear.
- Enter the project name, frame name, and engineer name in the Label frame box.
- Select the building standard you want your floor system to be designed to (ACI 318-14, ACI318M-14, ACI 318-11, ACI 318M-11, ACI 318-08, ACI 318M-08, ACI 318-05, ACI 318M-05, ACI 318-02, ACI 318M-02, ACI 318-99, ACI 318M-99, CSA A23.3-14, CSA A23.3-14E, CSA A23.3-04, CSA A23.3-04E, CSA A23.3-94, CSA A23.3-94E) from the Option frame box.

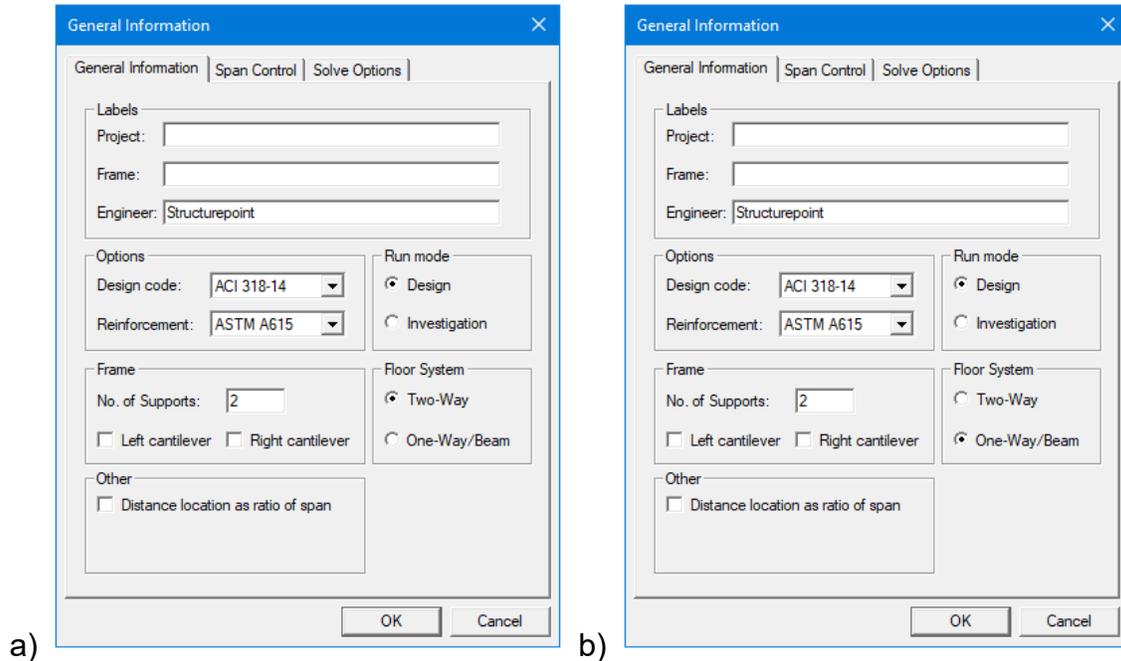


Figure 4-4 General Information dialog box (a) two-way system (b) beam and one-way system

- Select the DESIGN or INVESTIGATION from the RUN MODE frame box.
- In the FRAME box, enter the Number of supports of the frame. The default number of supports is 2. The minimum and maximum number of spans is 1 and 20 spans, respectively. Therefore the minimum number of supports is 2 and the maximum number of supports is 21.
- Check the LEFT CANTILEVER and/or RIGHT CANTILEVER check boxes if left cantilever and/or right cantilever exist in the frame respectively.
- In the FLOOR SYSTEM frame box, select TWO-WAY or BEAMS/ONE-WAY slab option.
- Select NONE, LONGITUDINAL, or TRANSVERSE in SLAB BAND box if a two-way floor system is selected for the CSA A23.3-14/04 design code.
- Check the DISTANCE LOCATION AS RATIO OF SPAN if the locations of loads need to be entered as a ratio of the length of a span.
- Press OK button to exit the dialog box and allow spSlab to use the new data. If using the Auto Input, click the NEXT button to the next dialog box.

4.7.1 Defining Solve Option

The **Solve Options** command allows you to select options and specify parameters that affect the analysis and design results. Changing these settings involves engineering judgment and it has to

be done cautiously. To take effect, this command must be used prior to the **Execute** command. The set of parameters is different for two-way and one-way systems.


4.7.1.1 Two-way systems

To specify solve options for two-way systems:

- Enter the live load pattern ratio.
- Check COMPRESSION REINFORCEMENT checkbox if it is to be considered when needed.
- Check USER SLAB STRIP WIDTH to enable manual input of column strip width. The default values are calculated according to design code selected. The validity of the assumptions when entering user defined values are to be decided by the Designer.
- Check USER DISTRIBUTION FACTORS to enable manual input of moment distribution factors. The default values are calculated according to design code selected. The validity of the assumptions when entering user defined values are to be decided by the Designer.
- Check DECREMENTAL REINFORCEMENT DESIGN to use alternative reinforcement design algorithm.
- Check COMBINED M-V-T REINF. DESIGN to proportion longitudinal reinforcement for combined action of flexure, shear, and torsion. This option is available only when CSA A23.3-14 or CSA A23.3-04 are selected.
- Check ONE-WAY SHEAR IN DROP PANELS to include drop panel cross-section in slab one-way shear capacity calculations in support locations.
- Check DISTRIBUTE SHEAR TO SLAB STRIPS to distribute slab one-way shear between column and middle strips in proportion to moment distribution factors.
- Check BEAM T-SECTION DESIGN to include portions of slab as flanges in beam cross-section for reinforcement design.
- Check LONG. BM. SUPT. DESIGN to include cross-section of longitudinal beam in reinforcement design for unbalanced moments over supports. This feature can be useful for slabs having wide longitudinal beams. When used together with USER DISTRIBUTION FACTORS, it can produce solutions consistent with the solutions for models with longitudinal slab bands for CSA A23.3-14/04 code.
- Check TRANS. BM. SUPT. DESIGN to include cross-section of transverse beam in reinforcement design for negative moments and unbalanced moments over supports. This feature is useful for slabs having wide transverse beams. When used together with USER DISTRIBUTION FACTORS, it can produce solutions consistent with the solutions for systems with transverse slab bands for CSA A23.3-14/04 code.

- Enter the multiplier that defines the distance between a column face and a free edge of a slab, within which a segment of punching shear critical section is to be ignored.
- Select whether circular critical section around circular supports is to be used or traditional equivalent rectangular critical section.
- Choose if GROSS (UNCRACKED) or EFFECTIVE (CRACKED) sections are to be considered in the deflection calculations.
- Choose if in the case of a section with flanges in the negative moment region, only the web (RECTANGULAR SECTION) or the whole section (T-SECTION) is to be used to calculate the gross moment of inertia (I_g) and the cracking moment.
- Check CALCULATE LONG-TERM DEFLECTIONS checkbox if you want the program to calculate long-term deflections. Provide the duration of load in months and the percentage of the live load which is considered as sustained load.

ACI

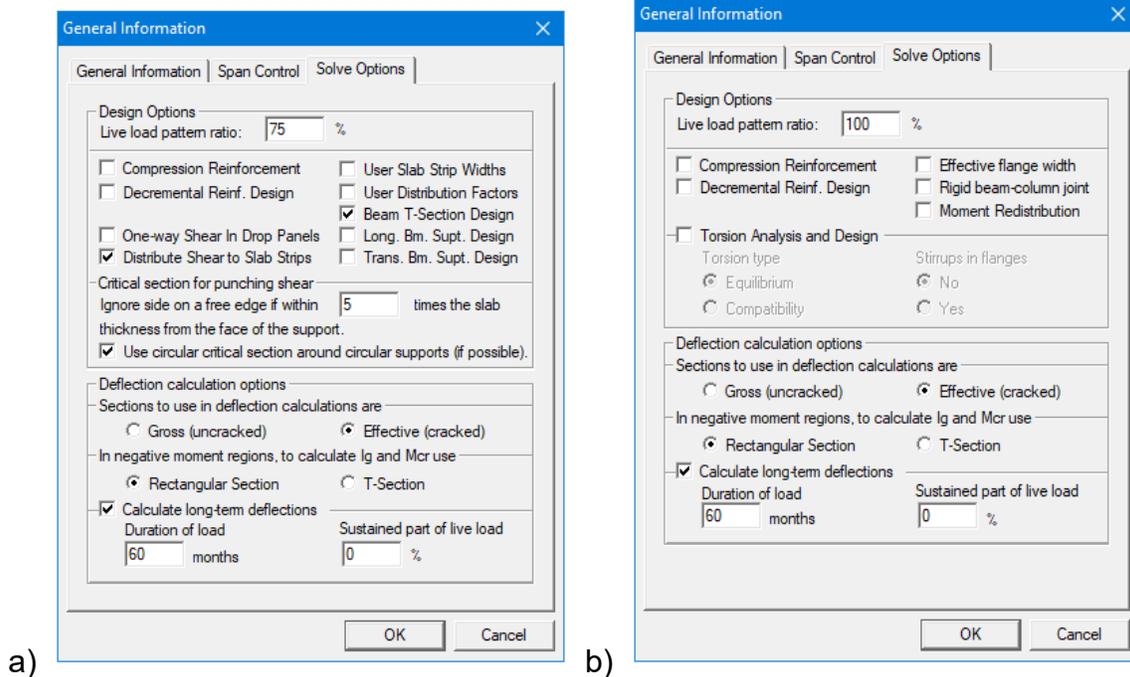

CSA

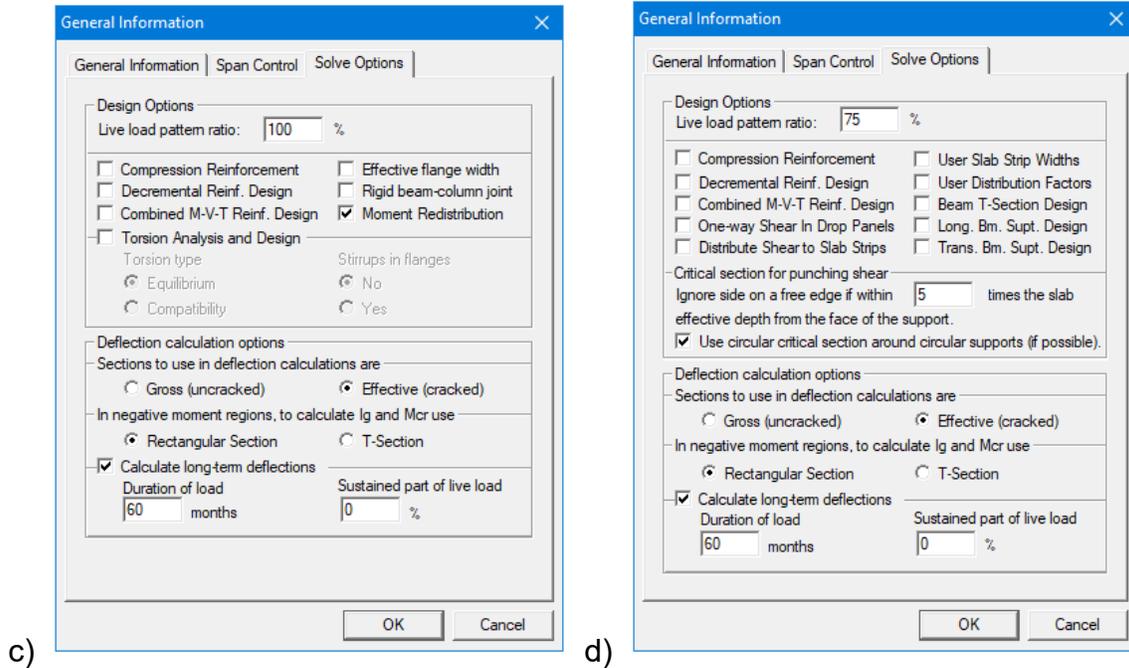


Figure 4-5 Solve Option (a, d) two-way system (b,c) beam and one-way system

4.7.1.2 One way/beam systems

To specify solve options for beams/one-way slab systems:

- Enter the live load pattern ratio. The default value for beams/one-way slab systems is 100%.
- Check COMPRESSION REINFORCEMENT checkbox if it is to be considered when needed.
- Check DECREMENTAL REINFORCEMENT DESIGN to use alternative reinforcement design algorithm.
- Check COMBINED M-V-T REINF. DESIGN to proportion longitudinal reinforcement for combined action of flexure, shear, and torsion. This option is available only when CSA A23.3-14 or CSA A23.3-04 are selected.
- Check EFFECTIVE FLANGE WIDTH if instead of the full flange width only the effective flange width is to be considered in the flexural design.
- Check RIGID BEAM-COLUMN JOINT to consider beam-column joint as rigid.
- Check TORSION ANALYSIS AND DESIGN if they are to be included in the solution. This option has to be checked for the TORSION TYPE and STIRRUPS IN FLANGES options to be

enabled. Also torsional loads will only be available in the TYPE combo box of the SPAN LOADS dialog box if this option is checked.

- Check MOMENT REDISTRIBUTION checkbox if it is to be considered in the analysis. This option has to be checked for the MOMENT REDISTRIBUTION tab to be available in the SUPPORT DATA dialog box.
- If TORSION ANALYSIS AND DESIGN is checked then select if EQUILIBRIUM or COMPATIBILITY torsion is to be considered and if for sections with flanges STIRRUPS IN FLANGES can be considered.
- Choose if GROSS (UNCRACKED) or EFFECTIVE (CRACKED) sections are to be considered in the deflection calculations.
- Choose if in the case of a section with flanges in the negative moment region, only the web (RECTANGULAR SECTION) or the whole section (T-SECTION) is to be used to calculate the gross moment of inertia (I_g) and the cracking moment.
- Check CALCULATE LONG-TERM DEFLECTIONS checkbox if you want the program to calculate long-term deflections. Provide the duration of load in months and the percentage of the live load which is considered as sustained load.

4.7.2 Using Span Control

The **Span Control** tab allows you to perform different operations on the spans that your system consists of. These operations include inserting new spans with default parameters, creating new spans by copying existing spans, moving spans to change span sequence, and deleting spans. The result of an operation depends on the span selected as well as on the selected support. Spans can be selected using the **Span Control List** and columns using the **Support Selection** radio buttons.

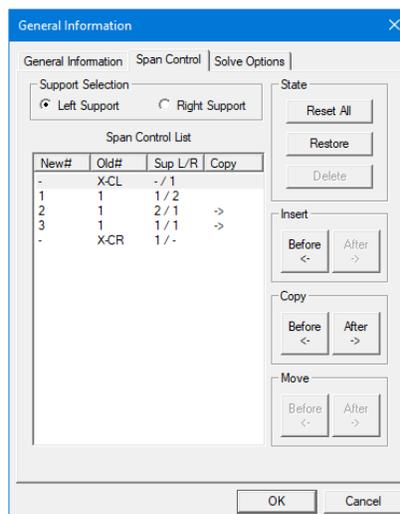


Figure 4-6 Span control tab

Additionally before the **Span Control** window is closed all changes made to the spans can be revoked using the RESET ALL button. The RESTORE button can be used to bring back a span removed using the DELETE button.

To insert a new span with default dimensions:

- In the SPAN CONTROL LIST select the span next to which you want to insert a new span.
- Select whether the LEFT SUPPORT or the RIGHT SUPPORT of the newly created span will be inserted.
- Press INSERT BEFORE button to insert the new span left to the selected span or INSERT AFTER button to insert the new span on the right side of the currently selected span.
- Examples of the insert operations are presented in Figure 4-7. Assuming that Span 2 is always selected the resulting systems will depend on whether INSERT AFTER or INSERT BEFORE was used and whether LEFT COLUMN or RIGHT COLUMN was selected. Newly inserted span and column are denoted with an “x”.

To copy a span:

- In the SPAN CONTROL LIST select the span you want to copy.
- Select whether the LEFT SUPPORT or the RIGHT SUPPORT of the copied span will be copied with the span.
- Press INSERT BEFORE button to place the copied span left to the selected span or INSERT AFTER button to place the copied span on the right side of the currently selected span.
- Examples of the insert operations are presented in Figure 4-8. Assuming that Span 2 is always selected the resulting systems will depend on whether COPY AFTER or COPY BEFORE was used and whether LEFT COLUMN or RIGHT COLUMN was selected. Newly created span and column are denoted with the prime sign.

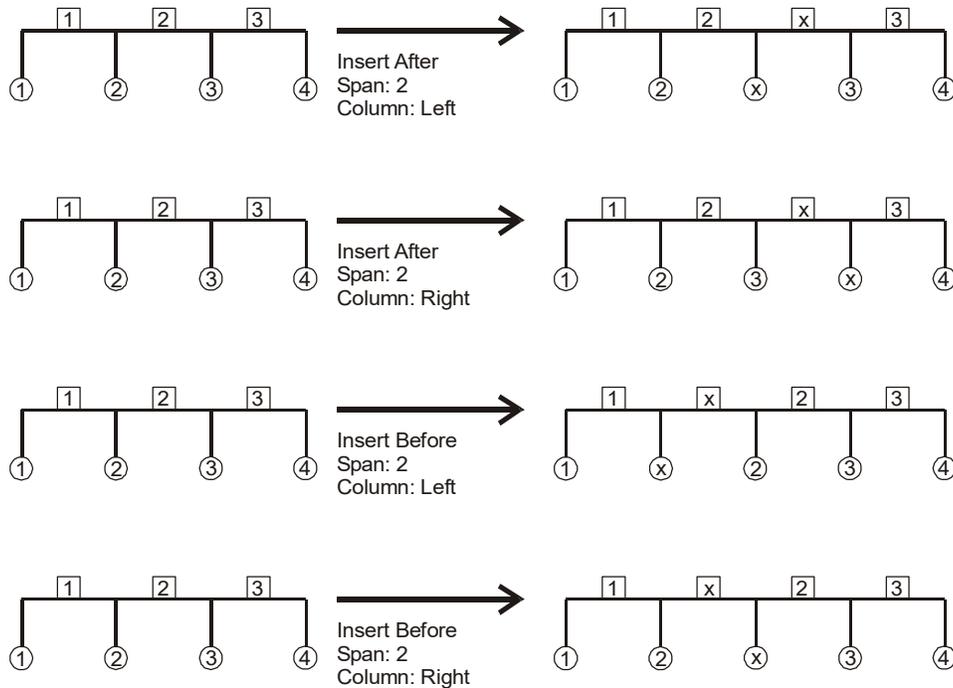


Figure 4-7 Inserting a new span using Span Control

To move a span:

- In the SPAN CONTROL LIST select the span you want to move.
- Select whether the LEFT SUPPORT or the RIGHT SUPPORT of the moved span will be moved with the span.
- Press MOVE BEFORE button to move the span to the left or MOVE AFTER button to move the span to the right side.

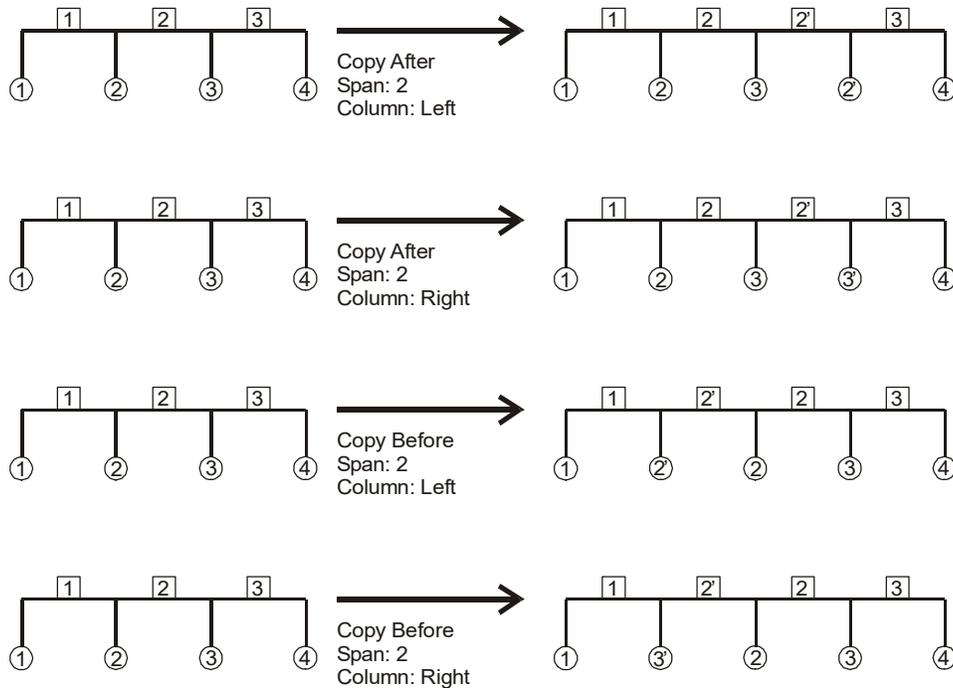


Figure 4-8 Copying a span using Span Control

Examples of the move operations are presented in Figure 4-9. Assuming that Span 2 is always selected the resulting systems will depend on whether MOVE AFTER or MOVE BEFORE was used and whether LEFT COLUMN or RIGHT COLUMN was selected.

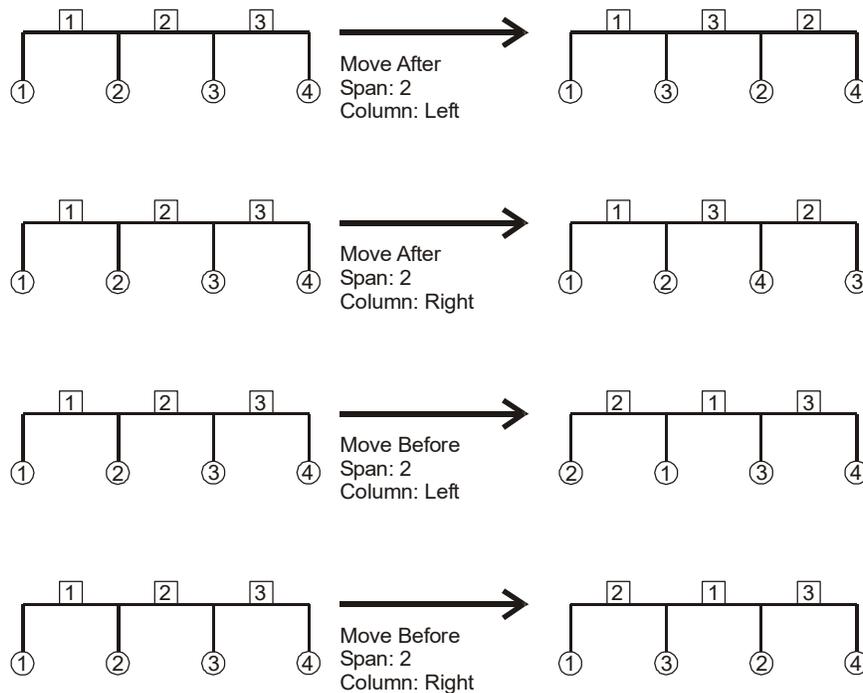


Figure 4-9 Moving a span using Span Control

To delete a span:

- In the SPAN CONTROL LIST select the span you want to delete.
- Select whether the LEFT SUPPORT or the RIGHT SUPPORT of the deleted span will be removed with the span.
- Press the DELETE button to delete the selected span.

Examples of the delete operations are presented in Figure 4-10. Assuming that Span 2 is always selected the resulting systems will depend on whether LEFT COLUMN or RIGHT COLUMN was selected.

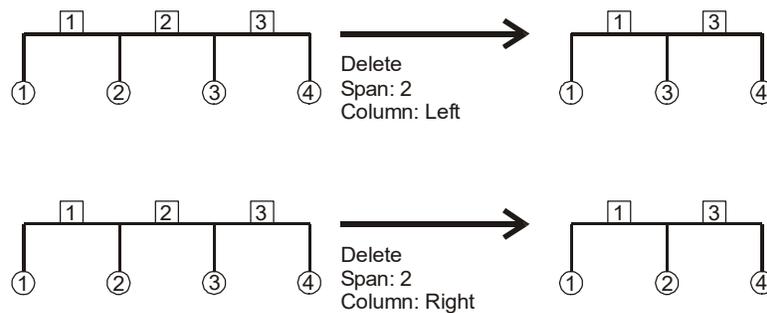


Figure 4-10 Deleting a span using Span Control

4.7.3 Defining Material Properties

The **Material Properties** command from the **Input** menu allows you to input material properties of the concrete and the reinforcement. There are two tabs in this dialog box. One is for concrete and the other is for reinforcing steel. This command must be executed in order to perform a design of the floor system. Use the tab key to get to each edit box then type in your values, or use your mouse and click directly on the desired tab and box, then type in your values. Refer to "Material Properties" for a detailed explanation of the default values.

To define material properties:

- Select the **Material Properties** command from the **Input** menu or click the  button on the tool bar. The dialog box of Figure 4-11 will appear.

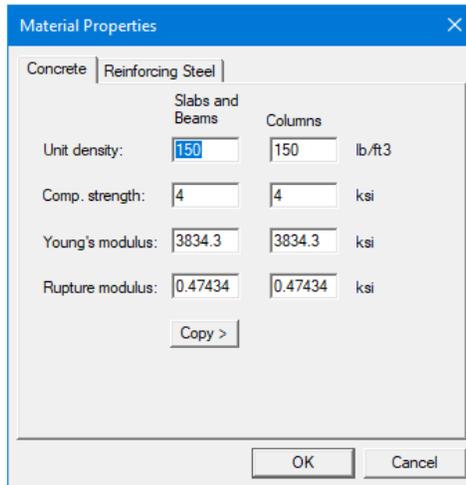


Figure 4-11 Concrete Properties dialog box

- Click the **Concrete** tab and enter the concrete density for the following members: Slabs, Beams, and Columns.
- Enter the concrete compressive strength. By entering a value for the compressive strength, values for Young's modulus and rupture modulus will automatically be computed for the slabs, beams, and columns. Young's modulus and rupture modulus will automatically be shown in the corresponding text boxes.
- If you have values for the rupture modulus, f_r , enter the values in the text boxes for the slabs, beams, and columns. Default values are computed based on f_c' . These values will be used for deflection analysis. A large value for the rupture modulus will produce a deflection analysis based on gross, non-cracked, sections. The CSA A23.3 standard requires¹⁹⁹ that for the calculation of deflections half the value of rupture modulus be used. spSlab defaults to this value of the rupture modulus for the slab (both one-way and two-way) and beam concrete in CSA A23.3-14/04 design runs and for two-way slabs in CSA A23.3-94 design runs. For beams and one-way slabs per CSA A23.3-94, however, the full value of rupture modulus has to be used and the program will provide it as default in this case. It is strongly recommended, however, that the user verifies what value of f_r is actually entered in the program since the default value can be inadvertently overwritten or carried over from a previous run.
- If precast concrete is used, check PRECAST CONCRETE checkbox.
- Click the **Reinforcing Steel** tab as shown in Figure 4-12.

199. CSA A23.3-14, 9.8.2.3; CSA A23.3-04, 9.8.2.3; CSA A23.3-94, 13.3.6

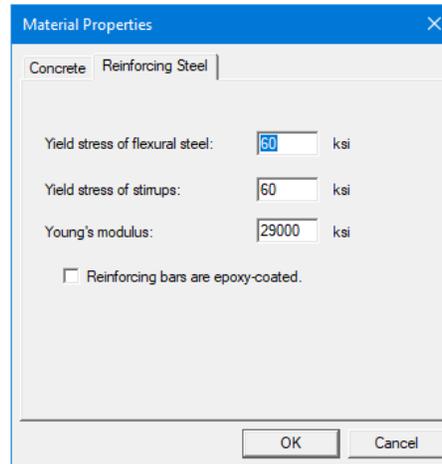


Figure 4-12 Reinforcing Steel Properties dialog box

- Enter the yield stress of flexure steel.
- Enter the yield stress of stirrups.
- Enter the Young's modulus for flexural steel and stirrups.
- Select whether the main reinforcement is epoxy-coated by clicking the left mouse button on the box or tabbing to the box and pressing the SPACE BAR. This selection affects development lengths.
- Press OK button to exit the dialog box so that spSlab will use these material properties. If using the **Auto Input**, click the NEXT button to the next dialog box.

4.7.4 Defining Slabs/Flanges

The **Spans** command from the **Input** menu is available for all floor systems. Span numbers, which are determined from the number of supports entered in the General Information box, are automatically filled into the **Span** drop-down list in the **Span Data** dialog box.

To input slab geometry:

1. Select the **Spans** command from the **Input** menu or click the  button on the tool bar. Click the left mouse button on the **Slabs** tab. The dialog box of Figure 4-13 will appear.
2. Select the number of the span, for which dimensions will be entered, from the **Span** drop-down list.

Span No.	Location	Length	Thickness	Width-L	Width-R
1	Interior	25	0	0	0
2	Interior	15	0	0	0
3	Interior	20	0	0	0

Figure 4-13 Defining the slabs dialog box

3. Select the span location from the **Location** drop-down list. Three types of locations are available: Interior, Exterior Left, and Exterior Right. The "left" and "right" are defined as you look along the direction of analysis. If a span has design strips on both sides it should be an "Interior" span. If a span has only a left design strip, it should be an "Exterior Right" span. If a span has only a right design strip, it should be an "Exterior Left" span.
4. Enter the slab thickness of the span.
5. Enter the span length from column centerline to column centerline or edge to column centerline for the two cantilever spans in the Length edit box. If the program detects a cantilever span length less than one-half the column dimension in the direction of analysis, an error message will pop up when the frame is analyzed. If a partial load is affected by the span length, a message warns the user of this condition.
6. Enter the span design width in the transverse direction of analysis on the left and right side of the column (see Figure 4-14). These distances are usually one-half the distance to the next transverse column or edge of the slab for exterior spans. The left and right designations are arbitrary. Both interior and exterior spans may be used in a design strip. An exterior width will automatically be designated by spSlab by entering a width value less than or equal to the transverse column dimension. Exterior sides do not contribute to the attached torsional stiffness, although they do contribute to loading. spSlab will use the total width entered for weight and superimposed loading but will use code allowed dimensions for flange width and stiffness computations.

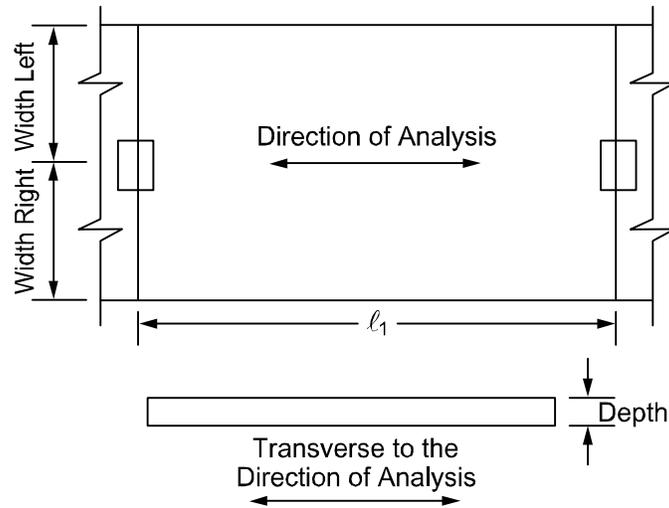


Figure 4-14 Required Slab Dimensions

7. Press the MODIFY button to update the slab geometry.
8. Repeat steps 2 through 7 until all the spans have been updated. You can use the COPY button as a shortcut.
9. Press OK button to exit the dialog box and allow spSlab to use the updated slab geometry.

4.7.5 Defining Longitudinal Beams

Longitudinal beam dimensions are required for the beam-supported slab. Span numbers, which are determined from the number of supports entered in the General Information box, are automatically filled into the **Span** drop-down list.

To input longitudinal beam geometry:

1. Select the **Spans** command from the **Input** menu or click the  button on the tool bar. Select **Longitudinal Beams** tab from the **Span Data** dialog box. The dialog box of Figure 4-15 will appear.
2. Select the span number from the **Span** drop-down list.
3. Enter the width of the longitudinal beam (Figure 4-16).
4. Enter the depth of the longitudinal beam which is taken from the top of the slab to the bottom of the beam (Figure 4-16).
5. If required, enter the offset which is measured from the joint centerline, positive to the right, and negative to the left of the joint (Figure 4-16)
6. Press the MODIFY button to update the longitudinal beam geometry.

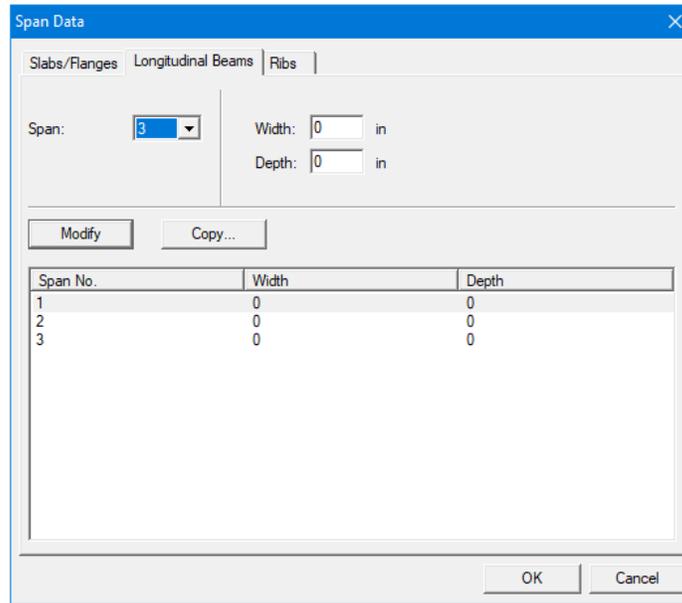


Figure 4-15 Longitudinal Beam Geometry dialog box

7. Repeat steps 2 through 6 until all the beams have been updated. You can use the COPY button as a shortcut.
8. Press OK button to exit the dialog box so that spSlab will use the new beam geometry.

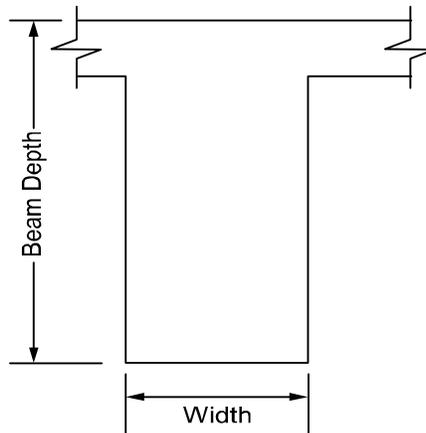


Figure 4-16 Required Longitudinal Beam Dimensions

4.7.6 Defining Ribs

For joist systems, you must define the rib geometry. The ribs are assumed to be the same throughout the strip.

To enter rib geometry:

- Select the **Spans** command from the **Input** menu or click the  button on the tool bar. Click the left mouse button on the **Ribs** tab. The dialog box of Figure 4-17 will appear.

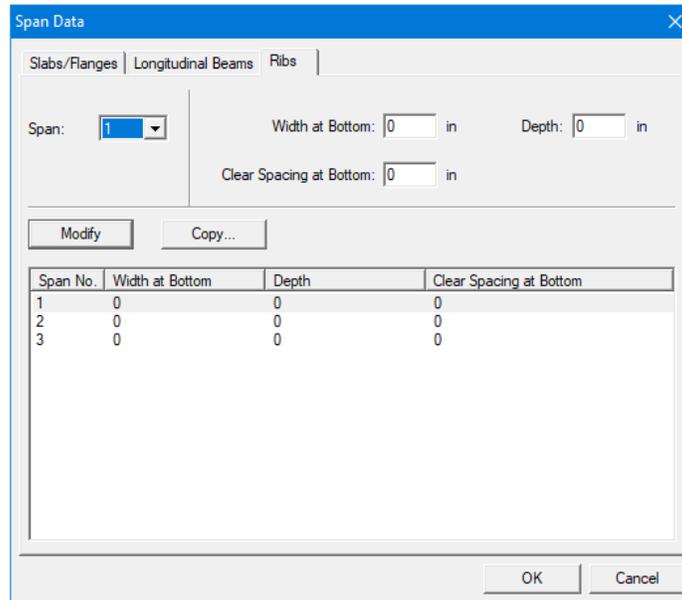


Figure 4-17 Ribs Geometry dialog box

- Select the span number from the **Span** drop-down list.
- Enter the spacing between ribs at the bottom for clear rib spacing (see Figure 4-18).

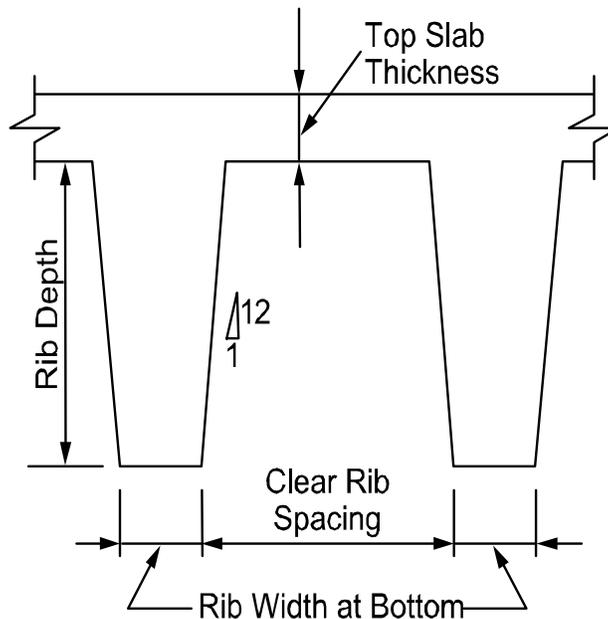


Figure 4-18 Required Rib Dimensions

- Enter the width at the bottom for rib width (see Figure 4-18).
- Enter the depth of the rib below the slab for Rib depth (see Figure 4-18).
- Press OK button to exit the dialog box so that spSlab can use the rib geometry.


4.7.7 Defining Longitudinal Slab Bands

This command is only available for two way floor systems when **Slab Bands | Longitudinal** option is selected under the **General Information** dialog box, (CSA A23.3-14/04 only).

The Longitudinal Slab **Bands** property page (Figure 4-19) allows inputting the width, depth, and offset (eccentricity) of longitudinal slab bands in each span. The procedure is identical to the described earlier input of dimensions of longitudinal beams. It is not required to input bands for every span. Spans where slab bands are not defined are modeled similar to regular two-way systems. Longitudinal slab bands can also be extended to adjacent spans using drop panels.

To input geometry for longitudinal slab band:

1. Select the **Spans** command from the **Input** menu or click the  button on the tool bar. Click the left mouse button on the **Longitudinal Bands** tab. The dialog box of Figure 4-19 will appear.
2. Select the span number from the **Span** drop-down list.
3. Enter the width of the longitudinal slab band.
4. Enter the depth of the longitudinal slab band from the top of the slab.
5. If required, enter the offset which is measured from the joint centerline, positive to the right, and negative to the left of the joint (See Figure 4-15)
6. Press the MODIFY button to update the longitudinal slab band geometry.
7. Repeat steps 2 through 6 until all the slab bands have been updated. You can use the COPY button as a shortcut.
8. Press OK button to exit the dialog box longitudinal slab bands can either be continuous (at every span) or be discontinuous (at a single span or in successive spans). However, discontinuous Longitudinal bands are required to be capped by a half drop panel at the discontinued support.

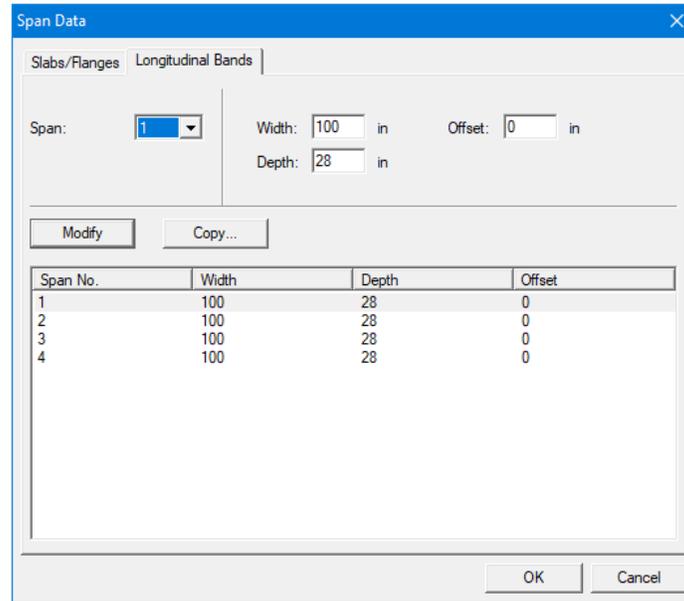

Span No.	Width	Depth	Offset
1	100	28	0
2	100	28	0
3	100	28	0
4	100	28	0

Figure 4-19 Longitudinal Slab Bands Geometry dialog box

4.7.8 User Defined Column Strip Widths

User has the ability to manually adjust column strip widths if the two-way floor system option is selected in **Solve Options**. In this case the Slab/Flanges property page (Figure 4-20) will contain additional field for inputting column strip width. The values of middle and beam strip widths are recalculated internally.

To manually adjust column strip widths:

- Enable check box **User Slab Strip Width** under **Solve Options** dialog window.
- Follow the procedure described in section *Defining Slabs/Flanges*.
- Enter additional values of column strip width for each span.

The screenshot shows the 'Span Data' dialog box with the following fields and values:

- Span: 1
- Location: Interior
- Length: 20 ft
- Thickness: 12 in
- Width Left: 10 ft
- Width Right: 10 ft
- Column Strip: 10 ft

The table below the fields contains the following data:

Span No.	Location	Length	Thickness	Width-L	Width-R	Col.Strip
1	Interior	20	12	10	10	10
2	Interior	20	12	10	10	10

Figure 4-20 User Defined Column Strip Widths

4.7.9 User Defined Moment Distribution Factors

User has the ability to manually adjust moment distribution factors if the two-way floor system option is selected in **Solve Options**. In such case the **Moment Distribution** property page (Figure 4-21) will become available under **Span Data** dialog window. This dialog contains fields for inputting distribution factors in column and beam strips. The distribution factors for middle strip are recalculated internally.

To input Moment Distribution Factors:

1. Enable check box **User Distribution Factors** under **Solve Options** dialog window.
2. Select the **Spans** command from the **Input** menu or click the  button on the tool bar. Click the left mouse button on the **Moment Distribution** tab. The dialog box of Figure 4-22 will appear.
3. Select the number of the span, for which values will be entered, from the **Span** drop-down list.
4. Enter moment distribution values in edit boxes.
5. Press the **MODIFY** button to update the slab geometry.
6. Repeat steps 2 through 5 until all the spans have been updated. You can use the **COPY** button as a shortcut.
7. Press **OK** button to exit the dialog box.

Span No.	B.Neg.Left	B.Neg.Right	B.Positive	C.Neg.Left	C.Neg.Right	C.Positive
1	0.35	0.25	0.25	0.65	0.45	0.45
2	0.25	0.35	0.25	0.45	0.65	0.45

Figure 4-21 User Defined Moment Distribution Factors

4.7.10 Defining Columns

Column data is optional. If no column is specified at the joints the joint is assumed hinged. You will be allowed to enter column dimensions above and below.

To input column/capital geometry:

1. Select the **Supports** command from the **Input** menu or click the  button on the tool bar. The dialog box of Figure 4-22 will appear. Click on the **Columns** tab.
2. Enter stiffness share of the column which determines the percentage of the column stiffness used in the analysis. When the percentage lies between zero and 100%, the joint stiffness contribution by the column is multiplied by that percentage. Zero stiffness share indicates a pin support. Value of 999 indicates a support with fully fixed rotation. The default value is 100%, i.e. the actual column stiffness.
3. Enter the column height above, which is the distance from the top of the design floor to the top of the floor above (see Figure 4-23). spSlab obtains the clear column height above by subtracting the average slab depth from the height given. Only the slab is considered for the floor system above. A zero dimension for the column heights above and below will create a pin condition.

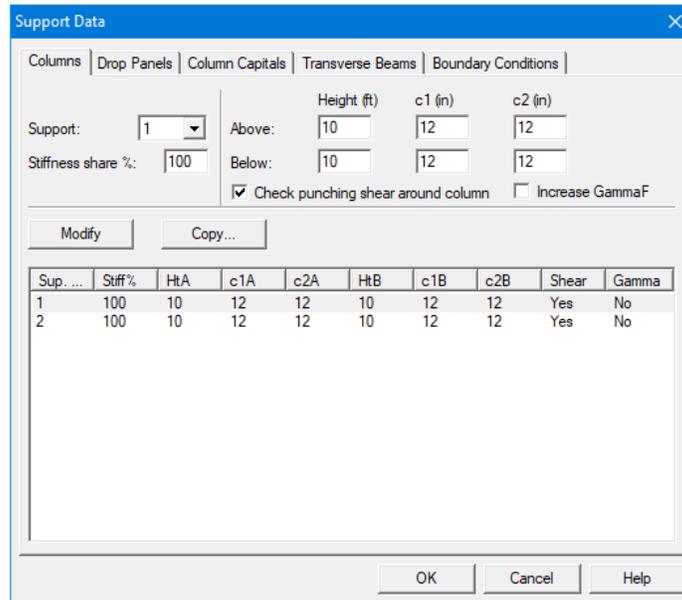


Figure 4-22 Column Geometry dialog box

4. Enter the column height below, which is the distance from the design floor to the top of the floor below (see Figure 4-23). To obtain a clear column height below, the slab/drop/beam depth is subtracted from the height given. A zero dimension for the column heights above and below will create a pin condition.

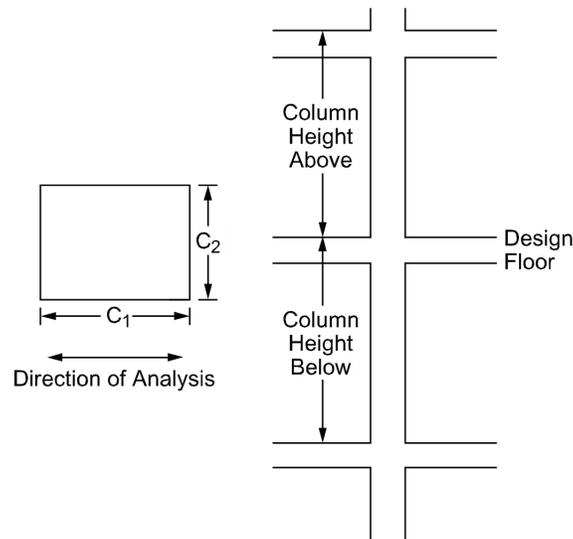


Figure 4-23 Required Column Dimensions

5. Enter a value for c1, the column dimension in the direction of analysis (see Figure 4-23).

6. Enter a value for c2, the column dimension perpendicular to the direction of analysis (see Figure 4-23). Round columns are specified with a zero input for c2; c1 is then taken as the diameter.
7. Select whether spSlab should compute punching shear around column and then ensure the preferred solve option for punching shear perimeter is selected in general information window.
8. Select whether spSlab should compute increased value of γ_f factor and corresponding decreased γ_v factor (for ACI code only).
9. Press the MODIFY button to update the column geometry.
10. Repeat steps 2 through 9 until all the columns and capitals have been updated. You can use the COPY button as a shortcut.
11. Press OK button to exit the dialog box so that spSlab will use the new data.

4.7.11 Defining Drop Panels

Drops are available for the flat slab or waffle slab systems and can be defined at all the support locations. The drop length and width dimensions are computed by spSlab, based on slab span dimensions, when the "Standard" is selected in the **Type** drop-down list.

To input drop geometry:

1. Select the **Supports** command from the **Input Menu** or click the  button then click on the **Drop Panels** tab. The dialog box of Figure 4-24 will appear.
2. Select whether spSlab should compute the drop dimensions or the dimensions will be user specified. If spSlab is to compute the dimensions, the "Standard" option should be selected from the **Type** drop-down list and then only the drop depth will be available. When the "Standard drop" option is selected spSlab will calculate drop panel dimensions in accordance with ACI 318 Clause 13.3.7. Similar requirements contained in previous editions of the CSA A23.3 Standard have been removed from the 1994 edition. As a result, the ACI minimum specifications for drop panels are also used in CSA A23.3 runs when the "Standard Drops" option is selected. If you would like to specify drop dimensions other than those computed by spSlab, you must select "User-defined" from the **Type** drop-down list.

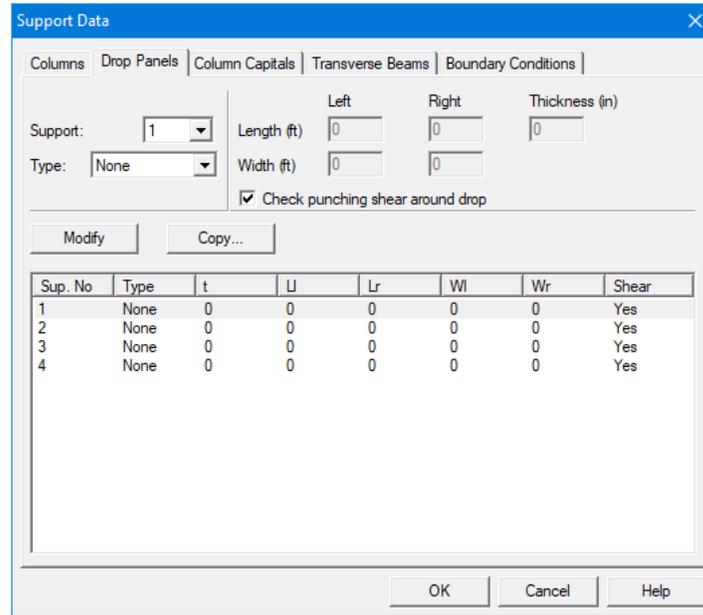


Figure 4-24 Drop Panel Geometry dialog box

3. Enter the dimension in the direction of analysis from the column centerline to the edge of the drop left of the column (see Figure 4-25). If this is a standard drop, this dimension will not be available and the length left is set equal to the slab span length left/6 for interior columns or the left cantilever length for the first column.
4. Enter the width dimension in the transverse direction (see Figure 4-25). If this is a standard drop, this dimension will not be available and the width is set equal to slab width/3.
5. In order for spSlab to recognize drops, drop depths are required for the flat slab systems even if Standard Drop is selected. Enter the depth of the drop from the span with the smaller slab depth (see Figure 4-25). For waffle slab systems, the depth is automatically assumed to be equal to the rib depth below the slab and is not displayed. A value entered will be considered to exist below the rib depth during calculations.
6. Select whether spSlab should compute punching shear around drop panel.
7. Press the MODIFY button to update the drop geometry.
8. Repeat steps 2 through 6 until all the drop dimensions have been updated. You can use the COPY button as a shortcut.
9. Press OK button to exit the dialog box so that spSlab will use the new drop geometry

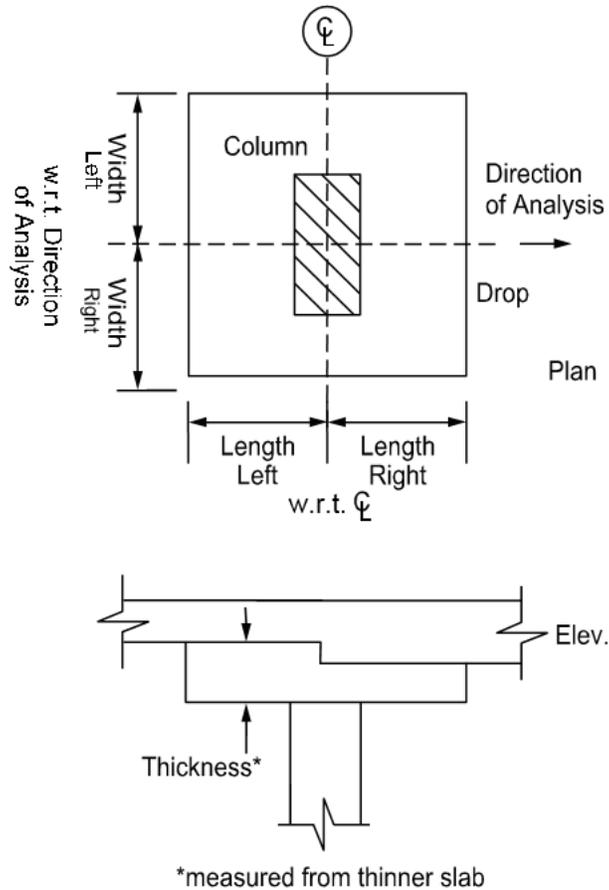


Figure 4-25 Required Drop Panel Dimensions

4.7.12 Defining Column Capitals

To input column capital geometry:

- Select the **Supports** command from the **Input** menu or click the  button on the tool bar. Click left mouse button on the **Column Capitals** tab to activate it. The dialog box of Figure 4-26 will appear.

Sup. No	Depth	Side Slope
1	0	0
2	0	0
3	0	0
4	0	0

Figure 4-26 Capital Dimensions

- Select the support number from the **Support** drop-down list.
- Enter the capital depth which is the distance from the bottom of the soffit (slab, drop, or beam), to the bottom of the capital.
- Enter the capital side slope which is the rate of depth to extension of the capital and it must be greater than 1 and smaller than 50 (see Figure 4-27).
- For circular column capitals, ensure the preferred solve option for punching shear perimeter is selected.

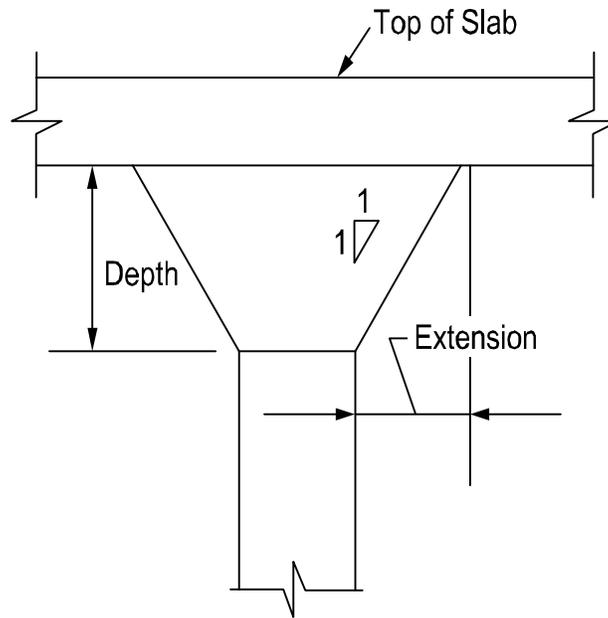


Figure 4-27 Required Capital Dimensions

4.7.13 Defining Transverse Beams

This command is only available for two way floor systems when **Slab Bands | Transverse** option is selected under the **General Information** dialog box, (CSA A23.3-14/04 only).

The Transverse **Beam** command allows you to input the width, depth, and offset (eccentricity) of transverse beams at each column. This command is optional.

To input transverse beam geometry:

1. Select the **Support** command from the **Input** menu. Select **Transverse Beams** tab from the **Support Data** dialog box. The dialog box of Figure 4-28 will appear.
2. Enter the width of the transverse beam (see Figure 4-29)
3. Enter the depth of the transverse beam which is taken from the top of the slab to the bottom of the beam (see Figure 4-29)
4. If required, enter the offset, which is measured from the joint centerline, positive to the right, and negative to the left of the joint (See Figure4-29).
5. Press the **MODIFY** button to update the transverse beam dimensions.
6. Repeat steps 2 through 5 until all the beams have been updated. You can use the **COPY** button as a shortcut (see "Entering the Structure Geometry" earlier in this chapter for help on the **COPY** button).

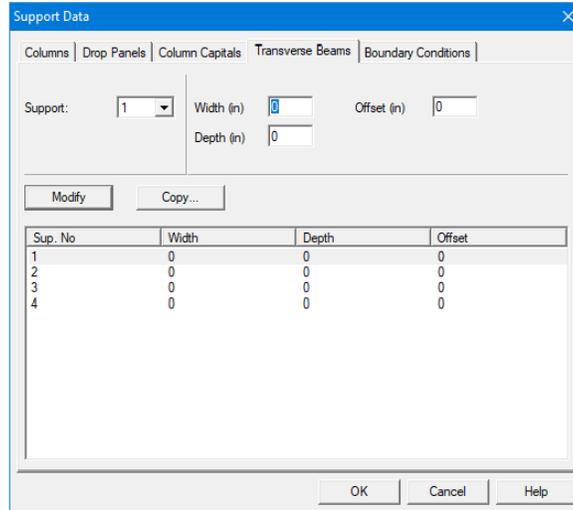


Figure 4-28 Transverse Beam Geometry dialog box

7. Press OK button to exit the dialog box so that spSlab will use the new beam geometry.

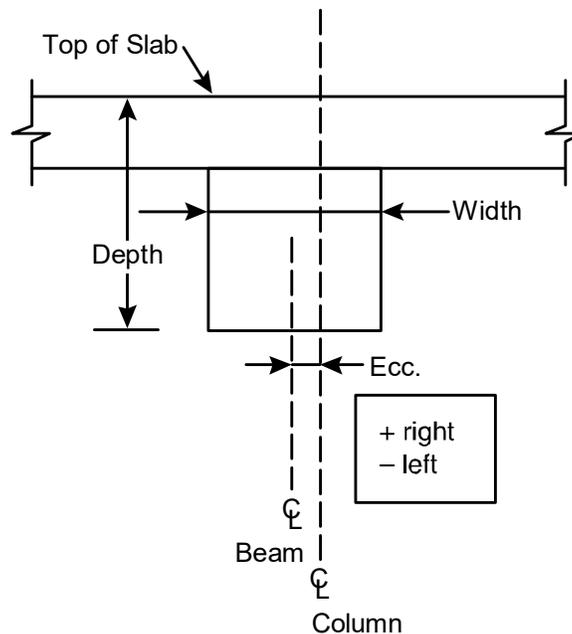


Figure 4-29 Required Transverse Beam Dimensions

4.7.14 Defining Transverse Slab Bands

The **Transverse Slab Bands** property page (Figure 4-30) allows inputting the width, depth, and offset (eccentricity) of transverse bands at each column. It is not required to input bands for every support. Supports where slab bands are not defined are modeled similar to regular two-way systems.

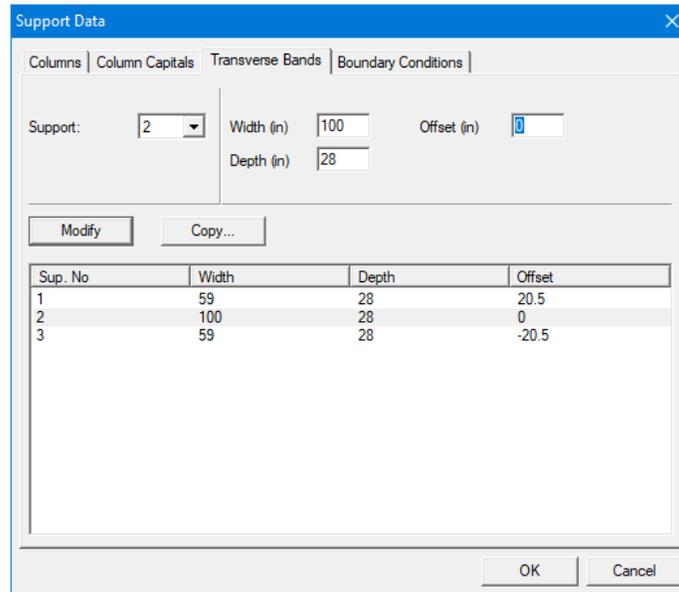


Figure 4-30 Transverse Slab Band Geometry dialog box

To input transverse slab band geometry:

1. Select the **Support** command from the **Input** menu. Select **Transverse Slab Bands** tab from the **Support Data** dialog box. The dialog box of Figure 4-30 will appear.
2. Enter the width of the transverse slab band (see Figure 4-30)
3. Enter the depth of the transverse slab band which is taken from the top of the slab to the bottom of the slab band (see Figure 4-30).
4. If required, enter the offset, which is measured from the joint centerline, positive to the right, and negative to the left of the joint (See Figure 4-30).
5. Press the **MODIFY** button to update the transverse slab band dimensions.
6. Repeat steps 2 through 5 until all the beams have been updated. You can use the **COPY** button as a shortcut (see "Entering the Structure Geometry" earlier in this chapter for help on the **COPY** button).
7. Press **OK** button to exit the dialog box so that spSlab will use the new band geometry.

4.7.15 Defining Boundary Conditions

By default spSlab assumes that column-slab/beam joints can only rotate and that they do not undergo any translational displacements. Rotation of a joint is affected by the stiffness of elements it connects i.e. slabs/beams, transverse beams, and columns. Columns are assumed by default to

be fixed at their far ends as shown in Figure 2-6. These default assumptions can be altered using the **Boundary Conditions** command.

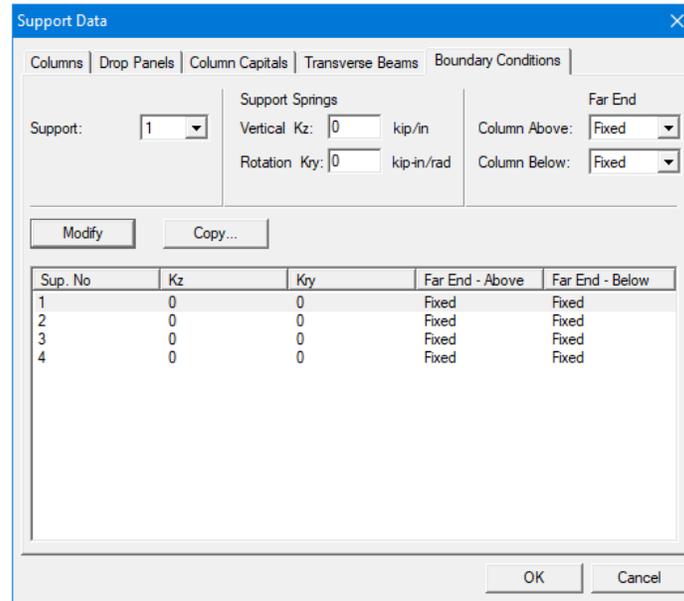


Figure 4-31 Boundary Conditions dialog box

By specifying vertical spring support constant with K_z value other than 0, you can allow the joint to displace vertically. This movement is then controlled by the stiffness of the spring K_z in addition to the stiffness of the column below. The column above is assumed not to constrain the vertical movement of the joint. Additional rotational spring support can be applied to the joint by specifying the value of K_{ry} . Also the far end column conditions can be selected as either fixed or pinned as shown in Figure 4-32(b). All elements controlling the displacements of a joint are shown in Figure 4-32(a).

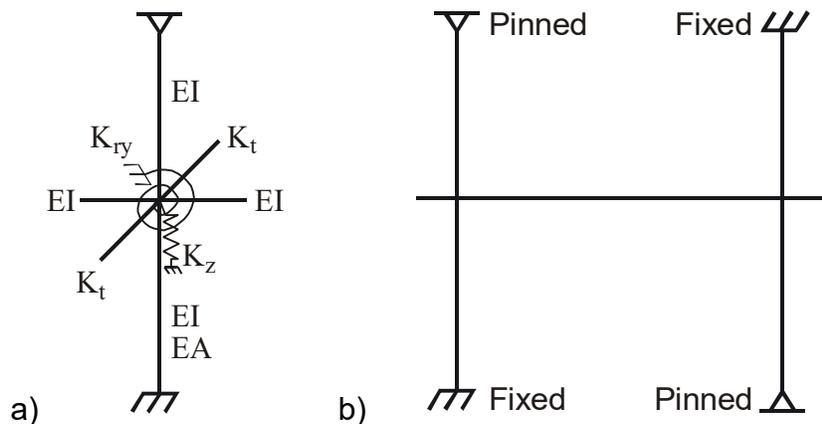


Figure 4-32 (a) Elements controlling joint displacement (b) Far End Column Boundary Conditions

To input boundary conditions:

1. Select the **Support** command from the **Input** menu. Select **Boundary Conditions** tab from the **Support Data** dialog box. The dialog box of Figure 4-31 will appear.
2. Select support number
3. Enter value of K_z to allow vertical displacement of the support and to add translational spring support (see Figure 4-32(a))
4. Enter value of K_{ry} to add rotational spring support (see Figure 4-32(a))
5. Select far end support conditions for the column above and below the joint (see Figure 4-32(b))
6. Press the MODIFY button to update the boundary conditions.
7. Repeat steps 2 through 5 until all the joints have been updated. You can use the COPY button as a shortcut (see "Entering the Structure Geometry" earlier in this chapter for help on the COPY button).
8. Press OK button to exit the dialog box so that the program will use the new boundary conditions.

4.7.16 Defining Moment Redistribution Factors

This command is only available for one-way/beam slab systems when MOMENT REDISTRIBUTION option is checked in the **General Information | Solve Options Tab**

To input moment redistribution factors:

1. Select the **Support** command from the **Input** menu. Select **Moment Redistribution** tab from the **Support Data** dialog box. The dialog box of Figure 4-33 will appear.
2. Select support number
3. Enter the maximum value of the redistribution factors you want to allow on the left and the right side of the support. Please note that actual value used is determined by the program when the problem is being solved and that the check against the code specified limit is also performed.
4. Press the MODIFY button to update the redistribution factor limits.
5. Repeat steps 2 through 5 until all the supports have been updated. Please note that supports connecting to cantilevers will not be available since moment redistribution is not allowed there. You can use the
6. COPY button as a shortcut (see "Entering the Structure Geometry" earlier in this chapter for help on the COPY button).
7. Press OK button to exit the dialog box so that spSlab will use the new moment redistribution limits.

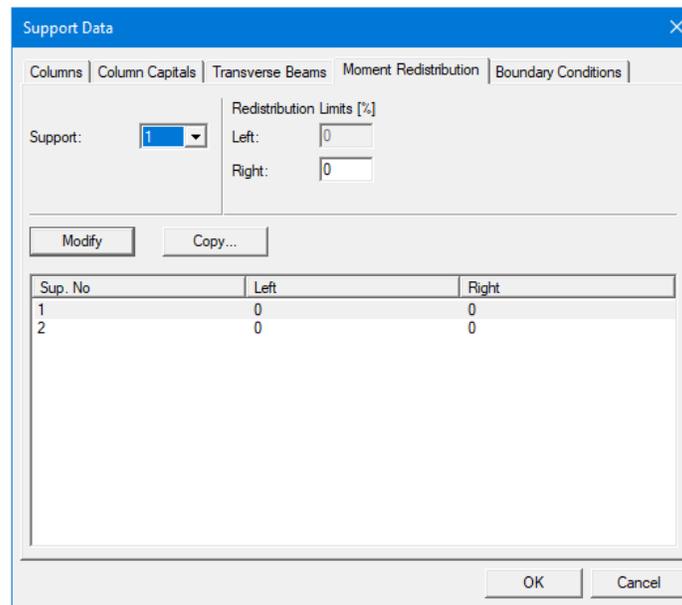


Figure 4-33 Moment Redistribution dialog box

4.7.17 Defining Reinforcement Criteria for Slabs and Ribs

In order for spSlab to select the reinforcement, you must define the slab and rib reinforcement, bar sizes, location, and minimum spacing dimensions. See "Area of Reinforcement" and "Reinforcement Selection" in Method of Solution for a discussion of the reinforcement computations.

To define reinforcement Criteria for Slabs and Ribs:

- Select the **Reinforcement Criteria** command from the **Input** menu or click the  button on the tool bar. Select **Slabs and Ribs** tab by clicking the left mouse button on the tab title. The dialog boxes of Figure 4-34 will appear.
- For slabs and ribs, enter the clear covers for top and bottom reinforcing bars. For the top reinforcement, this distance is from the top of the slab to the top of the top bars. For the bottom reinforcement, this distance is from the bottom of the slab to the bottom of the bottom bars (see Figure 4-35). The default value is 1.5 in. [40mm] for both input items.
- Enter the minimum bar size to start the iteration for determining flexural reinforcement.
- Enter the maximum bar size. This number will be used as a stop in the iteration for determining flexural bars in beams.

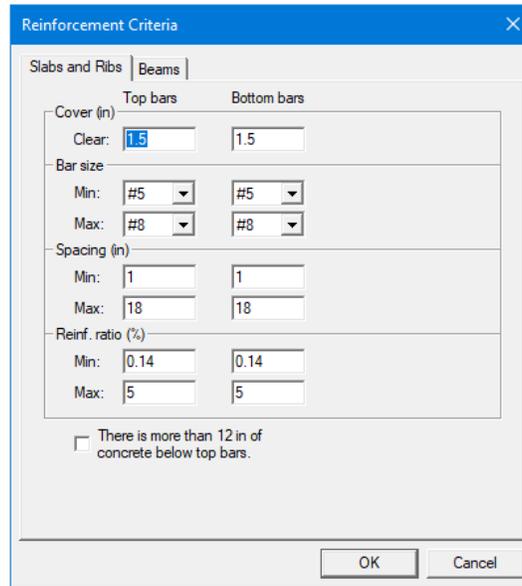


Figure 4-34 Slab and Rib Reinforcement dialog boxes

- Enter minimum bar spacing for slab and rib flexural reinforcement. This number should be based on aggregate size or detailing considerations. Default spacing is 6 in. [150mm] for slabs and ribs.
- Enter maximum bar spacing for slab and rib flexural reinforcement. Default spacing is 18 in. [500 mm] for slabs and ribs.
- Enter minimum Reinforcement Ratio for slab and rib flexural reinforcement. Default ratio is 0.14% [0.20%] for slabs and ribs. If the user specified value is smaller than 0.14%, 0.14% is used by spSlab. If the user specified value is greater than 0.14%, the specified value is used by spSlab.

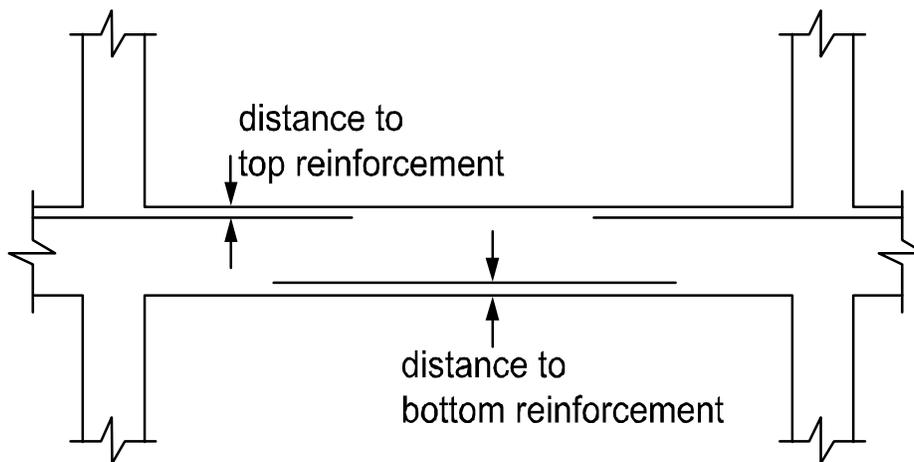


Figure 4-35 Clear Cover to Reinforcement

- Enter maximum Reinforcement Ratio for slab and rib flexural reinforcement. Default ratio is 5% for slabs and ribs.
- If the top bars have more than 12 in. [300 mm] of concrete below them, check the corresponding check box.
- Press OK button to exit the dialog box and allow spSlab to use the new data.

4.7.18 Defining Reinforcement Criteria for Beams

In order for spSlab to select the reinforcement, you must define the beam reinforcement, bar sizes, location, and minimum spacing dimensions. See "Area of Reinforcement" and "Reinforcement Selection" in the Method of Solution for a discussion of the reinforcement computations.

To define reinforcement criteria for beams:

- Select the **Reinforcement Criteria** command from the **Input** menu or click the  button on the tool bar. Select **Beams** tab by clicking the left mouse button on the tab title. The dialog boxes of Figure 4-36 will appear.
- Enter the covers for top and bottom reinforcing bars for beams. For the top reinforcement, this distance is from the top of the beam to the top of the top bars; and for the bottom reinforcement, this distance is from the bottom of the beam to the bottom of the bottom bars (see Figure 4-37). The default value is 1.5 in. [40mm] for both input items.
- Enter the side cover which is measured from the side face of a beam to the face of the stirrup (see Figure 2-20). The default value is 1.5 in [40 mm].
- Enter the minimum bar size for top and bottom bars and stirrups to start the iteration for determining flexural reinforcement.
- Enter the maximum bar size for top and bottom bars and stirrups. This number will be used as a stop in the iteration for determining flexural bars in beams.
- Enter the minimum bar spacing for beam flexural reinforcement and stirrups. This number should be based on aggregate size or detailing considerations. The default minimum reinforcement bar spacing is 1 in. [25 mm] and the default stirrup spacing is 6 in. [150 mm]

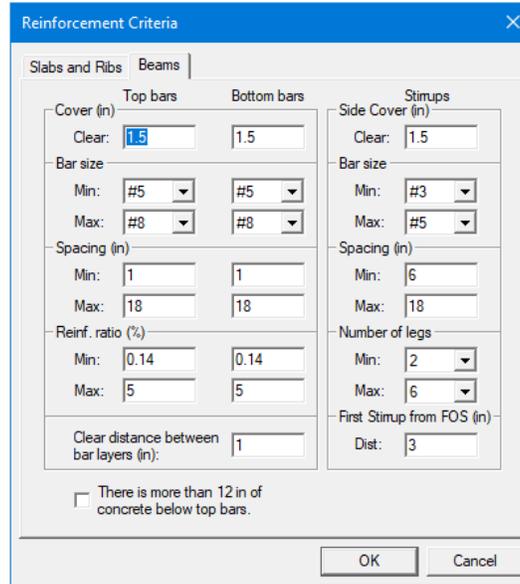


Figure 4-36 Beam reinforcement dialog boxes

- Enter the maximum bar spacing for beam flexural reinforcement and stirrups. The default maximum reinforcement spacing is 18 in. [500 mm] and the default maximum stirrup spacing is 18 in. [450 mm]
- Enter the minimum Reinforcement Ratio for beam flexural reinforcement. Default ratio is 0.14% [0.20%] for beams. If the user specified value is smaller than 0.14%, 0.14% is used by spSlab. If the user specified value is greater than 0.14%, the specified value is used by spSlab.

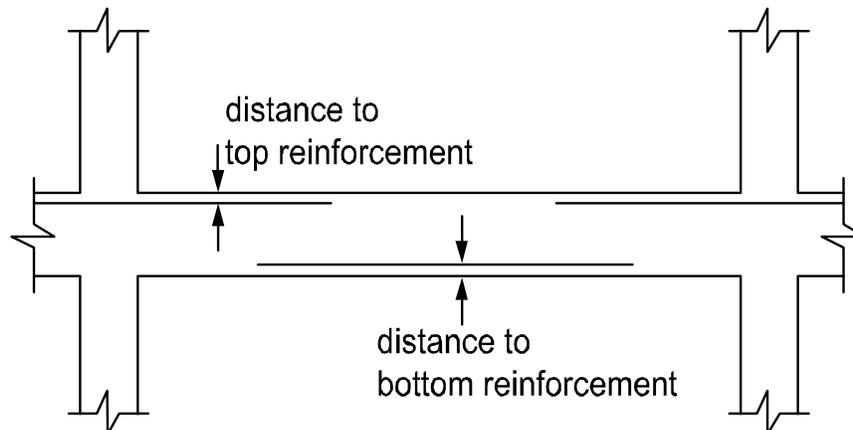


Figure 4-37 Clear Cover to Reinforcement

- Enter the maximum Reinforcement Ratio for beam flexural reinforcement. Default ratio is 5% for beams.

- Enter the clear distance between bar layers to use if the program needs to distribute flexural bars in multiple layers. Default distance is 1 in. [30 mm] for beams.
- Enter the distance from face of support (FOS) to first stirrup. The default value is 3.0 in [75 mm].
- If the top bars have more than 12 in. [300 mm] of concrete below them, check the corresponding check box.
- Press OK button to exit the dialog box and allow spSlab to use the new data.

4.7.19 Defining Column Strip Bars for Two-Way Slab Systems

The reinforcing bar size, number of bars, bar length, etc. can be defined by users if the Run Mode of Investigation and two-way floor system are selected in the General Information dialog box. This menu item is not available if Run Mode of Design is selected in the **General Information** dialog box.

To define column strip bars:

1. Select **Reinforcing Bars** from the **Input** menu or click the  button on the tool bar. Select the **Column Strip Bars** tab by clicking the tab title or use the tab key on the keyboard to toggle to the tab title then select the Column Strip Bars tab using the arrow keys. The dialog boxes of Figure 4-38 will appear.

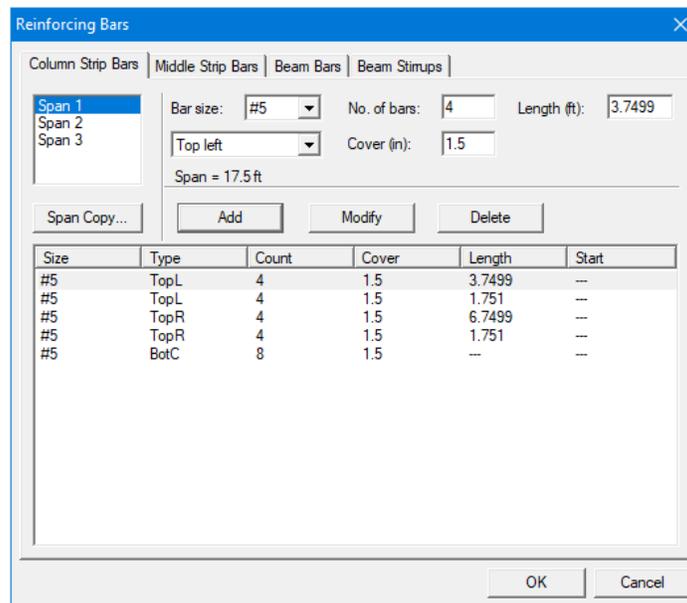


Figure 4-38 Defining Column Strip Bars

2. Select the span for which reinforcing bars will be defined from the Span list box on the upper left corner. The length of the selected span will be shown right above the ADD button.
3. Select bar size from the **Bar Size** drop-down list.
4. Define the number of reinforcing bars in the selected span by entering the number in the Number of Bars input box.
5. Define the length of the reinforcing bars by entering the length in the Length input box. The unit of the length is foot [m].
6. Define the types of the reinforcing bars in the selected span by selecting from the **Type** drop-down list, which is right below the **Bar Size** drop-down list. Five types are available: Top Left, Top Right, Top Continuous, Bottom Continuous and Bottom Discontinuous.
7. Define the cover by entering the number in the Cover input box. The unit of cover is inch [mm].
8. Press ADD button to add the new data into the list box below the buttons.
9. Repeat steps 2 to 8 to define reinforcing bars for all the spans. You may use the SPAN COPY button below the Span list to simply copy the data of one span to other spans.
10. If the reinforcing data of a span needs to be modified, select the data from the data list box on the lower part of the dialog box then modify the data as mentioned above. Press MODIFY button when finished to update the corresponding data in the data list box.
11. To delete the reinforcing data for a span, select the data of the span from the data list box then press the DELETE button.
12. Press OK button to exit the dialog box so that spSlab will use these reinforcing bar properties.

4.7.20 Defining Middle Strip Bars for Two-Way Slab Systems

The reinforcing bar size, number of bars, bar length, etc., can be defined by users if the Run Mode of Investigation and two-way floor system are selected in the General Information dialog box. This menu item is not available if **Run Mode** of **Design** is selected in the **General Information** dialog box.

To define middle strip bars:

1. Select **Reinforcing Bars** from the **Input** menu or click the  button on the tool bar. Select the **Middle Strip Bars** tab by clicking the tab title or use the tab key on the keyboard to toggle to the tab title then select the **Middle Strip Bars** tab using the arrow keys. The dialog boxes of Figure 4-39 will appear.

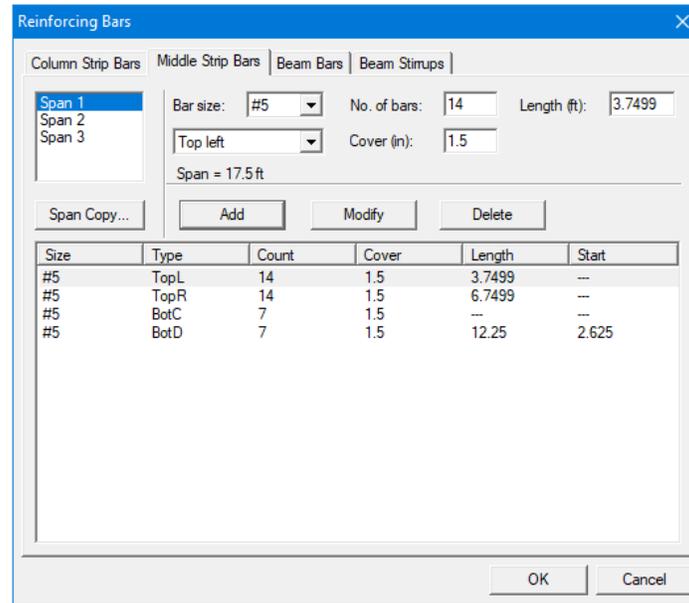


Figure 4-39 Defining Middle Strip Bars

2. Select the span for which reinforcing bars will be defined from the Span list box on the upper left corner. The length of the selected span will be shown right above the ADD button.
3. Select bar size from the **Bar Size** drop-down list.
4. Define the number of reinforcing bars in the selected span by entering the number in the Number of Bars input box.
5. Define the length of the reinforcing bars by entering the length in the Length input box. The unit of the length is foot [m].
6. Define the Types of the reinforcing bars in the selected span by selecting from the drop-down list, which is right below the **Bar Size** drop-down list. Five types are available: Top Left, Top Right, Top Continuous, Bottom Continuous and Bottom Discontinuous.
7. Define the cover by entering the number in the Cover input box. The unit of cover is inch [mm].
8. Press ADD button to add the new data into the list box below the buttons.
9. Repeat steps 2 to 8 to define reinforcing bars for all the spans. You may use the SPAN COPY button below the Span list to simply copy the data of one span to other spans.
10. If the reinforcing data of a span needs to be modified, select the data from the data list box on the lower part of the dialog box then modify the data as mentioned above. Press MODIFY button when finished to update the corresponding data in the data list.
11. To delete the reinforcing data for a span, select the data of the span from the data list box then press the DELETE button.

- Press OK button to exit the dialog box so that spSlab will use these reinforcing bar properties.

4.7.21 Defining Beam Bars for Two-Way Slab Systems

The reinforcing bar size, number of bars, bar length, etc. can be defined by users if the Run Mode of Investigation and two-way floor system are selected in the **General Information** dialog box. This menu item is not available if **Run Mode** of **Design** is selected in the **General Information** dialog box.

To define beam bars:

- Select **Reinforcing Bars** from the **Input** menu or click the  button from the tool bar. Select the **Beam Bars** tab by clicking the tab title or use the tab key on the keyboard to toggle to the tab title then select the **Beam Bars** tab using the arrow keys. The dialog box of Figure 4-40 will appear.

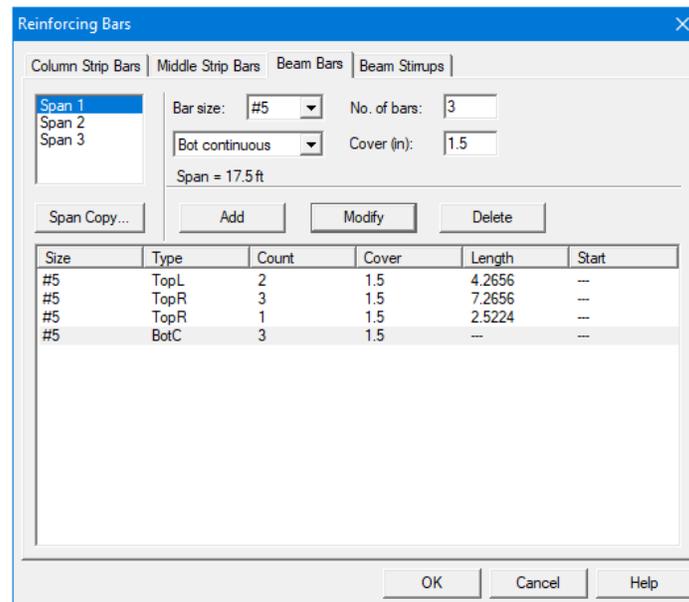


Figure 4-40 Defining Beam Bars

- Select the span for which reinforcing bars will be defined from the **Span** list box on the upper left corner. The length of the selected span will be shown right above the ADD button.
- Select bar size from the **Bar Size** drop-down list.
- Define the number of reinforcing bars in the selected span by entering the number in the Number of Bars input box.
- Define the length of the reinforcing bars by entering the length in the Length input box. The unit of the length is foot [m].

6. Define the types of the reinforcing bars in the selected span by selecting from the **Type** drop-down list, which is right below the **Bar Size** drop-down list. Five types are available: Top Left, Top Right, Top Continuous, Bottom Continuous and Bottom Discontinuous.
7. Define the cover by entering the number in the Cover input box. The unit of cover is inch [mm].
8. Press ADD button to add the new data into the list box below the buttons.
9. Repeat steps 2 to 8 to define reinforcing bars for all the spans. You may use the SPAN COPY button below the Span list to simply copy the data of one span to other spans.
10. If the reinforcing data of a span needs to be modified, select the data from the data list box on the lower part of the dialog box then modify the data as mentioned above. Press MODIFY button when finished to update the corresponding data in the data list.
11. To delete the reinforcing data for a span, select the data of the span from the data list box then press the DELETE button.

Press OK button to exit the dialog box so that spSlab will use these reinforcing bar properties.

4.7.22 Defining Beam Stirrups for Two-Way Slab Systems

The stirrup size, number of stirrups, etc. can be defined by users if the Run Mode of Investigation and two-way floor system are selected in the **General Information** dialog box. This menu item is not available if **Run Mode of Design** is selected in the **General Information** dialog box.

To define beam stirrups:

1. Select **Reinforcing Bars** from the **Input** menu or click the  button from the tool bar. Select the **Beam Stirrups** tab by clicking the tab title or use the tab key on the keyboard to toggle to the tab title then select the **Beam Stirrups** tab using the arrow keys. The dialog boxes of Figure 4-41 will appear.

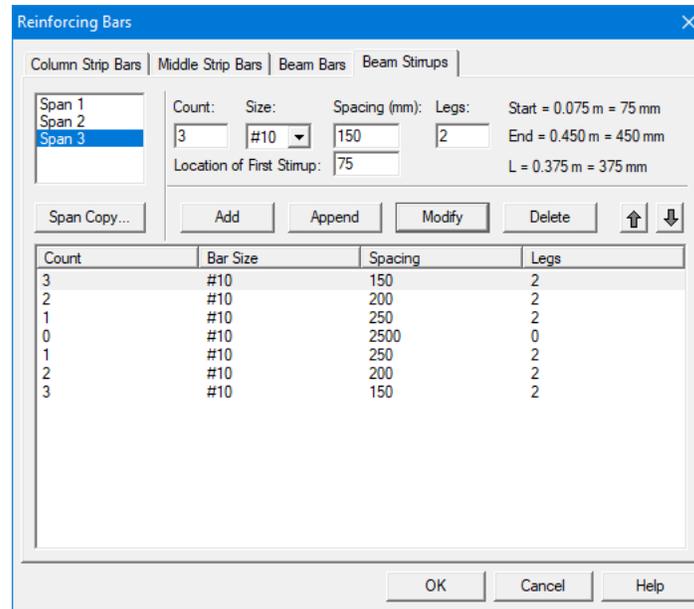


Figure 4-41 Defining Beam Stirrups

2. Select the span for which stirrups will be defined from the **Span** list box on the upper left corner. The length of the selected span will be shown right above the ADD button.
3. Enter the amount of stirrups of the selected span in the Count input box. (see Note)
4. Select stirrup size from the **Size** drop-down list.
5. Enter the spacing of the stirrups of the selected span in the Spacing input box. The unit of spacing is inch [mm].
6. Enter the number of legs in the Leg input box.
7. For first stirrup set modify the default location of first stirrup if required.
8. Press ADD button to add the new data into the list box below the buttons.
9. Repeat steps 2 to 8 to define stirrups for all the spans. You may use the Span COPY button below the Span list to simply copy the data of one span to other spans.
10. In order to mirror stirrup set or sets at the end of the span use APPEND button.
11. If the stirrup data of a span needs to be modified, select the data from the data list box on the lower part of the dialog box then modify the data as mentioned above. Press MODIFY button when finished to update the corresponding data in the data list.
12. To delete the stirrup data for a span, select the data of the span from the data list box then press the DELETE button.
13. Press OK button to exit the dialog box so that spSlab will use these reinforcing bar properties.

Note: If stirrups do not apply in a part of a span, the Count should be set to 0 (zero) and the Spacing should be the length of the part of the span where no stirrups are defined. For example, the following configuration shows stirrups in the left and right ends of a span with an empty space (46.0 in. long, no stirrups) in the middle part of the span.

Count	Bar Size	Spacing	Legs
32	#5	4.50	2
0	#5	46.0	2
32	#5	4.50	2

4.7.23 Defining Flexure Bars for Beams and One-Way Slab Systems

The reinforcing bar size, number of bars, bar length, etc. for one-way beam systems can be defined by users if the Run Mode of Investigation and beams/one-way slab floor system are selected in the **General Information** dialog box. This menu item is not available if **Run Mode** of **Design** is selected in the **General Information** dialog box.

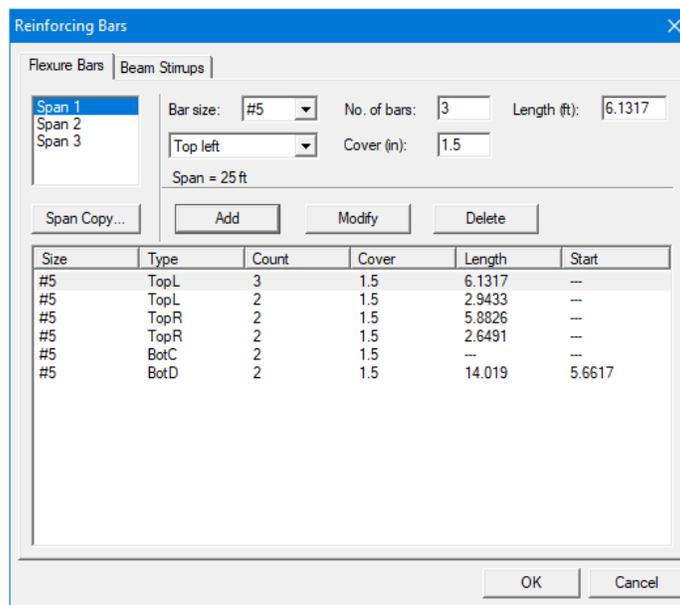


Figure 4-42 Defining Flexure Bars for Beams/One-Way slab Systems

To define flexure bars for beam in beams/one-way slab systems follow the steps described in section Defining Beam Bars.

4.7.24 Defining Stirrups for Beams and One-Way Slab Systems

The stirrup size, number of stirrups, etc. for beams/one-way slab systems can be defined by users if the Run Mode of Investigation and beams/one-way slab floor system are selected in the **General Information** dialog box. This menu item is not available if **Run Mode** of **Design** is selected in the **General Information** dialog box.

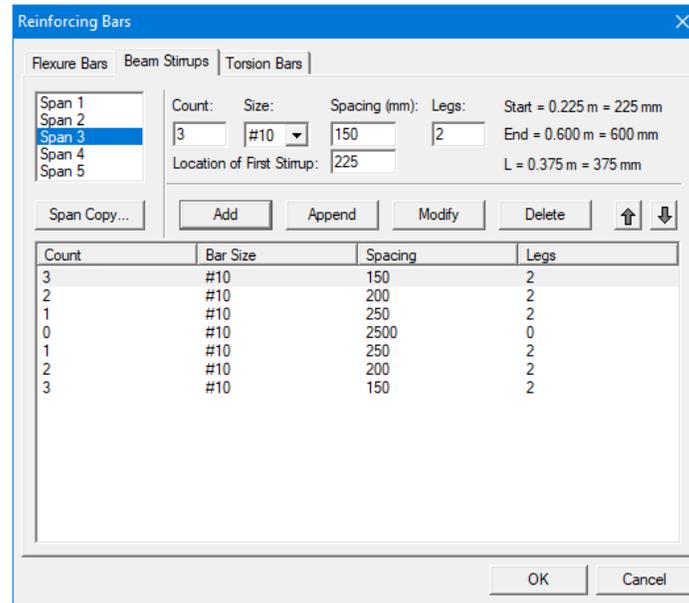


Figure 4-43 Defining Beams Stirrups in Beam/One-Way Slab Systems

To define beam stirrups in beams/one-way slab systems follow the steps described in section Defining Beam Stirrups.

4.7.25 Defining Torsional Longitudinal Bars for Beams

The torsional longitudinal reinforcement bars are distributed along the perimeter of the section in addition to the flexure bars. They can be defined by users if the Run Mode of Investigation, beams/one-way slab floor system, and torsional analysis and design are selected in the **General Information** dialog box. This menu item is not available if **Run Mode** of **Design** is selected in the **General Information** dialog box.

To define torsional longitudinal bars for beams in beams/one-way slab systems:

1. Select **Reinforcing Bars** from the **Input** menu or click the  button from the tool bar. Select the **Torsion Bars** tab by clicking the tab title or use the tab key on the keyboard to toggle to the tab title then select the **Torsion Bars** tab using the arrow keys. The dialog box of Figure 4-44 will appear.

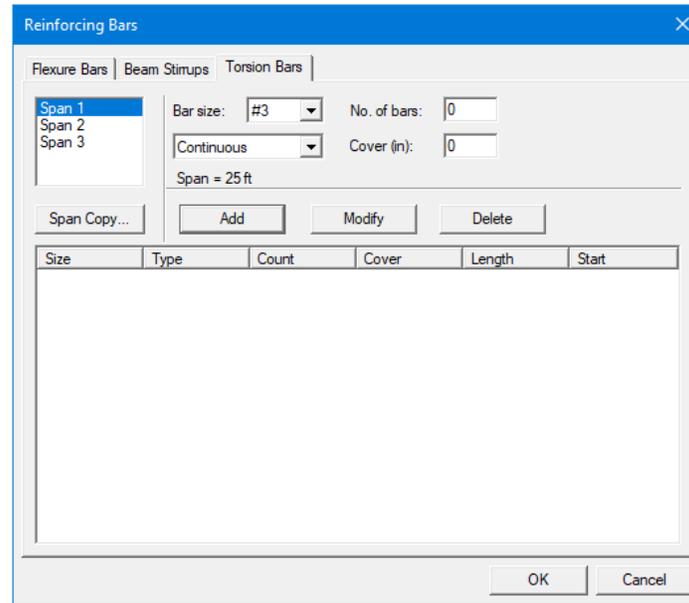


Figure 4-44 Defining Torsion Bars for Beams in Beams/One-Way Slab Systems

2. Select the span for which reinforcing bars will be defined from the **Span** list box on the upper left corner. The length of the selected span will be shown right above the ADD button.
3. Select bar size from the **Bar Size** drop-down list.
4. Define the type of the reinforcing bars in the selected span by selecting from the **Type** drop-down list, which is right below the **Bar Size** drop-down list. Two types are available: Continuous and Discontinuous.
5. Define the number of reinforcing bars in the selected span by entering the number in the Number of Bars input box.
6. Define the cover by entering the number in the Cover input box. The unit of cover is inch [mm].
7. For discontinued bars, define the length and the starting point of the reinforcing bars by entering the values in the Start and Length input boxes. The unit of both is foot [m].
8. Press ADD button to add the new data into the list box below the buttons.
9. Repeat steps 2 to 8 to define reinforcing bars for all the spans. You may use the SPAN COPY button below the Span list to simply copy the data of one span to other spans.
10. If the reinforcing data of a span needs to be modified, select the data from the data list box on the lower part of the dialog box then modify the data as mentioned above. Press MODIFY button when finished to update the corresponding data in the data list.
11. To delete the reinforcing data for a span, select the data of the span from the data list box then press the DELETE button.

12. Press OK button to exit the dialog box so that spSlab will use these reinforcing bar properties.

4.7.26 Defining Load Cases

Up to 6 load cases of dead load, live load or lateral load can be defined in the **Load Cases** dialog box. The default five load case labels (types) are SELF (dead load), Dead (dead load), Live (live load), Wind (wind load), and EQ (seismic load).

To define load cases:

1. Select **Load Cases** command from the **Input** menu or click the  button on the tool bar. Dialog box as in Figure 4-45 will appear.
2. Enter a name for the new load case in the Label edit box. The name could be any character string defined by the user.
3. Select the type of the new load case from the **Type** drop-down list. The available types are Dead Load, Live Load and Lateral Load.

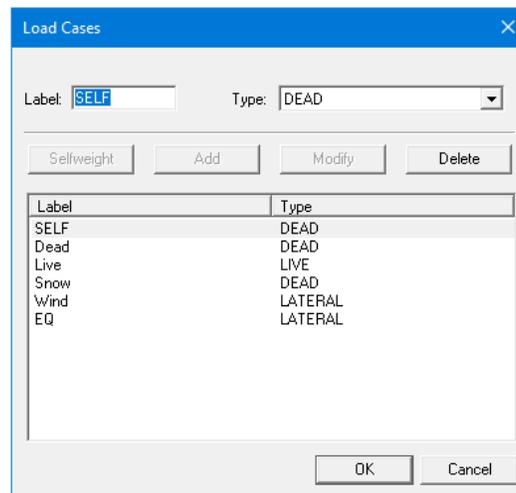


Figure 4-45 Defining Load Cases

4. Press ADD button to add the new load case into the load case list box on the lower part of the dialog box.
5. Repeat steps 2 to 4 to define all the load cases. The maximum number of load cases is 6. Once the maximum number is reached, the ADD button will be disabled.
6. To enter reserved load case SELF press the SELFWEIGHT button.
7. To modify an existing load case, select the load case from the load case list box then change the label or type the selected load case as mentioned above and press the MODIFY button.

8. To delete an existing load case, select the load case from the load case list box then press the DELETE button.
9. Press OK button to exit the dialog box so that spSlab will use these load cases.

Note: Only one case of live load can be defined. Load case label must be unique for each of the load cases. To ignore self weight in both strength and deflection calculations remove load case SELF from the list of load cases.

4.7.27 Defining Load Combinations

spSlab allows you to change the magnification factors applied to the load cases. The default values depend on the code selected with the General Information command.

To define load factors:

1. Select **Load Combinations** from the **Input** menu or click the  button from the tool bar. The dialog box of Figure 4-46 will appear if the ACI code was selected in the GENERAL INFORMATION dialog box.

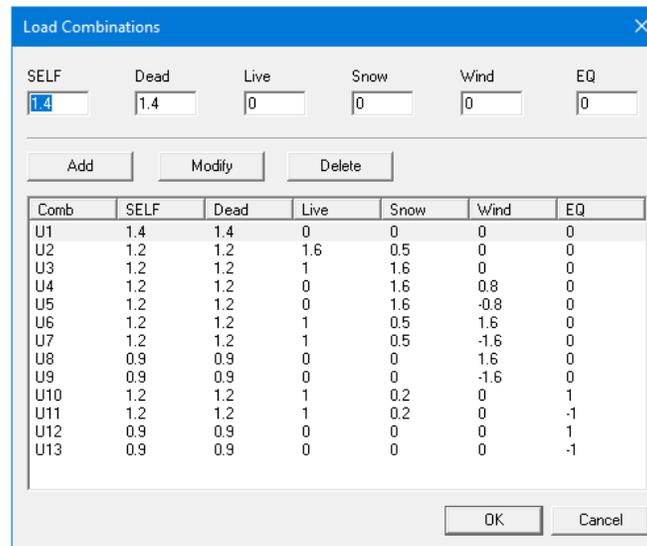


Figure 4-46 Define Load Combinations

2. The load cases and the corresponding factors that are defined in the Load Cases dialog box are shown on the top of the Load Combinations dialog box.
3. Enter the load factors for each of the load cases in the input box below the corresponding load case label.
4. Press the ADD button to add the combination defined above into the big list box in the lower part of the dialog box.

5. Repeat steps 2 to 4 to define all the load combinations. Up to fifty load combinations may be defined. All the combinations are indexed automatically from U1 to U50.
6. To change the factors of an existing combination, select the load combination from the load combination list box on the lower part of the dialog box then change the factors as mentioned above. Press the MODIFY button when finished to update the data in the load combination list box.
7. To delete an existing combination, select the load combination from the load combination list box then press the DELETE button.
8. Select OK button when all the desired load factors have been modified to exit so that spSlab will use the new data.

4.7.28 Span Loads

spSlab computes the self weight of the floor system. Other loads applied to the structure have to be specified by the user. There are several types of applied loads that may be entered. They are found in the **Input** menu. Surface loads are placed over the entire strip. Partial loads consist of uniform or trapezoidal loads, concentrated loads, and concentrated moments that may exist anywhere within the span length. For beams/one-way slab systems torsional loads can be defined either as concentrated or distributed torques.

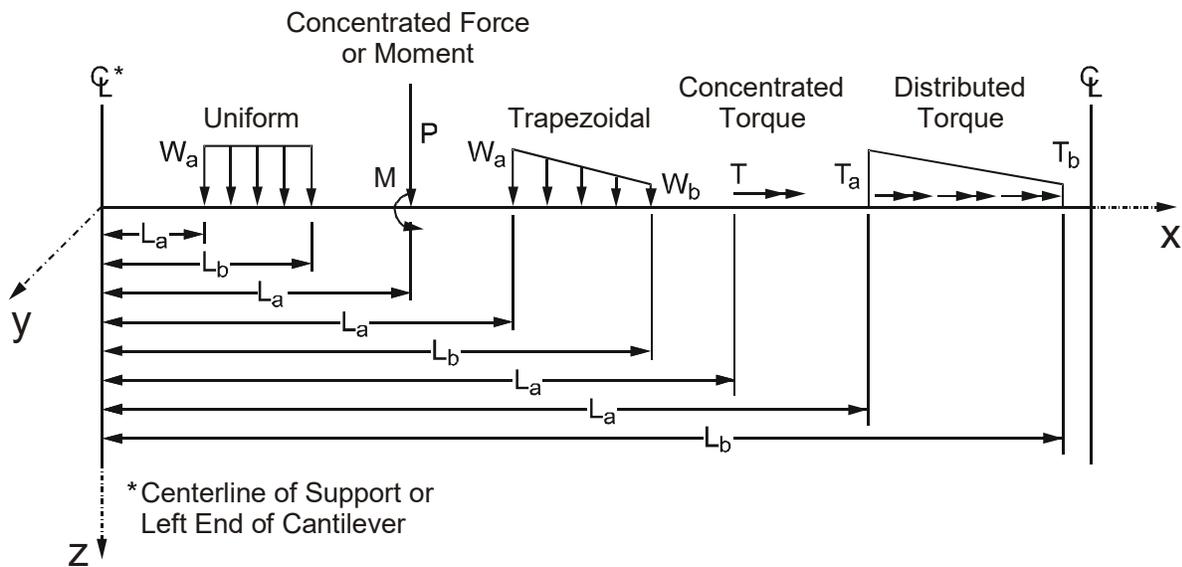


Figure 4-47 Span Load Types

Note: The loads shown in the Figure 4-47 are all positive and may not match the typical sign conventions.

The following table describes input for the span load types shown in Figure 4-48.

W_a	For uniformly distributed loads, W_a is the intensity of the load in units of lbs/ft [kN/m], positive W_a is downward. For trapezoidal loads, W_a is the intensity at the left end in units of lbs/ft [kN/m], positive W_a is downward. For concentrated force, W_a is the force P in units of kips [kN], positive W_a is downward. For concentrated moments, W_a is the moment M in units of ft-kips [kNm], positive W_a is clockwise. For concentrated torque, W_a is the external torque T in units of ft-kips [kNm], positive W_a is such that applying the right hand screw rule the torque vector points to the right. For distributed torque, W_a is the external torque intensity T_a in units of ft-kips/ft [kNm/m], positive W_a is such that applying the right hand screw rule the torque vector points to the right.
W_b	For trapezoidal loads, W_b is the intensity at the right end in units of lbs/ft [kN/m], positive W_b is downward. For distributed torque, W_b is the external torque intensity T_b in units of ft-kips/ft [kNm/m], positive W_a is such that applying the right hand screw rule the torque vector points to the right. For all the other partial load types, W_b is not available.
L_a	For distributed loads, L_a is the distance where the load begins from the centerline of the column at the left of the span, in units of ft [m]. For concentrated loads and moments, L_a is the distance where the load exists from the centerline of the column at the left of the span in units of ft [m].
L_b	For distributed loads, L_b is the distance where the load ends from the centerline of the column at the left of the span, in units of ft [m]. For concentrated loads and moments, L_b is unavailable. Note: Although the particular loading may not actually act over the entire transverse width, all line loading is converted internally by spSlab to act over the full width of the slab. In the design direction, partial loads given as acting over less than 1/20 of the span length will be averaged over 1/20 by the program.

4.7.29 Defining Area Load on Span

Area loads are uniform loads acting over the entire strip. These loads have units of lb/ft² [kN/m²].

To input area loads:

1. Select the **Span Loads** command from the **Input** menu or click the  button on the tool bar. Select the AREA LOAD from the TYPE drop-down list on the SPAN LOADS dialog box. The dialog box of Figure 4-48 will appear.

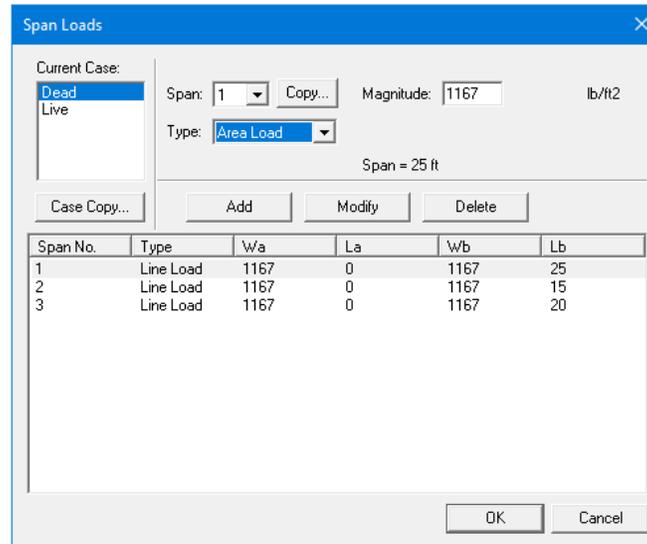


Figure 4-48 Defining Area Load on Span

2. Select the load case from the CURRENT CASE list box on the upper left corner as shown in the dialog above.
3. Select the span on which the area loads will be applied from the SPAN drop-down list.
4. Enter the unfactored superimposed area load magnitude acting over the entire area of the strip in the Magnitude edit box. Positive surface loads act downward.
5. Press the ADD button to update the area loads in the area load list box on the lower part of the dialog box.
6. Repeat steps 2 through 5 until the loads have been updated. You can use the COPY button as a shortcut.
7. To change the data of an existing area load, select the area load from the area load list box then change the magnitude as mentioned above. Press the MODIFY button when finished to update the data in the area load list box.
8. To delete an existing area load, select the load from the area load list box then press the DELETE button.
9. Press OK button to exit the dialog box so that spSlab will use the new data.

4.7.30 Defining Line Load on Span

You may enter uniform or trapezoidal loads that do not span from column centerline to column centerline in the direction of analysis. These loads are called line loads and are input through the SPAN LOADS dialog of the **Input** menu. Partial loads are assumed to act over the entire strip width.

To input line loads:

1. Select the **Span Loads** command from the **Input** menu or click the  button on the tool bar. Select the LINE LOAD from the TYPE drop-down list. The dialog box of Figure 4-49 will appear.
2. Select the load case of the line load that will be defined from the **Current Case** list box.
3. From the **Span** drop-down list, select the span number of the span whose line loads you would like to input.
4. Define unfactored load values and their locations in the corresponding text boxes.

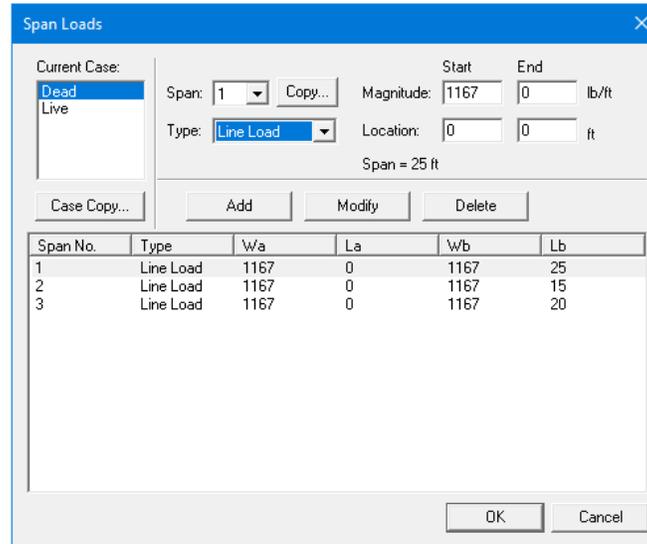


Figure 4-49 Defining Line Load on Span

5. Select **Add** to add the line load defined into the line load list box.
6. Repeat steps 2 through 5 until all the line loads have been entered then press OK button to exit the dialog box so that spSlab will use the new loads.

To change line loads data:

- Select the line load you want to change from the line load list box on the lower part of the dialog box by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.
- Make your changes to the load by modifying the load type, the load magnitude, and/or location.
- Select **Modify** to replace the old data with the new data.

To delete line load data:

- Select the line load you want to delete from the line load list box by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.

- Press the DELETE button.

4.7.31 Defining Point Force on Span

You may enter concentrated vertical loads. These loads are input through the **Span Load** command of the **Input** menu. Point loads are assumed to act over the entire strip width.

To input point loads:

1. Select the **Span Loads** command from the **Input** menu or click the  button on the tool bar. Select the **Point Force** from the **Type** drop-down list. The dialog box of Figure 4-50 will appear.

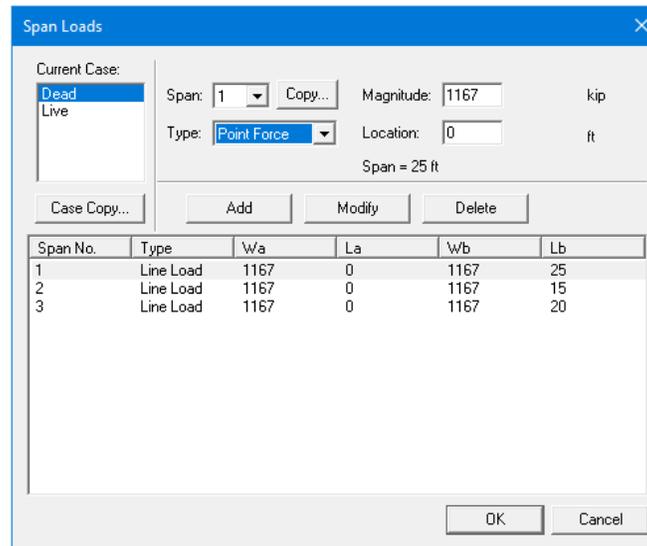


Figure 4-50 Defining Point Forces on Span

2. Select the load case of the point force that will be defined from the **Current Case** list box.
3. From the **Span** drop-down list, select the span number of the span whose point loads you would like to input.
4. Define unfactored load values and their locations in the corresponding text boxes.
5. Select **Add** to add the point load defined into the point load list box on the lower part of the dialog box.
6. Repeat steps 2 through 5 until all the point loads have been entered then press OK button to exit the dialog box so that spSlab will use the new loads.

To change point load data:

- Select the point force you want to change from the point load list box by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.

- Make your changes to the load by modifying the load type, the load magnitude, and/or location.
- Select **Modify** to replace the old data with the new data.

To delete point load data:

- Select the point force you want to delete from the point load list box to the right by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.
- Press the DELETE button.

4.7.32 Defining Point Moment on Span

You may enter concentrated moment. This load is input through the **Span Load** command of the **Input** menu. Point moments are assumed to act over the entire strip width.

To input point moments:

1. Select the **Span Loads** command from the **Input** menu or click the  button on the tool bar. Select the **Point Moment** from the **Type** drop-down list. The dialog box of Figure 4-51 will appear.
2. Select the load case of the point moment that will be defined from the **Current Case** list box.
3. From the **Span** drop-down list, select the span number of the span whose point moments you would like to input.
4. Define unfactored moment values and their locations in the corresponding text boxes.
5. Select **Add** to add the point moment defined into the point moment list box on the lower part of the dialog box.
6. Repeat steps 2 through 5 until all the point moments have been entered then press OK button to exit the dialog box so that spSlab will use the new moments.

Span Loads

Current Case:
 Dead
 Live

Span: 1 Copy... Magnitude: 1167 k-ft
 Type: Point Moment Location: 0 ft
 Span = 25 ft

Case Copy... Add Modify Delete

Span No.	Type	Wa	La	Wb	Lb
1	Line Load	1167	0	1167	25
2	Line Load	1167	0	1167	15
3	Line Load	1167	0	1167	20

OK Cancel

Figure 4-51 Defining Point Moments on Span

To change point moment data:

- Select the point moment you want to change from the point moment list box by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.
- Make your changes to the moment by modifying the moment type, the moment magnitude, and/or location.
- Select **Modify** to replace the old data with the new data.

To delete point moment data:

- Select the point moment you want to delete from the point moment list box to the right by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.
- Press the DELETE button.

4.7.33 Defining Line Torque on Span

You may enter line torque for beams/one-way slab systems if Torsion Analysis and Design is selected in the GENERAL INFORMATION dialog box. This load is input through the **Span Load** command of the **Input** menu.

To input line torque:

1. Select the **Span Loads** command from the **Input** menu or click the  button on the tool bar. Select the LINE TORQUE from the TYPE drop-down list. The dialog box of Figure 4-52 will appear.

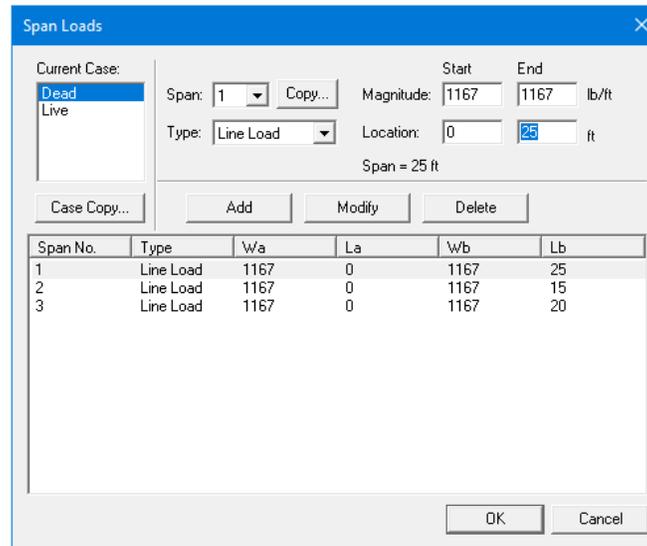


Figure 4-52 Defining Line Torque on Span

2. Select the load case of the line load that will be defined from the CURRENT CASE list box.
3. From the SPAN drop-down list, select the span number of the span whose line loads you would like to input.
4. Define unfactored torque values and their locations in the corresponding text boxes.
5. Select **Add** to add the line torque defined into the list box.
6. Repeat steps 2 through 5 until all the line torques have been entered. Then press OK button to exit the dialog box so that spSlab will use the new loads.

To change line torque data:

- Select the line torque you want to change from the load list box on the lower part of the dialog box by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.
- Make your changes to the load by modifying the load type, the load magnitude, and/or location.
- Select **Modify** to replace the old data with the new data.

To delete line torque data:

- Select the line torque you want to delete from the load list box by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.
- Press the DELETE button.

4.7.34 Defining Point Torque on Span

You may enter point torque for beams/one-way slab systems if Torsion Analysis and Design is selected in the GENERAL INFORMATION dialog box. This load is input through the **Span Load** command of the **Input** menu.

To input point torque:

1. Select the **Span Loads** command from the **Input** menu or click the  button on the tool bar. Select the POINT TORQUE from the TYPE drop-down list. The dialog box of Figure 4-53 will appear.
2. Select the load case of the point torque that will be defined from the CURRENT CASE list box.
3. From the SPAN drop-down list, select the span number of the span whose point moments you would like to input.
4. Define unfactored torque values and their locations in the corresponding text boxes.
5. Select ADD to add the point torque defined into the list box on the lower part of the dialog box.
6. Repeat steps 2 through 5 until all the point torques have been entered. Then press OK button to exit the dialog box so that spSlab will use the new torques.

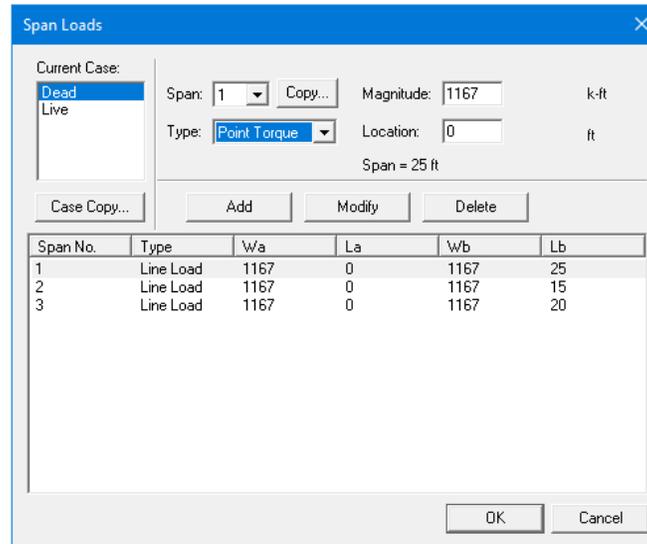


Figure 4-53 Defining Point Torque on Span

To change point torque data:

- Select the point torque you want to change from the list box by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.
- Make your changes to the moment by modifying the torque magnitude, and/or location.
- Select MODIFY to replace the old data with the new data.

To delete point torque data:

- Select the point torque you want to delete from the point moment list box by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.
- Press the DELETE button.

4.7.35 Defining Support Loads and Displacements

You may enter prescribed support displacements and rotations as well as apply concentrated forces and moments to the system at support locations. These loads are input through the **Support Loads and Displacements** command of the **Input** menu.

To input support loads and displacements:

1. Select the **Support Loads and Displacements** command from the **Input** menu or click the  button on the tool bar. The dialog box of Figure 4-54 will appear.

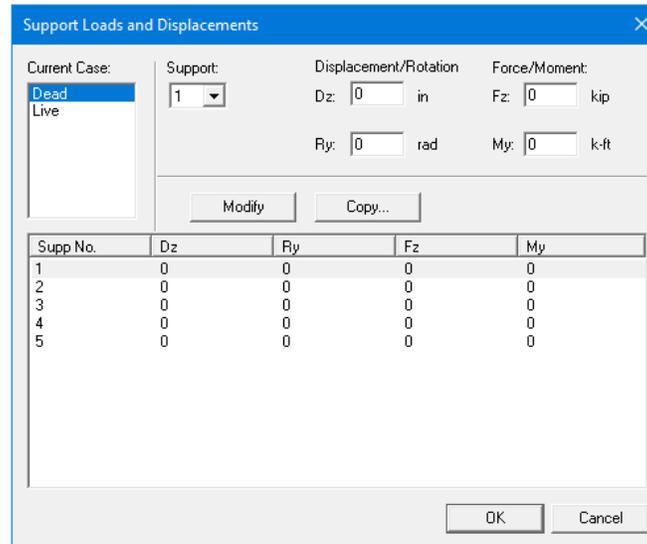


Figure 4-54 Defining Support Loads and Displacements

2. Select the load case of the support loads and displacements that will be defined from the CURRENT CASE list box.
3. From the SUPPORT drop-down list, select the support number of the support whose loads you would like to input.
4. Define unfactored values of the displacement, rotation, forces, and moment.
5. Select **Add** to add the support loads and displacements defined into the load list box on the lower part of the dialog box.
6. Repeat steps 2 through 5 until all the support loads and displacements have been entered then press OK button to exit the dialog box so that spSlab will use the new moments.

To change support and displacement loads data:

- Select the entry you want to change from the load list box by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.
- Make your changes to the values.
- Select **Modify** to replace the old data with the new data.

To delete support and displacement load data:

- Select the entry you want to delete from the load list box by clicking the left mouse button on the load or tabbing to the list box and using the arrow up and down keys.
- Press the DELETE button.

4.7.36 Defining Lateral Effects

spSlab can combine the gravity load analysis with a lateral load analysis. Lateral loads are entered as joint moments obtained elsewhere by a frame analysis. The joint moments are combined with the gravity load moments to produce load patterns 5 through 8.

To input lateral load moments:

1. Define at least one lateral load case from the **Load Cases** dialog box.
2. Select **Lateral Effects** from the **Input** menu. If no lateral case is defined this command is disabled. Once selected, Figure 4-55 will appear.

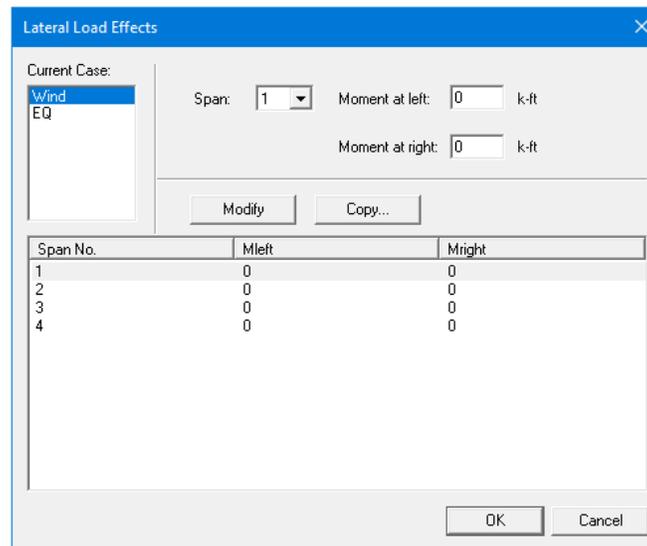


Figure 4-55 Lateral Moment dialog box

3. Select load cases from the CURRENT CASE list box. At least one lateral load case must be defined in the LOAD CASES dialog box before you can see the load case in the CURRENT CASE list box.
4. Select span number on which lateral loads will be defined from the SPAN drop-down list.
5. Enter the moments at the left end and right end of the span in the Moment at Left and Moment at Right input boxes, respectively.
6. Press the ADD button to add the lateral load defined above into the lateral load list box in the lower part of the dialog box.
7. Repeat steps 2 through 5 to define all the lateral loads.
8. To change an existing lateral load, select the load from the lateral load list box then change the moments as mentioned above. Press the MODIFY button when finished to update the data in the lateral load list box.

9. To delete an existing lateral load, select the load from the lateral load list box then press the DELETE button.
10. Select OK button when all the desired lateral loads have been modified to exit so that spSlab will use the new data.

4.8 Executing Calculations (menu Solve)

4.8.1 Execute

The **Execute** command starts the design portion of spSlab after you have finished inputting all the data.

To design the system:

Select the **Execute** command from the **Solve** menu or click the  button on the tool bar. If any data required to analyze and design the system has not been input prior to executing this command, spSlab will display an "Invalid model!" message. You must complete the data before execution.

An analysis status window shows the current state of the execution as shown in Figure 4-56. If the state of each of the computations is OK, the analysis is successful. If any error is encountered ERROR will be shown and the computation is terminated.

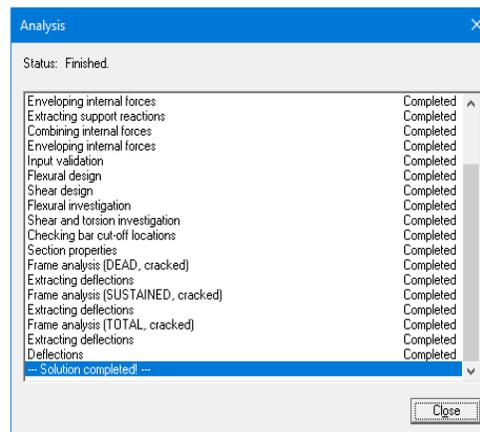


Figure 4-56 Analysis Status Window

4.8.2 Viewing Results

Once the analysis and/or design is performed, you can view the results, shear and moment diagrams, and deflected shapes. This section provides procedures performing these functions.

To view the analysis and design results:

- Select **Results** command from the **Solve** menu or click the  button from the tool bar. Alternatively you can also press the **F6** key. This will launch the spResults module.

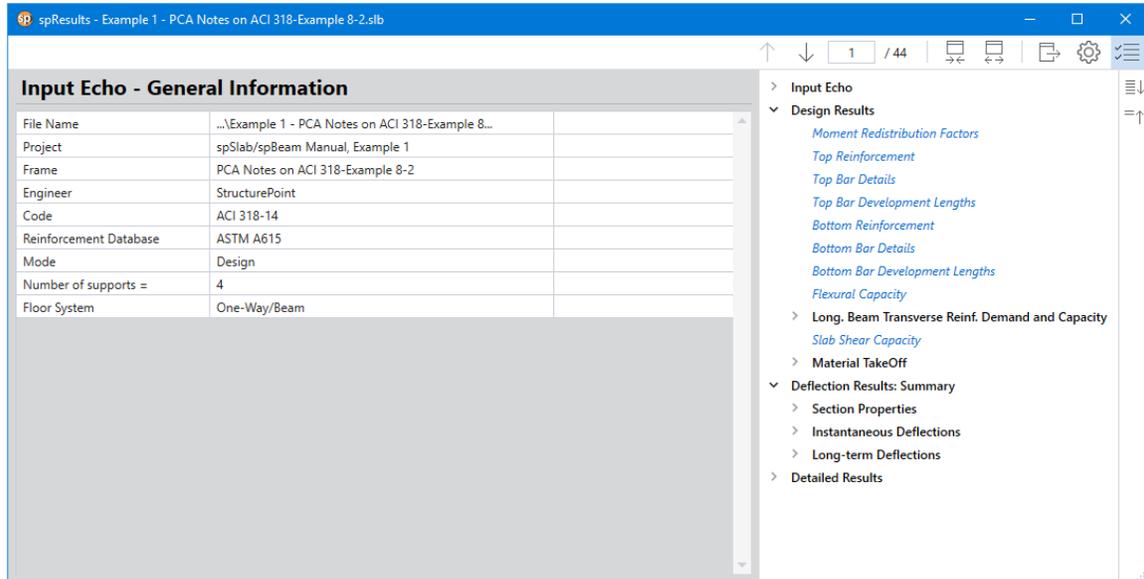


Figure 4-57 spResults Module

- Select the results tables you want to view from the explorer. The table displayed in the preview space will be changed based on your selection.
- To copy results, select desired data from the table and right click, press the COPY button to copy the current results into the Windows clipboard. Then you may use CTRL + V to paste the contents of the clipboard to any other editors such as Word or Notepad.
- Press the CLOSE on the top right corner to close the result dialog box.

4.9 View Program Output (menu View)

4.9.1 Zooming in on Floor System

In order to view the floor system in greater detail, spSlab allows you to magnify a portion of the floor system for closer analysis.

Using zoom with a magnifier:

- Select **Zoom** from the **View** menu then a sub menu appears beside the **View** menu.

- Select **Window** from the sub menu. Notice that the **Window** command is checked and the cursor is changed to a magnifier. The other way to magnify window is to click the  button on the tool bar.
- Move the cross cursor to the upper left corner of the portion of the system you want to enlarge.
- Press and hold down the left mouse button while dragging the cursor to the lower right portion of the system enclosing the desired area within the dashed box.
- Release the mouse to enlarge that portion.

Using Zoom In and Zoom Out command:

- Select **Zoom** from the **View** menu and a sub menu appears.
- Select the **In(2x)** menu command from the sub menu. The current active window will be magnified by two times. The other way to do this is to click the  button on the tool bar.
- Select the **Out(0.5x)** menu command from the sub menu. The current active window will be reduced by two times. The other way to do this is to click the  button on the tool bar.

Note: To return to original (default) zoom, select **Restore** from the **View** menu, or select  from tool bar. To move model in a view window, use **Pan** from the **View** menu, or select  from tool bar.

4.9.2 Change Isometric View Angle

You can modify the X and Z angles at which the floor system is displayed in the isometric view window. By default, the floor system is viewed at -45° about the X axis and 45° about the Z axis. The right hand rule is used to determine the angle of rotation about the X and Z axes and the X axis is always rotated first.

To change angles:

- Select **Change View Angle** from the **View** menu. The dialog box of Figure 4-58 appears displaying the currently set angles.

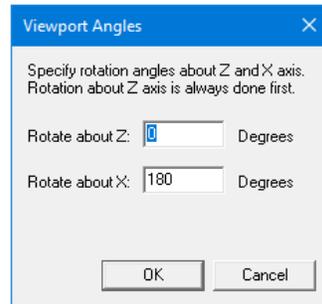


Figure 4-58 Isometric View dialog box

- Change the angles of rotation about the X and Z axes. The X axis is rotated first then the Z axis is rotated. The floor system is rotated about the axis using the right hand rule.
- Select OK button to accept the new angles and to modify the isometric view.

Note: A more convenient way to change the view angles instantly without entering angles in the dialog box is to use the keyboard shortcut CTRL + ARROW Keys. For example, press CTRL + ← and CTRL + → to rotate the floor system around Z axis and press CTRL + ↑ or CTRL + ↓ to rotate around X axis.

4.9.3 Viewing Specific Member Type

In order to see the floor system members in greater detail, you can select specific member types to view by enabling and disabling them.

To select member type:

- Select the **View Options** command from the **View** menu. The dialog box of Figure 4-62 will appear showing the currently displayed member types. Depending on the floor system, some of the member types will be shaded gray and unavailable.
- To hide a member type from a view of the floor system you must remove the ✓ sign from the check box. Click the left mouse button on the check box of the member type you would like to hide. To view a previously hidden member type, click the left mouse button on the check box to add the ✓ sign to the check box.
- Select OK button to view only the selected member types.

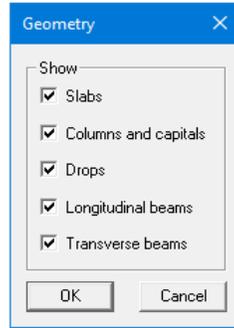


Figure 4-59 View Options dialog box

4.9.4 Plan View

To switch to plan view:

1. Select the **Plan View** command from the **View** menu or click  button on the tool bar. The dialog box of Figure 4-60 will appear.

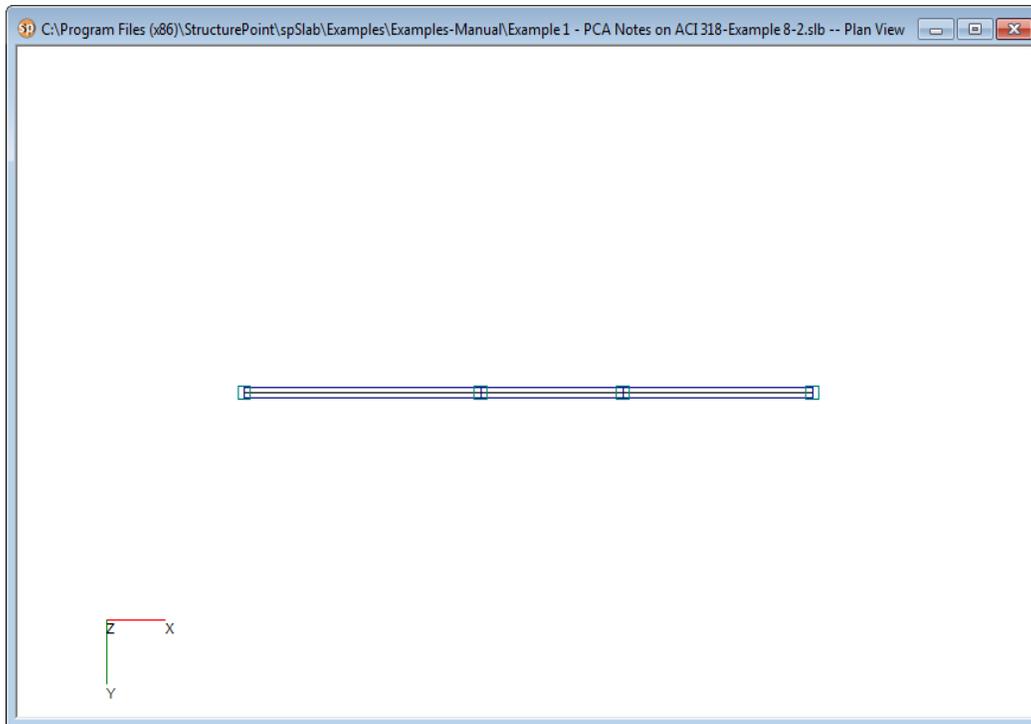


Figure 4-60 Plan View Window

2. Right click on the view window to show the pop-up menu. You may save the current view window as bitmap (BMP) file or metafile (EMF) onto the Windows clipboard by selecting Copy Bitmap or Copy Metafile, respectively. You may also select the commands from the

pop-up menu to zoom in or zoom out the view window and preview it before printing it out.

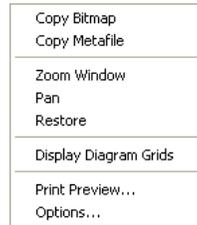


Figure 4-61 Pop-up Menu of View Window

1. Select the **Options** command from the pop-up menu, and then you may decide what geometry members need to be shown on the view window as shown in Figure 4-62. To hide a member type from a view of the floor system you must remove the ✓ sign from the check box. Click the left mouse button on the check box of the member type you would like to hide. To view a previously hidden member type, click the left mouse button on the check box to add the ✓ sign to the check box.
2. Select OK button to view only the selected member types.

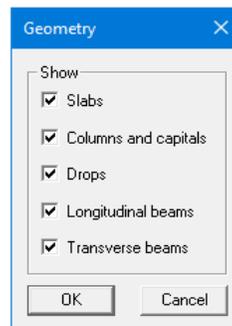


Figure 4-62 Geometry Options of Elevated View

4.9.5 Elevated View

To switch to elevated view:

- Select the **Elevated View** command from the **View** menu or click  button from the tool bar. The dialog box of Figure 4-63 will appear.

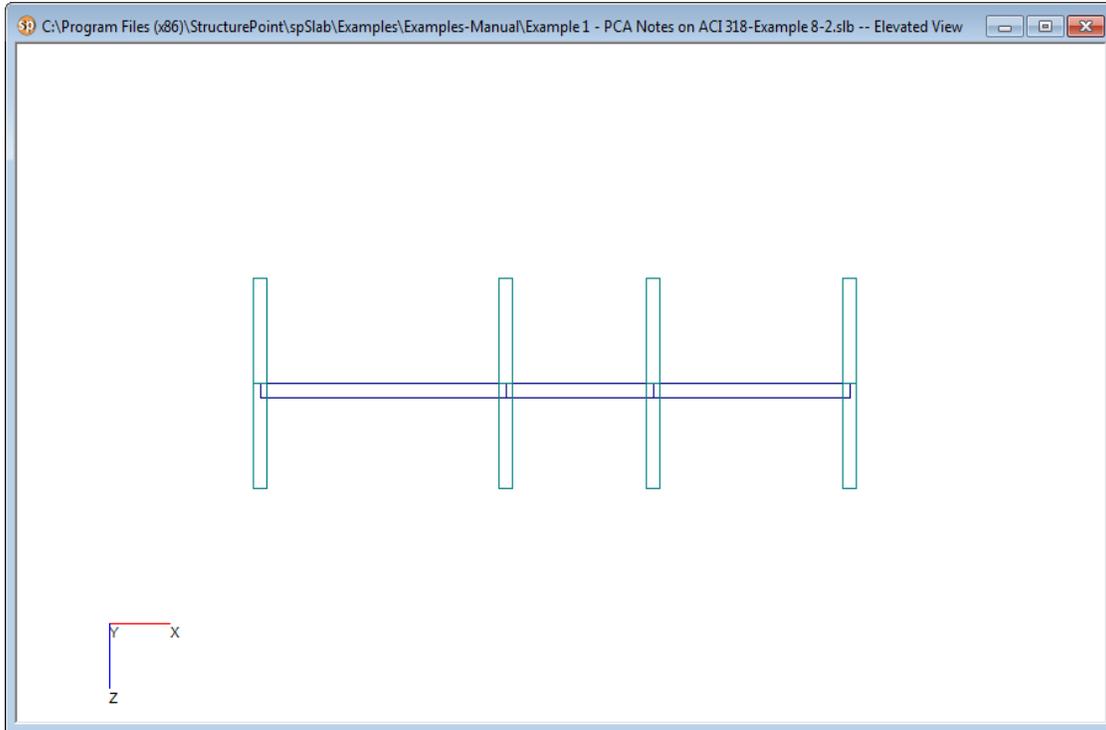


Figure 4-63 Elevated View Window

- Right click on the view window to show the pop-up menu. You may save the current view window as bitmap (BMP) file or metafile (EMF) onto the Windows clipboard by selecting Copy Bitmap or Copy Metafile, respectively. You may also select the commands from the pop-up menu to zoom in or zoom out the view window and preview it before printing it out.

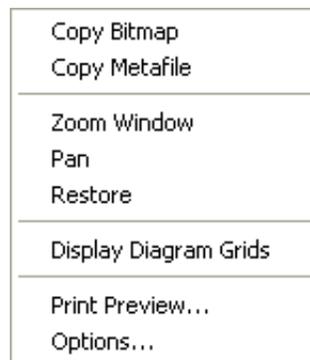


Figure 4-64 Pop-up Menu of View Window

- Select the **Options** command from the pop-up menu, and then you may decide what geometry members need to be shown on the view window as shown in Figure 4-65. To hide a member type from a view of the floor system you must remove the ✓ sign from the check box. Click the left mouse button on the check box of the member type you would

like to hide. To view a previously hidden member type, click the left mouse button on the check box to add the ✓ sign to the check box.

- Select OK button to view only the selected member types.

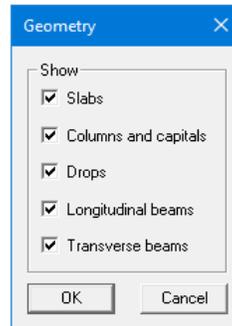


Figure 4-65 Geometry Options of Elevated View

4.9.6 Side View

To switch to side view:

- Select the **Elevated View** command from the **View** menu or click  button from the tool bar. The dialog box of Figure 4-66 will appear.

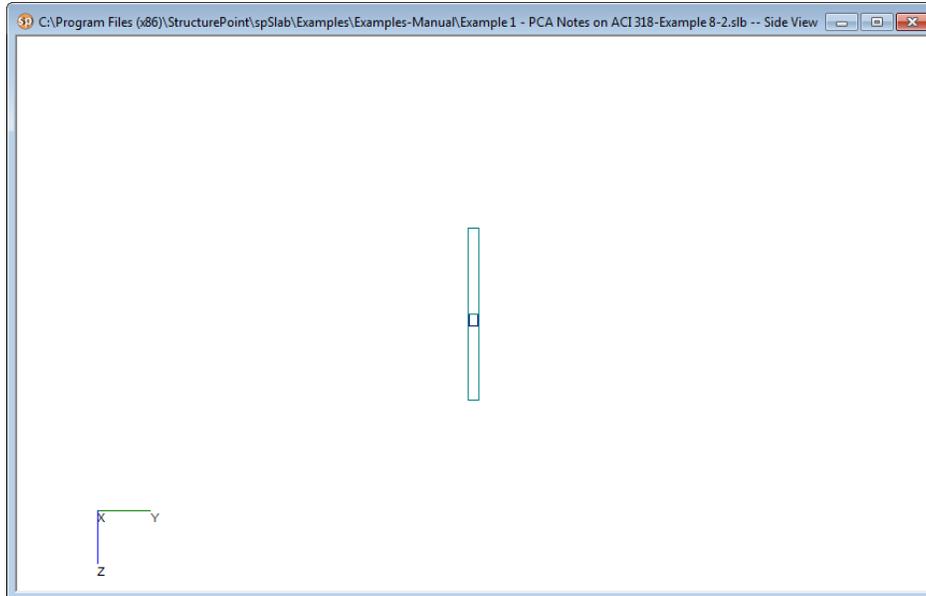


Figure 4-66 Side View window

- Right click on the view window to show the pop-up menu. You may save the current view window as bitmap (BMP) file or metafile (EMF) onto the Windows clipboard by selecting Copy Bitmap or Copy Metafile, respectively. You may also select the commands from the

pop-up menu to zoom in or zoom out the view window and preview it before printing it out.

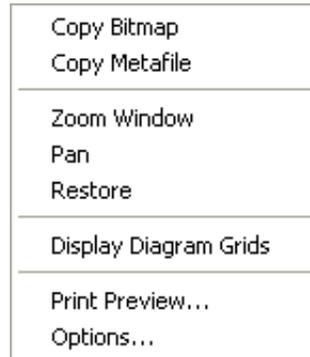


Figure 4-67 Pop-up Menu of View Window

- Select the **Options** command from the pop-up menu, and then you may decide what geometry members need to be shown on the view window as shown in Figure 4-68. To hide a member type from a view of the floor system you must remove the ✓ sign from the check box. Click the left mouse button on the check box of the member type you would like to hide. To view a previously hidden member type, click the left mouse button on the check box to add the ✓ sign to the check box.

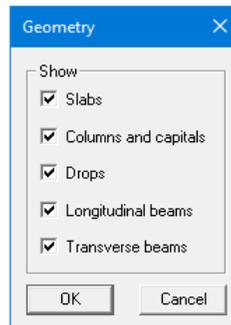


Figure 4-68 Geometry Options of Side View

- Select OK button to view only the selected member types.

4.9.7 Isometric View

To switch to isometric view:

- Select the **Isometric View** command from the **View** menu or click  button on the tool bar. The dialog box of Figure 4-69 will appear.

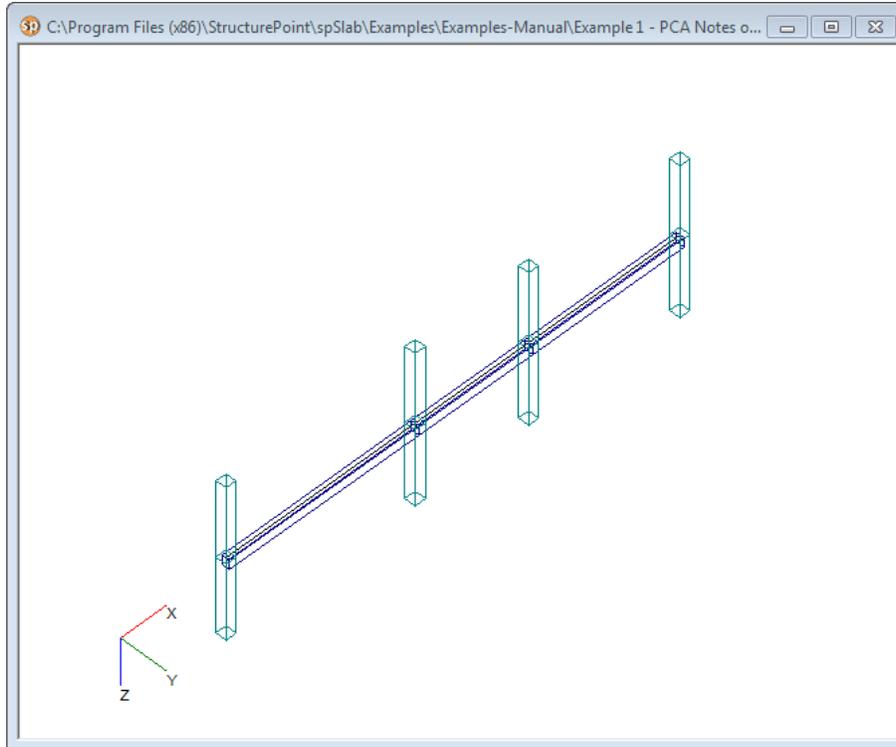


Figure 4-69 Isometric View Window

- Right click on the view window to show the pop-up menu. You may save the current view window as bitmap (BMP) file or metafile (EMF) onto the Windows clipboard by selecting Copy Bitmap or Copy Metafile, respectively. You may also select the commands from the pop-up menu to zoom in or zoom out the view window and preview it before printing it out.



Figure 4-70 Pop-up Menu of View Window

- Select the **Options** command from the pop-up menu, and then you may decide what geometry members need to be shown on the view window as shown in Figure4-71. To hide a member type from a view of the floor system you must remove the ✓ sign from the check box. Click the left mouse button on the check box of the member type you would like to hide. To view a previously hidden member type, click the left mouse button on the check box to add the ✓ sign to the check box.

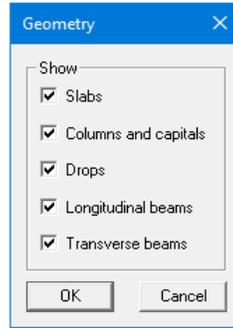


Figure 4-71 Geometry Options of Isometric View

- Select OK button to view only the selected member types.

4.9.8 Loads

To show the loads:

- Select the **Loads** command from the **View** menu or click  button from the tool bar. The dialog box of Figure 4-72 will appear.

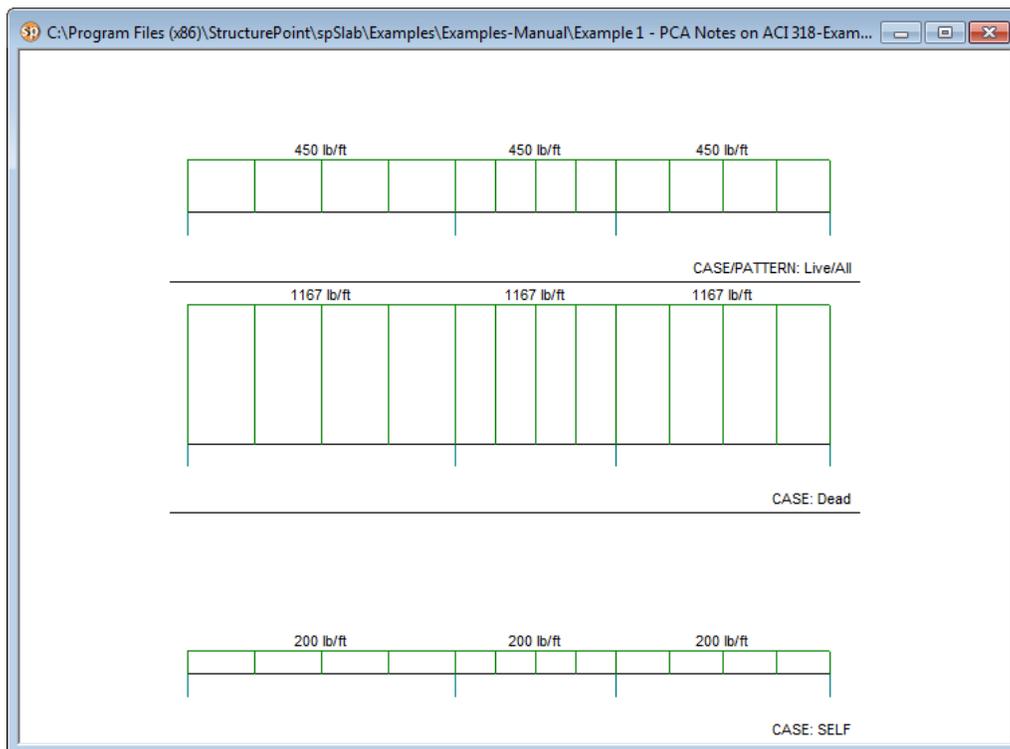


Figure 4-72 Loads View Window

- Right click on the view window to show the pop-up menu. You may save the current view window as bitmap (BMP) file or metafile (EMF) onto the Windows clipboard by selecting

Copy Bitmap or Copy Metafile, respectively. You may also select the commands from the pop-up menu to zoom in or zoom out the view window and preview it before printing it out.

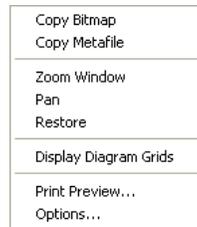


Figure 4-73 Pop-up menu of View Window

- Select the **Options** command from the pop-up menu, and then you may decide what kind of loads need to be shown on the view window as shown in Figure 4-74. To hide a load case, load type, or live load pattern you must remove the ✓ sign from the check box. Click the left mouse button on the check box of the member type you would like to hide. To view a previously hidden load type, click the left mouse button on the check box to add the ✓ sign to the check box.

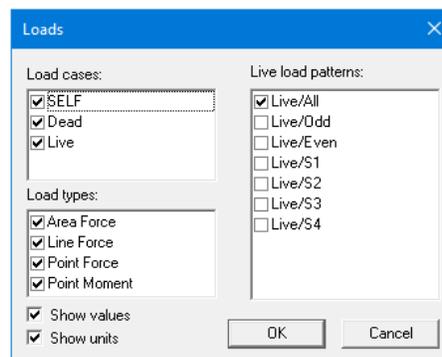


Figure 4-74 Loads Options

- If you want to hide the load values, remove the ✓ sign before SHOW VALUES check box.
- If you want to hide the load units, remove the ✓ sign before SHOW UNITS check box.
- Select OK button to view only the selected member types.

4.9.9 View Graphical Results

4.9.9.1 Viewing Internal Forces Diagrams

Once the design has been performed, you may view the shear, moment, and internal torque (beams/one-way slab systems with torsion) diagrams for any span at any available load combination.

To view shears and moments diagram:

- Select the **Internal Forces** command from the **View** menu or click the  button on the tool bar. A view window similar to Figure 4-75 will appear. The upper half view window shows the shear diagram and the lower half the view window shows the moment diagram. If torsion is enabled for beams/one-way slab systems than internal torque diagram will also be shown in this window.

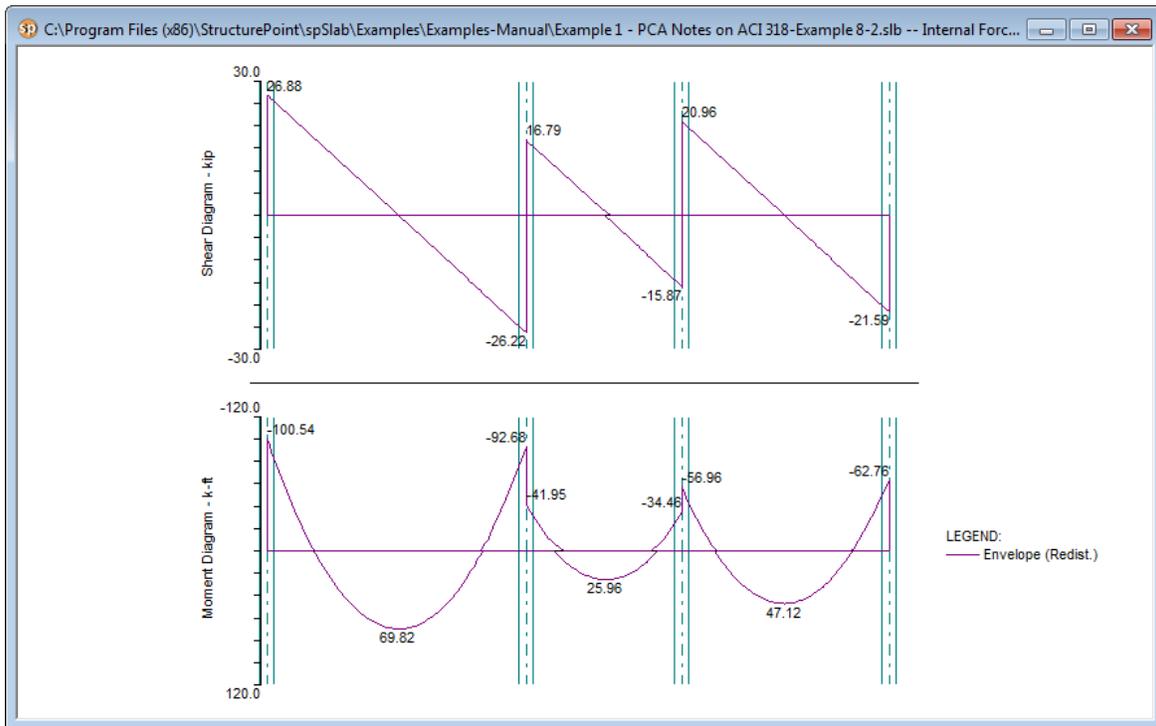


Figure 4-75 View Internal Forces Diagram

- The current coordinate values can be captured based on the position of the mouse cursor. The status bar in Figure 4-76 shows the name of the diagram, two coordinate values of the current mouse cursor position, and the current design code used in the project.



Figure 4-76 Coordinate Value Shown in Status Bar

- Click the right mouse button anywhere on the view window to show the pop-up menu. You may **Restore**, **Zoom**, **Pan** or **Print View** directly by selecting commands from this pop-up menu.
- Click the **Options** command from the pop-up menu to change the span for which the internal forces diagrams will be shown and to choose if legend will be displayed or not. Figure 4-77 shows the **OPTIONS** dialog box. Select a span number from the **SHOW DIAGRAM FOR**

drop-down list and select a load Envelope or combination from the SELECT LOAD COMBINATIONS check list box. Use DRAW LEGEND checkbox to control whether legend is drawn or not. Press the OK button to close the dialog box and redraw the view windows.

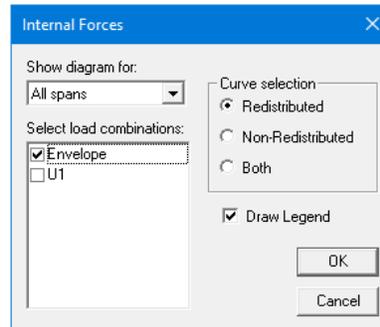


Figure 4-77 View Internal Forces Diagram Options

Note: The pop-up menu can be accessed from each of the view windows of spSlab.

The **Restore** command cannot be executed in the pop-up menu until the **Zoom** or **Pan** command is stopped by pressing the ESC key. Without stopping the **Zoom/Pan** command, one can only restore a view using the **Restore** command in **View** menu or  button in the tool bar. This occurs in all spSlab view windows.

4.9.9.2 Viewing Moment Capacity

Once the design has been performed, you may view the moment capacity diagrams for any span. The moment capacity window will be split in half horizontally. The middle strip moment capacity will occupy the upper half and the column strip moment capacity will occupy the lower half where each diagram will be scaled to fill the entire half of the window.

To view moment capacity:

1. Select the **Moment Capacity** command from the **View** menu or click the  button on the tool bar. A view window similar to Figure 4-78 will appear.
2. Right click on the Moment Capacity view window and select **Options** command from the pop-up menu. A dialog box similar to Figure 4-79 will appear.
3. The current coordinate values can be captured based on the position of the mouse cursor. The status bar shows the name of the diagram, two coordinate values of the current mouse cursor position, and the current design code used in the project.

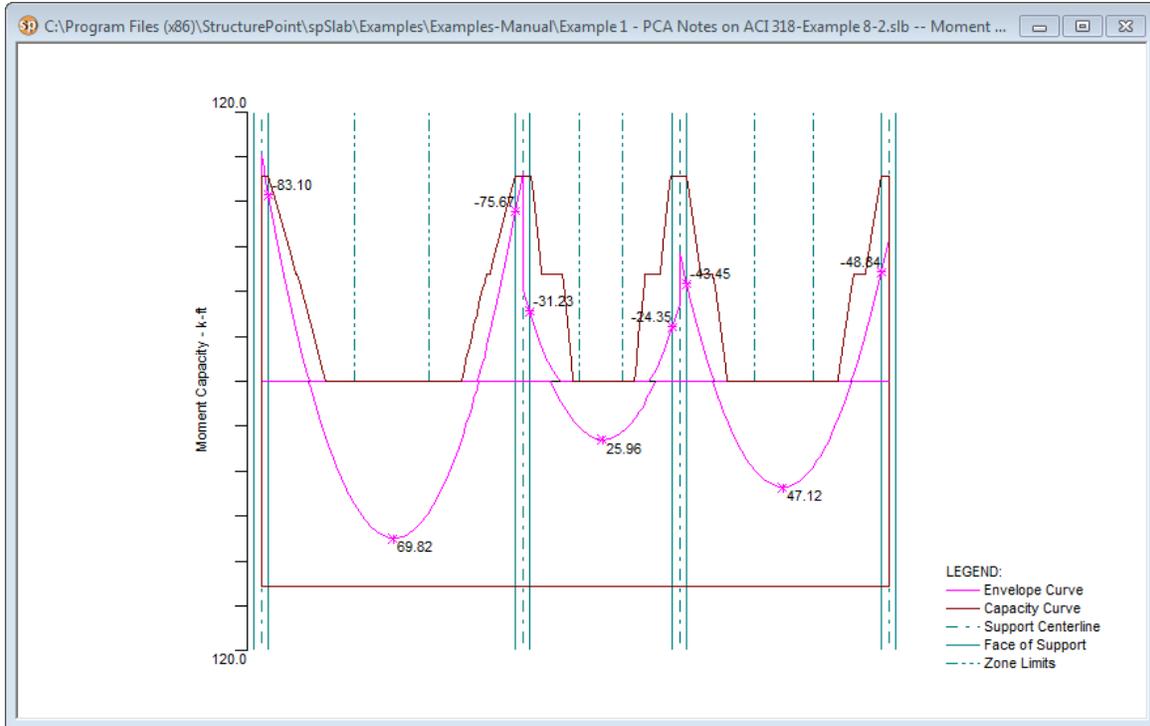


Figure 4-78 View Moment Capacity Diagram

4. Click the right mouse button anywhere on the view window to show the pop-up menu. You may **Restore**, **Zoom**, **Pan** or **Print View** directly by selecting commands from this pop-up menu.
5. Click the **Options** command from the pop-up menu to change the span for which the moment capacity will be shown. Select which span will be shown in the SHOW DIAGRAM FOR drop-down list. Use DRAW LEGEND checkbox to control whether legend is drawn or not. Use VALUES AND ZONES checkbox to control whether values at critical sections within the zones are drawn or not. Select which part of the selected span will be shown in the Show frame box.

To view capacity of longitudinal reinforcement, use COMBINED M-V-T checkbox (Figure 4-79b) for beams designed or investigated per CSA A23.3-14/04²⁰⁰ with Combined M-V-T option.

6. Press the OK button to close the dialog box and redraw the view windows.
7. The magnitude of the bending moment at the critical sections is displayed and indicated by an asterisk where the bending moment diagram intersects the critical section.

200.CSA A23.3-14, 11.3.9.2, 11.3.9.3, 11.3.10.6; CSA A23.3-04, 11.3.9.2, 11.3.9.3, 11.3.10.6

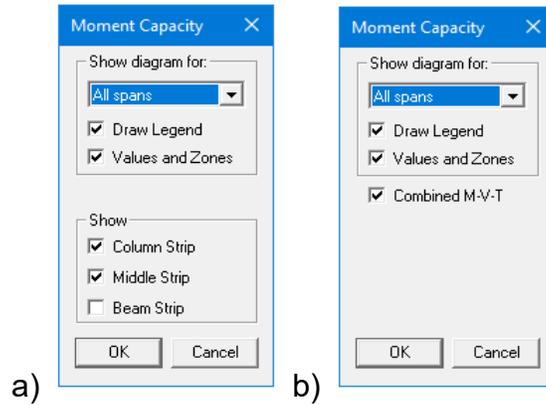


Figure 4-79 View Moment Capacity Option dialog box (a) two-way system (b) beam with M-V-T option selected in Solve Options (CSA A23.3-14/04 only)

4.9.9.3 Viewing Shear Capacity

Once the design has been performed, you may view the slab shear capacity diagrams for any span.

To view shear capacity:

1. Select the **Shear Capacity** command from the View menu or click the button on the tool bar. A view window similar to Figure 4-80 will appear.

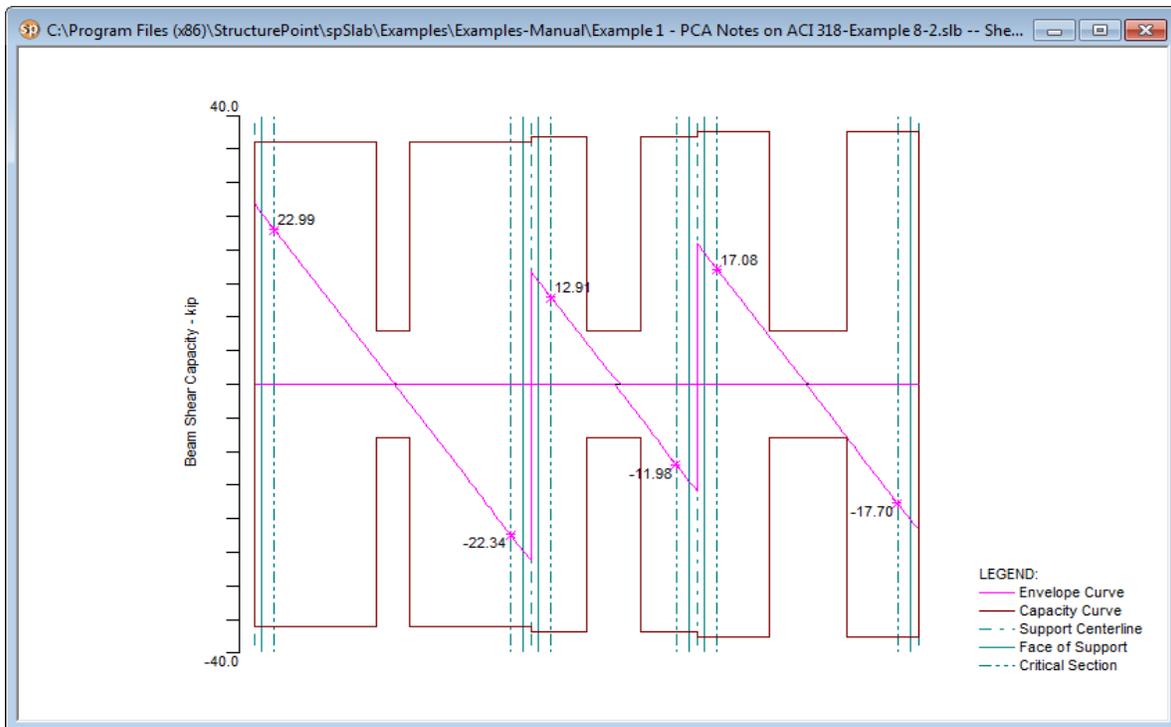


Figure 4-80 View Shear Capacity

- Right click on the Shear Capacity view window and select **Options** command from the pop-up menu. A dialog box similar to Figure 4-81 will appear.

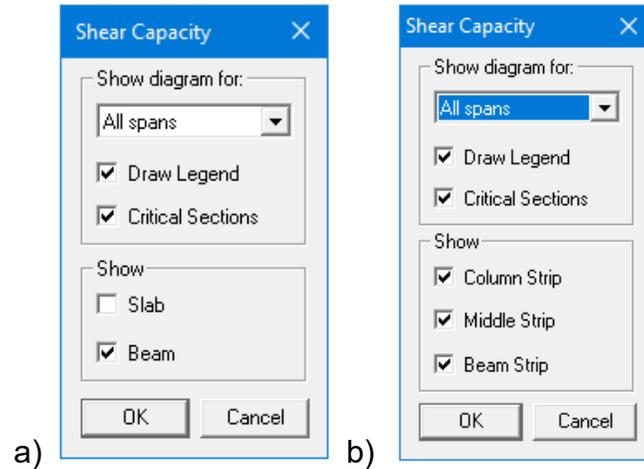


Figure 4-81 View Shear Capacity Option dialog box(a) One-way and two-way system (b) Two-way system with shear distributed to slab strips

- The current coordinate values can be captured based on the position of the mouse cursor. The status bar shows the name of the diagram, two coordinate values of the current mouse cursor position, and the current design code used in the project.
- Click the right mouse button anywhere on the view window to show the pop-up menu. You may **Restore**, **Zoom**, **Pan** or **Print View** directly by selecting commands from this pop-up menu.
- Click the **Options** command from the pop-up menu to change the span for which the shear capacity will be shown. Select which span will be shown in the SHOW DIAGRAM FOR drop-down list. Use DRAW LEGEND checkbox and CRITICAL SECTION checkbox to control if the legend and critical sections are drawn or not. Select which part of the selected span will be shown in the SHOW frame box.
- The magnitude of the shear at critical sections is displayed and indicated by an asterisk where the shear force diagram intersects the critical section.
- Press the OK button to close the dialog box and redraw the view windows.

4.9.9.4 Viewing Reinforcement

Once the design has been performed, you may view the reinforcement diagrams for any span. The reinforcement window will be split in half horizontally. The middle strip reinforcement will occupy the upper half, and the column strip reinforcement will occupy the lower half where each diagram will be scaled to fill the entire half of the window.

To view reinforcement:

- Select the **Reinforcement** command from the **View** menu or click the  button on the tool bar. A view window similar to Figure 4-82 will appear.

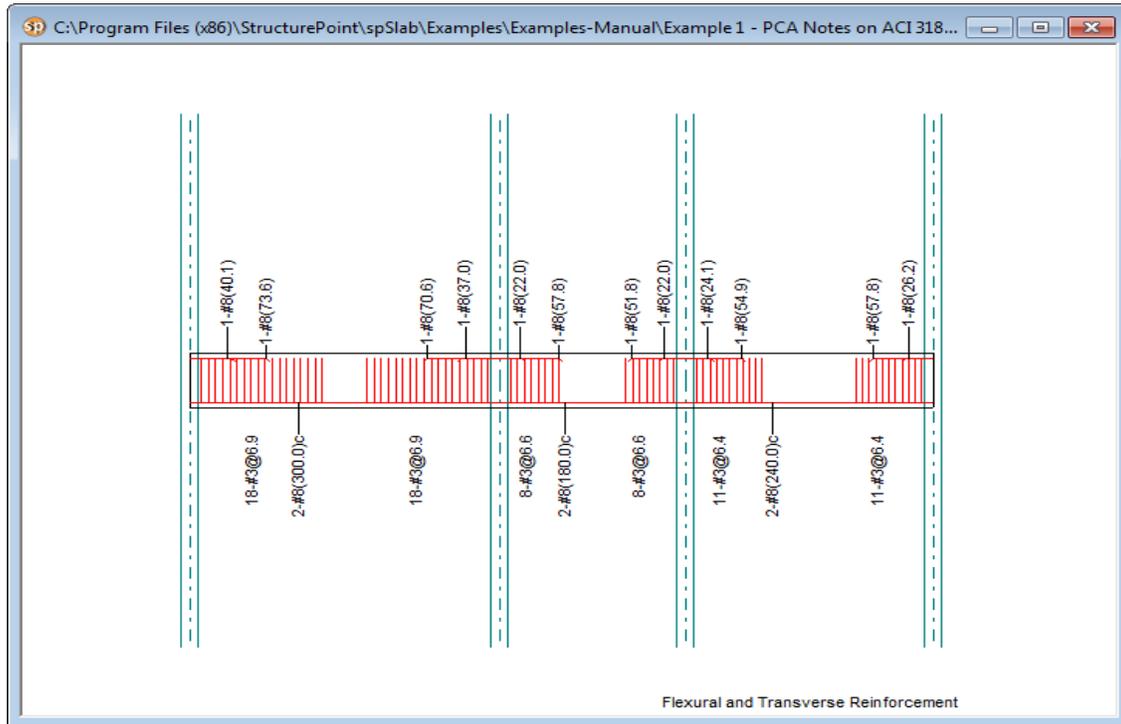


Figure 4-82 View Reinforcement

- Right click on the Reinforcements view window and select **Options** command from the pop-up menu. A dialog box similar to Figure 4-83 will appear.
- The current coordinate values can be captured based on the position of the mouse cursor. The status bar shows the name of the diagram, coordinate value of the current mouse cursor position in the design direction, and the current design code used in the project.
- Click the right mouse button anywhere on the view window to show the pop-up menu. You may **Restore**, **Zoom**, **Pan** or **Print View** directly by selecting commands from this pop-up menu.

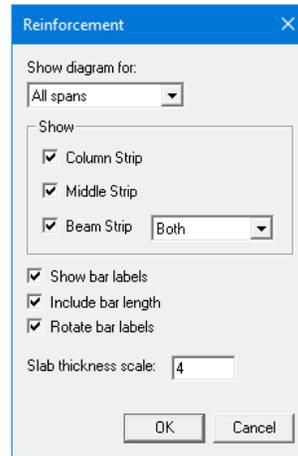


Figure 4-83 View Reinforcement Options dialog box

- Click the **Options** command from the pop-up menu to change the span for which the shear capacity will be shown. Select the span you want to show from the **Show diagram for** drop-down list. Select which part of the selected span will be shown from the Show frame box. Checking the SHOW BAR LABELS will show labels beside each reinforcement on the view. Similarly bar length can be included by checking INCLUDE BAR LENGTH. Bar labels can also be arranged vertically if ROTATE BAR LABELS is checked. Set the vertical scale (relative to the horizontal scale which is set automatically) to which members are drawn in the SLAB THICKNESS SCALE edit box.
- Press the OK button to close the dialog box and redraw the view windows.

4.9.9.5 Viewing Deflected Shapes

Once the design has been performed, you may view the deflection shapes for any span.

To view the deflection shapes:

- Select the **Deflection** command from the **View** menu or click the  button on the tool bar. A view window similar to Figure 4-84 will appear.
- Right click on the deflection view window and select **Options** command from the pop-up menu. A dialog box similar to Figure 4-85 will appear.

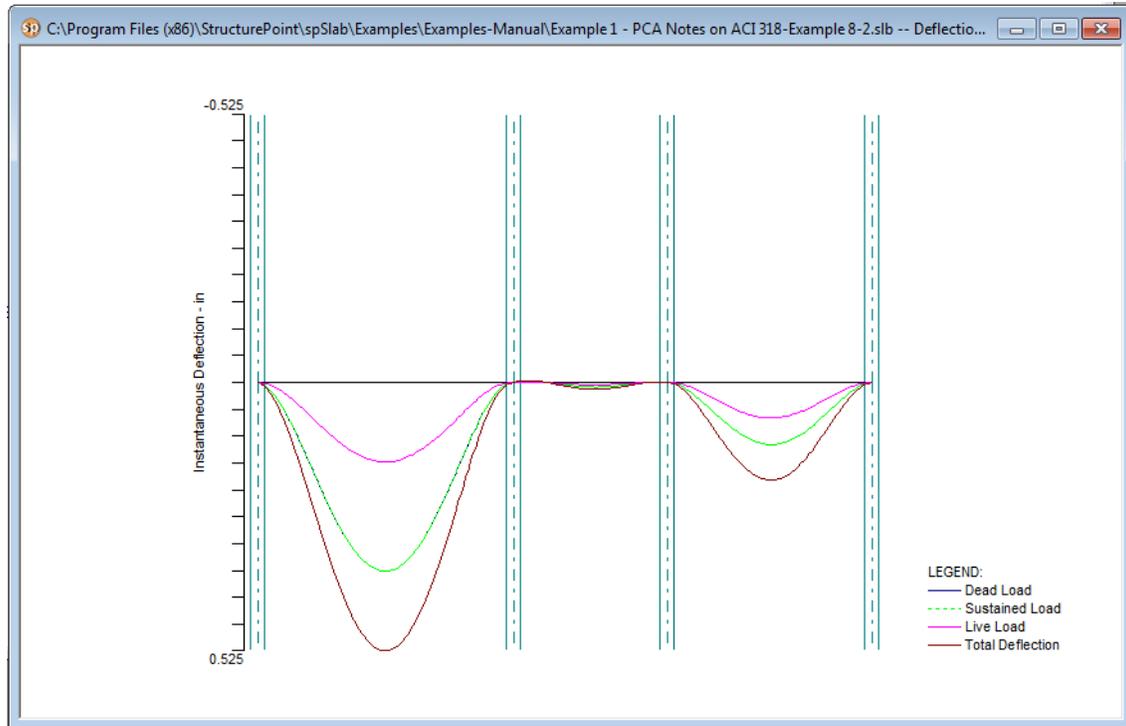


Figure 4-84 View Deflection Diagram

- The current coordinate values can be captured based on the position of the mouse cursor. The status bar shows the name of the diagram, two coordinate values of the current mouse cursor position, and the current design code used in the project.
- Click the right mouse button anywhere on the view window to show the pop-up menu. You may **Restore**, **Zoom**, **Pan** or **Print View** directly by selecting commands from this pop-up menu.

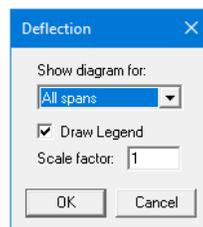


Figure 4-85 View Deflection Option dialog box

- Click the **Options** command from the pop-up menu to change the span for which the deflection will be shown. Select the span you want to show from the SHOW DIAGRAM FOR drop-down list. Check the Draw Legend checkbox to include the legend in the drawing. Enter the scale factor in the SCALE FACTOR edit box. The bigger the scale factor, the more apparent the deflections will be on the diagram.

- Press the OK button to close the dialog box and redraw the view windows.

4.9.10 Printing Results

4.9.10.1 Printing Analysis and Design Results

Once the analysis and/or design is performed, you can print the results. This section provides procedures for performing these functions.

To print the analysis and design results:

Select **Reporter** command from the **Solve** menu or click the  button from the tool bar. Alternatively you can also press the **F7** key. This will launch the spReporter module.

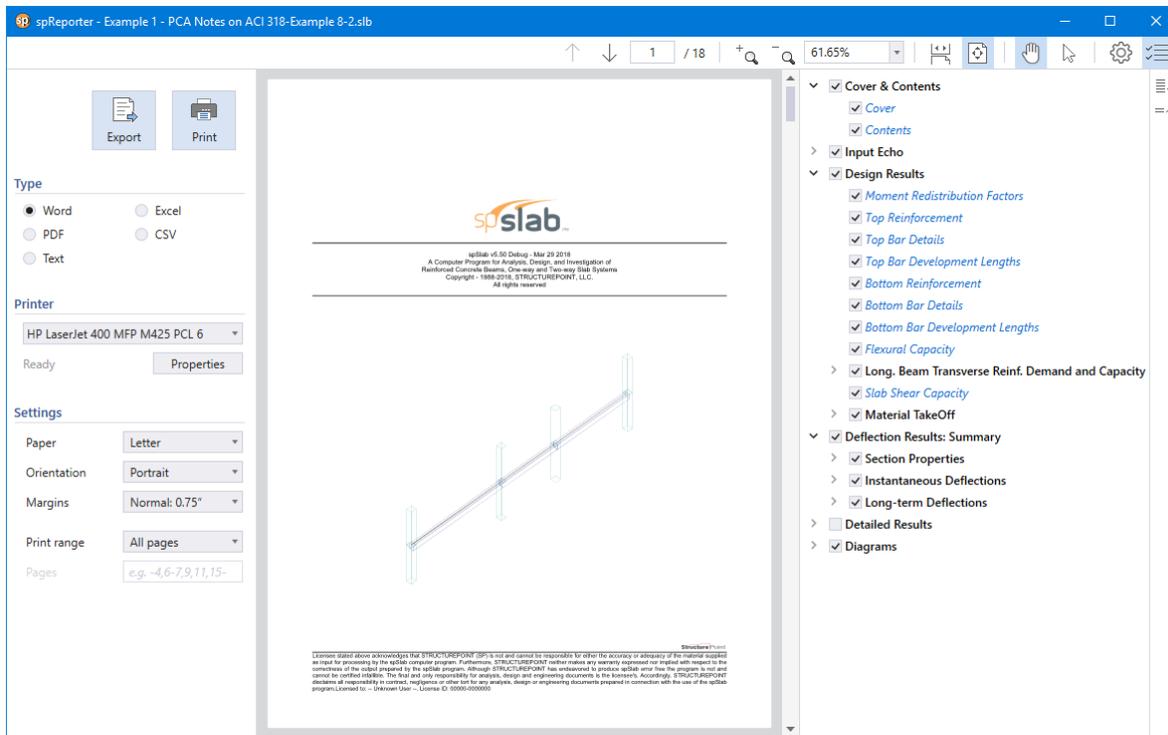


Figure 4-86 View and Print dialog box

- Only Word/PDF and Text reports can be previewed and directly printed. Select the format you want to print the results in from the panel on the left. The preview will be changed depending on your selection.
- You can adjust the paper size, page orientation margins and print range using the Print/Export panel on the left.

- Press the PRINT button on the dialog box to print the results through a printer. The printer could be a local printer which is connected to your computer directly, or a network printer.
- Press the CLOSE button to close spReporter when printing job is done.

4.9.10.2 Printing Current View Window

Once the design has been performed, you may print the diagrams and views for any span at any available loading pattern by selecting the **Print View** command from the **File** menu.

To print a displaying window:

- To select the diagram or view you want to print, single click the left mouse button on the diagram or view window.
- Select the **Print View** command from the **File** menu. A print preview window similar to Figure 4-87 will be shown

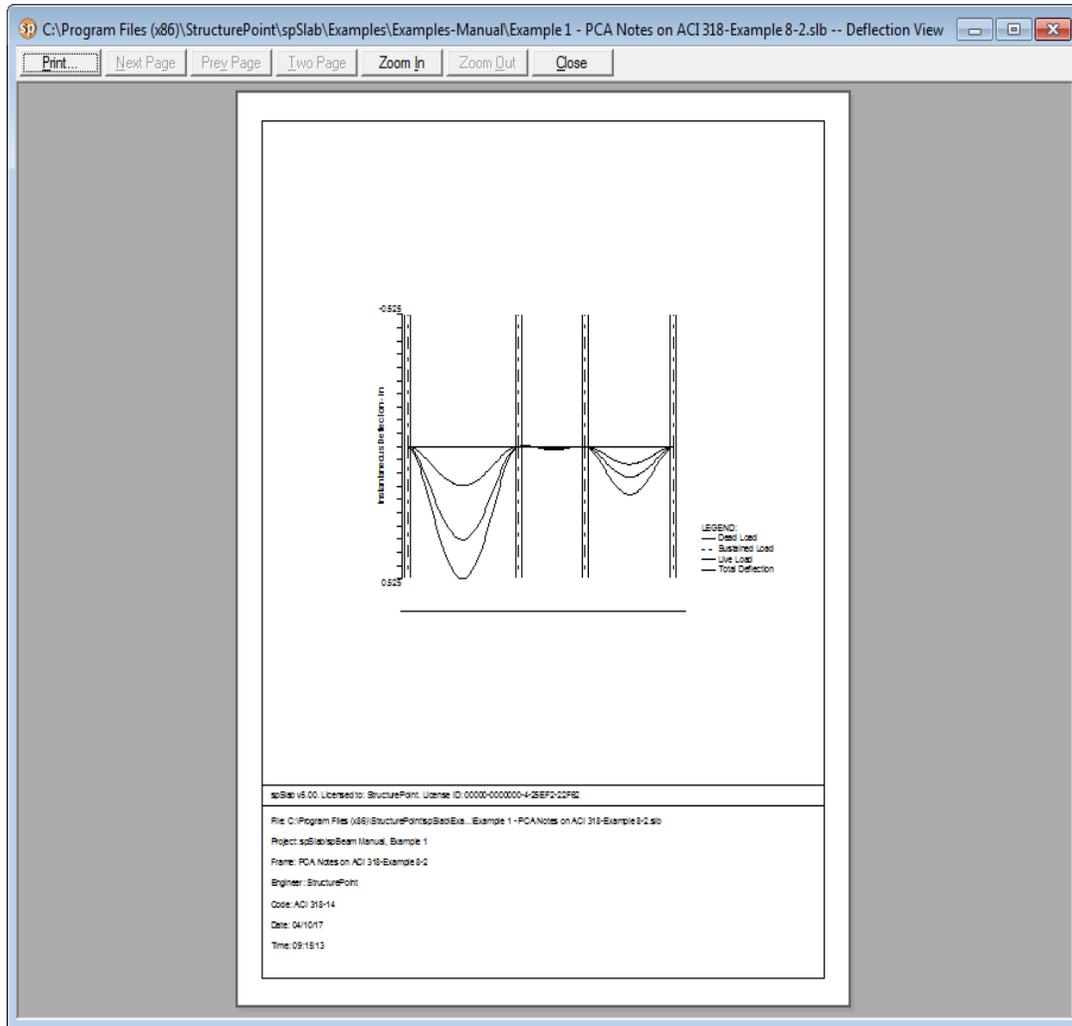


Figure 4-87 Print Preview Window

- Press the ZOOM IN or ZOOM OUT buttons or simply click the left mouse button on the preview to magnify or reduce the size of the preview paper.
- Press the NEXT PAGE button if more than one page need to be printed.
- Press the PRINT button to print the view. The printer could be a local printer which is connected to your computer directly, or a network printer.
- Press the CLOSE button to close the preview window and go back to spSlab.

4.9.11 Print Preview

The **Print Preview** command allows you to preview and print the current view window (floor system geometry in the plan, elevated and isometric views, prints the shear and moment diagrams, and the deflected shapes).

- To obtain a view window you must first perform the design, then select what you want to view from the **View** menu. You may have more than one view window opened. The current view window is the one activated and on top of the others on your screen.
- Selecting this command closes the spSlab main window and opens the print preview window as shown in Figure 4-87.
- On the print preview window, press the ZOOM IN or ZOOM OUT buttons or simply click the left mouse button on the preview window to magnify or reduce the size of the preview paper.
- Press the NEXT PAGE button if more than one page needs to be printed.
- Press the PRINT button to print the view. The printer could be a local printer which is connected to your computer directly, or a network printer.
- Press the CLOSE button to close the preview window and go back to spSlab.

4.9.12 Copy Graphs to Clipboard

Copy Bitmap (BMP format)

spSlab can copy any of the ten view windows onto Windows clipboard as bitmap. The bitmap on clipboard can then be pasted into Microsoft Word or other Windows applications including presentation software such as Microsoft PowerPoint.

To copy view window to clipboard as bitmap:

- Select the view window that will be copied by single clicking left mouse button on it.
- Select  from the tool bar to copy the selected view window to clipboard.
- Switch to other word processing software, such as Microsoft Word, then press the CTRL + V to paste the bitmap on clipboard to a Word file.

Copy Metafile (EMF format)

Since bitmap files cannot easily be resized or re-proportioned without significant distortion to the image, metafiles are generally used for situations requiring scalability of the image.

Advantages of metafiles are:

- Large, simply structured images require less memory than bitmaps for display and make optimal use of the resolution of the output device.
- Metafiles can be resized with none of the distortion which normally accompanies resizing of bitmaps.
- A metafile can contain SelectPalette statements, allowing custom palettes to be displayed in applications such as Microsoft Word.

The Enhanced MetaFile (EMF) format is an extension of the Windows metafiles format developed for use with 32 bit Windows applications. It is only available to native 32 bit applications.

To copy view window to clipboard as Enhanced MetaFile (EMF):

- Select the view window that will be copied by single clicking left mouse button on it.
- Select  from the tool bar to copy the selected view window to clipboard.
- Switch to other word processing software, such as Microsoft Word, then press the CTRL + V to paste the bitmap on clipboard to a Word file.

4.10 Customizing Program (menu Options)

4.10.1 Changing Colors

Colors can be changed for background of views, geometry items such as slabs and beams, text on views, result diagrams, etc.

To change colors:

- Select **Colors** command from the **Options** menu. Figure 4-88 will appear.
- From the **General** frame box on the left side, select the item whose color needs to be changed from the list box.
- Select a color from the **Change color to** drop-down list. Once a new color is selected from the drop-down list the color in the list box above the drop-down list is updated instantly.
- From the Results category box on the right side, select the item whose color needs to be changed from the list box.
- Select a color from the **Change color to** drop-down list. Once a new color is selected from the drop-down list the color in the list box above the drop-down list is updated instantly.
- If you want to print views in black and white, select the **Print Black** and **White** check box.
- If you want to save the settings as default, select the **Save** setting for future use check box.

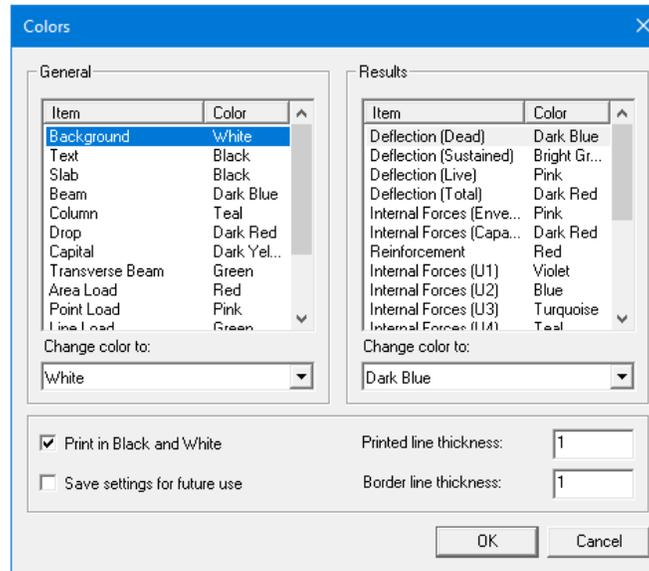


Figure 4-88 Changing Colors dialog box

- Input the line thickness in the Printed Line Thickness edit box. The diagram line thickness will be based on the number you input.
- Press the OK button to save the settings and close the dialog box.

4.10.2 Changing Fonts

Fonts can be selected separately for graphical on screen, graphical output and the text output via **Options|Font** command.

To change the graphical on screen or graphical output fonts:

- Select the **Font|Graphical, On Screen** or **Font|Graphical, Output** command from the **Options** menu. A view window similar to Figure 4-89 will appear.

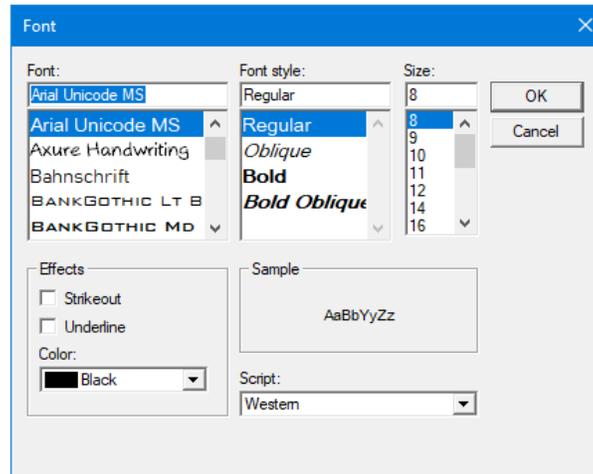


Figure 4-89 Changing Graphical Output Font dialog box

- Select the font, font style and size from the lists. Font sizes different from those on the list can be typed in the **Size** text box.
- In the EFFECT frame select if strikeout and/or underline effect have to be applied. Alternatively to the COLOR dialog box, the font color can be chosen in this dialog box too.
- The script of the font by default is Western and should not be changed.
- Press the OK button to save the new setting and close the dialog box.

To change the text output font follow the same procedure as for the graphical output font except that font effects are not available for text output and the list of fonts only contains non-proportional fonts which are suitable for tabulated text output (Figure 4-90).

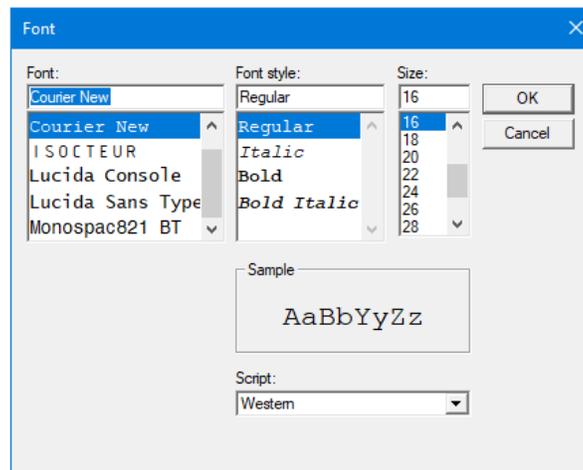


Figure 4-90 Changing Text Output Font dialog box

4.11 Working with View Windows (menu Window)

Cascade

The **Cascade** command displays all the open windows in the same size, arranging them on top of each other so that the title bar of each is visible. The current active view window will be on the top after the execution of the **Cascade** command.

Tile Horizontal

The **Tile Horizontal** command arranges all open windows horizontally so that no window overlaps another. The current active view window will be on the most left or on the upper-left corner of the screen after the execution of the **Tile Horizontal** command.

Tile Vertical

The **Tile Vertical** command arranges all open windows vertically so that no window overlaps another. The current active view window will be on the most left or on the upper-left corner of the screen after the execution of the **Tile Vertical** command.

Remaining Commands

The remaining menu items are in a list of the windows that are available for viewing. Selecting any window from this menu will restore the window to its previous size and position from an icon.

4.12 Obtaining Help Information (menu Help)

4.12.1 Opening Table of Contents of the Help System

To open table of contents of the Help system:

- Select **Help** from the **Help** menu.
- Select the chapter you need from the content tree view in the left pane of the browser window. The contents of the selected chapter appear in the right pane of the browser window.

4.12.2 Displaying the Manual

To display the manual:

- Select **Manual** from the **Help** menu.
- The manual will be displayed in the default browser window.

4.12.3 Checking for Updates

To check if a newer version of the program is available:

- Select **Check for Updates** from the **Help** menu.
- The program will open the default browser window with the page where the newer version can be requested or downloaded.

4.12.4 Obtaining Information about the Program

The following information about the program is displayed in the ABOUT SPSLAB dialog box:

- program version and short description
- licensing information
- the copyright information

The licensing information depends on the type of license being used. If it is a trial license then the LICENSE EXP field shows when the trial period expires and the LOCKING CODE field displays a unique fingerprint of the computer on which the program is running. This locking code needs to be provided to StructurePoint in order to generate a permanent license. For other, non-trial licenses, license ID is displayed. You may be asked to provide this ID when you contact StructurePoint for technical support.

To obtain the information about the program:

- Select the **About spSlab** command from the **Help** menu. A dialog box of Figure 4-91 will appear.
- Press OK button to exit the dialog box.

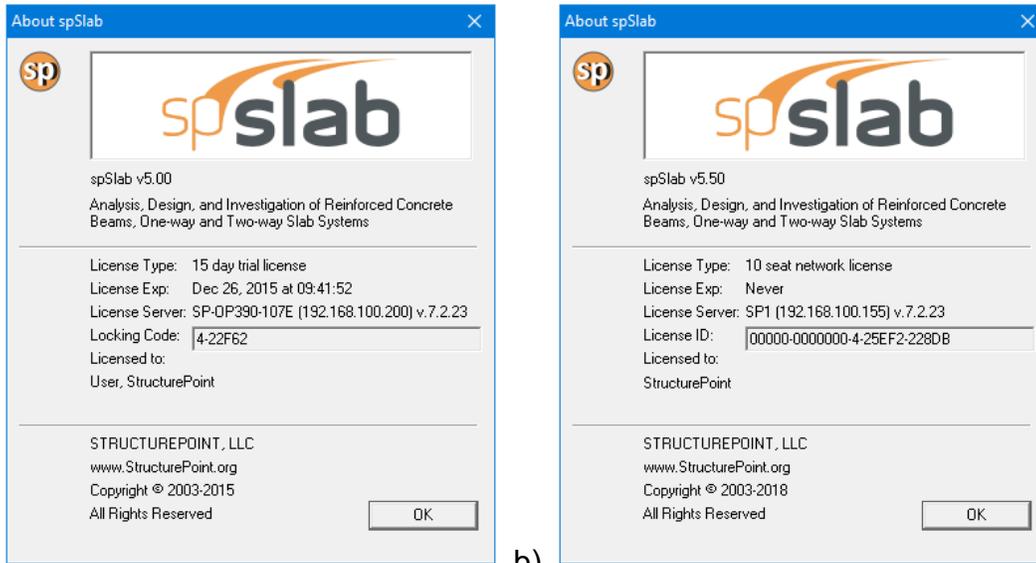


Figure 4-91 About spSlab dialog boxes with (a) a trial license (b) a network license

CHAPTER

5

OUTPUT DESCRIPTION

5.1	Output Elements	213
5.2	Cover & Contents	213
5.3	Input Echo	213
5.3.1	General Information	213
5.3.2	Material Properties	214
5.3.3	Reinforcement Database	214
5.3.4	Span Data	214
5.3.5	Support Data	214
5.3.6	Load Data	214
5.3.7	Reinforcement Criteria	215
5.3.8	Reinforcing Bars	215
5.4	Design Results	215
5.4.1	Strip Widths and Distribution Factors	215
5.4.2	Top Reinforcement	215
5.4.3	Top Bar Details	216
5.4.4	Band Reinforcement at Supports	216
5.4.5	Bottom Reinforcement	217
5.4.6	Bottom Bar Details - Bottom Bar Development Lengths	217
5.4.7	Flexural Capacity	217
5.4.8	Longitudinal Beam Shear Reinforcement Required	217
5.4.9	Longitudinal Beam Shear Reinforcement Details	218
5.4.10	Beam Shear (and Torsion) Capacity	218
5.4.11	Slab Shear Capacity	218
5.4.12	Flexural Transfer of Unbalanced Moments at Supports	218
5.4.13	Punching Shear Around Columns	219

5.4.14	Punching Shear Around Drops	219
5.4.15	Integrity Reinforcement at Supports	219
5.4.16	Corner Reinforcement	219
5.4.17	Shear Resistance at Corner Columns	220
5.4.18	Material Takeoff	220
5.5	Deflection Results: Summary	220
5.6	Detailed Results	220
5.6.1	Column Forces and Redistributed Column Forces	220
5.6.2	Non – Redistributed and Redistributed Internal Forces: M – V	221
5.6.3	Internal Forces: T	221
5.6.4	Deflections - Load Cases	222
5.6.5	Required Reinforcement	222
5.7	Graphical Output	222

5.1 Output Elements

spSlab generates the text and graphical output of the input data and the results of the calculations. The text output is generated when user opens the Results Report dialog window. An ASCII text file is generated in the same sub-folder as the input data file. The name of the output file is created by adding the extension ".OUT" to the name of the input data file. Depending on the report options selected, the text output will contain a selection of the following sections (see the illustrated examples in the following chapter):

- Cover & Contents
- Input Echo
- Design Results
- Deflection Results: Summary
- Detailed Results
- Diagrams

5.2 Cover & Contents

The cover page consists of the program logo, program version, and a diagram of the section being investigated. Additionally, legal disclaimer is displayed at the bottom of the first page. The program version number appears at the top of each report page along with the licensing and copyright information.

The contents lists out all the headings and sub-headings for the sections contained in the report.

5.3 Input Echo

Section Input Echo reports the data used in the analysis. spSlab defaults common data; all other data must be input. Carefully check the contents of the section and compare it with the intended design model. The following paragraphs describe the blocks included in the section.

5.3.1 General Information

This block is similar in its content to the dialog window General Information. It contains the information on project input data file name, project description, selected design code and units, selected reinforcement database, calculation mode (design or investigation), number of supports, cantilevers. The selections available in the SOLVE OPTIONS dialog box are also listed in this block.

5.3.2 Material Properties

This block contains the information on concrete properties for slabs, beams and columns. It also contains the information on reinforcing steel properties for slabs and beams.

5.3.3 Reinforcement Database

This block lists the properties of the bars from the bar table selected for the project. Bar diameter, cross-section area and unit weight for each bar are reported. The values reported are consistent with the units used in particular model.

5.3.4 Span Data

This block is similar in its content to the dialog window Span Data. The block is divided into two parts. First part reports the span-by-span geometry of the concrete slab (length, left and right side width, depth and code required minimum thickness). The second part contains the span-by-span geometry of longitudinal beams and ribs (for joist slabs): width, depth, and offset (eccentricity) from column centroid.

5.3.5 Support Data

This block is similar in its content to the dialog window Support Data. The block is divided into four parts. The first part reports the geometry of top and bottom columns and the stiffness share factor. For circular column the transverse dimension C2 is reported as zero. The second part contains the geometry of drop panels: thickness, lengths, widths. If dimensions of a drop panel are invalid it will be marked. Invalid or excessive drop panel geometry is not used in the analysis. The third part contains the geometry of column capitals: depth, slope (depth/extension ratio), extensions. The fourth part contains the geometry of transverse beams: width, depth, and offset) from column centroid.

5.3.6 Load Data

This block contains the complete information on load input. The block is divided into three parts. The first part reports the defined load cases, load combinations and corresponding load factors. This part summarizes the contents of the dialog windows Load Cases and Load Combinations. The second part reports the magnitudes of defined span loads. It summarizes the contents of the dialog window Span Loads. The third part reports the magnitudes of lateral actions (joint moments) if defined in the model. It summarizes the contents of the dialog window Lateral Load Effects.

5.3.7 Reinforcement Criteria

This block is similar in its content to the dialog window Reinforcement Criteria. The block is divided into three parts. The first part reports the requirements for slab and rib bars. The second part reports the requirements for longitudinal beams. Both parts contain the information on bar sizes, covers, spacing, and user selected allowable steel percentages. The requirements for top and bottom bars are given. For longitudinal beams additionally the criteria for transverse bars (stirrups) are listed.

5.3.8 Reinforcing Bars

This block is available only when Investigation Mode is selected. This block is similar in its content to the dialog window Reinforcing Bars. The block is divided into three parts. The first part reports the span-by span user selected top bars for column, middle and beam strips accordingly. Similarly, the second part reports the user selected bottom bars for column, middle and beam. For longitudinal bars the program reports bar sizes, lengths and concrete cover. The third part presents the beam transverse reinforcement (stirrups) defined by the user.

Note: When switching from Design Mode to Investigation Mode, spSlab automatically assumes the results of the Design Mode as an input for Investigation Mode.

5.4 Design Results

Section Design Results presents the summary of the design results of the slab system. The following paragraphs describe the blocks included in the section.

5.4.1 Strip Widths and Distribution Factors

This block is available only for two-way systems. It contains the information on design strip widths, moment distribution factors, and shear distribution factors (for CSA A23.3-14/04 standard and optionally for other standards if distribution of shear to slab strips is selected).

5.4.2 Top Reinforcement

This block is available only when Design Mode is selected. It reports the negative reinforcement requirements. The block contains the values of corresponding design strip widths (column, middle, and beam), maximum factored design moments per strip and critical location, minimum and maximum steel areas, spacing for bars selected based on required reinforcement area, steel areas required by ultimate condition, selected bar sizes and numbers. The quantities are given for left, center and right location of each span. For a detailed discussion, see Chapter 2, “Area of Reinforcement”.

Note: This block does not include reinforcement quantities necessary to transfer unbalanced moments at supports. In case of CSA standard, the reported spacing is averaged between reinforcement placed in the b_b band and in the remaining portion of the column strip outside of the b_b band.

5.4.3 Top Bar Details

The block contains a span-by-span listing of the longitudinal bars selected in column, middle and beam strips. This reinforcement schedule is intended as a guide for bar placement. In more complex cases the bar schedule selected by the program may have to be adjusted by the user for constructability reasons. The selected bar sizes are limited by user specified minimum and maximum sizes. Bar sizes and numbers are selected to satisfy the minimum and required steel areas in conjunction with the bar spacing requirements of the code. The program calculates the bar lengths based on the computed inflection points and the recommended minima of the code. The bar lengths are adjusted by appropriate development lengths. Hooks and bends are not included in bar length tables and figures. For beams bars are placed in single a layer (see Figure 2-21), provided there is sufficient beam width. For a detailed discussion, see Chapter 4, "Reinforcement Selection".

Note: This block does not include additional reinforcement bars necessary to transfer negative unbalanced moment at supports.

5.4.4 Band Reinforcement at Supports

Available only when the CSA code is selected, this section describes how the negative reinforcement in column strips should be concentrated over supports. It reports the total width of the strip from which reinforcement is concentrated, the width of the b_b band, and the remaining width. The total width of the subdivided strip will be equal to the column strip width when no wide beams (width greater than b_b) and no slab bands are present. If either one is present then its width will be used. If a beam narrower than b_b frames into an exterior support then both the total strip width and the b_b width will be reduced to the beam width.

The section also gives the area of reinforcement and the number of bars required in each strip. The sum of number of bars in the band strip and in the remaining strip should be equal to the total number of bars over each support in the strip from which the bars were concentrated. The total number of bars in this strip should also be consistent with the number of bars listed in the Top Bar Details table.

Note: This output block does not include additional reinforcement bars necessary to transfer negative unbalanced moment at supports.

5.4.5 Bottom Reinforcement

This block is available only when Design Mode is selected. It reports the positive reinforcement requirements. The block contains the values of corresponding design strip widths (column, middle, and beam), maximum factored design moments per strip and critical location, minimum and maximum steel areas, spacing for bars selected based on required reinforcement area, steel areas required by ultimate condition, selected bar sizes and numbers. The quantities are given for mid-span regions of each span. For a detailed discussion, see Chapter 2, “Area of Reinforcement”.

5.4.6 Bottom Bar Details - Bottom Bar Development Lengths

This block contains a span-by-span listing of the longitudinal bars selected in column, middle and beam strips. The reinforcement schedule is intended as a guide for bar placement. In more complex cases the bar schedule selected by the program may have to be adjusted by the user for constructability reasons. The selected bar sizes are limited by user specified minimum and maximum sizes. Bar sizes and numbers are selected to satisfy the minimum and required steel areas in conjunction with the bar spacing requirements of the code. The program calculates the bar lengths based on the computed inflection points and the recommended minimums of the code. The bar lengths are adjusted by appropriate development lengths. Bottom bar development lengths are tabulated directly below the bottom bar details block. Hooks and bends are not included in bar length tables and figures. For beams bars are placed in single a layer (see Figure 2-21), provided there is sufficient beam width. For a detailed discussion, see Chapter 2, “Reinforcement Selection”.

5.4.7 Flexural Capacity

This block lists the selected top and bottom steel areas and corresponding negative and positive moment capacity values in each span. The data is subdivided between column, middle and beam strips. Each span is subdivided into segments reflecting the changes in geometry and bar placement.

5.4.8 Longitudinal Beam Shear Reinforcement Required

This block is available only when Design Mode is selected. It reports the requirements of transverse reinforcement for each longitudinal beam. The capacity of concrete cross-section ΦV_c in each span is shown. The table contains the segmental values of the factored shear force V_u and required intensity of stirrups (A_v/s). The segmental values cover the distance between left and right critical sections, and include locations where there is change of geometry of loading.

5.4.9 Longitudinal Beam Shear Reinforcement Details

This block is available only when Design Mode is selected. It is intended as a guide for stirrup placement. The output presents the program selected stirrup sizes, numbers, and spacing. Distances between groups of stirrups are also reported.

5.4.10 Beam Shear (and Torsion) Capacity

If torsion is not considered then this block lists the concrete section shear capacity ΦV_c , selected stirrup intensities and spacing, and corresponding beam shear capacity ΦV_n values in each span. For CSA A23.3-14/04 code, the program additionally reports value of factor β . The maximum factored shear forces V_u in beam strip along the span is also reported.

In the case of combined shear and torsion analysis (beams/one-way slab systems only), this block lists section properties, shear and torsion transverse reinforcement capacity, and longitudinal torsional reinforcement capacity. The provided and required capacities are expressed in terms of the provided and required areas of reinforcement.

5.4.11 Slab Shear Capacity

This block lists the values of one-way slab shear capacity ΦV_c in each span. For CSA A23.3-04 code, the program additionally reports value of factor β . The maximum factored shear force V_u and the location of the critical section X_u are also reported.

5.4.12 Flexural Transfer of Unbalanced Moments at Supports

There are two blocks reporting the design values for additional reinforcement necessary to transfer unbalanced support moments. One block is for negative unbalanced moments and the other for positive unbalanced moment. These blocks contain the results for critical (effective) section width as per the code, width of the effective section on the tension side (for negative unbalanced moments) or on the compression side (for positive unbalanced moments), distances to the centroids of tension and compression reinforcement (if compression reinforcement option is selected), the maximum negative or positive unbalanced moment, the corresponding load combination and governing load pattern, the reinforcing steel areas provided and additional steel required. The provided reinforcement area (main longitudinal bars) is reduced by the ratio of critical (effective) strip width to total strip width and does not include the required area due to unbalanced moments. The additional reinforcement is the difference between that required by unbalanced moment transfer by flexure and that provided for design bending moment. When additional reinforcement is required, it is selected based on the bar sizes already provided at the support. For a detailed discussion, see Chapter 2, "Area of Reinforcement" and "Additional Reinforcement at Support".

5.4.13 Punching Shear Around Columns

The block contains two tables with values pertaining to punching shear check in critical sections around the columns. The first table lists geometrical properties of punching shear critical section. The reported properties of the critical section are overall dimensions in the direction of analysis, b_1 , and in the perpendicular direction, b_2 , perimeter, b_0 , location of centroid with respect to column center line, d_{avg} , average distance from the slab bottom to centroid of the slab tension reinforcement, CG, distance from centroid to the left, c_{left} and right, c_{right} edge of critical section, area of concrete resisting shear transfer, A_c , and moment of inertia of critical section, J_c . The second table lists two sets of punching shear calculations – direct shear alone and direct shear with moment transfer. The output contains the values of the allowable shear stress Φv_c , reactions V_u , unbalanced moments M_{unb} , governing load pattern, fraction of unbalanced moment ΦV , punching shear stress v_u . The calculation for moment transfer adjusts the unbalanced moment to the centroid of the critical section. The "shear transfer" is the unbalanced moment multiplied by γ_v . When calculated shear stress v_u exceeds the allowable value Φv_c , the program prints a warning flags for this support. For a detailed discussion, see Chapter 2, "Shear Analysis of Slabs".

5.4.14 Punching Shear Around Drops

The block contains two tables with values pertaining to punching shear check in a critical section around the drop panels. The first table lists geometrical properties of punching shear critical section (see description in the Punching shear around Columns block). The second table displays the reactions V_u , governing load pattern, the punching shear stress around the drop v_u , and the allowable shear stress Φv_c . When calculated shear stress v_u exceeds the allowable value Φv_c , the program prints a warning flags for this drop panel. For a detailed discussion, see Chapter 2, "Shear Analysis of Slabs".

5.4.15 Integrity Reinforcement at Supports

This section is available only when the CSA code is selected. It lists the shear transferred to the column and the minimum area of bottom reinforcement crossing one face of the periphery of a column and connecting slab to the column to provide structural integrity. For a detailed discussion, see Chapter 2, "Integrity Reinforcement".

5.4.16 Corner Reinforcement

This block refers to the reinforcement required in the exterior corners of a slab with beams between columns. The ratio of flexural stiffness of beam section to flexural stiffness of slab is listed as well as the area of reinforcement and the distance over which the reinforcement is required. The area applies to each layer of reinforcement in each direction. For a detailed discussion, see Chapter 2, "Slab Corners".

5.4.17 Shear Resistance at Corner Columns

This section is available only when the CSA code is selected in design mode. It reports results of one-way shear check at corner columns. The results include the factored shear resistance and the factored shear force at the column. Also, the minimum length of the critical shear section and, for the 1994 edition, the angle at which the minimum length is obtained are listed. For a detailed discussion, see Chapter 2, "Shear Resistance at Corner Columns" in "Shear Analysis of Slabs".

5.4.18 Material Takeoff

This block lists the approximate total and unit quantities of concrete, and reinforcement. Note that the reinforcement estimate is for one direction only and ignores items such as hooks, bends, and waste. For a detailed discussion, see Chapter 2, "Material Quantities".

5.5 Deflection Results: Summary

Section Deflection Results presents the summary of the deflection results of the slab system. This section lists the summary of frame section properties, for positive and negative moments, frame effective section properties for load levels, strip section properties at midspan (two-way systems only), instantaneous deflections and long-term deflections, if they are selected in solve options. Also, if a solution option "Gross (uncracked) sections" is selected, only gross moment of inertia, I_g , is reported in the section properties table and the values of all deflections reported are based on gross section properties. If solution option "Effective (cracked) sections" is used, the values of deflections reported are based on averaged effective moments of inertia, $I_{e,avg}$, which are then reported in the section properties table together with other properties of cracked sections. For a detailed discussion, see Chapter 2, "Deflection Calculation".

5.6 Detailed Results

5.6.1 Column Forces and Redistributed Column Forces

Sections Column Forces and Redistributed Column Forces present the summary of axial forces (reactions) and bending moments in bottom and top columns and in springs attached to the column-slab joints. Also, moments at far ends of columns are reported. All reported values represent forces and moments at column ends, i.e. at joint level (not at slab or drop panel surface level). If moment redistribution is selected (beams/one-way slab systems only) both redistributed and un-redistributed values can be included. The values reported represent the loading of a single floor only. Any actions on the columns from the floors above

must be added to this story's actions to properly analyze/design the columns. The output contains column axial forces and moments due to all load cases, including all live load patterns, and all load combinations. Positive axial forces mean compression and positive moments mean that fibers on the left hand side are in tension for top columns and for bottom column fibers on the right hand side are in tension. Also, reactions of additional translational and rotational springs applied at joints are reported in this block. Positive values mean upward translational spring reaction and clockwise rotational spring reaction.

5.6.2 Non – Redistributed and Redistributed Internal Forces: M – V

Load Cases

This section presents the summary of unfactored bending moments and shear forces for individual load cases including selfweight, dead load, live load and lateral cases. The reported values are presented using span-by-span segmental approach. If moment redistribution is selected (beams/one-way slab systems only) both redistributed and un-redistributed values can be included.

Load Combinations

This section presents the summary of bending moments and shear forces for each load combination. The reported values for each load combination are presented using span-by-span segmental approach. The negative and positive values of bending moments and shear forces are presented in separate columns in order to provide consistent format with enveloped output. If moment redistribution is selected (beams/one-way slab systems only) both redistributed and un-redistributed values can be included.

Envelopes

This section presents the summary of bending moments and shear forces for envelope of all load combinations. The reported values are presented using span-by-span segmental approach. The negative and positive values of bending moments and shear forces are presented in separate columns for user convenience. The factored values presented in this section are used for design purposes (longitudinal and transverse reinforcement). If moment redistribution is selected (beams/one-way slab systems only) both redistributed and un-redistributed values can be included.

This section presents the summary of unfactored bending moments and shear forces for individual load cases including selfweight, dead load, live load and lateral cases. The reported values are presented using span-by-span segmental approach. If moment redistribution is selected (beams/one-way slab systems only) both redistributed and un-redistributed values can be included.

5.6.3 Internal Forces: T

Load Cases

This section presents the summary of unfactored beam torsion forces (beams/one-way slab systems with torsion analysis and design only) for individual load cases including selfweight, dead

load, live load and lateral cases. The reported values are presented using span-by-span segmental approach.

Load Combinations

This section presents the summary of beam torsion forces (beams/one-way slab systems with torsion analysis and design only) for each load combination. The reported values for each load combination are presented using span-by-span segmental approach. The negative and positive values of torsion forces are presented in separate columns in order to provide consistent format with enveloped output.

Envelopes

This section presents the summary of beam torsion forces (beams/one-way slab systems with torsion analysis and design only) for envelope of all load combinations. The reported values are presented using span-by-span segmental approach. The negative and positive values of torsion forces are presented in separate columns for user convenience. The factored values presented in this section are used for design purposes (longitudinal and transverse reinforcement).

5.6.4 Deflections - Load Cases

This section presents the summary of instantaneous deflections for unfactored (service) load cases including selfweight and dead load (DL), live load (LL), sustained load (DL+LLsustained), and total load (DL+LL) cases, and summary of long-term deflections for unfactored incremental and total deflections for one-way systems. For two-way systems, instantaneous frame deflections for fixed-end, end-rotation, and total (fixed-end and end rotation combined), instantaneous strip deflections, and long-term strip deflections. The reported values are presented using span-by-span segmental approach. For a detailed discussion, see Chapter 2, "Deflection Calculation".

5.6.5 Required Reinforcement

This section presents the summary of enveloped design moments and the required areas of longitudinal reinforcement required for flexure. If combined M-V-T option (available only for beam design/investigation per CSA A23.3-04) is selected in the **Solve Option** window then longitudinal reinforcement required for combined flexure, shear, and torsion (M-V-T) is also reported with the corresponding values of bending moment, shear force, and torsional moment. The values are tabulated for every design strip at every design segment.

5.7 Graphical Output

spSlab provides the following graphical output features:

- Diagrams of Internal Forces,

- Moment (and longitudinal reinforcement capacity due to combined M-V-T action, available only for beams designed/investigated per CSA A23.3-14/04) Capacity Diagram,
- Shear (and Torsion) Capacity Diagram,
- Deflection Diagram,
- Reinforcement Diagram.

These diagram windows can be customized. The **Options** dialog allows selecting either a single span or all spans. Other elements of the graphs can also be modified. spSlab print preview of the current graphical window. The user has also the choice to export the graphics to a metafile or bitmap file.

Detailed information on using the graphical output features is included in chapter "Operating the Program".

CHAPTER

6

EXAMPLES

6.1	Example 1 Spandrel Beam with Moment Redistribution	226
6.1.1	Problem Formulation	226
6.1.2	Preparing Input	227
6.1.3	Assigning Properties	227
6.1.4	Solving	232
6.1.5	Viewing and Printing Results	233
6.2	Example 2 Spandrel Beam with Torsion	249
6.2.1	Problem Formulation	249
6.2.2	Preparing Input	250
6.2.3	Assigning Properties	251
6.2.4	Solving	257
6.2.5	Viewing and Printing Results	258
6.3	Example 3 Design of a Continuous Beam	274
6.3.1	Problem Formulation	274
6.3.2	Preparing Input	275
6.3.3	Assigning Properties	275
6.3.4	Solving	281
6.3.5	Viewing and Printing Results	282
6.4	Example 4 Flat Plate Floor System	301
6.4.1	Problem Formulation	301
6.4.2	Preparing Input	302
6.4.3	Assigning Properties	302
6.4.4	Solving	307
6.4.5	Viewing and Printing Results	308
6.5	Example 5 Two-way Slab System	327

6.5.1 Problem Formulation	327
6.5.2 Preparing Input	328
6.5.3 Assigning Properties	328
6.5.4 Solving	334
6.5.5 Viewing and Printing Results	334

In this chapter several examples are presented to demonstrate capabilities of the program. Generally program results match closely the results found in the referenced text books. When discrepancies are observed, they result from variations in assumptions and solutions methods, and numerical accuracy.

Both beams/one-way slab systems as well as two-way slab systems are presented in the examples. The output of beams/one-way slab examples shows that spBeam program was used to solve them. This is to illustrate that spBeam program is available as a limited version of spSlab including only beams/one-way slab capabilities.

6.1 Example 1 Spandrel Beam with Moment Redistribution

6.1.1 Problem Formulation

Determine the required reinforcement for the spandrel beam at an intermediate floor level as shown, using moment redistribution to reduce total reinforcement required. (Note: the self weight is already included in the specified dead load below.) This example refers to Example 8-2 from *PCA Notes on ACI 318 Building Code Requirements for Structural Concrete*.

Columns:	16 × 16 in.
Story height:	10 ft
Spandrel beam:	12 × 16 in.
f'_c	= 4000 psi
f_y	= 60,000 psi
DL	= 1167 lb/ft
LL	= 450 lb/ft



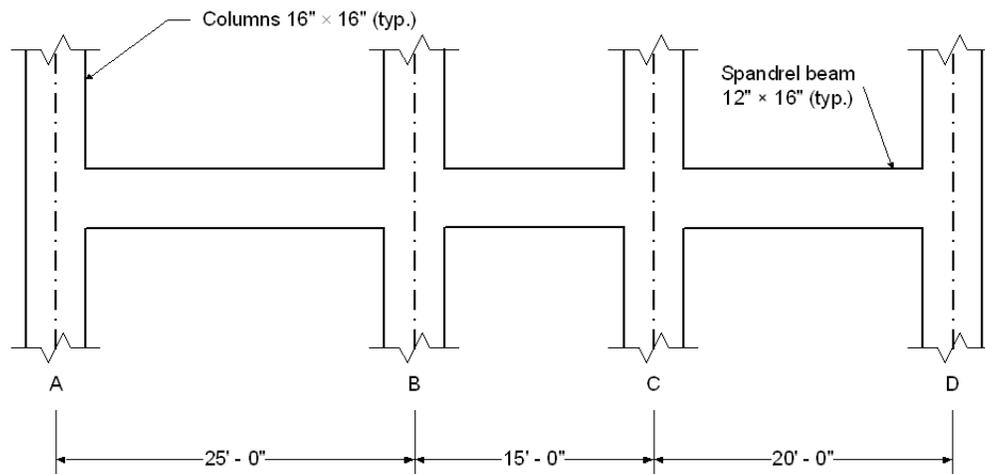


Figure 6.1 Example spandrel beam problem


6.1.2 Preparing Input

1. From the **Input** menu, select **General Information**. A dialog box appears.
 - In the LABELS section, input the names of the project, frame, and engineer.
 - In the FRAME section, input 4 for NO OF SUPPORTS.
 - In the FLOOR SYSTEM section, click the radial button next to ONE WAY / BEAM.
 - Leave all other options in the **General Information** tab to their default settings of ACI 318-14 design code, ASTM A615 reinforcement, and DESIGN run mode option.
 - In the **Solve Options** tab, click the check box next to MOMENT REDISTRIBUTION. Press OK.

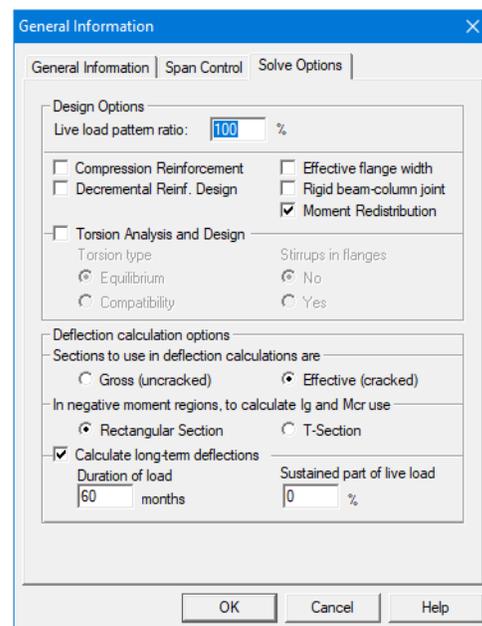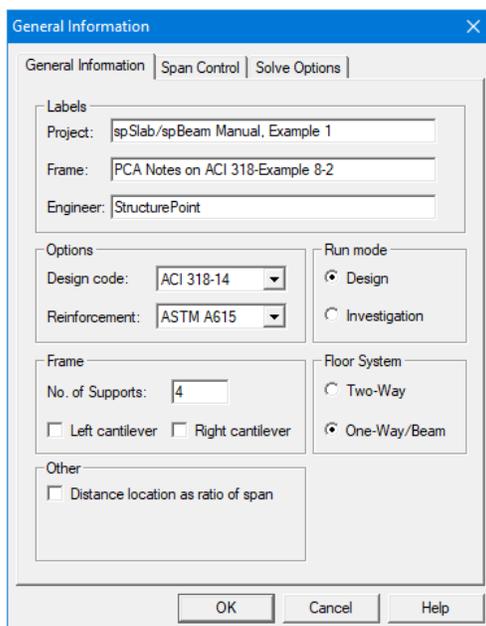



6.1.3 Assigning Properties

2. Nothing needs to be changed in the **Material Properties** dialog box.


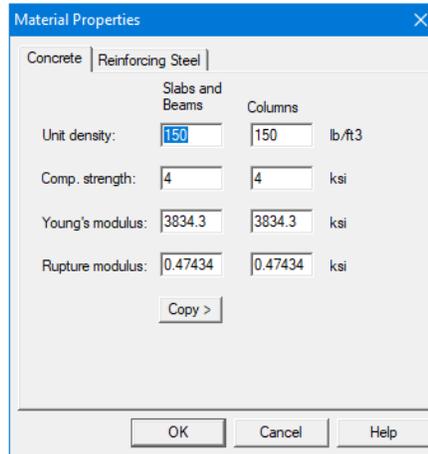


3. From the **Input** menu, select **Spans**. A dialog box appears.


- Under the **Slabs/Flanges** tab, input 25 for LENGTH, 0 for THICKNESS, and 0 for WIDTH LEFT and WIDTH RIGHT. Press MODIFY.
- Press the drop down arrow next to SPAN and select Span 2. Input 15 for LENGTH, 0 for THICKNESS, and 0 for WIDTH LEFT and WIDTH RIGHT. Press MODIFY.
- Press the drop down arrow next to SPAN and select Span 3. Input 20 for LENGTH, 0 for THICKNESS, and 0 for WIDTH LEFT and WIDTH RIGHT. Press MODIFY.
- Select the **Longitudinal Beams** tab. Input 12 for WIDTH and 16 for DEPTH. Press MODIFY.
- Press COPY. Press the CHECK ALL button. Press OK.
- Press OK again.

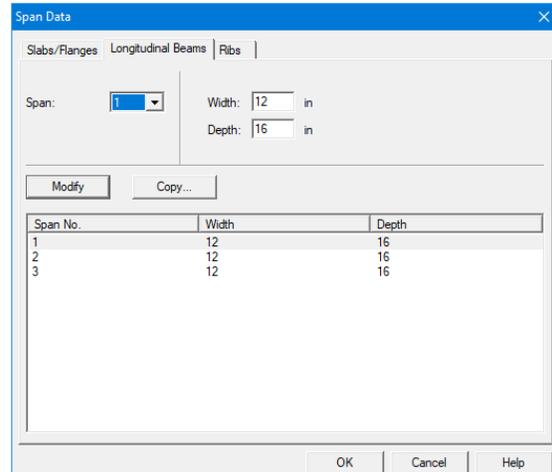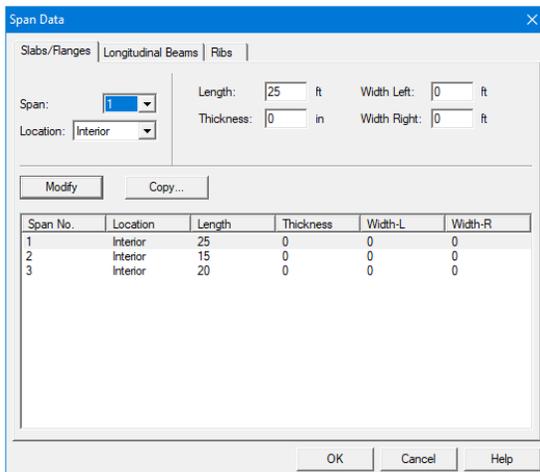


4. From the **Input** menu, select **Supports**. A dialog box appears.
 - Under the **Columns** tab, input 16 for both the c1 and c2 values in both the ABOVE and BELOW rows. Press MODIFY. (Note: the default HEIGHT ABOVE and HEIGHT BELOW values of 10 are correct.)
 - Press COPY. Press the CHECK ALL button. Press OK.
 - Under the **Moment Redistribution** tab, click on SUPPORT 2 in the list in the bottom half of the SUPPORT DATA dialog box.
 - Input 20 for both the LEFT and RIGHT REDISTRIBUTION LIMITS. Press MODIFY.
 - Press COPY. Click the check box next to SPAN 3. Press OK.
 - Press OK again.

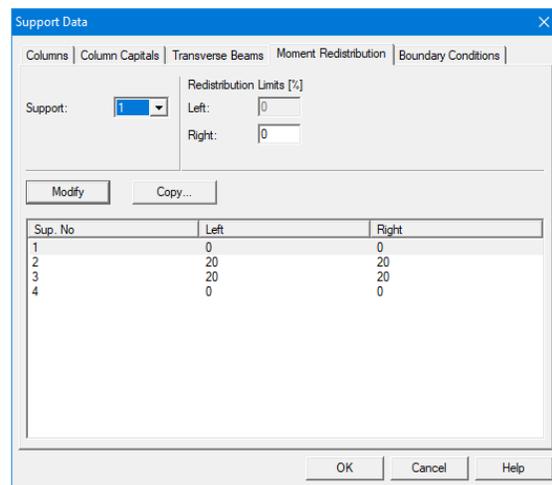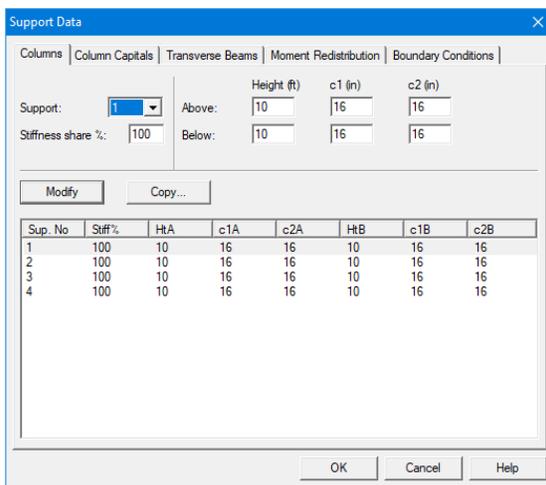


5. From the **Input** menu, select **Reinforcement Criteria**. A dialog box appears.
 - Under the **Beams** tab, select #8 for MAX BAR SIZE for TOP BARS and BOTTOM BARS.
 - Press OK.

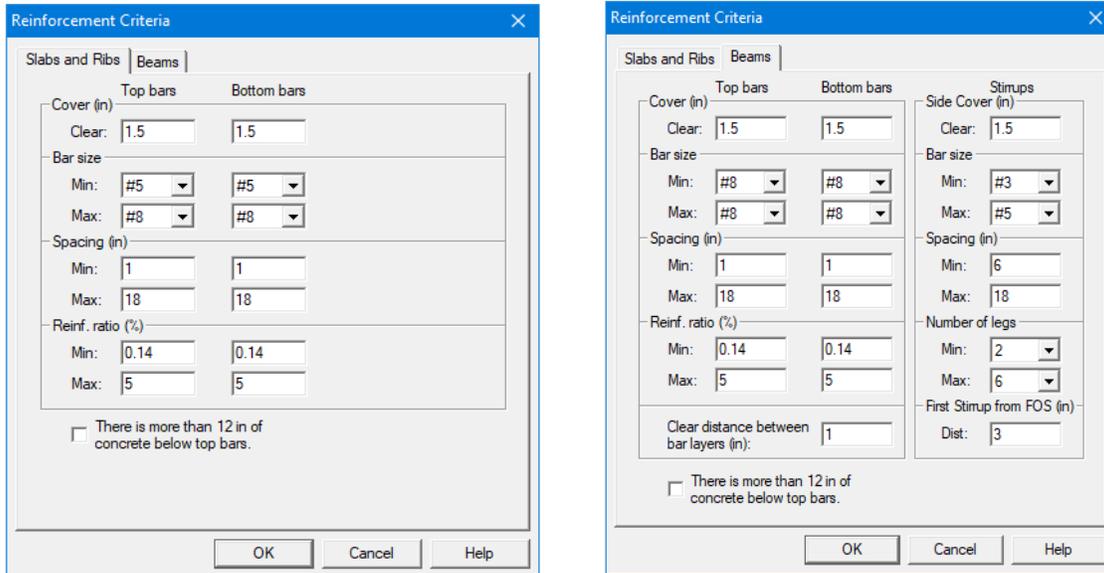


6. From the **Input** menu, select **Load Cases**. A dialog box appears.
 - Since we are not considering lateral forces, click on WIND in the LABEL column on the list in the bottom half of the LOAD CASES dialog box and press the DELETE button.
 - Click on EQ in the LABEL column and press the DELETE button. Press OK.

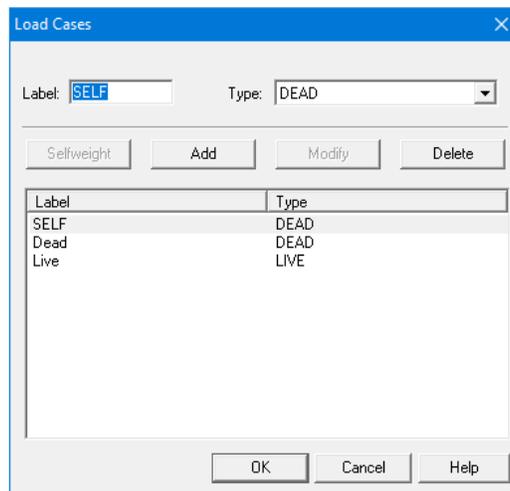


7. From the **Input** menu, select **Load Combinations**. A dialog box appears.
 - Delete all the load combinations by clicking anywhere on the list in the bottom half of the LOAD COMBINATIONS dialog box and pressing the DELETE button. Repeat this procedure until all the load combinations are gone.
 - Input 0 in the SELF field, 1.2 in the DEAD field, and 1.6 in the LIVE field. Press ADD.
 - Press OK.

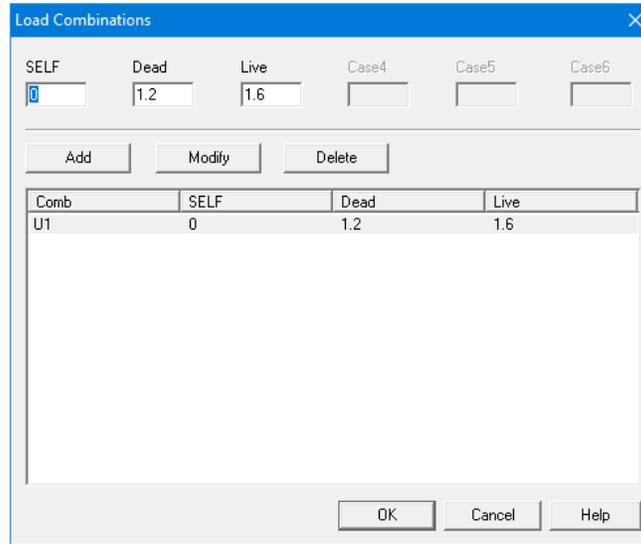

8. From the **Input** menu, select **Span Loads**. A dialog box appears.
 - Press the drop down arrow next to TYPE, and select LINE LOAD.
 - Input 11 67 for both the START and END MAGNITUDE.
 - Input 25 for the END LOCATION. Press ADD.
 - Use the drop down arrow next to SPAN to select SPAN 2. Keep the START and END MAGNITUDES of 11 67 lb/ft but change the END LOCATION to 15. Click the ADD button.
 - Again use the drop down arrow next to SPAN to select SPAN 3. Keep the START and END MAGNITUDES of 11 67 lb/ft but change the END LOCATION to 20. Click the ADD button

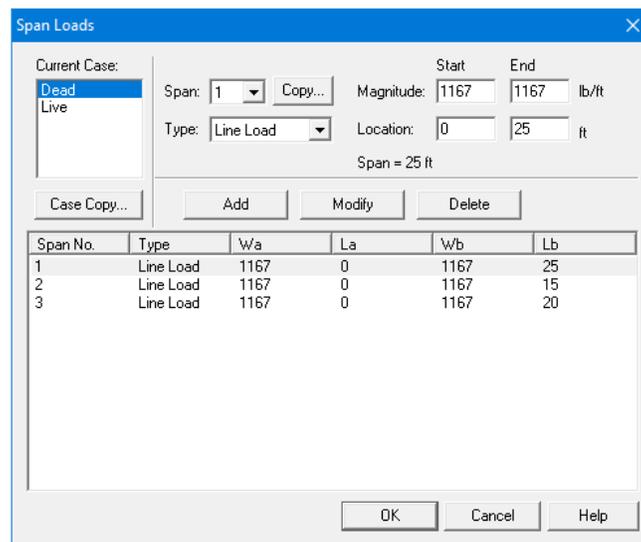

9. In the top left corner of the SPAN LOADS dialog box, there is a section called CURRENT CASE. Click on LIVE.
 - Use the drop down arrow next to SPAN to select SPAN 1.
 - Making sure that LINE LOAD is still the selected LOAD TYPE, input 450 for both the START and END MAGNITUDE.
 - Input 25 for the END LOCATION. Press ADD.
 - Use the drop down arrow next to SPAN to select SPAN 2. Keep the START and END MAGNITUDES of 450 lb/ft but change the END LOCATION to 15. Click the ADD button.
 - Again use the drop down arrow next to SPAN to select SPAN 3. Keep the START and END MAGNITUDES of 11 67 lb/ft but change the END LOCATION to 20. Click the ADD button
 - Press OK.

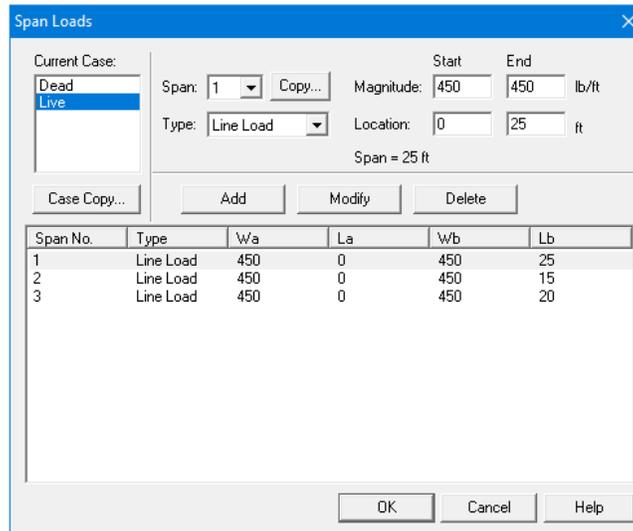

6.1.4 Solving


10. From the **Solve** menu, select **Execute**. Press CLOSE.
11. From the **Solve** menu, select **Results**.
 - Use the explorer to browse through the results tables.
 - Use the ARROW keys or the mouse wheel to browse through different parts of the table quickly. Press the CLOSE button to close the SPRESULTS.

6.1.5 Viewing and Printing Results

12. To view diagrams, select **Loads, Internal Forces, Moment Capacity, Shear Capacity, Deflection, or Reinforcement** from the **View** menu. Right click in any of these diagrams to get new copy, printing, or display options.
13. You may print the results report by using the spReporter module. To print any of the diagrams you selected to view, use the **Print Preview** command found by right clicking in the diagram's window. After viewing the results, you may decide to investigate the input beams under the same loads but with a modified reinforcement configuration.
14. From the **Input** menu, select **General Information**. In the **General Information** dialog box change the RUN MODE option to INVESTIGATION. Do not change any of the other options. Press OK
15. From the **Input** menu, select the different commands under **Reinforcement Criteria** and **Reinforcing Bars** to modify the reinforcement configuration computed by the program.
16. Repeat steps 10 and subsequent to perform the investigation and view the results.



spSlab v5.50 Debug - Mar 29 2018
A Computer Program for Analysis, Design, and Investigation of
Reinforced Concrete Beams, One-way and Two-way Slab Systems
Copyright - 1988-2018, STRUCTUREPOINT, LLC.
All rights reserved

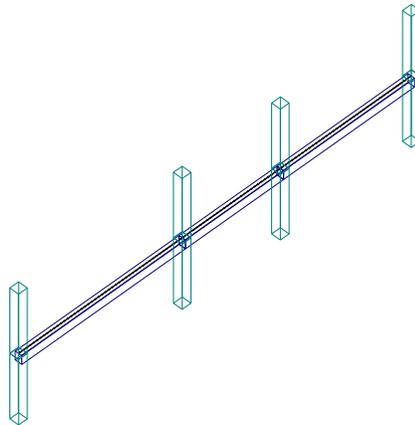

StructurePoint

Licensee stated above acknowledges that STRUCTUREPOINT (SP) is not and cannot be responsible for either the accuracy or adequacy of the material supplied as input for processing by the spSlab computer program. Furthermore, STRUCTUREPOINT neither makes any warranty expressed nor implied with respect to the correctness of the output prepared by the spSlab program. Although STRUCTUREPOINT has endeavored to produce spSlab error free the program is not and cannot be certified infallible. The final and only responsibility for analysis, design and engineering documents is the licensee's. Accordingly, STRUCTUREPOINT disclaims all responsibility in contract, negligence or other tort for any analysis, design or engineering documents prepared in connection with the use of the spSlab program. Licensed to: -- Unknown User --. License ID: 00000-0000000

Contents

1. Input Echo.....	3
1.1. General Information.....	3
1.2. Solve Options.....	3
1.3. Material Properties.....	3
1.3.1. Concrete: Slabs / Beams.....	3
1.3.2. Concrete: Columns.....	3
1.3.3. Reinforcing Steel.....	3
1.4. Reinforcement Database.....	4
1.5. Span Data.....	4
1.5.1. Slabs.....	4
1.5.2. Ribs and Longitudinal Beams.....	4
1.6. Support Data.....	4
1.6.1. Columns.....	4
1.6.2. Moment Redistribution Limits.....	4
1.6.3. Boundary Conditions.....	4
1.7. Load Data.....	5
1.7.1. Load Cases and Combinations.....	5
1.7.2. Line Loads.....	5
1.8. Reinforcement Criteria.....	5
1.8.1. Slabs and Ribs.....	5
1.8.2. Beams.....	5
2. Design Results.....	6
2.1.1. Moment Redistribution Factors.....	6
2.2. Top Reinforcement.....	6
2.3. Top Bar Details.....	6
2.4. Top Bar Development Lengths.....	7
2.5. Bottom Reinforcement.....	7
2.6. Bottom Bar Details.....	7
2.7. Bottom Bar Development Lengths.....	7
2.8. Flexural Capacity.....	7
2.9. Longitudinal Beam Transverse Reinforcement Demand and Capacity.....	8
2.9.1. Section Properties.....	8
2.9.2. Beam Transverse Reinforcement Demand.....	9
2.9.3. Beam Transverse Reinforcement Details.....	9
2.9.4. Beam Transverse Reinforcement Capacity.....	9
2.10. Slab Shear Capacity.....	10
2.11. Material TakeOff.....	10
2.11.1. Reinforcement in the Direction of Analysis.....	10

1. Input Echo

1.1. General Information

File Name	...\Example 1 - PCA Notes on ACI 318-Example 8...
Project	spSlab/spBeam Manual, Example 1
Frame	PCA Notes on ACI 318-Example 8-2
Engineer	StructurePoint
Code	ACI 318-14
Reinforcement Database	ASTM A615
Mode	Design
Number of supports =	4
Floor System	One-Way/Beam

1.2. Solve Options

Live load pattern ratio = 100%
Deflections are based on cracked section properties.
In negative moment regions, I_g and M_{cr} DO NOT include flange/slab contribution (if available)
Long-term deflections are calculated for load duration of 60 months.
0% of live load is sustained.
Compression reinforcement calculations NOT selected.
Default incremental rebar design selected.
Moment redistribution selected.
Effective flange width calculations NOT selected.
Rigid beam-column joint NOT selected.
Torsion analysis and design NOT selected.

1.3. Material Properties

1.3.1. Concrete: Slabs / Beams

w_c	150 lb/ft ³
f'_c	4 ksi
E_c	3834.3 ksi
f_r	0.474342 ksi

1.3.2. Concrete: Columns

w_c	150 lb/ft ³
f'_c	4 ksi
E_c	3834.3 ksi
f_r	0.47434 ksi

1.3.3. Reinforcing Steel

f_y	60 ksi
f_{yt}	60 ksi
E_s	29000 ksi
Epoxy coated bars	No

STRUCTUREPOINT - spSlab v5.50 Debug - Mar 29 2018
 Licensed to: -- Unknown User --. License ID: 00000-0000000
 C:\Program Files (x86)\StructurePoint\spSlab\Ex...\Example 1 - PCA Notes on ACI 318-Example 8-2.slb

Page | 5
 3/30/2018
 11:14 AM

Support	Spring		Far End	
	K _z kip/in	K _{ry} kip-in/rad	Above	Below
2	0	0	Fixed	Fixed
3	0	0	Fixed	Fixed
4	0	0	Fixed	Fixed

1.7. Load Data

1.7.1. Load Cases and Combinations

Case Type	SELF DEAD	Dead DEAD	Live LIVE
U1	0.000	1.200	1.600

1.7.2. Line Loads

Case/Patt	Span	Wa lb/ft	La ft	Wb lb/ft	Lb ft
SELF	1	200.00	0.000	200.00	25.000
	2	200.00	0.000	200.00	15.000
	3	200.00	0.000	200.00	20.000
Dead	1	1167.00	0.000	1167.00	25.000
	2	1167.00	0.000	1167.00	15.000
	3	1167.00	0.000	1167.00	20.000
Live	1	450.00	0.000	450.00	25.000
	2	450.00	0.000	450.00	15.000
	3	450.00	0.000	450.00	20.000
Live/Odd	1	450.00	0.000	450.00	25.000
	3	450.00	0.000	450.00	20.000
Live/Even	2	450.00	0.000	450.00	15.000
Live/S1	1	450.00	0.000	450.00	25.000
	2	450.00	0.000	450.00	15.000
Live/S2	1	450.00	0.000	450.00	25.000
	2	450.00	0.000	450.00	15.000
Live/S3	2	450.00	0.000	450.00	15.000
	3	450.00	0.000	450.00	20.000
Live/S4	3	450.00	0.000	450.00	20.000

1.8. Reinforcement Criteria

1.8.1. Slabs and Ribs

	Units	Top Bars		Bottom Bars	
		Min.	Max.	Min.	Max.
Bar Size		#5	#8	#5	#8
Bar spacing	in	1.00	18.00	1.00	18.00
Reinf ratio	%	0.14	5.00	0.14	5.00
Clear Cover	in	1.50		1.50	

There is NOT more than 12 in of concrete below top bars.

1.8.2. Beams

	Units	Top Bars		Bottom Bars		Stirrups	
		Min.	Max.	Min.	Max.	Min.	Max.
Bar Size		#8	#8	#8	#8	#3	#5
Bar spacing	in	1.00	18.00	1.00	18.00	6.00	18.00
Reinf ratio	%	0.14	5.00	0.14	5.00		
Clear Cover	in	1.50		1.50			

STRUCTUREPOINT - spSlab v5.50 Debug - Mar 29 2018
 Licensed to: -- Unknown User --, License ID: 00000-0000000
 C:\Program Files (x86)\StructurePoint\spSlab\Ex...\Example 1 - PCA Notes on ACI 318-Example 8-2.slb

Page | 6
 3/30/2018
 11:14 AM

	Units	Top Bars		Bottom Bars		Stirrups	
		Min.	Max.	Min.	Max.	Min.	Max.
Layer dist.	in	1.00		1.00			
No. of legs						2	6
Side cover	in					1.50	
1st Stirrup	in					3.00	

There is NOT more than 12 in of concrete below top bars.

2. Design Results

2.1.1. Moment Redistribution Factors

Support	Side	Org. M_u k-ft	Calculated			User Limit %	Applied Factor %
			Iter.#	ϵ_t	Factor		
1	Right	83.53	7	0.01796	17.96	0.00	0.00
2	Left	91.92	6	0.01526	15.26	20.00	15.26
2	Right	41.57	2	0.04168	20.00	20.00	20.00
3	Left	32.97	2	0.05368	20.00	20.00	20.00
3	Right	57.21	2	0.02909	20.00	20.00	20.00
4	Left	49.30	2	0.03446	20.00	0.00	0.00

2.2. Top Reinforcement

Notes:

*3 - Design governed by minimum reinforcement.

Span Zone	Width ft	M_{max} k-ft	X_{max} ft	$A_{s,min}$ in ²	$A_{s,max}$ in ²	$A_{s,req}$ in ²	$S_{p,prov}$ in	Bars
1 Left	1.00	83.10	0.667	0.560	3.035	1.426	6.311	2-#8
Midspan	1.00	0.00	12.500	0.000	3.035	0.000	0.000	---
Right	1.00	75.67	24.333	0.560	3.035	1.288	6.311	2-#8
2 Left	1.00	31.23	0.667	0.560	3.035	0.509	6.311	2-#8 *3
Midspan	1.00	0.00	7.500	0.000	3.035	0.000	0.000	---
Right	1.00	24.35	14.333	0.525	3.035	0.395	6.311	2-#8 *3
3 Left	1.00	43.45	0.667	0.560	3.035	0.717	6.311	2-#8
Midspan	1.00	0.00	10.000	0.000	3.035	0.000	0.000	---
Right	1.00	48.84	19.333	0.560	3.035	0.810	6.311	2-#8

2.3. Top Bar Details

NOTES:

* - Bar cut-off location does not meet ACI 318, 12.10.5.1. Revise location, unless the requirements of either 12.10.5.2 or 12.10.5.3 are manually checked and satisfied.

Span	Bars	Left		Continuous		Right			
		Length ft	Bars	Length ft	Bars	Length ft	Bars	Length ft	Bars
1	1-#8	6.13	1-#8 *	3.34	---	1-#8	5.88	1-#8 *	3.08
2	1-#8	4.82	1-#8 *	1.83	---	1-#8	4.32	1-#8 *	1.83
3	1-#8	4.57	1-#8 *	2.01	---	1-#8	4.82	1-#8 *	2.19

2.4. Top Bar Development Lengths

Span	Left				Continuous		Right			
	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in
1	1-#8	32.10	1-#8	32.10	---	---	1-#8	29.01	1-#8	29.01
2	1-#8	12.00	1-#8	12.00	---	---	1-#8	12.00	1-#8	12.00
3	1-#8	16.14	1-#8	16.14	---	---	1-#8	18.23	1-#8	18.23

2.5. Bottom Reinforcement

Notes:
 *3 - Design governed by minimum reinforcement.

Span	Width ft	M _{max} k-ft	X _{max} ft	A _{s,min} in ²	A _{s,max} in ²	A _{s,req} in ²	Sp _{Prov} in	Bars
1	1.00	69.82	12.625	0.560	3.035	1.182	6.311	2-#8
2	1.00	25.96	7.624	0.560	3.035	0.421	6.311	2-#8 *3
3	1.00	47.12	9.876	0.560	3.035	0.780	6.311	2-#8

2.6. Bottom Bar Details

Span	Long Bars			Short Bars		
	Bars	Start ft	Length ft	Bars	Start ft	Length ft
1	2-#8	0.00	25.00	---	---	---
2	2-#8	0.00	15.00	---	---	---
3	2-#8	0.00	20.00	---	---	---

2.7. Bottom Bar Development Lengths

Span	Long Bars		Short Bars	
	Bars	DevLen in	Bars	DevLen in
1	2-#8	26.61	---	---
2	2-#8	12.00	---	---
3	2-#8	17.56	---	---

2.8. Flexural Capacity

Span	x ft	Top					Bottom				
		A _{s,top} in ²	ΦM _{n-} k-ft	M _{u-} k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _{n+} k-ft	M _{u+} k-ft	Comb Pat	Status
1	0.000	1.58	-91.28	-100.54	U1 Odd	---	1.58	91.28	0.00	U1 All	---
	0.222	1.58	-91.28	-94.62	U1 Odd	---	1.58	91.28	0.00	U1 All	---
	0.667	1.58	-91.28	-83.10	U1 Odd	OK	1.58	91.28	0.00	U1 All	OK
	3.342	0.79	-47.70	-22.57	U1 Odd	OK	1.58	91.28	0.00	U1 All	OK
	3.457	0.79	-47.70	-20.31	U1 Odd	OK	1.58	91.28	0.00	U1 All	OK
	6.132	0.00	0.00	0.00	U1 All	OK	1.58	91.28	24.64	U1 S2	OK
	8.950	0.00	0.00	0.00	U1 All	OK	1.58	91.28	55.09	U1 Odd	OK

Span	x ft	Top					Bottom				
		A _{s,top} in ²	ΦM _{n-} k-ft	M _{u-} k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _{n+} k-ft	M _{u+} k-ft	Comb Pat	Status
1	12.500	0.00	0.00	0.00	U1 All	OK	1.58	91.28	69.78	U1 Odd	OK
	12.625	0.00	0.00	0.00	U1 All	OK	1.58	91.28	69.82	U1 Odd	OK
	16.050	0.00	0.00	0.00	U1 All	OK	1.58	91.28	57.75	U1 Odd	OK
	19.117	0.00	0.00	0.00	U1 All	OK	1.58	91.28	25.84	U1 Odd	OK
	21.535	0.79	-47.70	-14.56	U1 S2	OK	1.58	91.28	0.00	U1 All	OK
	21.916	0.79	-47.70	-21.91	U1 S2	OK	1.58	91.28	0.00	U1 All	OK
	24.333	1.58	-91.28	-75.67	U1 S2	OK	1.58	91.28	0.00	U1 All	OK
	25.000	1.58	-91.28	-92.68	U1 S2	---	1.58	91.28	0.00	U1 All	---
2	0.000	1.58	-91.28	-41.95	U1 S2	---	1.58	91.28	0.00	U1 All	---
	0.667	1.58	-91.28	-31.23	U1 S2	OK	1.58	91.28	0.00	U1 All	OK
	0.833	1.58	-91.28	-28.71	U1 S2	OK	1.58	91.28	0.00	U1 All	OK
	1.833	0.79	-47.70	-14.74	U1 S2	OK	1.58	91.28	0.00	U1 All	OK
	3.815	0.79	-47.70	0.00	U1 All	OK	1.58	91.28	10.41	U1 S3	OK
	4.815	0.00	0.00	0.00	U1 All	OK	1.58	91.28	17.30	U1 Even	OK
	5.450	0.00	0.00	0.00	U1 All	OK	1.58	91.28	20.72	U1 Even	OK
	7.500	0.00	0.00	0.00	U1 All	OK	1.58	91.28	25.92	U1 Even	OK
	7.624	0.00	0.00	0.00	U1 All	OK	1.58	91.28	25.96	U1 Even	OK
	9.550	0.00	0.00	0.00	U1 All	OK	1.58	91.28	22.21	U1 Even	OK
	10.682	0.00	0.00	0.00	U1 All	OK	1.58	91.28	16.45	U1 S2	OK
	11.682	0.79	-47.70	0.00	U1 All	OK	1.58	91.28	9.53	U1 S2	OK
	13.167	0.79	-47.70	-8.94	U1 S3	OK	1.58	91.28	0.00	U1 All	OK
	14.167	1.58	-91.28	-21.98	U1 S3	OK	1.58	91.28	0.00	U1 All	OK
14.333	1.58	-91.28	-24.35	U1 S3	OK	1.58	91.28	0.00	U1 All	OK	
15.000	1.58	-91.28	-34.46	U1 S3	---	1.58	91.28	0.00	U1 All	---	
3	0.000	1.58	-91.28	-56.96	U1 S3	---	1.58	91.28	0.00	U1 All	---
	0.667	1.58	-91.28	-43.45	U1 S3	OK	1.58	91.28	0.00	U1 All	OK
	2.011	0.79	-47.70	-19.09	U1 S3	OK	1.58	91.28	0.00	U1 All	OK
	3.226	0.79	-47.70	-1.18	U1 Even	OK	1.58	91.28	1.03	U1 Odd	OK
	4.571	0.00	0.00	0.00	U1 All	OK	1.58	91.28	17.91	U1 Odd	OK
	7.200	0.00	0.00	0.00	U1 All	OK	1.58	91.28	39.84	U1 Odd	OK
	9.876	0.00	0.00	0.00	U1 All	OK	1.58	91.28	47.12	U1 Odd	OK
	10.000	0.00	0.00	0.00	U1 All	OK	1.58	91.28	47.08	U1 Odd	OK
	12.800	0.00	0.00	0.00	U1 All	OK	1.58	91.28	37.70	U1 Odd	OK
	15.180	0.00	0.00	0.00	U1 All	OK	1.58	91.28	16.97	U1 S3	OK
	16.699	0.79	-47.70	-3.07	U1 Odd	OK	1.58	91.28	0.00	U1 All	OK
	17.814	0.79	-47.70	-20.64	U1 Odd	OK	1.58	91.28	0.00	U1 All	OK
	19.333	1.58	-91.28	-48.84	U1 Odd	OK	1.58	91.28	0.00	U1 All	OK
20.000	1.58	-91.28	-62.76	U1 Odd	---	1.58	91.28	0.00	U1 All	---	

2.9. Longitudinal Beam Transverse Reinforcement Demand and Capacity

2.9.1. Section Properties

Span	d in	(A _v /s) _{min} in ² /in	ΦV _c kip
1	14.00	0.0100	15.94
2	14.00	0.0100	15.94
3	14.00	0.0100	15.94

2.9.2. Beam Transverse Reinforcement Demand

Notes:

*8 - Minimum transverse (stirrup) reinforcement governs.

Span	Start ft	End ft	Required				Demand
			X _u ft	V _u kip	Comb/Patt	A _v /s in ² /in	A _v /s in ² /in
1	0.917	4.881	1.833	22.99	U1/Odd	0.0112	0.0112
	4.881	7.929	4.881	16.53	U1/Odd	0.0009	0.0100 *8
	7.929	10.976	7.929	10.07	U1/Odd	0.0000	0.0100 *8
	10.976	14.024	10.976	3.61	U1/Odd	0.0000	0.0000
	14.024	17.071	17.071	9.41	U1/S2	0.0000	0.0100 *8
	17.071	20.119	20.119	15.87	U1/S2	0.0000	0.0100 *8
	20.119	24.083	23.167	22.34	U1/S2	0.0102	0.0102
2	0.917	3.452	1.833	12.91	U1/S2	0.0000	0.0100 *8
	3.452	5.071	3.452	9.47	U1/S2	0.0000	0.0100 *8
	5.071	6.690	5.071	6.04	U1/S2	0.0000	0.0000
	6.690	8.310	6.690	2.61	U1/S2	0.0000	0.0000
	8.310	9.929	9.929	5.12	U1/S3	0.0000	0.0000
	9.929	11.548	11.548	8.55	U1/S3	0.0000	0.0100 *8
	11.548	14.083	13.167	11.98	U1/S3	0.0000	0.0100 *8
3	0.917	4.167	1.833	17.08	U1/S3	0.0018	0.0100 *8
	4.167	6.500	4.167	12.13	U1/S3	0.0000	0.0100 *8
	6.500	8.833	6.500	7.18	U1/S3	0.0000	0.0000
	8.833	11.167	11.167	2.86	U1/Odd	0.0000	0.0000
	11.167	13.500	13.500	7.80	U1/Odd	0.0000	0.0000
	13.500	15.833	15.833	12.75	U1/Odd	0.0000	0.0100 *8
	15.833	19.083	18.167	17.70	U1/Odd	0.0028	0.0100 *8

2.9.3. Beam Transverse Reinforcement Details

Span	Size	Stirrups (2 legs each unless otherwise noted)
1	#3	18 @ 6.9 + <-- 36.6 --> + 18 @ 6.9
2	#3	8 @ 6.6 + <-- 58.3 --> + 8 @ 6.6
3	#3	11 @ 6.4 + <-- 84.0 --> + 11 @ 6.4

2.9.4. Beam Transverse Reinforcement Capacity

Notes:

*8 - Minimum transverse (stirrup) reinforcement governs.

Span	Start ft	End ft	Required				Provided			
			X _u ft	V _u kip	Comb/Patt	A _v /s in ² /in	A _v in ²	Sp in	A _v /s in ² /in	ΦV _n kip
1	0.000	0.917	1.833	22.99	U1/Odd	----	----	----	----	----
	0.917	10.976	1.833	22.99	U1/Odd	0.0112	0.22	6.9	0.0319	36.03
	10.976	14.024	10.976	3.61	U1/Odd	0.0000	----	----	----	7.97
	14.024	24.083	23.167	22.34	U1/S2	0.0102	0.22	6.9	0.0319	36.03
	24.083	25.000	23.167	22.34	U1/S2	----	----	----	----	----
2	0.000	0.917	1.833	12.91	U1/S2	----	----	----	----	----
	0.917	5.071	1.833	12.91	U1/S2	0.0000	0.22	6.6	0.0331	36.79 *8
	5.071	9.929	5.071	6.04	U1/S2	0.0000	----	----	----	7.97
	9.929	14.083	13.167	11.98	U1/S3	0.0000	0.22	6.6	0.0331	36.79 *8
	14.083	15.000	13.167	11.98	U1/S3	----	----	----	----	----

STRUCTUREPOINT - spSlab v5.50 Debug - Mar 29 2018
 Licensed to: -- Unknown User --, License ID: 00000-0000000
 C:\Program Files (x86)\StructurePoint\spSlab\Ex...\Example 1 - PCA Notes on ACI 318-Example 8-2.slb

Page | 10
 3/30/2018
 11:14 AM

Span	Start ft	End ft	Required				Provided				
			X_u ft	V_u kip	Comb/Patt	A_v/s in ² /in	A_v in ²	Sp in	A_v/s in ² /in	ΦV_n kip	
3	0.000	0.917	1.833	17.08	U1/S3	----	----	----	----	----	
	0.917	6.500	1.833	17.08	U1/S3	0.0018	0.22	6.4	0.0345	37.66 *8	
	6.500	13.500	13.500	7.80	U1/Odd	0.0000	----	----	----	7.97	
	13.500	19.083	18.167	17.70	U1/Odd	0.0028	0.22	6.4	0.0345	37.66 *8	
	19.083	20.000	18.167	17.70	U1/Odd	----	----	----	----	----	


2.10. Slab Shear Capacity

Span	b	d	V_{ratio}	ΦV_c	V_u	X_u
	in	in		kip	kip	ft
1	---	---	---	---	---	---
2	---	---	---	---	---	---
3	---	---	---	---	---	---

2.11. Material TakeOff

2.11.1. Reinforcement in the Direction of Analysis

Top Bars	119.7 lb	<=>	1.99 lb/ft	<=>	1.995 lb/ft ²
Bottom Bars	320.4 lb	<=>	5.34 lb/ft	<=>	5.340 lb/ft ²
Stirrups	102.0 lb	<=>	1.70 lb/ft	<=>	1.700 lb/ft ²
Total Steel	542.1 lb	<=>	9.04 lb/ft	<=>	9.035 lb/ft ²
Concrete	80.0 ft ³	<=>	1.33 ft ³ /ft	<=>	1.333 ft ³ /ft ²

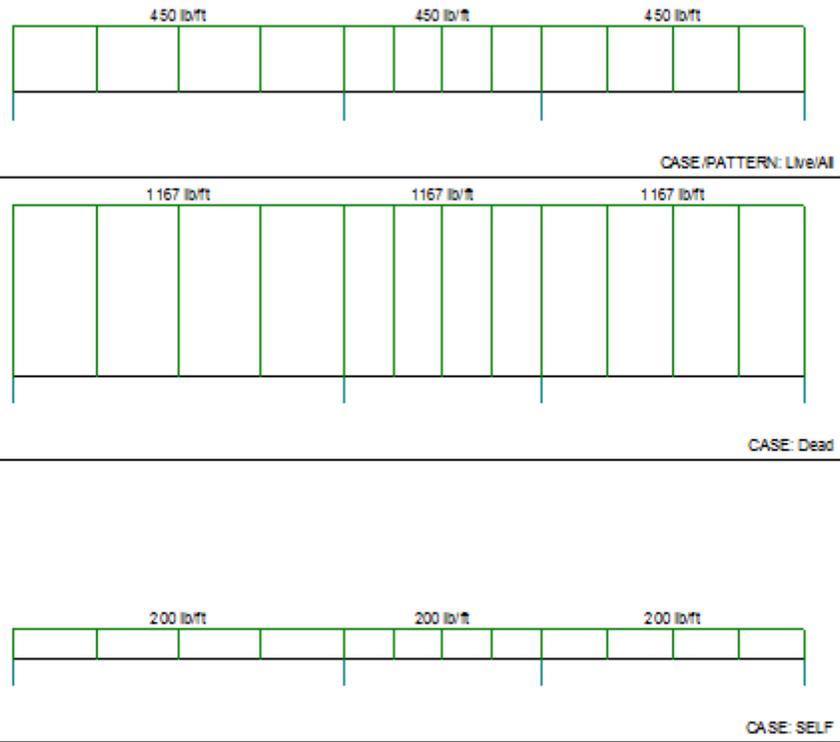

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-00000004-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\Examples\Example 1 - PCA Notes on ACI 318-Example 6-2. s1b

Project: sp Slab/spBeam Manual, Example 1


Frame: PCA Notes on ACI 318-Example 6-2


Engineer: StructurePoint

Code: ACI 318-14

Date: 12/11/15

Time: 14:53:55

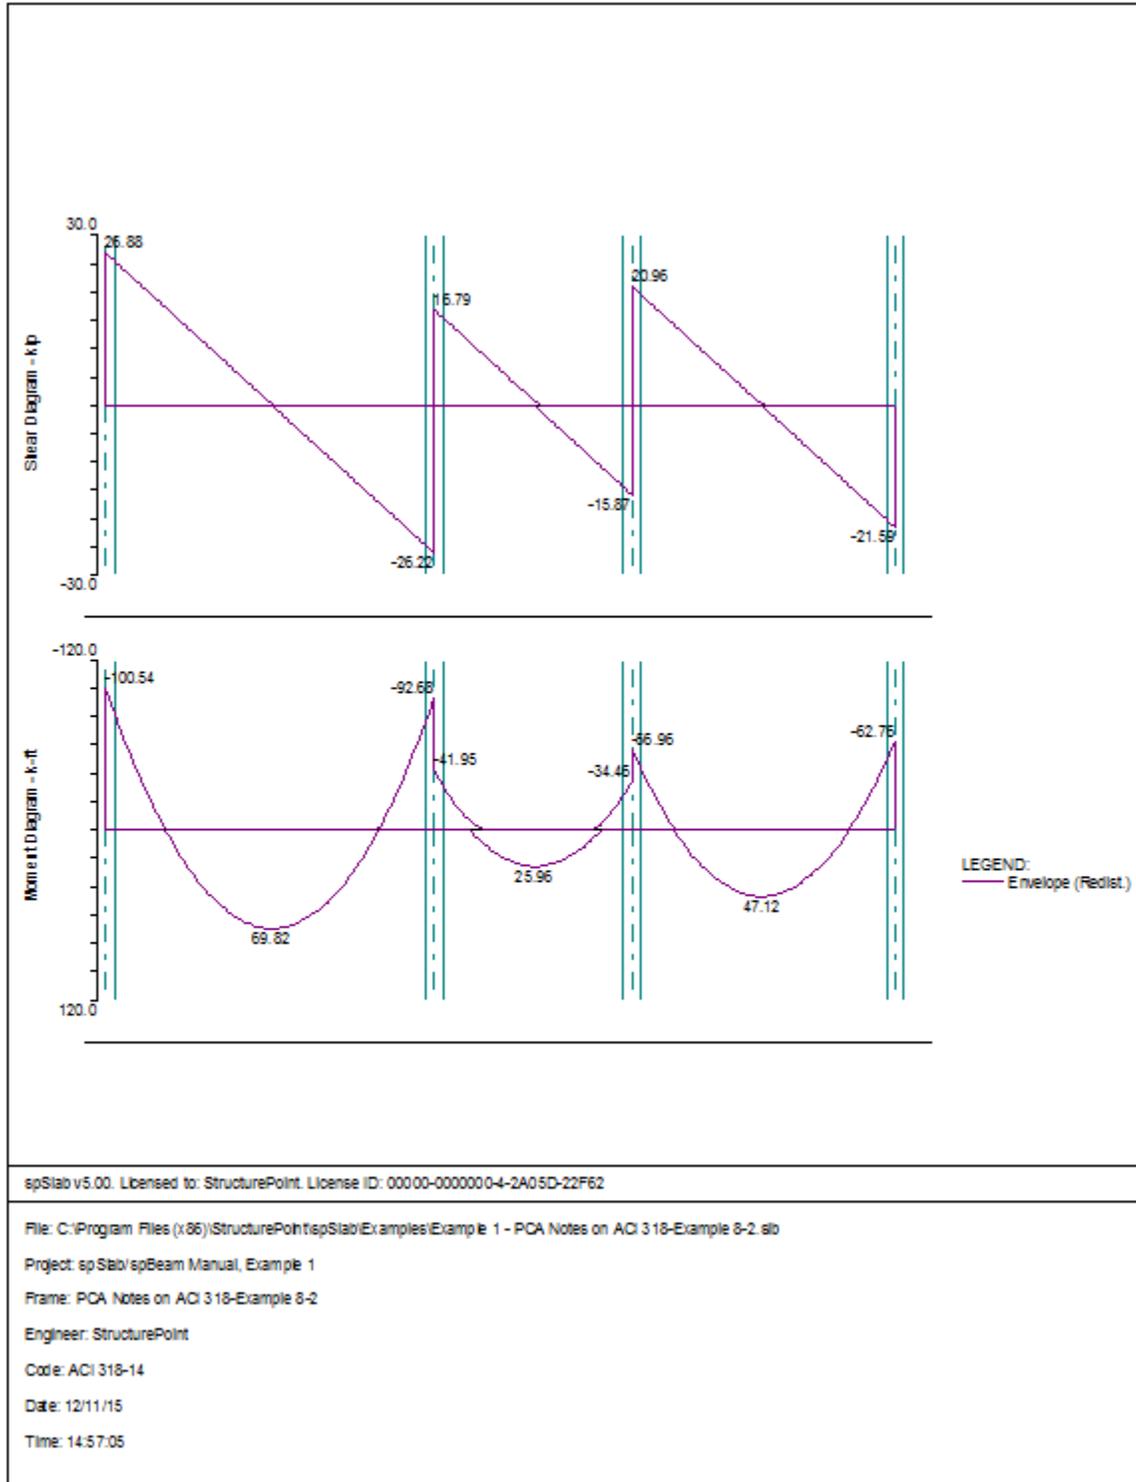

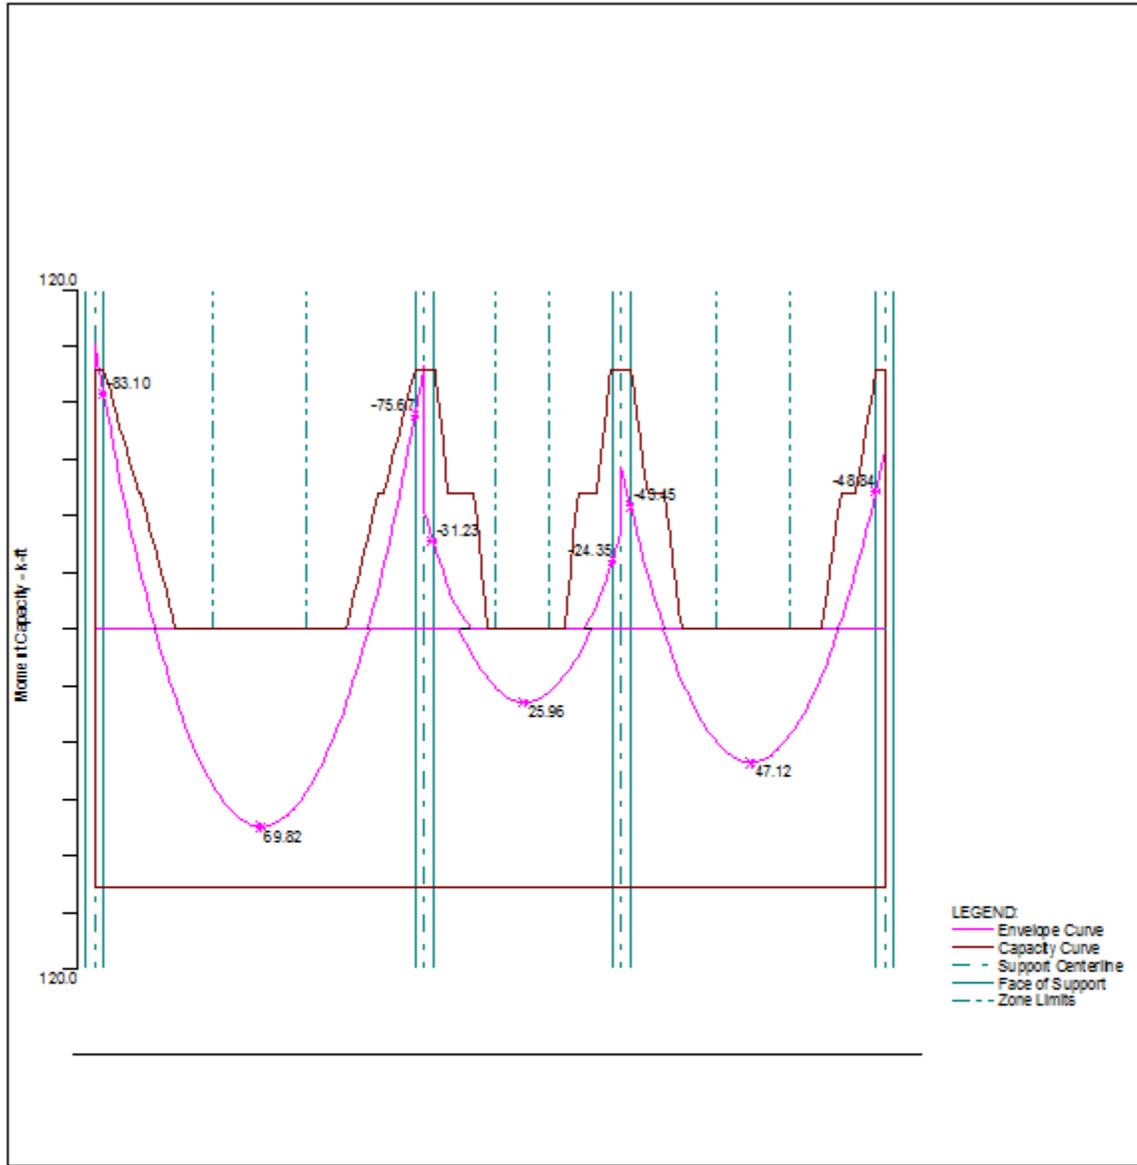

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-00000004-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\Examples\Example 1 - PCA Notes on ACI 318-Example 6-2.slb

Project: sp Slab/spBeam Manual, Example 1


Frame: PCA Notes on ACI 318-Example 6-2

Engineer: StructurePoint

Code: ACI 318-14

Date: 12/11/15

Time: 15:00:37

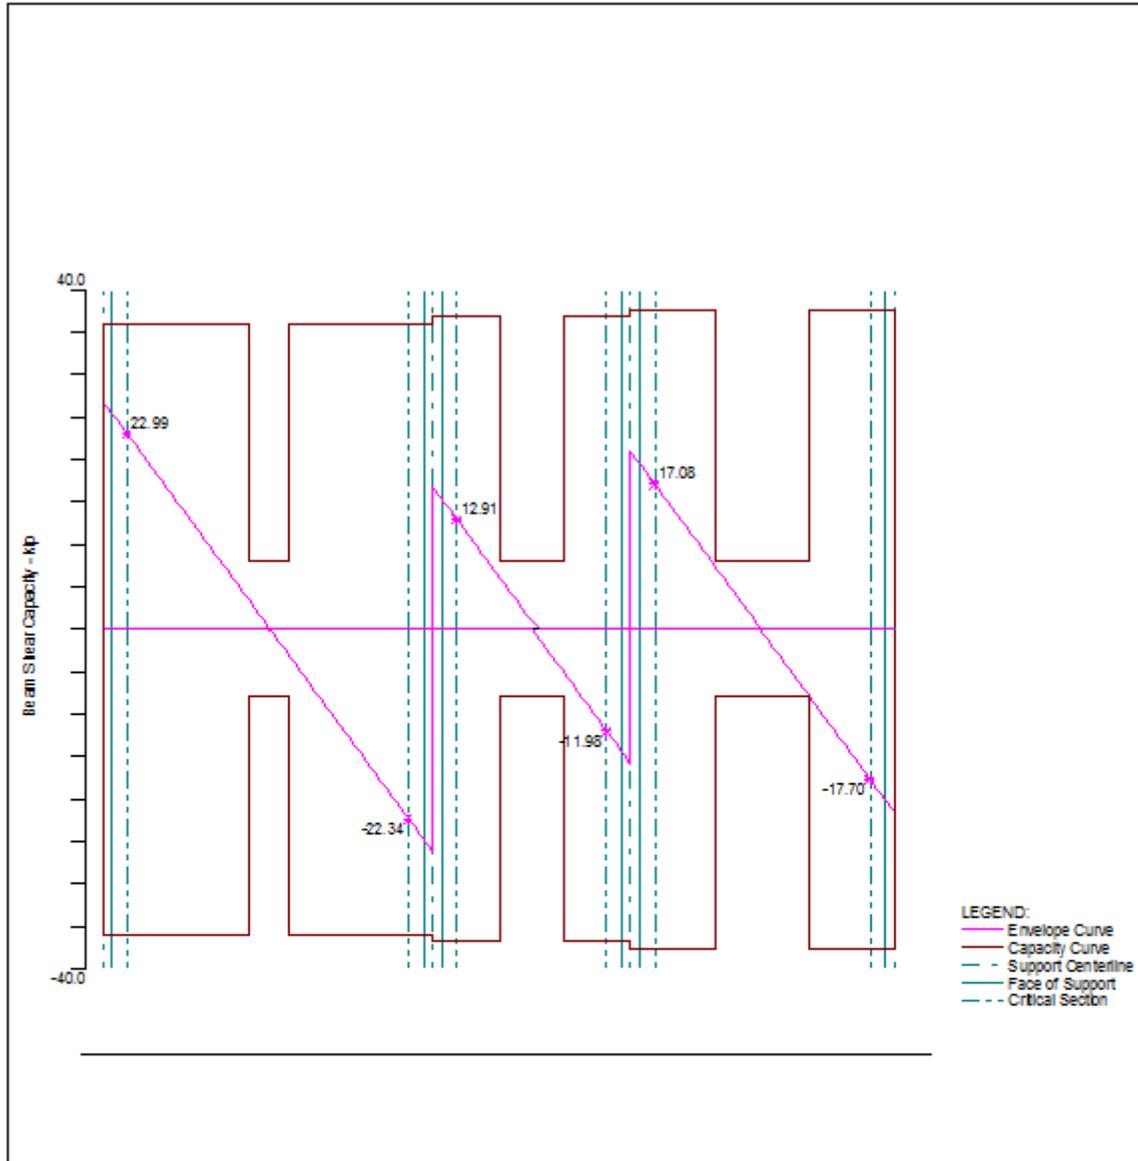

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-00000004-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\Examples\Example 1 - PCA Notes on ACI 318-Example 8-2.slb

Project: spSlab/spBeam Manual, Example 1


Frame: PCA Notes on ACI 318-Example 8-2

Engineer: StructurePoint

Code: ACI 318-14

Date: 12/11/15


Time: 15:03:50

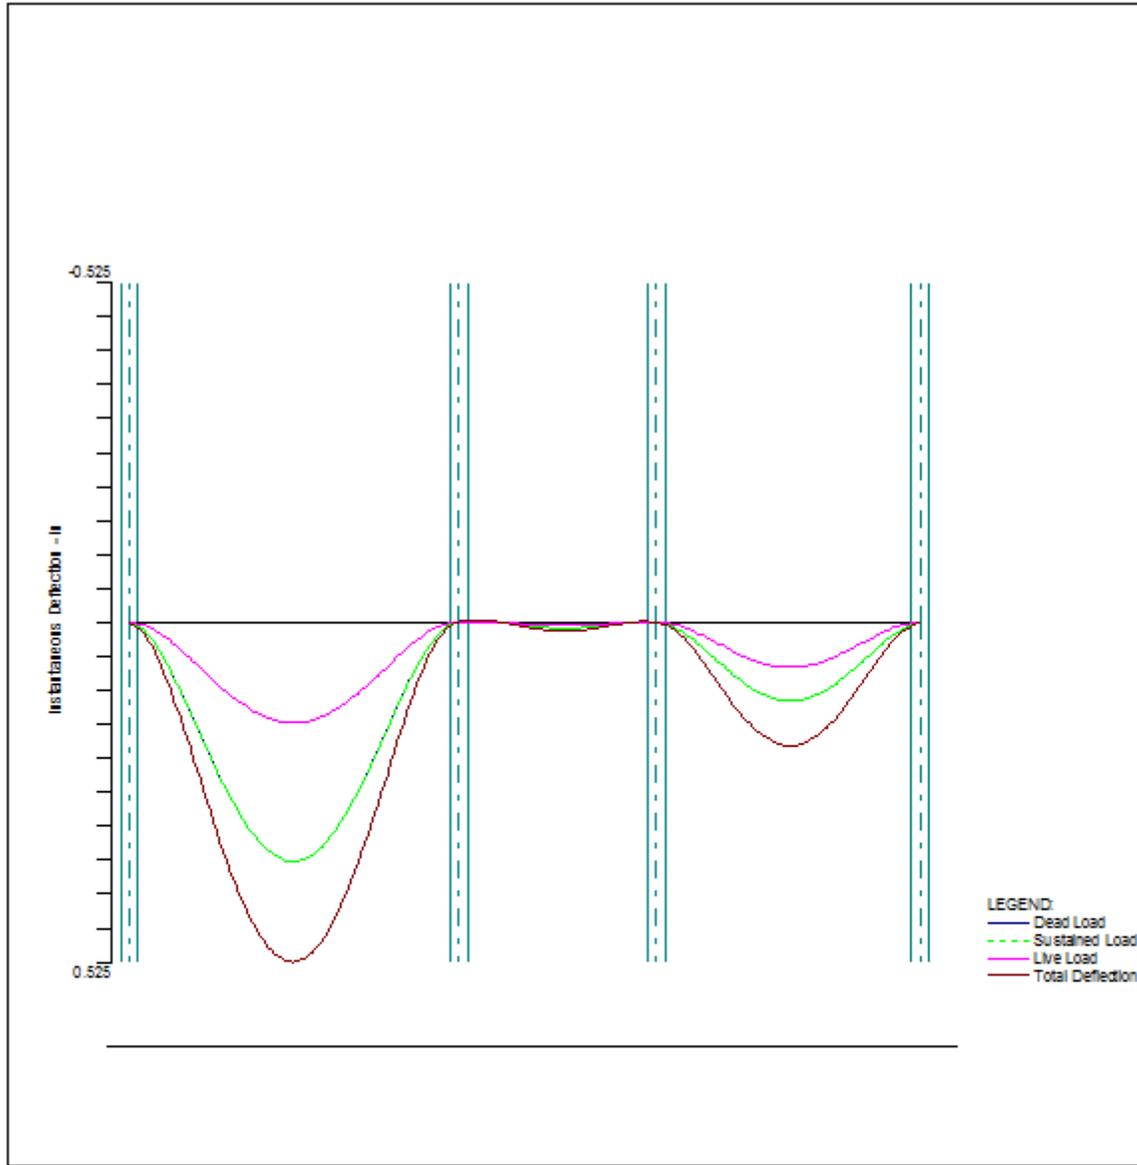

LEGEND
 — Dead Load
 - - - Sustained Load
 — Live Load
 — Total Deflection

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-00000004-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\Examples\Example 1 - PCA Notes on ACI 318-Example 8-2.slb
 Project: sp Slab/spBeam Manual, Example 1
 Frame: PCA Notes on ACI 318-Example 8-2
 Engineer: StructurePoint
 Code: ACI 318-14
 Date: 12/11/15
 Time: 15:07:09

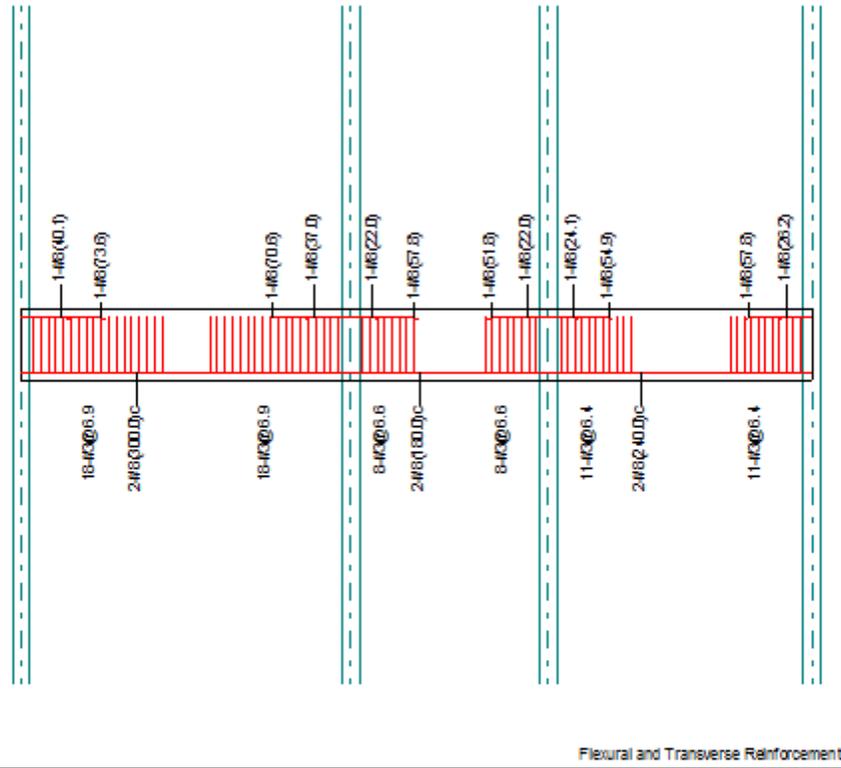

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-00000004-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\Examples\Example 1 - PCA Notes on ACI 318-Example 8-2.slb

Project: spSlab/spBeam Manual, Example 1

Frame: PCA Notes on ACI 318-Example 8-2

Engineer: StructurePoint

Code: ACI 318-14


Date: 12/11/15

Time: 15:10:42

6.2 Example 2 Spandrel Beam with Torsion

6.2.1 Problem Formulation


Design a precast, nonprestressed concrete spandrel beam for combined shear and torsion. Roof members are simply supported on spandrel ledge. Spandrel beams are connected to columns to transfer torsion. Continuity between spandrel beams is not provided. This example refers to Example 13-1 from *PCA Notes on ACI 318 Building Code Requirements for Structural Concrete*.

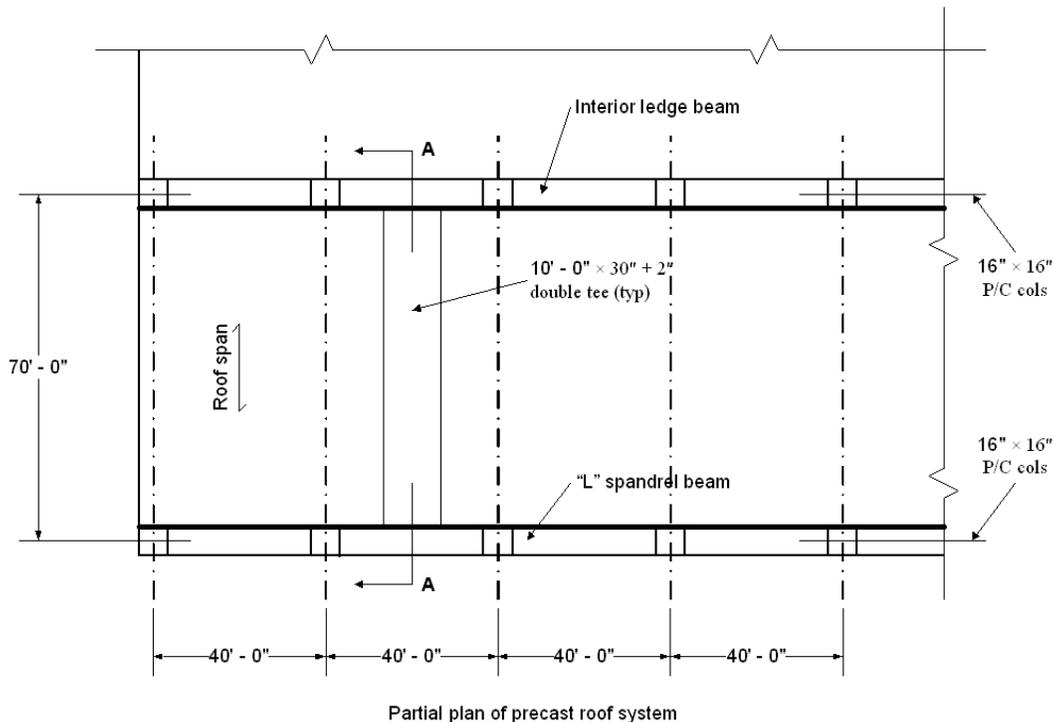

Design Criteria:



- Live load = 30 lb/ft²
- Dead load = 90 lb/ft² (double tee + topping + insulation + roofing)
- f'_c = 5000 psi ($w_c = 150$ pcf)
- f_y = 60,000 psi

Roof members are 10 ft wide double tee units, 30 in. deep with 2 in. topping.. Design of these units is not included in this design example. For lateral support, alternate ends of roof members are fixed to supporting beams.

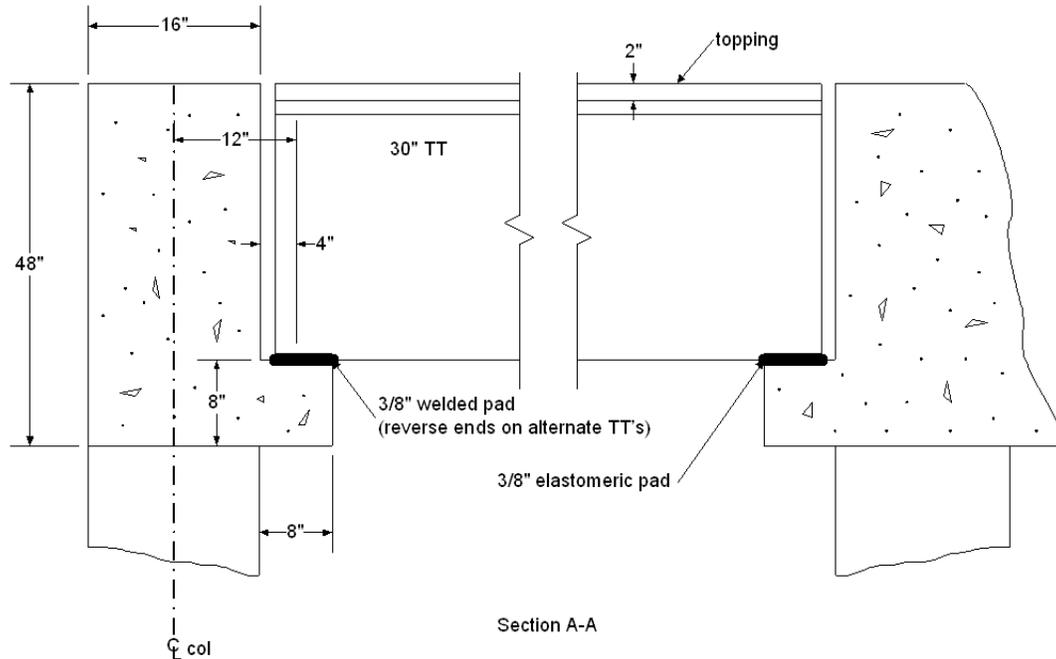


6.2.2 Preparing Input

1. From the **Input** menu, select **General Information**. A dialog box appears.
 - In the LABELS section, input the names of the project, frame, and engineer.
 - In the FRAME section, input 2 for NO OF SUPPORTS.
 - In the FLOOR SYSTEM section, click the radial button next to ONE WAY / BEAM.
 - Leave all other options in the **General Information** tab to their default settings of ACI 318-14 design code, ASTM A615 reinforcement, and DESIGN run mode option.
 - In the **Solve Options** tab, click the check box next to TORSION ANALYSIS AND DESIGN.
 - Under TORSION TYPE, click the radial button next to EQUILIBRIUM.
 - Under the heading STIRRUPS IN FLANGES, click the radial button next to YES.
 - Press OK.

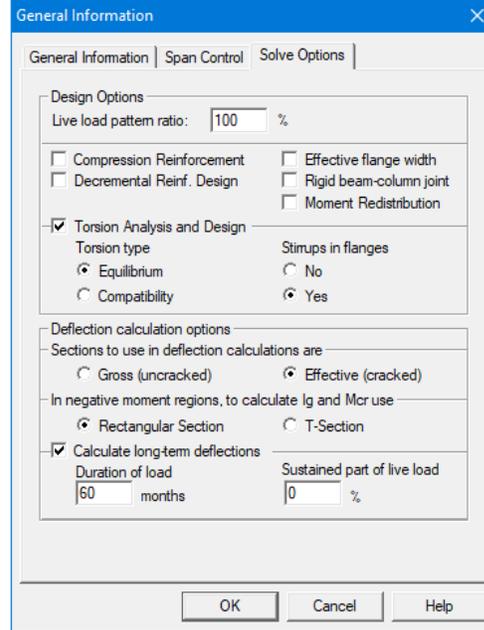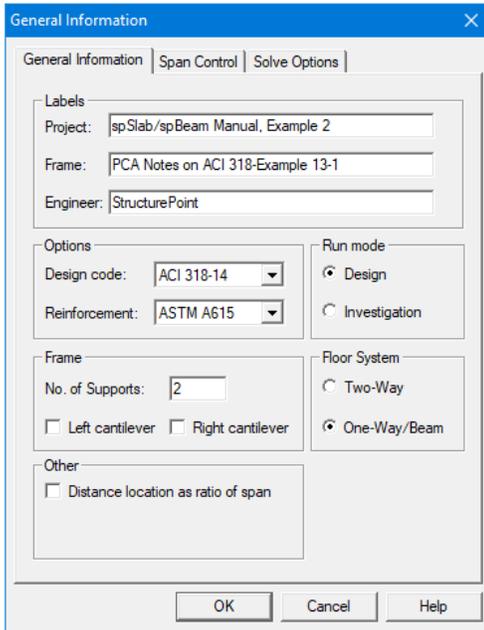


6.2.3 Assigning Properties


2. From the **Input** menu, select **Material Properties**. A dialog box appears.
 - Input 5 for Comp. strength for both Slabs and Beams and Columns.
 - Press OK.

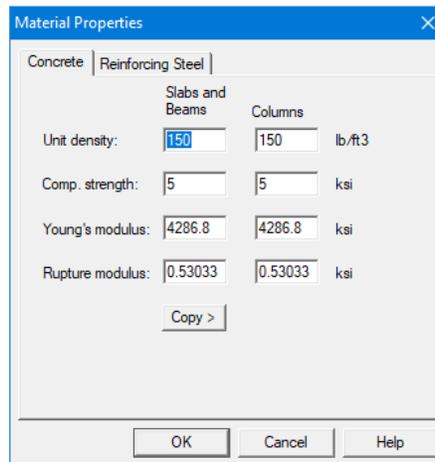



3. From the **Input** menu, select **Spans**. A dialog box appears.
 - Under the **Slabs/Flanges** tab, input 40 for LENGTH, 16 for THICKNESS, and 0.667 for WIDTH LEFT and 1.333 WIDTH RIGHT. Press MODIFY.
 - Select the **Longitudinal Beams** tab. Input 16 for WIDTH and 48 for DEPTH. Press MODIFY.
 - Press OK.

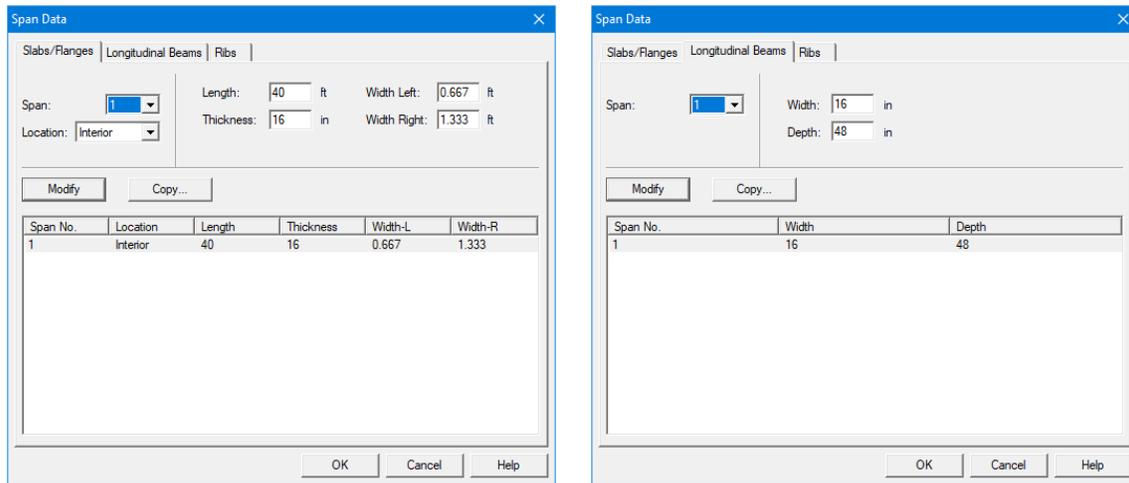


4. From the **Input** menu, select **Supports**. A dialog box appears.
 - Under the **Columns** tab, input 0 for STIFFNESS SHARE %.
 - Next, input 16 for both the C1 and C2 values in both the ABOVE and BELOW rows. Press MODIFY. (Note: the default HEIGHT ABOVE and HEIGHT BELOW values of 10 are correct.)
 - Press COPY. Press the CHECK ALL button. Press OK.
 - Press OK again.

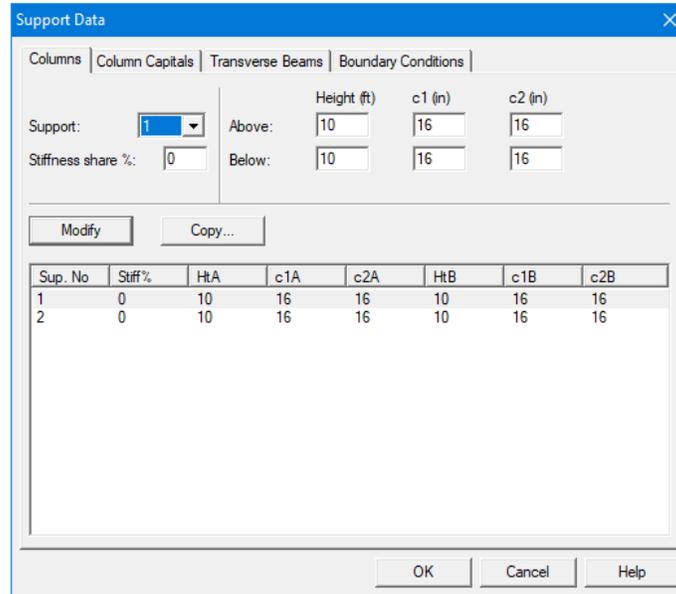


5. From the **Input** menu, select **Reinforcement Criteria**. A dialog box appears.
 - Under the **Slabs and Ribs** tab, change the CLEAR COVER for both TOP and BOTTOM BARS to 1.75.
 - Under the **Beams** tab, change the CLEAR COVER for both TOP and BOTTOM BARS again to 1.75.
 - Use the drop down arrow for MINIMUM STIRRUP BAR SIZE to select # 4.
 - Press OK.

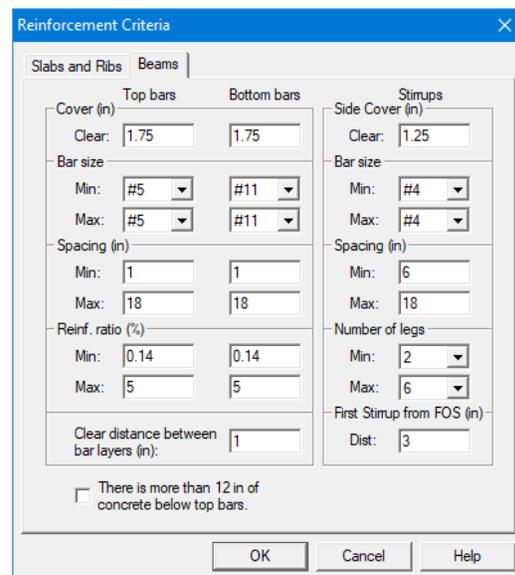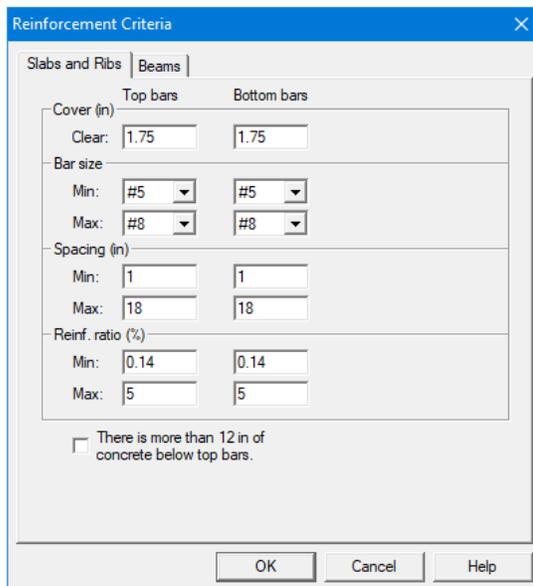

6. From the **Input** menu, select **Load Cases**. A dialog box appears.
 - Since we are not considering lateral forces, click on WIND in the LABEL column on the list in the bottom half of the LOAD CASES dialog box and press the DELETE button.
 - Click on EQ in the LABEL column and press the DELETE button.
 - Press OK.

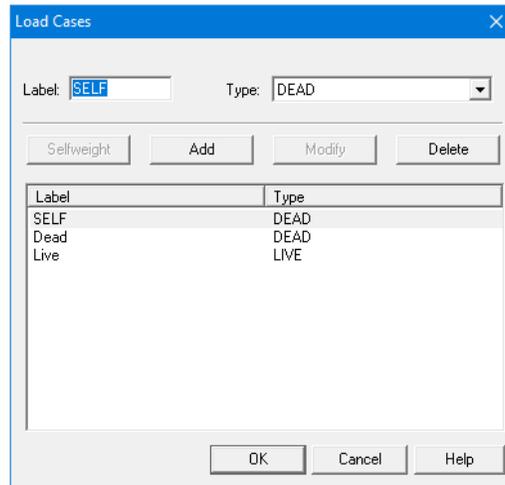

7. From the **Input** menu, select **Load Combinations**. A dialog box appears.
 - Delete all the load combinations by clicking anywhere on the list in the bottom half of the LOAD COMBINATIONS dialog box and pressing the DELETE button. Repeat this procedure until all the load combinations are gone.
 - Input 0 in the SELF field, 1.2 in the DEAD field, and 1.6 in the LIVE field. Press ADD.
 - Press OK.

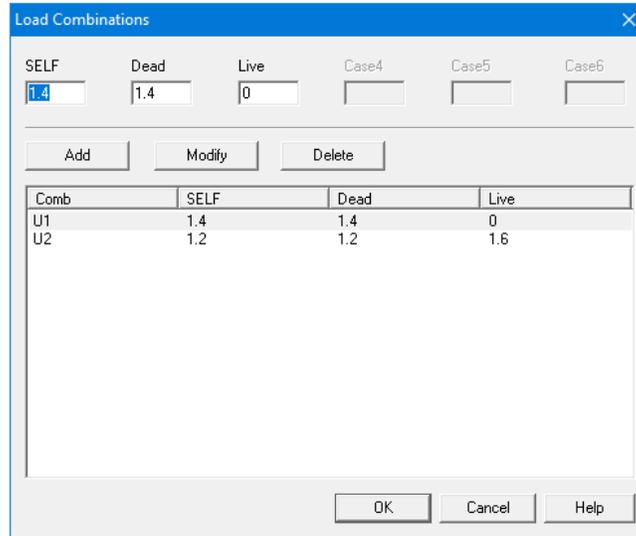

8. From the **Input** menu, select **Span Loads**. A dialog box appears.
 - Press the drop down arrow next to TYPE, and select LINE LOAD.
 - Input 4080 for both the START and END MAGNITUDE. (Note: this value was obtained by converting the area loads on the roof and the beam’s self weight into line loads.)

Dead Load = Superimposed Load + Self Weight of Spandrel Beam =

$$\left(90psf \times \frac{70ft}{2} \right) + [(1.33ft \times 4.00ft) + (1.33ft \times 0.67ft)] \times 150pcf = 0.93 \text{ kip / ft}$$


- Input 40 for the END LOCATION. Press ADD.
- Critical section for torsion is at the face of the support because of concentrated torques applied by the double tee stems at a distance less than d from the face of the support. The critical section for shear is also at the face of support because the load on the spandrel beam is not applied close to the top of the member and because the concentrated forces transferred by the double tee stems are at a distance less than d from the face of support. A small dummy load of 0.001 kips at the face of support is therefore intro-

duced in order to move the critical section for shear from the default location of d away from the support to the face of the support.

- Use the drop down arrow next to TYPE, and select POINT FORCE.
- Input 0.001 for the MAGNITUDE and 0.667 for the LOCATION. Press ADD.
- Use the drop down arrow next to TYPE, and select POINT FORCE.
- Input 0.001 for the MAGNITUDE and 39.333 for the LOCATION. Press ADD.
- Use the drop down arrow next to TYPE, and select LINE TORQUE.
- Input 3.15 for both the START and END MAGNITUDE. (Note: this value was obtained by multiplying the superimposed line load by the moment arm of 12 in.)

$$\text{Torsion Line Load (Dead)} = \left(90 \text{psf} \times \frac{70 \text{ft}}{2} \right) \times \frac{12 \text{in}}{12 \text{in} / \text{ft}} = 3.15 \text{ kip} \cdot \text{ft} / \text{ft}$$

- Keep the END LOCATION of 40 and press ADD.

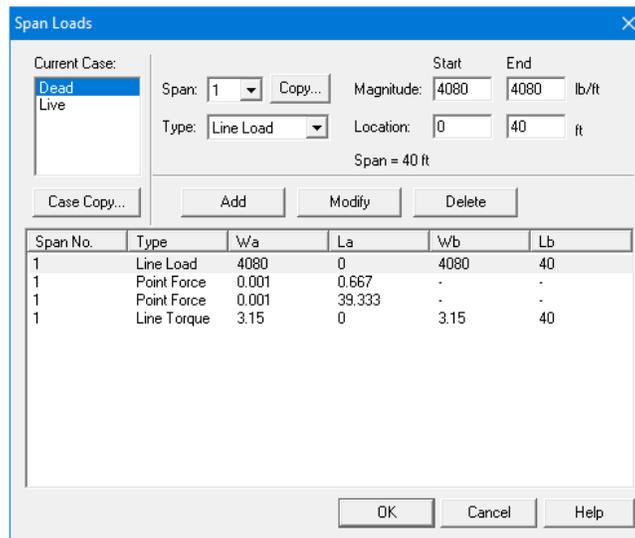

9. In the top left corner of the SPAN LOADS dialog box, there is a section called CURRENT CASE. Click on LIVE.


- Use the drop down arrow next to TYPE to select LINE LOAD. I
- Input 1050 for both the START and END MAGNITUDE. (Note: this value was obtained by converting the area loads on the roof to line loads on the beam.)

$$\text{Live Load} = 30\text{psf} \times \left(\frac{70\text{ft}}{2}\right) = 1050 \text{ lb / ft}$$

- Input 40 for the END LOCATION. Press ADD.
- Use the drop down arrow next to TYPE, and select LINE TORQUE.
- Input 1.05 for both the START and END MAGNITUDE. (Note: this value was obtained by multiplying the live line load by the moment arm of 12 in.)

$$30\text{psf} \times \left(\frac{70\text{ft}}{2}\right) \times \frac{12\text{in}}{12\text{in / ft}} = 1.05 \text{ kip} \cdot \text{ft / ft}$$

- Input 40 for the END LOCATION. Press ADD.
- Press OK.

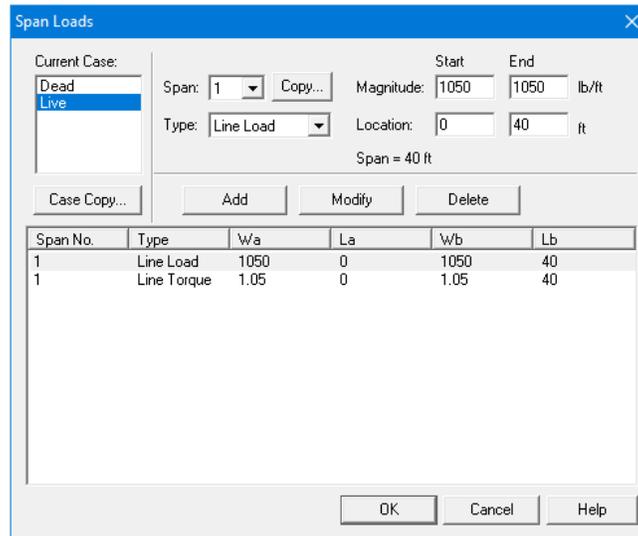

6.2.4 Solving


10. From the **Solve** menu, select **Execute**. Press CLOSE.
11. From the **Solve** menu, select **Results**.
 - Use the explorer to browse through the results tables.
 - Use the ARROW keys or the mouse wheel to browse through different parts of the table quickly. Press the CLOSE button to close the SPRESULTS.

6.2.5 Viewing and Printing Results

12. To view diagrams, select **Loads, Internal Forces, Moment Capacity, Shear Capacity, Deflection, or Reinforcement** from the **View** menu. Right click in any of these diagrams to get new copy, printing, or display options.
13. You may print the results report by using the spReporter module. To print any of the diagrams you selected to view, use the **Print Preview** command found by right clicking in the diagram's window. After viewing the results, you may decide to investigate the input beams under the same loads but with a modified reinforcement configuration.
14. From the **Input** menu, select **General Information**. In the **General Information** dialog box change the RUN MODE option to INVESTIGATION. Do not change any of the other options. Press OK.
15. From the **Input** menu, select the different commands under **Reinforcement Criteria** and **Reinforcing Bars** to modify the reinforcement configuration computed by the program.
16. Repeat steps 10 and subsequent to perform the investigation and view the results.



spSlab v5.50 Debug - Mar 29 2018
A Computer Program for Analysis, Design, and Investigation of
Reinforced Concrete Beams, One-way and Two-way Slab Systems
Copyright - 1988-2018, STRUCTUREPOINT, LLC.
All rights reserved

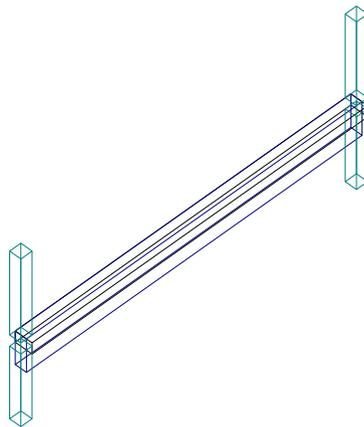

StructurePoint

Licensee stated above acknowledges that STRUCTUREPOINT (SP) is not and cannot be responsible for either the accuracy or adequacy of the material supplied as input for processing by the spSlab computer program. Furthermore, STRUCTUREPOINT neither makes any warranty expressed nor implied with respect to the correctness of the output prepared by the spSlab program. Although STRUCTUREPOINT has endeavored to produce spSlab error free the program is not and cannot be certified infallible. The final and only responsibility for analysis, design and engineering documents is the licensee's. Accordingly, STRUCTUREPOINT disclaims all responsibility in contract, negligence or other tort for any analysis, design or engineering documents prepared in connection with the use of the spSlab program. Licensed to: -- Unknown User --. License ID: 00000-0000000

Contents

1. Input Echo.....	3
1.1. General Information.....	3
1.2. Solve Options.....	3
1.3. Material Properties.....	3
1.3.1. Concrete: Slabs / Beams.....	3
1.3.2. Concrete: Columns.....	3
1.3.3. Reinforcing Steel.....	3
1.4. Reinforcement Database.....	4
1.5. Span Data.....	4
1.5.1. Slabs.....	4
1.5.2. Ribs and Longitudinal Beams.....	4
1.6. Support Data.....	4
1.6.1. Columns.....	4
1.6.2. Boundary Conditions.....	4
1.7. Load Data.....	4
1.7.1. Load Cases and Combinations.....	4
1.7.2. Area Loads.....	4
1.7.3. Line Loads.....	5
1.7.4. Point Forces.....	5
1.7.5. Line Torque.....	5
1.8. Reinforcement Criteria.....	5
1.8.1. Slabs and Ribs.....	5
1.8.2. Beams.....	5
2. Design Results.....	6
2.1. Top Reinforcement.....	6
2.2. Top Bar Details.....	6
2.3. Top Bar Development Lengths.....	6
2.4. Bottom Reinforcement.....	6
2.5. Bottom Bar Details.....	6
2.6. Bottom Bar Development Lengths.....	6
2.7. Flexural Capacity.....	6
2.8. Longitudinal Beam Shear and Torsion Reinforcement Required.....	7
2.8.1. Section Geometrical Properties.....	7
2.8.2. Section Strength Properties.....	7
2.8.3. Transverse Reinforcement Demand.....	7
2.8.4. Required Longitudinal Reinforcement.....	7
2.8.5. Beam Transverse Reinforcement Details.....	7
2.8.6. Longitudinal Torsional Reinforcement Details.....	7
2.8.7. Beam Shear and Torsion Transverse Reinforcement Capacity in Terms of Required Area.....	8
2.8.8. Beam Shear and Torsion Transverse Reinforcement Capacity in Terms of Provided Area.....	8
2.8.9. Beam Torsion Longitudinal Reinforcement Capacity in Terms of Required and Provided Area.....	8
2.9. Slab Shear Capacity.....	9
2.10. Material TakeOff.....	9
2.10.1. Reinforcement in the Direction of Analysis.....	9

1. Input Echo

1.1. General Information

File Name	...\Example 2 - PCA Notes on ACI 318-Example 1...
Project	spSlab/spBeam Manual, Example 2
Frame	PCA Notes on ACI 318-Example 13-1
Engineer	StructurePoint
Code	ACI 318-14
Reinforcement Database	ASTM A615
Mode	Design
Number of supports =	2
Floor System	One-Way/Beam

1.2. Solve Options

Live load pattern ratio = 100%
Deflections are based on cracked section properties.
In negative moment regions, I_g and M_{cr} DO NOT include flange/slab contribution (if available)
Long-term deflections are calculated for load duration of 60 months.
0% of live load is sustained.
Compression reinforcement calculations NOT selected.
Default incremental rebar design selected.
Moment redistribution NOT selected.
Effective flange width calculations NOT selected.
Rigid beam-column joint NOT selected.
Torsion analysis and design selected.
Stirrups in flanges (if available) selected.
Compatibility torsion NOT selected.

1.3. Material Properties

1.3.1. Concrete: Slabs / Beams

w_c	150 lb/ft ³
f'_c	5 ksi
E_c	4286.8 ksi
f_r	0.53033 ksi

1.3.2. Concrete: Columns

w_c	150 lb/ft ³
f'_c	5 ksi
E_c	4286.8 ksi
f_r	0.53033 ksi

1.3.3. Reinforcing Steel

f_y	60 ksi
f_{yt}	60 ksi
E_s	29000 ksi
Epoxy coated bars	No

1.4. Reinforcement Database

Size	Db in	Ab in ²	Wb lb/ft	Size	Db in	Ab in ²	Wb lb/ft
#3	0.38	0.11	0.38	#4	0.50	0.20	0.67
#5	0.63	0.31	1.04	#6	0.75	0.44	1.50
#7	0.88	0.60	2.04	#8	1.00	0.79	2.67
#9	1.13	1.00	3.40	#10	1.27	1.27	4.30
#11	1.41	1.56	5.31	#14	1.69	2.25	7.65
#18	2.26	4.00	13.60				

1.5. Span Data

1.5.1. Slabs

Span	Loc	L1 ft	t in	wL ft	wR ft	H _{min} in
1	Int	40.000	16.00	0.667	1.333	0.00

1.5.2. Ribs and Longitudinal Beams

Span	Ribs			Beams		Span H _{min} in
	b in	h in	Sp in	b in	h in	
1	0.00	0.00	0.00	16.00	48.00	30.00

1.6. Support Data

1.6.1. Columns

Support	c1a in	c2a in	Ha ft	c1b in	c2b in	Hb ft	Red %
1	16.00	16.00	10.000	16.00	16.00	10.000	0
2	16.00	16.00	10.000	16.00	16.00	10.000	0

1.6.2. Boundary Conditions

Support	Spring		Far End	
	K _z kip/in	K _{ry} kip-in/rad	Above	Below
1	0	0	Fixed	Fixed
2	0	0	Fixed	Fixed

1.7. Load Data

1.7.1. Load Cases and Combinations

Case Type	SELF	Dead	Live
U1	1.400	1.400	0.000
U2	1.200	1.200	1.600

1.7.2. Area Loads

Case/Patt	Span	Wa lb/ft ²
SELF	1	200.00

1.7.3. Line Loads

Case/Patt	Span	Wa lb/ft	La ft	Wb lb/ft	Lb ft
SELF	1	533.33	0.000	533.33	40.000
Dead	1	4080.00	0.000	4080.00	40.000
Live	1	1050.00	0.000	1050.00	40.000
Live/Odd	1	1050.00	0.000	1050.00	40.000
Live/S1	1	1050.00	0.000	1050.00	40.000
Live/S2	1	1050.00	0.000	1050.00	40.000

1.7.4. Point Forces

Case/Patt	Span	Wa kip	La ft
Dead	1	0.00	0.667
	1	0.00	39.333

1.7.5. Line Torque

Case/Patt	Span	Wa k-ft/ft	La ft	Wb k-ft/ft	Lb ft
Dead	1	3.15	0.000	3.15	40.000
Live	1	1.05	0.000	1.05	40.000
Live/Odd	1	1.05	0.000	1.05	40.000
Live/S1	1	1.05	0.000	1.05	40.000
Live/S2	1	1.05	0.000	1.05	40.000
SELF	1	0.13	0.000	0.13	40.000

1.8. Reinforcement Criteria

1.8.1. Slabs and Ribs

	Units	Top Bars		Bottom Bars	
		Min.	Max.	Min.	Max.
Bar Size		#5	#8	#5	#8
Bar spacing	in	1.00	18.00	1.00	18.00
Reinf ratio	%	0.14	5.00	0.14	5.00
Clear Cover	in	1.75		1.75	

There is NOT more than 12 in of concrete below top bars.

1.8.2. Beams

	Units	Top Bars		Bottom Bars		Stirrups	
		Min.	Max.	Min.	Max.	Min.	Max.
Bar Size		#5	#5	#11	#11	#4	#4
Bar spacing	in	1.00	18.00	1.00	18.00	6.00	18.00
Reinf ratio	%	0.14	5.00	0.14	5.00		
Clear Cover	in	1.75		1.75			
Layer dist.	in	1.00		1.00			
No. of legs						2	6
Side cover	in					1.25	
1st Stirrup	in					3.00	

There is NOT more than 12 in of concrete below top bars.

2. Design Results

2.1. Top Reinforcement

Span	Zone	Width ft	M _{max} k-ft	X _{max} ft	A _{s,min} in ²	A _{s,max} in ²	A _{s,req} in ²	Sp _{Prov} in	Bars
1	Left	2.00	0.00	0.667	0.000	15.619	0.000	0.000	---
	Midspan	2.00	0.00	20.000	0.000	15.619	0.000	0.000	---
	Right	2.00	0.00	39.333	0.000	15.619	0.000	0.000	---

2.2. Top Bar Details

Span	Bars	Left		Continuous		Right	
		Length ft	Bars	Length ft	Bars	Length ft	Bars
1	---	---	---	---	---	---	---

2.3. Top Bar Development Lengths

Span	Bars	Left		Continuous		Right	
		DevLen in	Bars	DevLen in	Bars	DevLen in	Bars
1	---	---	---	---	---	---	---

2.4. Bottom Reinforcement

Span	Width ft	M _{max} k-ft	X _{max} ft	A _{s,min} in ²	A _{s,max} in ²	A _{s,req} in ²	Sp _{Prov} in	Bars
1	1.33	1539.20	20.000	2.531	22.818	8.073	3.639	6-#11 2L

2.5. Bottom Bar Details

Span	Long Bars			Short Bars		
	Bars	Start ft	Length ft	Bars	Start ft	Length ft
1	6-#11	0.00	40.00	---	---	---

2.6. Bottom Bar Development Lengths

Span	Long Bars		Short Bars	
	Bars	DevLen in	Bars	DevLen in
1	6-#11	59.98	---	---

2.7. Flexural Capacity

Span	x ft	Top						Bottom				
		A _{s,top} in ²	ΦM _{n-} k-ft	M _{u-} k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _{n+} k-ft	M _{u+} k-ft	Comb Pat	Status	
1	0.000	0.00	0.00	0.00	U1 All	---	9.36	1768.57	0.00	U1 All	---	
	0.667	0.00	0.00	0.00	U1 All	OK	9.36	1768.57	100.90	U2 All	OK	
	14.200	0.00	0.00	0.00	U1 All	OK	9.36	1768.57	1409.75	U2 All	OK	
	20.000	0.00	0.00	0.00	U1 All	OK	9.36	1768.57	1539.20	U2 All	OK	
	25.800	0.00	0.00	0.00	U1 All	OK	9.36	1768.57	1409.75	U2 All	OK	
	39.333	0.00	0.00	0.00	U1 All	OK	9.36	1768.57	100.91	U2 All	OK	
	40.000	0.00	0.00	0.00	U1 All	---	9.36	1768.57	0.00	U1 All	---	

2.8. Longitudinal Beam Shear and Torsion Reinforcement Required

2.8.1. Section Geometrical Properties

Span	d in	p _{cp} in	p _h in	A _{cp} in ²	A _{oh} in ²	A _o in ²
1	44.74	144.00	132.00	896.000	689.000	585.650

2.8.2. Section Strength Properties

Span	(A _w /s) _{min} in ² /in	ΦV _c kip	ΦT _{cr} k-ft	ΦS _{vt} ksi
1	0.0141	75.93	98.55	0.530

2.8.3. Transverse Reinforcement Demand

Notes:
 *2 - Torsion ignored (T_u < ΦiT_{cr}/4).

Span	Start ft	End ft	X _u ft	V _u kip	T _u k-ft	v _t ksi	Required				Demand A _{(v+2t)/s} in ² /in
							Comb/Patt	A _w /s in ² /in	A _t /s in ² /in	A _{(v+2t)/s} in ² /in	
1	0.667	6.190	0.67	148.79	108.65	0.298	U2/All	0.0362	0.0247	0.0857	0.0857
	6.190	11.714	6.19	106.28	77.61	0.213	U2/All	0.0151	0.0177	0.0504	0.0504
	11.714	17.238	11.71	63.77	46.56	0.128	U2/All	0.0000	0.0106	0.0212	0.0212
	17.238	22.762	17.24	21.26	15.52	0.043	U2/All	0.0000	0.0000	0.0000	0.0000 *2
	22.762	28.286	28.29	63.77	46.56	0.128	U2/All	0.0000	0.0106	0.0212	0.0212
	28.286	33.810	33.81	106.28	77.61	0.213	U2/All	0.0151	0.0177	0.0504	0.0504
	33.810	39.333	39.33	148.79	108.65	0.298	U2/All	0.0362	0.0247	0.0857	0.0857

2.8.4. Required Longitudinal Reinforcement

Notes:
 *2 - Torsion ignored (T_u < ΦiT_{cr}/4).
 *5 - Minimum longitudinal reinforcement required.

Span	Start ft	End ft	X _u ft	T _u k-ft	Comb/Patt	A _t in ²
1	0.667	6.190	0.67	108.65	U2/All	3.265
	6.190	11.714	11.71	46.56	U2/All	3.880 *5
	11.714	17.238	14.97	28.25	U2/All	4.400 *5
	17.238	22.762	17.24	15.52	U2/All	0.000 *2
	22.762	28.286	24.64	26.08	U2/All	4.400 *5
	28.286	33.810	28.29	46.56	U2/All	3.880 *5
	33.810	39.333	39.33	108.65	U2/All	3.265

2.8.5. Beam Transverse Reinforcement Details

Span	Size	Stirrups (2 legs each unless otherwise noted)
1	#4	10 @ 6.7 [3L] + 9 @ 7.4 + 6 @ 11.0 + <-- 66.3 --> + 6 @ 11.0 + 9 @ 7.4 + 10 @ 6.7 [3L]

2.8.6. Longitudinal Torsional Reinforcement Details

Span	Long Bars			Short Bars		
	Bars	Start ft	Length ft	Bars	Start ft	Length ft
1	---			12-#6	0.00	17.22
	---			12-#6	22.78	17.22

2.8.7. Beam Shear and Torsion Transverse Reinforcement Capacity in Terms of Required Area

Notes:
 *2 - Torsion ignored ($T_u < \Phi T_{cr}/4$).

Span	Start ft	End ft	X_u ft	V_u kip	T_u k-ft	v_f ksi	Required			
							Comb/Patt	A_v/s in ² /in	A_t/s in ² /in	A_{v+2t}/s in ² /in
1	0.000	0.917	0.67	148.79	108.65	0.30	U2/All	----	----	----
	0.917	6.190	0.92	146.87	107.25	0.29	U2/All	0.0352	0.0244	0.0841
	6.190	11.714	6.19	106.28	77.61	0.21	U2/All	0.0151	0.0177	0.0504
	11.714	15.747	11.71	63.77	46.56	0.13	U2/All	0.0000	0.0106	0.0212
	15.747	17.238	15.75	32.73	23.90	0.07	U2/All	0.0000	0.0000	0.0000 *2
	17.238	22.762	17.24	21.26	15.52	0.04	U2/All	0.0000	0.0000	0.0000 *2
	22.762	24.253	24.25	32.73	23.90	0.07	U2/All	0.0000	0.0000	0.0000 *2
	24.253	28.286	28.29	63.77	46.56	0.13	U2/All	0.0000	0.0106	0.0212
	28.286	33.810	33.81	106.28	77.61	0.21	U2/All	0.0151	0.0177	0.0504
	33.810	39.083	39.08	146.87	107.25	0.29	U2/All	0.0352	0.0244	0.0841
	39.083	40.000	39.33	148.79	108.65	0.30	U2/All	----	----	----

2.8.8. Beam Shear and Torsion Transverse Reinforcement Capacity in Terms of Provided Area

Notes:
 *2 - Torsion ignored ($T_u < \Phi T_{cr}/4$).

Span	Start ft	End ft	Provided		
			A_{v+2t} in ²	Sp in	A_{v+2t}/s in ² /in
1	0.000	0.917	----	----	----
	0.917	6.190	0.600	6.66	0.0901
	6.190	11.714	0.400	7.37	0.0543
	11.714	15.747	0.400	11.05	0.0362
	15.747	17.238	0.400	11.05	0.0362 *2
	17.238	22.762	----	----	----
	22.762	24.253	0.400	11.05	0.0362 *2
	24.253	28.286	0.400	11.05	0.0362
	28.286	33.810	0.400	7.37	0.0543
	33.810	39.083	0.600	6.66	0.0901
	39.083	40.000	----	----	----

2.8.9. Beam Torsion Longitudinal Reinforcement Capacity in Terms of Required and Provided Area

Notes:
 *2 - Torsion ignored ($T_u < \Phi T_{cr}/4$).
 *5 - Minimum longitudinal reinforcement required.

Span	Start ft	End ft	Required				Provided
			X_u ft	T_u k-ft	Comb/Patt	A1 in ²	A1 in ²
1	0.000	0.917	0.67	108.65	U2/All	3.265	----
	0.917	6.190	0.92	107.25	U2/All	3.223	5.280
	6.190	11.714	11.71	46.56	U2/All	3.880	5.280 *5
	11.714	15.747	14.97	28.25	U2/All	4.400	5.280 *5
	15.747	17.238	15.75	23.90	U2/All	0.000	---- *2
	17.238	22.762	17.24	15.52	U2/All	0.000	---- *2
	22.762	24.253	22.76	15.52	U2/All	0.000	---- *2
	24.253	28.286	24.64	26.08	U2/All	4.400	5.280 *5
	28.286	33.810	28.29	46.56	U2/All	3.880	5.280 *5
	33.810	39.083	39.08	107.25	U2/All	3.223	5.280
	39.083	40.000	39.33	108.65	U2/All	3.265	----


2.9. Slab Shear Capacity

Span	b	d	V _{ratio}	ΦV _c	V _u	X _u
	in	in		kip	kip	ft
1	--- Not checked ---					

2.10. Material TakeOff

2.10.1. Reinforcement in the Direction of Analysis


Top Bars	0.0 lb	<=>	0.00 lb/ft	<=>	0.000 lb/ft ²
Bottom Bars	1275.1 lb	<=>	31.88 lb/ft	<=>	15.939 lb/ft ²
Torsion Bars	620.9 lb	<=>	15.52 lb/ft	<=>	7.761 lb/ft ²
Stirrups	387.4 lb	<=>	9.69 lb/ft	<=>	4.843 lb/ft ²
Total Steel	2283.4 lb	<=>	57.09 lb/ft	<=>	28.543 lb/ft ²
Concrete	248.9 ft ³	<=>	6.22 ft ³ /ft	<=>	3.111 ft ³ /ft ²

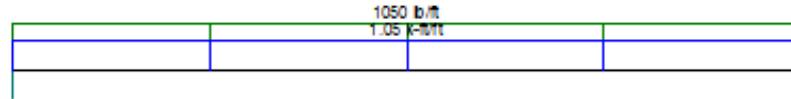

CASE/PATTERN: Live/All



CASE: Dead

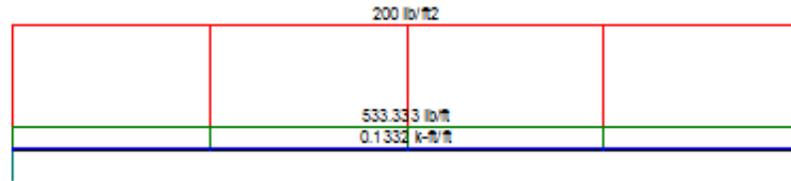

CASE: SELF

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-00000004-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\Examples\Example 2 - PCA Notes on ACI 318-Example 13-1.slb

Project: spSlab/spBeam Manual, Example 2


Frame: PCA Notes on ACI 318-Example 13-1


Engineer: StructurePoint

Code: ACI 318-14

Date: 12/11/15

Time: 15:35:48

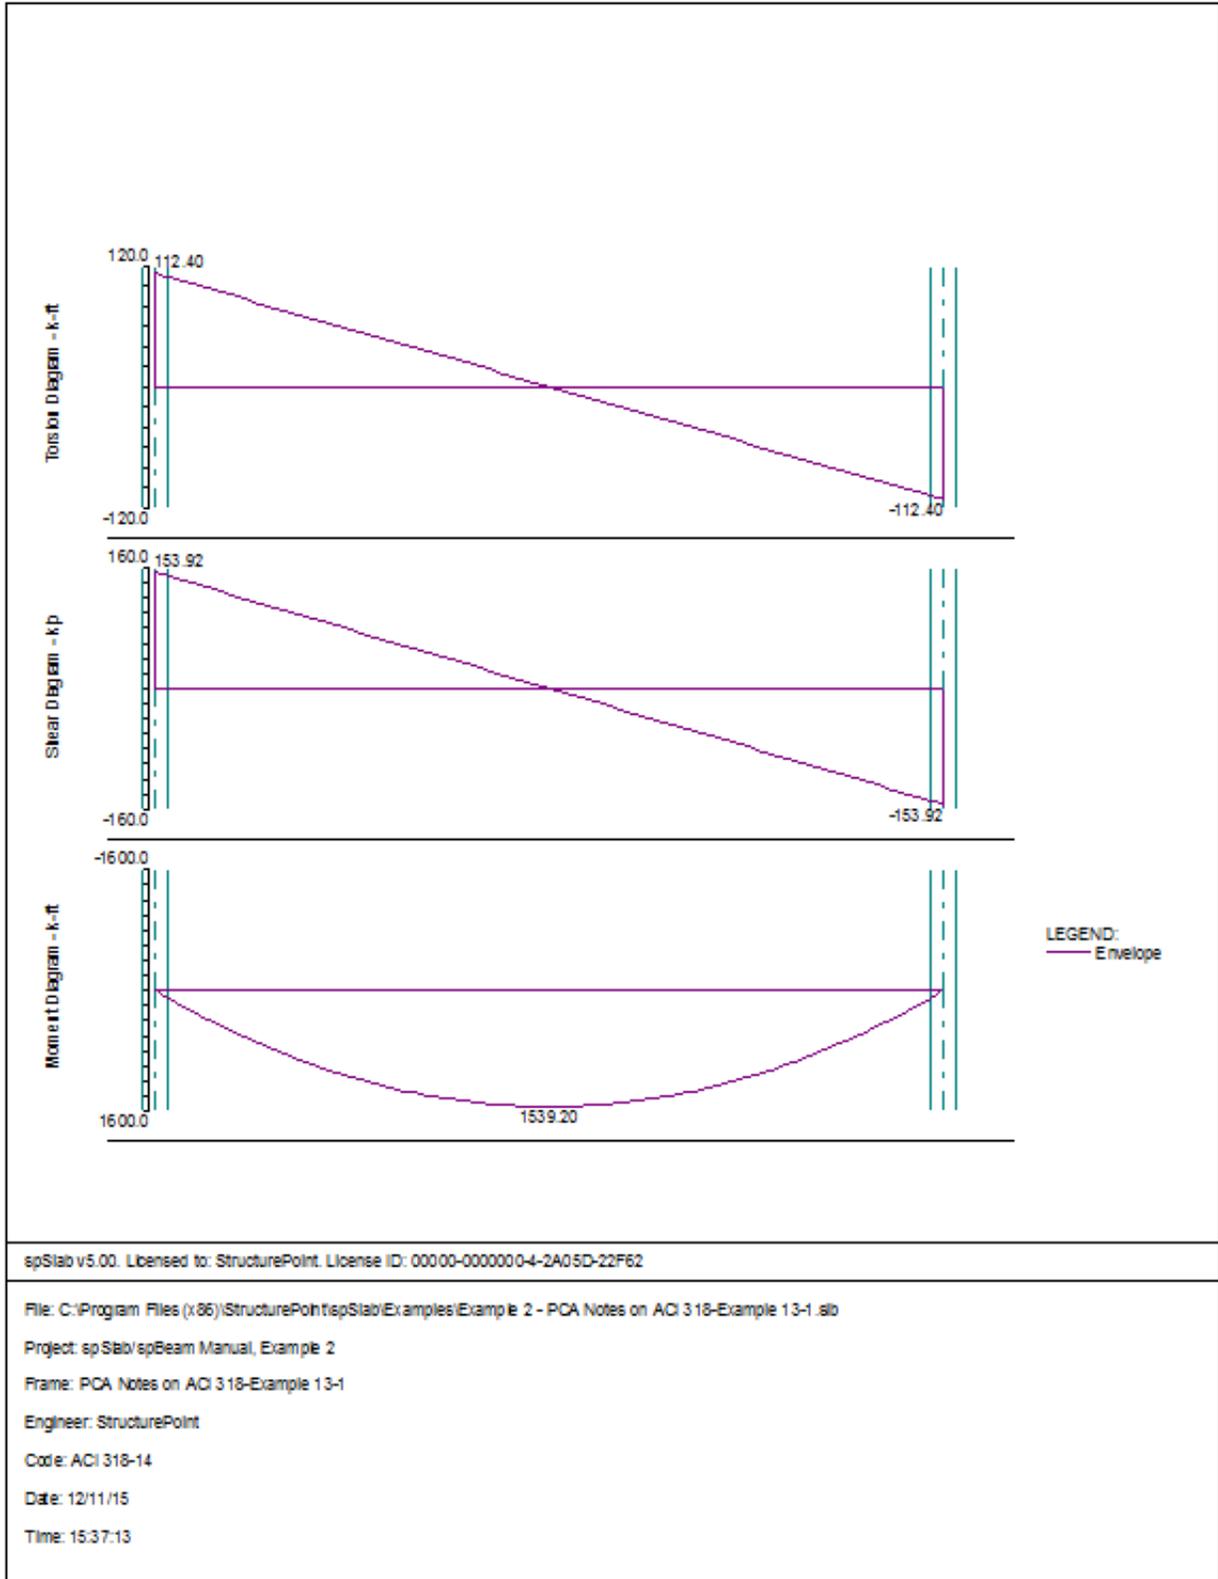

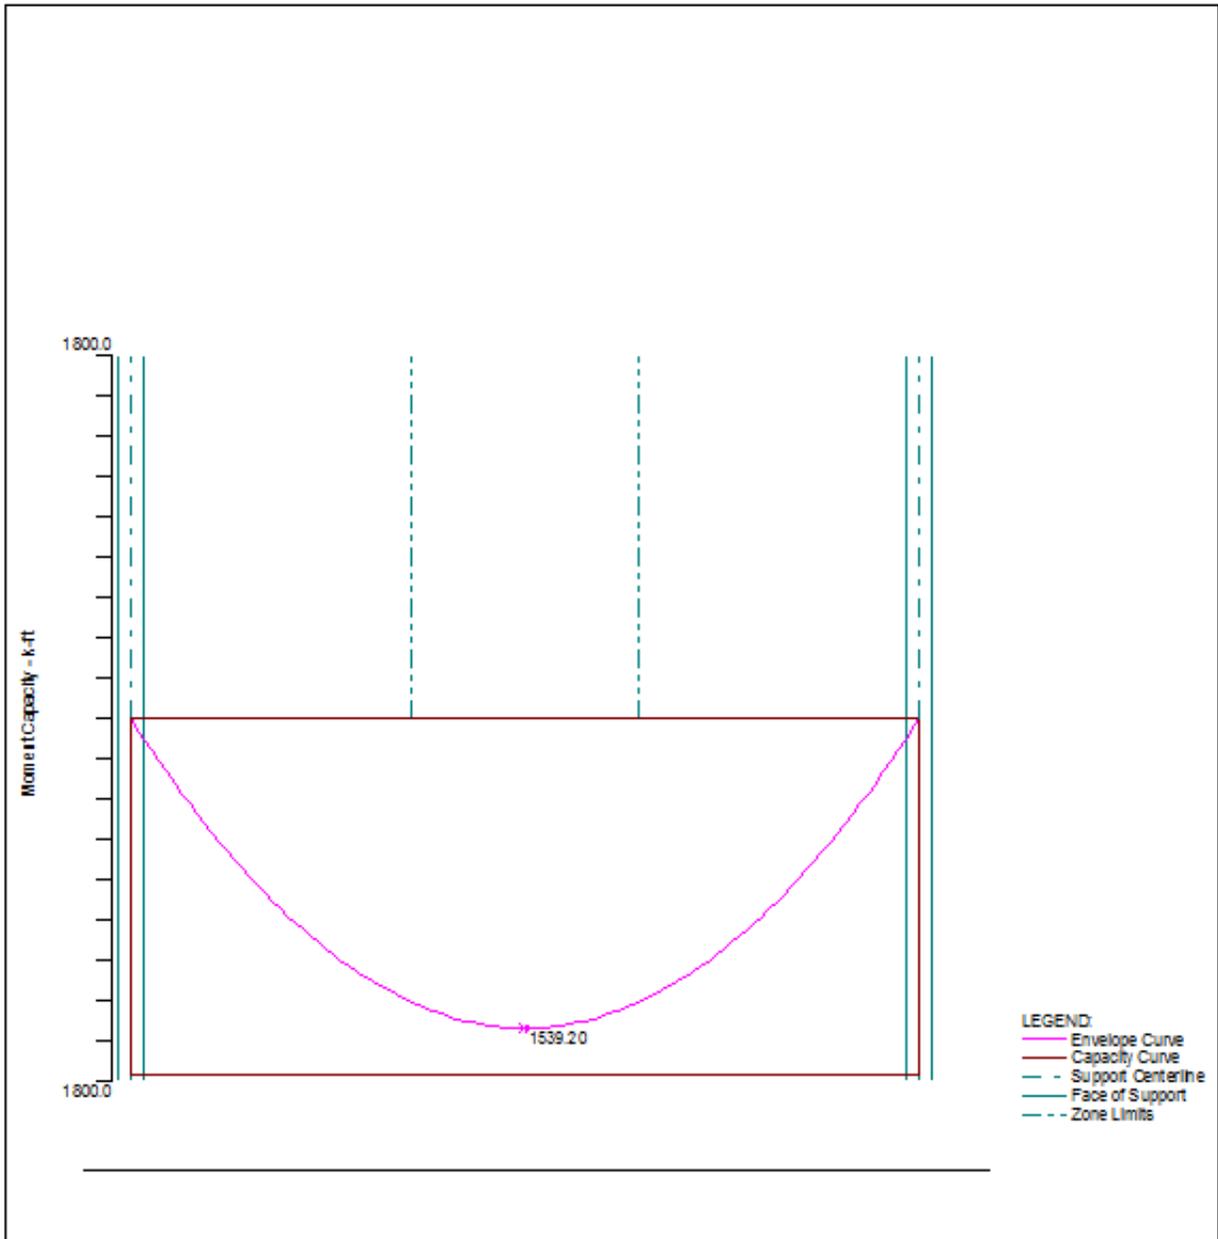

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-0000000-4-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\slab\Examples\Example 2 - PCA Notes on ACI 318-Example 13-1.slb

Project: spSlab/spBeam Manual, Example 2


Frame: PCA Notes on ACI 318-Example 13-1


Engineer: StructurePoint

Code: ACI 318-14

Date: 12/11/15

Time: 15:38:20

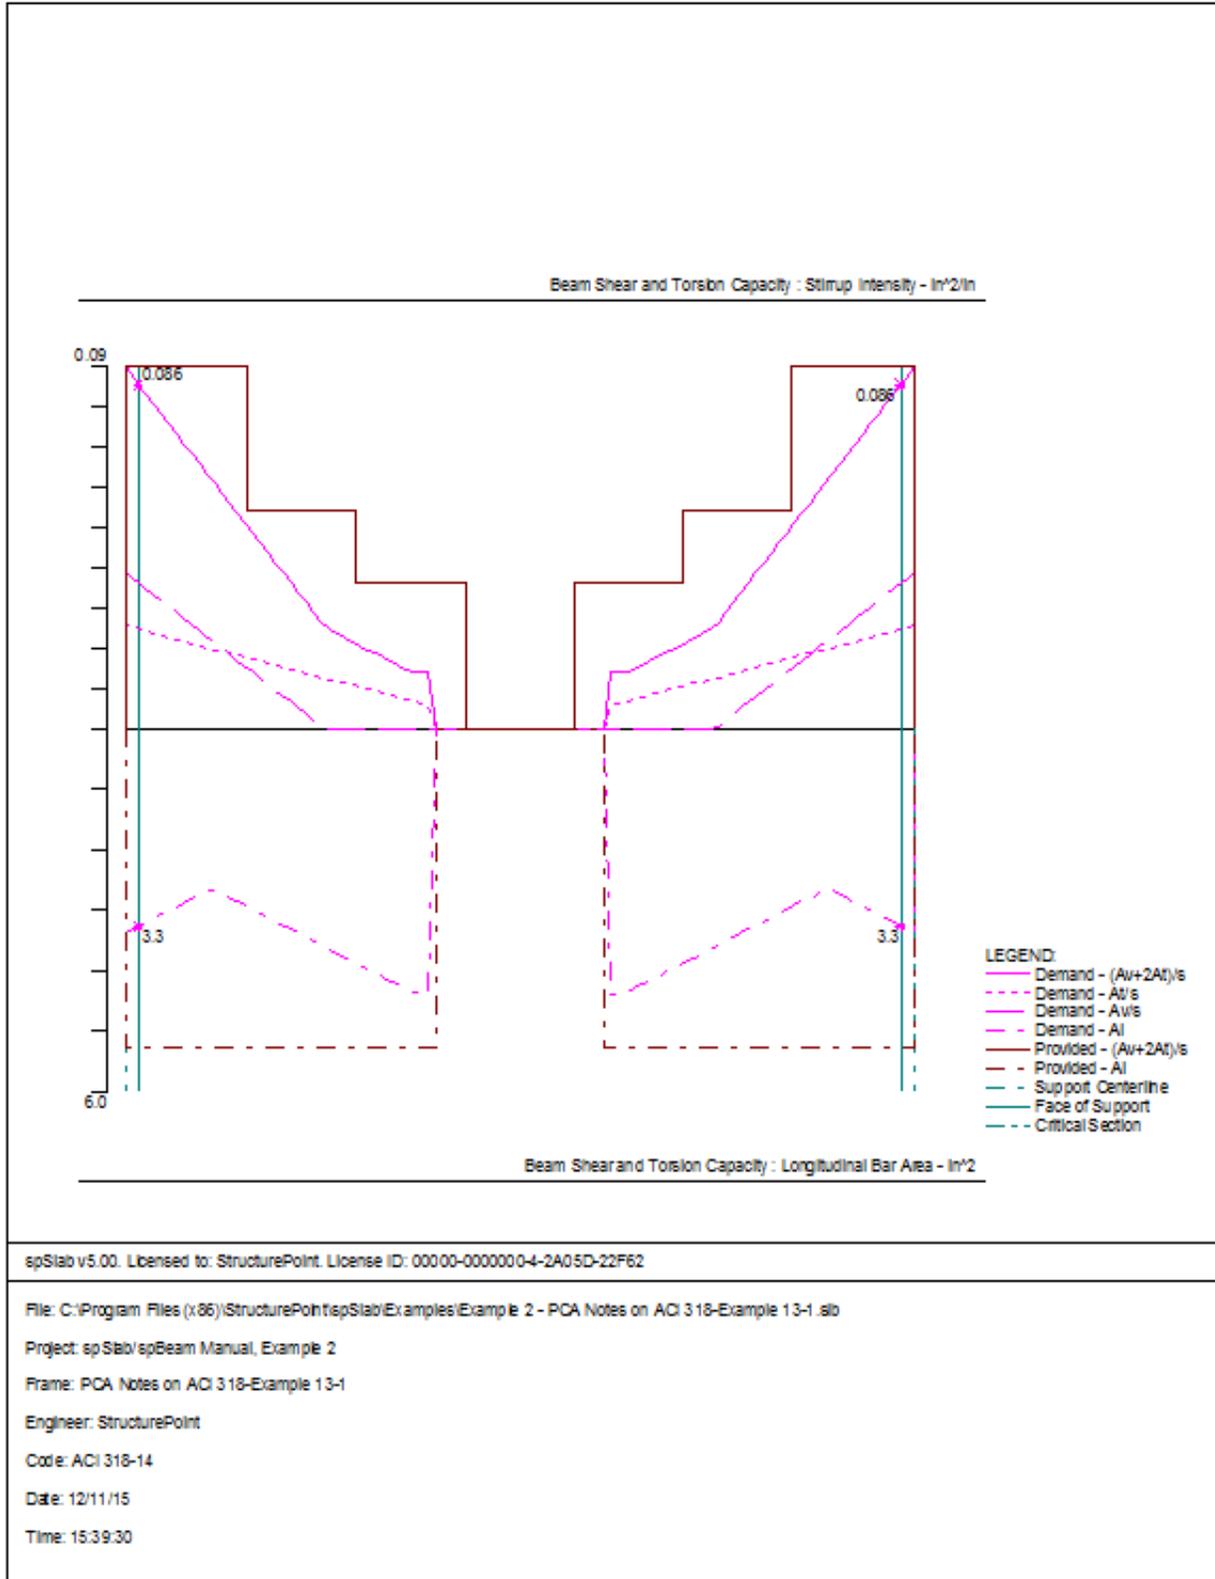

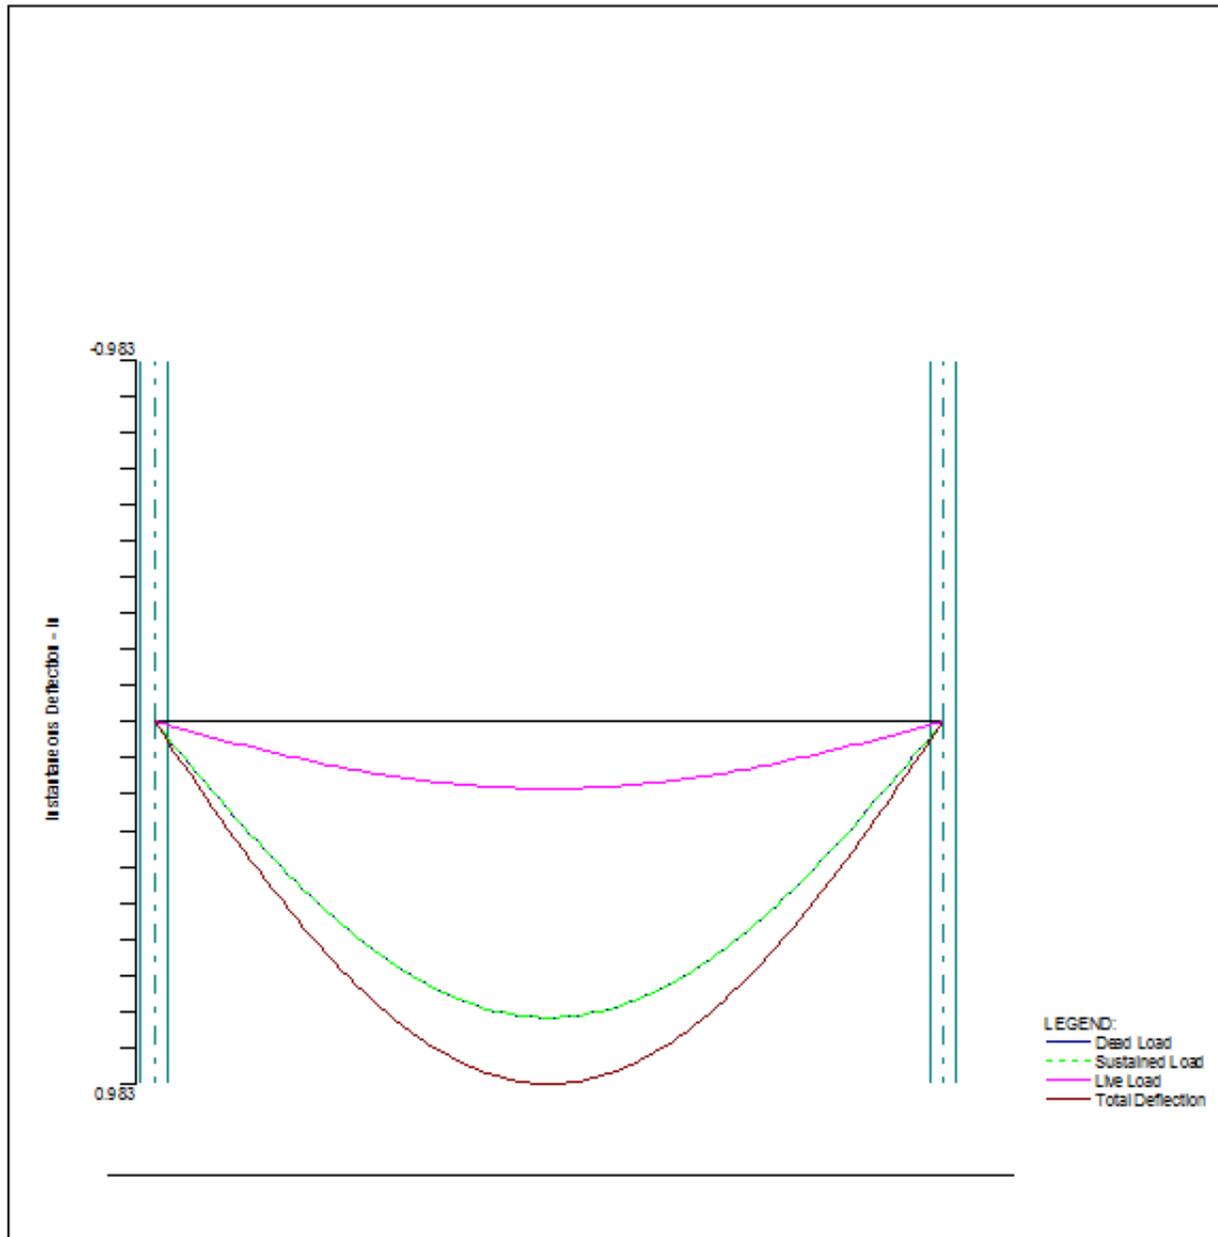

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-0000004-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\Examples\Example 2 - PCA Notes on ACI 318-Example 13-1.slb

Project: spSlab/spBeam Manual, Example 2


Frame: PCA Notes on ACI 318-Example 13-1

Engineer: StructurePoint

Code: ACI 318-14

Date: 12/11/15


Time: 15:40:44

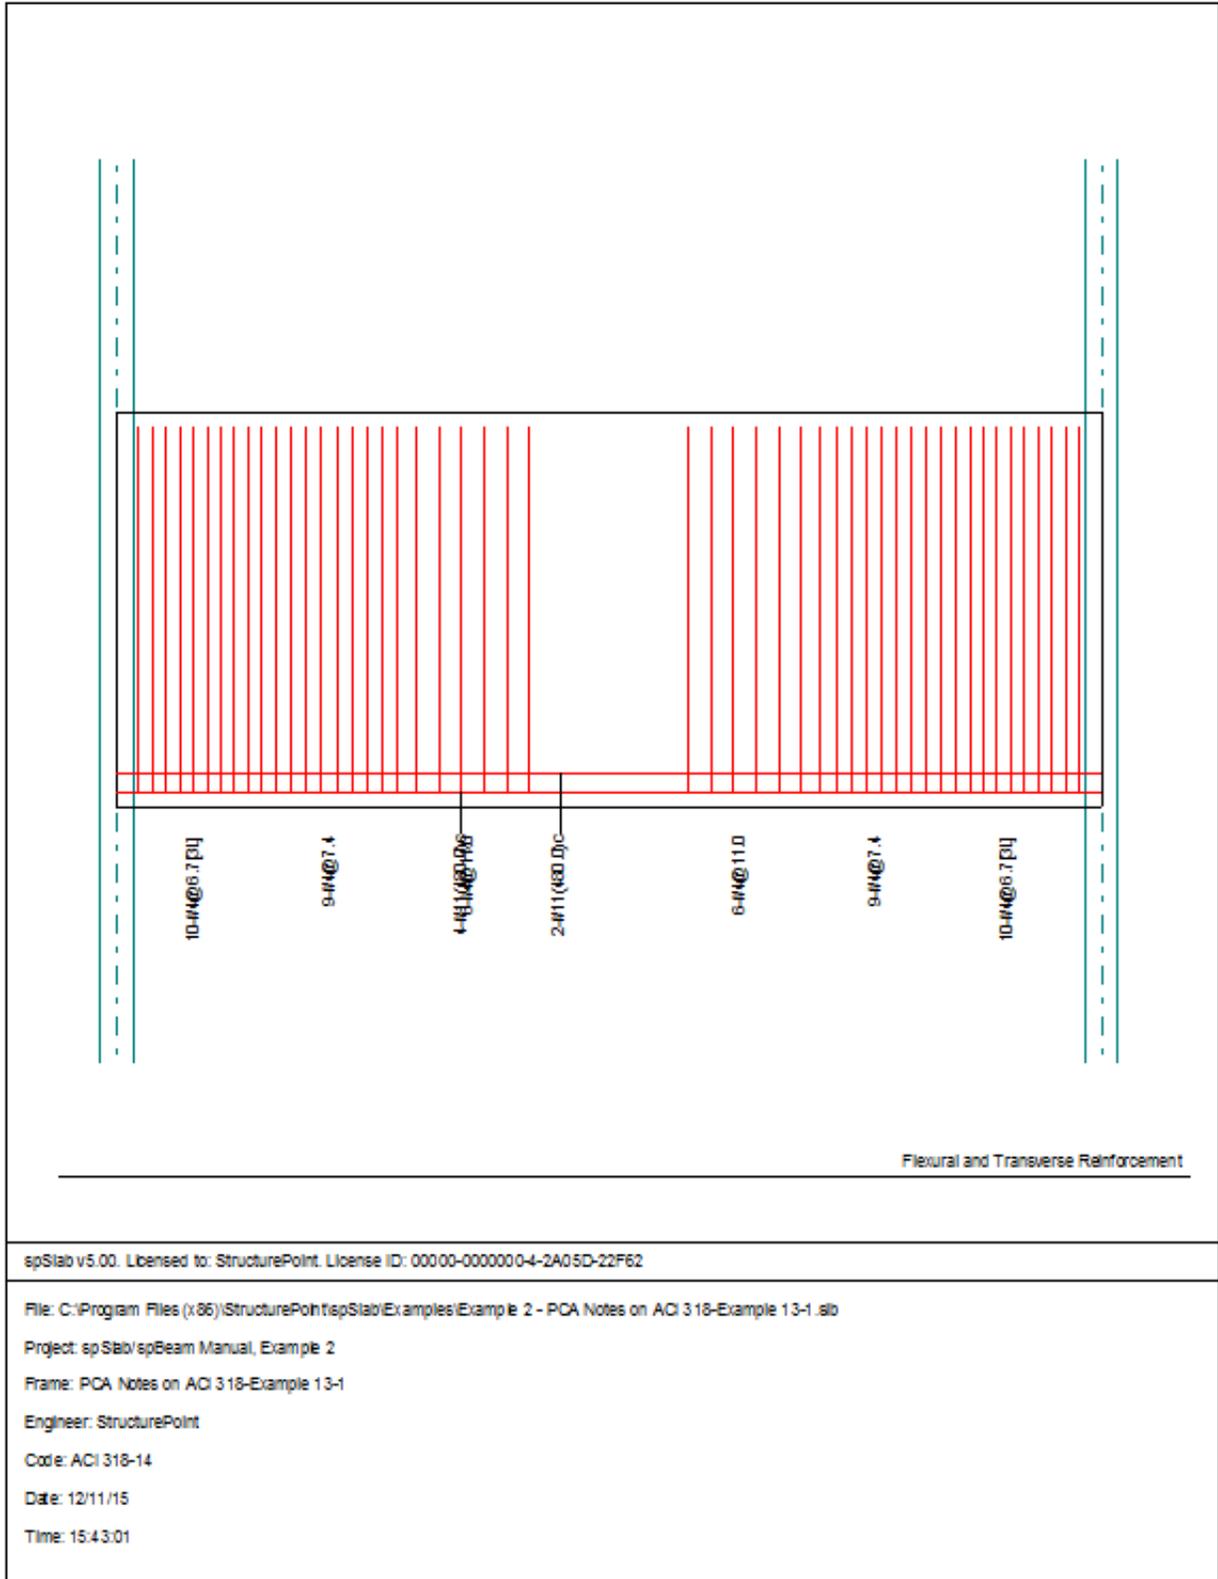

6.3 Example 3 Design of a Continuous Beam


6.3.1 Problem Formulation

The system shown in the following figure consists of five spans symmetric about the centerline. We will be designing beam ABCD assuming that the other half of the beam will be loaded and designed the same way. All beams have a width of 12 in. and a depth of 22 in. – including the 5 in. thick deck. Span length and widths are shown in the figure. Columns have a 12 in. × 12 in. cross-section and a length equal to a typical story height of 13 ft. The system will be analyzed and designed under a uniform live load of 130 psf and a dead load that consists of the slab system’s own weight plus 80 psf. Use $f'_c = 4$ ksi, $f_y = 60$ ksi, and $\gamma_{concrete} = 150$ pcf. This example refers to example 16.1 from *Structural Concrete: Theory and Design* by Hassoun and Al-Manaseer, Third Edition, 2008.

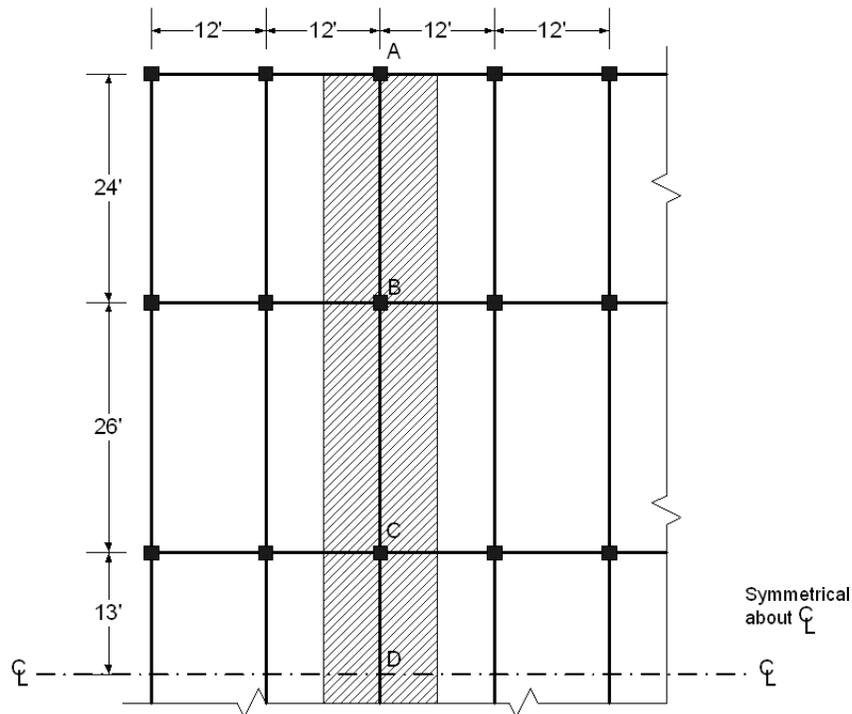


6.3.2 Preparing Input

1. From the **Input** menu, select **General Information**. A dialog box appears.
 - In the LABELS section, input the names of the project, frame, and engineer.
 - In the FRAME section, input 6 for NO OF SUPPORTS as the spBeam models the entire continuous beam.
 - In the FLOOR SYSTEM section, click the radial button next to ONE-WAY / BEAM.
 - Leave all other options in the **General Information** tab to their default settings of ACI 318-14 design code, ASTM A615 reinforcement, and DESIGN run mode option.
 - In the **Solve Options** tab, keep the default settings. Press OK.


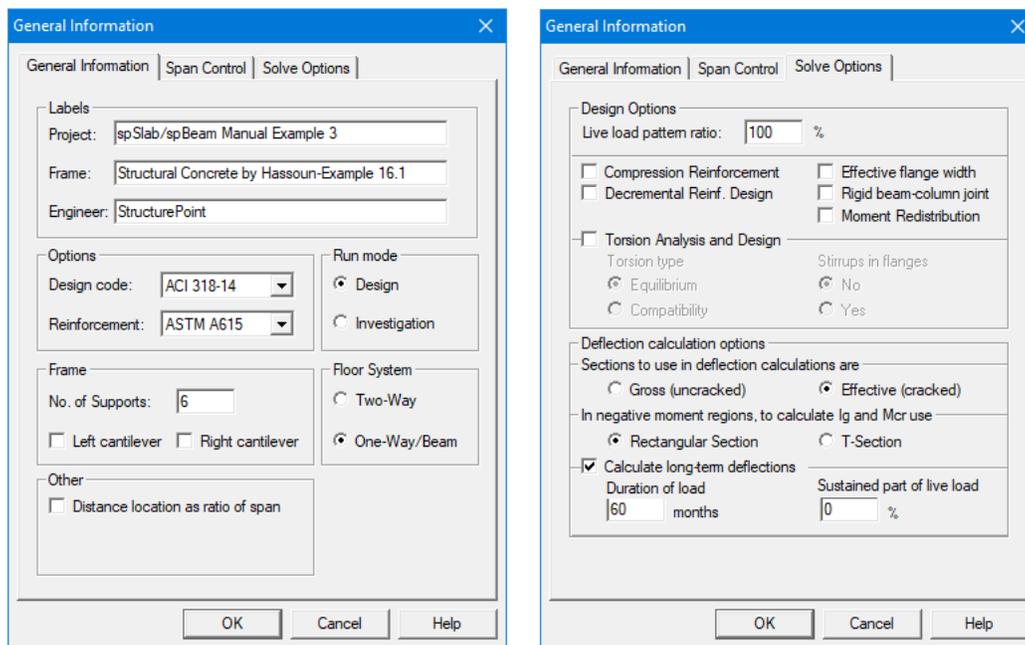


6.3.3 Assigning Properties

2. Nothing needs to be changed in the **Material Properties** menu.

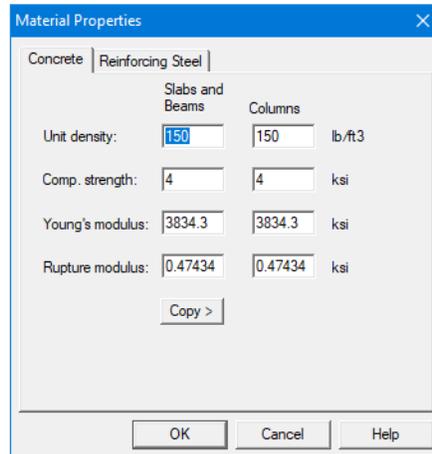


3. From the **Input** menu, select **Spans**. A dialog box appears.
 - Under the **Slabs/Flanges** tab, input 24 for LENGTH, 5 for THICKNESS, and 0 for WIDTH LEFT and WIDTH RIGHT. Press MODIFY. (Note: Since the slab has no width, we must convert the area loads to line loads along the beam and also add the self-weight of the slab to the dead load. This calculation will be shown in Step 8.)
 - Press COPY. Select the check box next to Span 5. Press OK. This will give Span 5 the same geometry as Span 1.
 - Press the drop down arrow next to SPAN and select Span 2. Input 26 for LENGTH, 5 for THICKNESS, and 0 for WIDTH LEFT and WIDTH RIGHT. Press MODIFY.
 - Press COPY. Unselect the check box next to Span 1 and select the check boxes next to Spans 3 and 4. Press OK.
 - Select the **Longitudinal Beams** tab. Input 12 for WIDTH and 22 for DEPTH. Press MODIFY.
 - Press COPY. Press the CHECK ALL button. Press OK.
 - Press OK again.

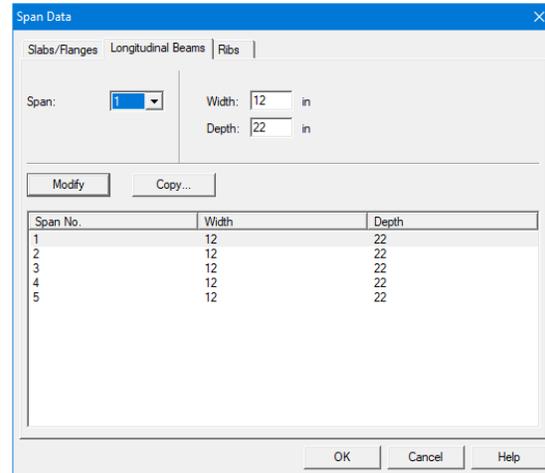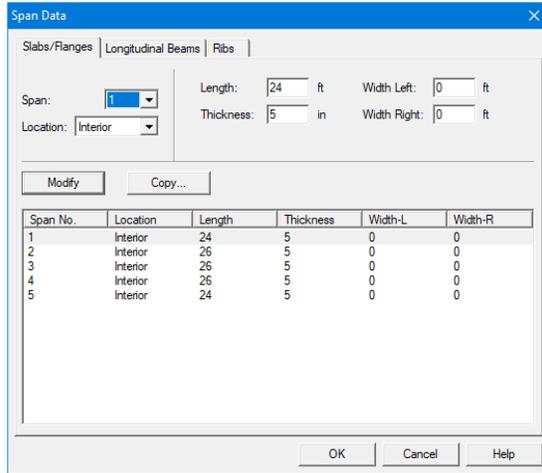


4. From the **Input** menu, select **Supports**. A dialog box appears.


- Under the **Columns** tab, input 13 for both HEIGHT ABOVE and HEIGHT BELOW. Press **MODIFY**. (Note: the default c1 and c2 values for both the column above and below the support can be left alone since all the columns' cross sections are 12 in. × 12 in.)
- Press **COPY**. Press the **CHECK ALL** button. Press **OK**.
- Press **OK** again.

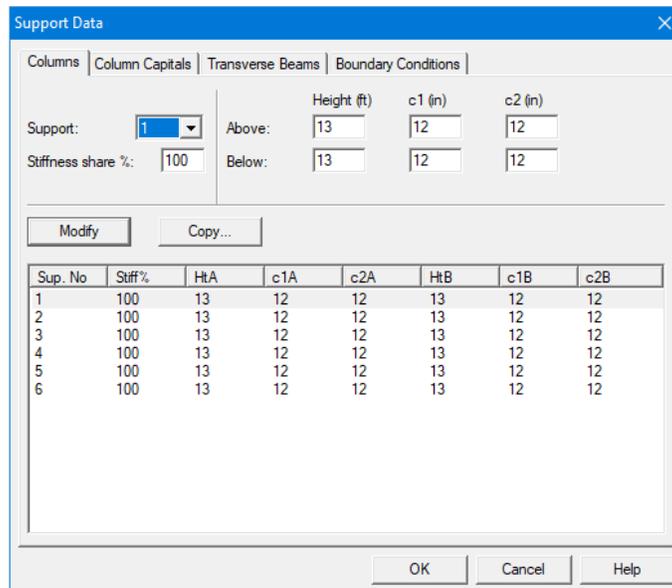


5. From the **Input** menu, select **Reinforcement Criteria**. A dialog box appears.
 - Under the **Beams** tab, use the drop down arrows to change both the MIN and MAX BAR SIZE for TOP BARS to #9.
 - Use the drop down arrows to change both the MIN and MAX BAR SIZE for BOTTOM BARS to #8. Press OK.

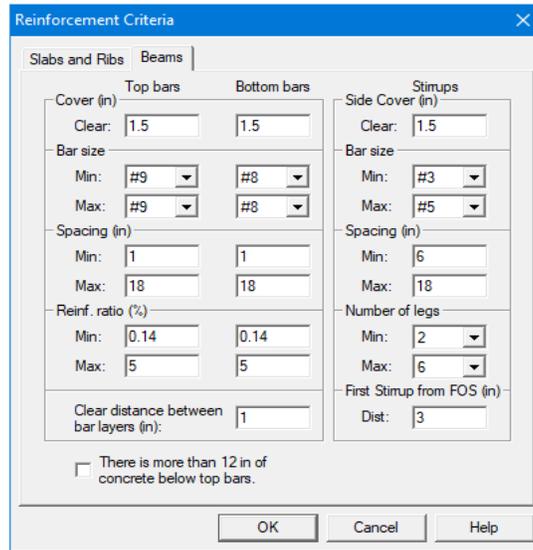

6. From the **Input** menu, select **Load Cases**. A dialog box appears.
 - Since we are not considering lateral forces, click on WIND in the LABEL column on the list in the bottom half of the LOAD CASES dialog box and press the DELETE button.
 - Click on EQ in the LABEL column and press the DELETE button. Press OK.

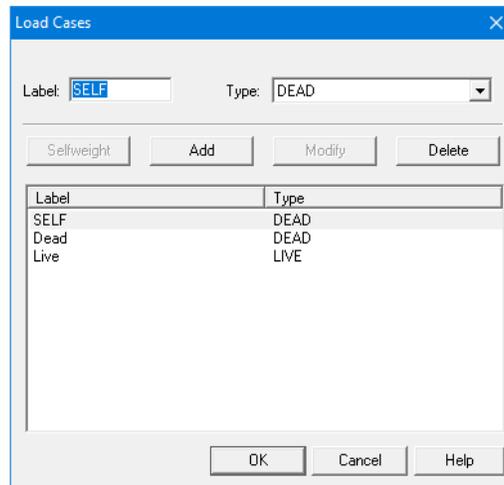

7. From the **Input** menu, select **Load Combinations**. A dialog box appears.
 - Delete all the load combinations by clicking anywhere on the list in the bottom half of the LOAD COMBINATIONS dialog box and pressing the DELETE button. Repeat this procedure until all the load combinations are gone.
 - Input 1 . 2 in the SELF field, 1 . 2 in the DEAD field, and 1 . 6 in the LIVE field. Press ADD.
 - Press OK.

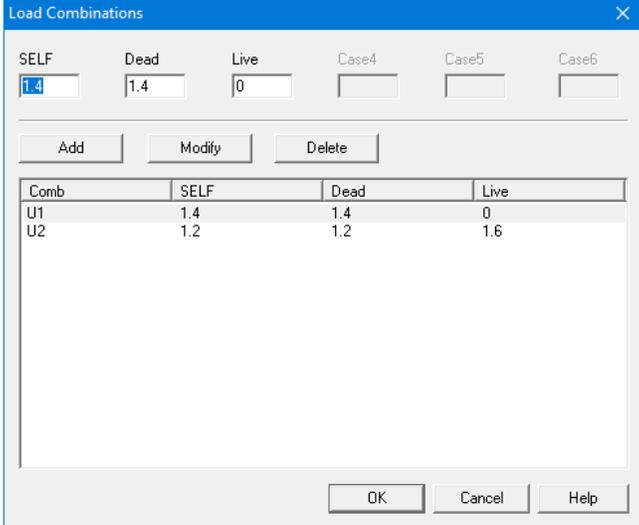


Comb	SELF	Dead	Live
U1	1.4	1.4	0
U2	1.2	1.2	1.6

8. From the **Input** menu, select **Span Loads**. A dialog box appears.
 - Press the drop down arrow next to TYPE, and select LINE LOAD.
 - Input 1647.5 for both the START and END MAGNITUDE. (Note: This value was obtained by converting the area loads of the of the slab’s self weight (without the beam) and superimposed dead load into a line load.)

$$\text{Dead Load} = \left(\frac{5}{12} \text{ft} \times 150 \text{pcf} \times 12 \text{ft} \right) + (80 \text{psf} * 12 \text{ft}) - \left(\frac{5 \text{in} \times 12 \text{in}}{144 \text{in}^2 / \text{ft}^2} \times 150 \text{pcf} \right)$$

$$= 1647.5 \text{lb} / \text{ft}$$

- Input 24 for the END LOCATION. Press ADD.
- Click on SPAN 1 on the list in the bottom half of the SPAN LOADS dialog box. Press the COPY button. (Note: there is a CASE COPY button that should not be pressed.)
- Click the check box next to SPAN 5 and press OK.
- Back in the SPAN LOADS dialog box, use the drop down arrow next to SPAN to select SPAN 2. Keep the START and END MAGNITUDES of 1647.5 lb/ft but change the END LOCATION to 26. Click the ADD button.
- Click on SPAN 2 in the list at the bottom half of the SPAN LOADS dialog box. Press the COPY button.
- Click the check boxes next to SPAN 3 and 4. Press OK.

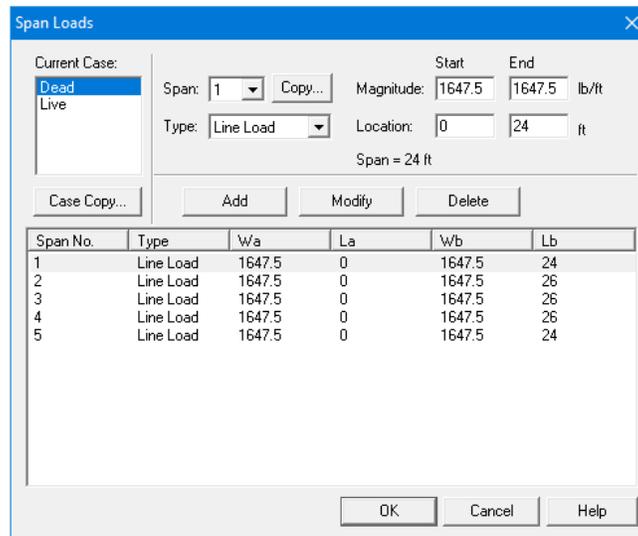


–
–

9. In the top left corner of the SPAN LOADS dialog box, there is a section called CURRENT CASE. Click on LIVE.
 - Use the drop down arrow next to SPAN to select SPAN 1.
 - Making sure that LINE LOAD is still the selected LOAD TYPE, input 1560 for both the START and END MAGNITUDE.

Live Load = $(130psf \times 12ft) = 1560lb / ft$

 - Input 24 for the END LOCATION. Press ADD.
 - Click on SPAN 1 on the list in the bottom half of the SPAN LOADS dialog box. Press the COPY button. (Note: the CASE COPY button should not be pressed.)
 - Click the check box next to SPAN 5 and press OK.
 - Back in the SPAN LOADS dialog box, use the drop down arrow next to SPANS to select SPAN 2. Keep the START and END MAGNITUDES of 1560 lb/ft but change the END LOCATION to 26. Click the ADD button.
 - Click on SPAN 2 in the list at the bottom half of the SPAN LOADS dialog box. Press the COPY button.
 - Click the check boxes next to SPAN 3 AND 4. Press OK.
 - Press OK again.

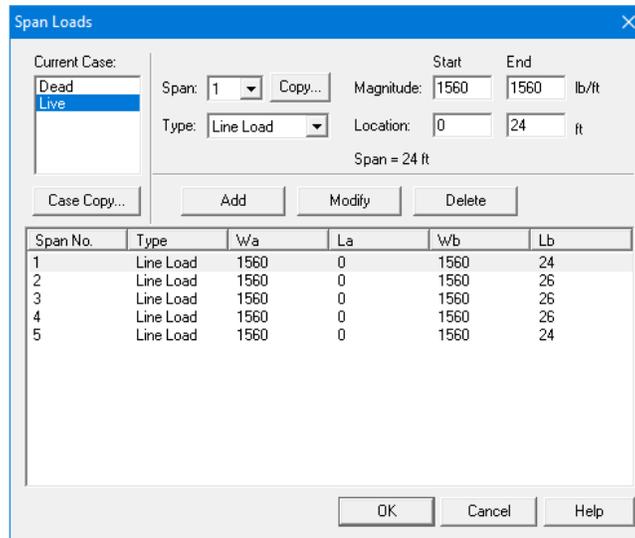

6.3.4 Solving

10. From the **Solve** menu, select **Execute**. Press CLOSE.


11. From the **Solve** menu, select **Results**.
 - Use the explorer to browse through the results tables.
 - Use the ARROW keys or the mouse wheel to browse through different parts of the table quickly. Press the CLOSE button to close the SPRESULTS.

6.3.5 Viewing and Printing Results

12. To view diagrams, select **Loads, Internal Forces, Moment Capacity, Shear Capacity, Deflection, or Reinforcement** from the **View** menu. Right click in any of these diagrams to get new copy, printing, or display options.
13. You may print the results report by using the spReporter module. To print any of the diagrams you selected to view, use the **Print Preview** command found by right clicking in the diagram's window. After viewing the results, you may decide to investigate the input beams under the same loads but with a modified reinforcement configuration.
14. From the **Input** menu, select **General Information**. In the **General Information** dialog box change the RUN MODE option to INVESTIGATION. Do not change any of the other options. Press OK
15. From the **Input** menu, select the different commands under **Reinforcement Criteria** and **Reinforcing Bars** to modify the reinforcement configuration computed by the program.
16. Repeat steps 10 and subsequent to perform the investigation and view the results.



spSlab v5.50 Debug - Mar 29 2018
A Computer Program for Analysis, Design, and Investigation of
Reinforced Concrete Beams, One-way and Two-way Slab Systems
Copyright - 1988-2018, STRUCTUREPOINT, LLC.
All rights reserved

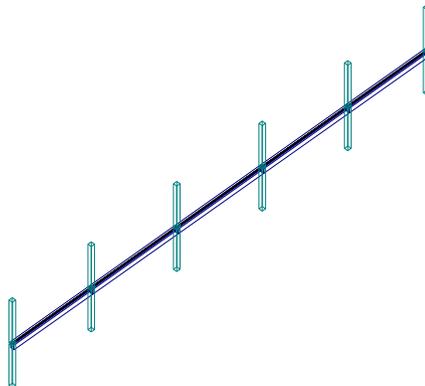

StructurePoint

Licensee stated above acknowledges that STRUCTUREPOINT (SP) is not and cannot be responsible for either the accuracy or adequacy of the material supplied as input for processing by the spSlab computer program. Furthermore, STRUCTUREPOINT neither makes any warranty expressed nor implied with respect to the correctness of the output prepared by the spSlab program. Although STRUCTUREPOINT has endeavored to produce spSlab error free the program is not and cannot be certified infallible. The final and only responsibility for analysis, design and engineering documents is the licensee's. Accordingly, STRUCTUREPOINT disclaims all responsibility in contract, negligence or other tort for any analysis, design or engineering documents prepared in connection with the use of the spSlab program. Licensed to: -- Unknown User --. License ID: 00000-0000000

Contents

1. Input Echo.....	3
1.1. General Information.....	3
1.2. Solve Options.....	3
1.3. Material Properties.....	3
1.3.1. Concrete: Slabs / Beams.....	3
1.3.2. Concrete: Columns.....	3
1.3.3. Reinforcing Steel.....	3
1.4. Reinforcement Database.....	4
1.5. Span Data.....	4
1.5.1. Slabs.....	4
1.5.2. Ribs and Longitudinal Beams.....	4
1.6. Support Data.....	4
1.6.1. Columns.....	4
1.6.2. Boundary Conditions.....	4
1.7. Load Data.....	5
1.7.1. Load Cases and Combinations.....	5
1.7.2. Area Loads.....	5
1.7.3. Line Loads.....	5
1.8. Reinforcement Criteria.....	6
1.8.1. Slabs and Ribs.....	6
1.8.2. Beams.....	6
2. Design Results.....	6
2.1. Top Reinforcement.....	6
2.2. Top Bar Details.....	7
2.3. Top Bar Development Lengths.....	7
2.4. Bottom Reinforcement.....	7
2.5. Bottom Bar Details.....	7
2.6. Bottom Bar Development Lengths.....	8
2.7. Flexural Capacity.....	8
2.8. Longitudinal Beam Transverse Reinforcement Demand and Capacity.....	10
2.8.1. Section Properties.....	10
2.8.2. Beam Transverse Reinforcement Demand.....	10
2.8.3. Beam Transverse Reinforcement Details.....	11
2.8.4. Beam Transverse Reinforcement Capacity.....	11
2.9. Slab Shear Capacity.....	12
2.10. Material TakeOff.....	12
2.10.1. Reinforcement in the Direction of Analysis.....	12

STRUCTUREPOINT - spSlab v5.50 Debug - Mar 29 2018
 Licensed to: -- Unknown User --, License ID: 00000-0000000
 C:\Program Files (x86)\StructurePoin...\Example 3 - Structural Concrete by Hassoun-Example 16.1.slb

Page | 3
 3/30/2018
 11:19 AM

1. Input Echo

1.1. General Information

File Name	...\Example 3 - Structural Concrete by Hassoun...
Project	spSlab/spBeam Manual Example 3
Frame	Structural Concrete by Hassoun-Example 16.1
Engineer	StructurePoint
Code	ACI 318-14
Reinforcement Database	ASTM A615
Mode	Design
Number of supports =	6
Floor System	One-Way/Beam

1.2. Solve Options

Live load pattern ratio = 100%
Deflections are based on cracked section properties.
In negative moment regions, I_g and M_{cr} DO NOT include flange/slab contribution (if available)
Long-term deflections are calculated for load duration of 60 months.
0% of live load is sustained.
Compression reinforcement calculations NOT selected.
Default incremental rebar design selected.
Moment redistribution NOT selected.
Effective flange width calculations NOT selected.
Rigid beam-column joint NOT selected.
Torsion analysis and design NOT selected.

1.3. Material Properties

1.3.1. Concrete: Slabs / Beams

w_c	150 lb/ft ³
f'_c	4 ksi
E_c	3834.3 ksi
f_r	0.474342 ksi

1.3.2. Concrete: Columns

w_c	150 lb/ft ³
f'_c	4 ksi
E_c	3834.3 ksi
f_r	0.47434 ksi

1.3.3. Reinforcing Steel

f_y	60 ksi
f_{yt}	60 ksi
E_s	29000 ksi
Epoxy coated bars	No

1.4. Reinforcement Database

Size	Db in	Ab in ²	Wb lb/ft	Size	Db in	Ab in ²	Wb lb/ft
#3	0.38	0.11	0.38	#4	0.50	0.20	0.67
#5	0.63	0.31	1.04	#6	0.75	0.44	1.50
#7	0.88	0.60	2.04	#8	1.00	0.79	2.67
#9	1.13	1.00	3.40	#10	1.27	1.27	4.30
#11	1.41	1.56	5.31	#14	1.69	2.25	7.65
#18	2.26	4.00	13.60				

1.5. Span Data
1.5.1. Slabs

Span	Loc	L1 ft	t in	wL ft	wR ft	H _{min} in
1	Int	24.000	5.00	0.500	0.500	0.00
2	Int	26.000	5.00	0.500	0.500	0.00
3	Int	26.000	5.00	0.500	0.500	0.00
4	Int	26.000	5.00	0.500	0.500	0.00
5	Int	24.000	5.00	0.500	0.500	0.00

1.5.2. Ribs and Longitudinal Beams

Span	Ribs			Beams		Span
	b in	h in	Sp in	b in	h in	H _{min} in
1	0.00	0.00	0.00	12.00	22.00	15.57
2	0.00	0.00	0.00	12.00	22.00	14.86
3	0.00	0.00	0.00	12.00	22.00	14.86
4	0.00	0.00	0.00	12.00	22.00	14.86
5	0.00	0.00	0.00	12.00	22.00	15.57

1.6. Support Data
1.6.1. Columns

Support	c1a in	c2a in	Ha ft	c1b in	c2b in	Hb ft	Red %
1	12.00	12.00	13.000	12.00	12.00	13.000	100
2	12.00	12.00	13.000	12.00	12.00	13.000	100
3	12.00	12.00	13.000	12.00	12.00	13.000	100
4	12.00	12.00	13.000	12.00	12.00	13.000	100
5	12.00	12.00	13.000	12.00	12.00	13.000	100
6	12.00	12.00	13.000	12.00	12.00	13.000	100

1.6.2. Boundary Conditions

Support	Spring		Far End	
	K _x kip/in	K _{xy} kip-in/rad	Above	Below
1	0	0	Fixed	Fixed
2	0	0	Fixed	Fixed
3	0	0	Fixed	Fixed
4	0	0	Fixed	Fixed
5	0	0	Fixed	Fixed
6	0	0	Fixed	Fixed

1.7. Load Data

1.7.1. Load Cases and Combinations

Case Type	SELF DEAD	Dead DEAD	Live LIVE
U1	1.400	1.400	0.000
U2	1.200	1.200	1.600

1.7.2. Area Loads

Case/Patt	Span	Wa lb/ft ²
SELF	1	62.50
	2	62.50
	3	62.50
	4	62.50
	5	62.50

1.7.3. Line Loads

Case/Patt	Span	Wa lb/ft	La ft	Wb lb/ft	Lb ft
SELF	1	212.50	0.000	212.50	24.000
	2	212.50	0.000	212.50	26.000
	3	212.50	0.000	212.50	26.000
	4	212.50	0.000	212.50	26.000
	5	212.50	0.000	212.50	24.000
Dead	1	1647.50	0.000	1647.50	24.000
	2	1647.50	0.000	1647.50	26.000
	3	1647.50	0.000	1647.50	26.000
	4	1647.50	0.000	1647.50	26.000
	5	1647.50	0.000	1647.50	24.000
Live	1	1560.00	0.000	1560.00	24.000
	2	1560.00	0.000	1560.00	26.000
	3	1560.00	0.000	1560.00	26.000
	4	1560.00	0.000	1560.00	26.000
	5	1560.00	0.000	1560.00	24.000
Live/Odd	1	1560.00	0.000	1560.00	24.000
	3	1560.00	0.000	1560.00	26.000
	5	1560.00	0.000	1560.00	24.000
Live/Even	2	1560.00	0.000	1560.00	26.000
	4	1560.00	0.000	1560.00	26.000
Live/S1	1	1560.00	0.000	1560.00	24.000
	1	1560.00	0.000	1560.00	24.000
Live/S2	2	1560.00	0.000	1560.00	26.000
	2	1560.00	0.000	1560.00	26.000
Live/S3	2	1560.00	0.000	1560.00	26.000
	3	1560.00	0.000	1560.00	26.000
Live/S4	3	1560.00	0.000	1560.00	26.000
	4	1560.00	0.000	1560.00	26.000
Live/S5	4	1560.00	0.000	1560.00	26.000
	5	1560.00	0.000	1560.00	24.000
Live/S6	5	1560.00	0.000	1560.00	24.000

1.8. Reinforcement Criteria

1.8.1. Slabs and Ribs

	Units	Top Bars		Bottom Bars	
		Min.	Max.	Min.	Max.
Bar Size		#9	#9	#8	#8
Bar spacing	in	1.00	18.00	1.00	18.00
Reinf ratio	%	0.14	5.00	0.14	5.00
Clear Cover	in	1.50		1.50	

There is NOT more than 12 in of concrete below top bars.

1.8.2. Beams

	Units	Top Bars		Bottom Bars		Stirrups	
		Min.	Max.	Min.	Max.	Min.	Max.
Bar Size		#9	#9	#8	#8	#3	#5
Bar spacing	in	1.00	18.00	1.00	18.00	6.00	18.00
Reinf ratio	%	0.14	5.00	0.14	5.00		
Clear Cover	in	1.50		1.50			
Layer dist.	in	1.00		1.00			
No. of legs						2	6
Side cover	in					1.50	
1st Stirrup	in					3.00	

There is NOT more than 12 in of concrete below top bars.

2. Design Results

2.1. Top Reinforcement

Span Zone	Width ft	M _{max} k-ft	X _{max} ft	A _{s,min} in ²	A _{s,max} in ²	A _{s,req} in ²	SP _{prov} in	Bars
1 Left	1.00	77.75	0.500	0.797	4.321	0.896	6.220	2-#9
Midspan	1.00	0.00	12.000	0.000	4.321	0.000	0.000	---
Right	1.00	268.24	23.500	0.776	4.206	3.549	3.110	4-#9 2L
2 Left	1.00	267.45	0.500	0.776	4.206	3.537	3.110	4-#9 2L
Midspan	1.00	0.00	13.000	0.000	4.321	0.000	0.000	---
Right	1.00	264.30	25.500	0.776	4.206	3.488	3.110	4-#9 2L
3 Left	1.00	265.14	0.500	0.776	4.206	3.501	3.110	4-#9 2L
Midspan	1.00	0.00	13.000	0.000	4.321	0.000	0.000	---
Right	1.00	265.14	25.500	0.776	4.206	3.501	3.110	4-#9 2L
4 Left	1.00	264.30	0.500	0.776	4.206	3.488	3.110	4-#9 2L
Midspan	1.00	0.00	13.000	0.000	4.321	0.000	0.000	---
Right	1.00	267.45	25.500	0.776	4.206	3.537	3.110	4-#9 2L
5 Left	1.00	268.24	0.500	0.776	4.206	3.549	3.110	4-#9 2L
Midspan	1.00	0.00	12.000	0.000	4.321	0.000	0.000	---
Right	1.00	77.75	23.500	0.797	4.321	0.896	6.220	2-#9

STRUCTUREPOINT - spSlab v5.50 Debug - Mar 29 2018
 Licensed to: -- Unknown User --. License ID: 00000-0000000
 C:\Program Files (x86)\StructurePoin...\Example 3 - Structural Concrete by Hassoun-Example 16.1.slb

Page | 7
 3/30/2018
 11:19 AM

2.2. Top Bar Details

NOTES:

* - Bar cut-off location does not meet ACI 318, 12.10.5.1. Revise location, unless the requirements of either 12.10.5.2 or 12.10.5.3 are manually checked and satisfied.

Span	Left				Continuous		Right			
	Bars	Length ft	Bars	Length ft	Bars	Length ft	Bars	Length ft	Bars	Length ft
1	1-#9	3.91	1-#9 *	2.14	---	---	2-#9	9.62	2-#9 *	4.80
2	2-#9	10.37	2-#9 *	4.79	---	---	2-#9	10.37	2-#9 *	4.73
3	2-#9	10.12	2-#9 *	4.75	---	---	2-#9	10.12	2-#9 *	4.75
4	2-#9	10.37	2-#9 *	4.73	---	---	2-#9	10.37	2-#9 *	4.79
5	2-#9	9.62	2-#9 *	4.80	---	---	1-#9	3.91	1-#9 *	2.14

2.3. Top Bar Development Lengths

Span	Left				Continuous		Right			
	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in
1	1-#9	19.66	1-#9	19.66	---	---	2-#9	51.66	2-#9	51.66
2	2-#9	51.48	2-#9	51.48	---	---	2-#9	50.76	2-#9	50.76
3	2-#9	50.95	2-#9	50.95	---	---	2-#9	50.95	2-#9	50.95
4	2-#9	50.76	2-#9	50.76	---	---	2-#9	51.48	2-#9	51.48
5	2-#9	51.66	2-#9	51.66	---	---	1-#9	19.66	1-#9	19.66

2.4. Bottom Reinforcement

Span	Width ft	M _{max} k-ft	X _{max} ft	A _{s,min} in ²	A _{s,max} in ²	A _{s,req} in ²	S _{p,prov} in	Bars
1	1.00	183.86	11.000	0.800	4.335	2.225	3.155	3-#8
2	1.00	171.61	13.250	0.800	4.335	2.063	3.155	3-#8
3	1.00	177.76	13.000	0.800	4.335	2.144	3.155	3-#8
4	1.00	171.61	12.750	0.800	4.335	2.063	3.155	3-#8
5	1.00	183.86	13.000	0.800	4.335	2.225	3.155	3-#8

2.5. Bottom Bar Details

Notes:

* - Bar cut-off location does not meet ACI 318, 12.10.5.1. Revise location, unless the requirements of either 12.10.5.2 or 12.10.5.3 are manually checked and satisfied.

Span	Long Bars			Short Bars		
	Bars	Start ft	Length ft	Bars	Start ft	Length ft
1	2-#8	0.00	24.00	1-#8 *	2.85	16.17
2	2-#8	0.00	26.00	1-#8 *	5.96	14.46

STRUCTUREPOINT - spSlab v5.50 Debug - Mar 29 2018
 Licensed to: -- Unknown User --, License ID: 00000-0000000
 C:\Program Files (x86)\StructurePoin...\Example 3 - Structural Concrete by Hassoun-Example 16.1.slb

Page | 8
 3/30/2018
 11:19 AM

Span	Long Bars			Short Bars		
	Bars	Start ft	Length ft	Bars	Start ft	Length ft
3	2-#8	0.00	26.00	1-#8	5.33	15.34
4	2-#8	0.00	26.00	1-#8 *	5.58	14.46
5	2-#8	0.00	24.00	1-#8 *	4.98	16.17

2.6. Bottom Bar Development Lengths

Span	Long Bars		Short Bars	
	Bars	DevLen in	Bars	DevLen in
1	2-#8	42.34	1-#8	42.34
2	2-#8	39.26	1-#8	39.26
3	2-#8	40.80	1-#8	40.80
4	2-#8	39.26	1-#8	39.26
5	2-#8	42.34	1-#8	42.34

2.7. Flexural Capacity

Span	x ft	A _{s,top} in ²	Top				Bottom				
			ΦM _n - k-ft	M _u - k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _n + k-ft	M _u + k-ft	Comb Pat	Status
1	0.000	2.00	-166.19	-103.42	U2 Odd	---	1.58	133.94	0.00	U1 All	---
	0.500	2.00	-166.19	-77.75	U2 Odd	OK	1.58	133.94	0.00	U1 All	OK
	2.138	1.00	-86.40	-2.11	U2 Odd	OK	1.58	133.94	9.83	U2 Even	OK
	2.273	1.00	-86.40	0.00	U1 All	OK	1.58	133.94	11.91	U2 Even	OK
	2.852	0.65	-56.65	0.00	U1 All	OK	1.58	133.94	32.58	U2 S2	OK
	3.911	0.00	0.00	0.00	U1 All	OK	1.82	152.63	67.00	U2 S2	OK
	6.380	0.00	0.00	0.00	U1 All	OK	2.37	194.71	133.94	U2 Odd	OK
	8.550	0.00	0.00	0.00	U1 All	OK	2.37	194.71	170.15	U2 Odd	OK
	11.000	0.00	0.00	0.00	U1 All	OK	2.37	194.71	183.86	U2 Odd	OK
	12.000	0.00	0.00	0.00	U1 All	OK	2.37	194.71	181.15	U2 Odd	OK
	14.383	0.00	0.00	0.00	U1 All	OK	2.37	194.71	155.32	U2 Odd	OK
	15.450	0.50	-43.66	0.00	U1 All	OK	2.37	194.71	134.94	U2 Odd	OK
	15.497	0.52	-45.54	0.00	U1 All	OK	2.37	194.71	133.94	U2 Odd	OK
	18.688	2.00	-166.19	-50.91	U2 Even	OK	1.66	139.92	39.58	U2 Odd	OK
19.025	2.00	-166.19	-58.70	U2 Even	OK	1.58	133.94	26.78	U2 Odd	OK	
19.195	2.00	-166.19	-62.75	U2 Even	OK	1.58	133.94	20.08	U2 Odd	OK	
23.500	4.00	-296.33	-268.24	U2 S2	OK	1.58	133.94	0.00	U1 All	OK	
24.000	4.00	-296.33	-300.91	U2 S2	---	1.58	133.94	0.00	U1 All	---	
2	0.000	4.00	-296.33	-299.70	U2 S2	---	1.58	133.94	0.00	U1 All	---
	0.500	4.00	-296.33	-267.45	U2 S2	OK	1.58	133.94	0.00	U1 All	OK
	4.790	2.00	-166.19	-60.38	U2 S1	OK	1.58	133.94	8.87	U2 S3	OK
	5.959	2.00	-166.19	-36.03	U2 S1	OK	1.58	133.94	48.30	U2 S3	OK
	6.077	2.00	-166.19	-33.75	U2 S1	OK	1.61	136.21	51.91	U2 S3	OK
	9.231	0.53	-46.60	0.00	U1 All	OK	2.37	194.71	133.94	U2 Even	OK
	9.250	0.52	-45.82	0.00	U1 All	OK	2.37	194.71	134.32	U2 Even	OK
	10.367	0.00	0.00	0.00	U1 All	OK	2.37	194.71	152.43	U2 Even	OK

Span	x ft	Top					Bottom				
		A _{s,top} in ²	ΦM _{n-} k-ft	M _{u-} k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _{n+} k-ft	M _{u+} k-ft	Comb Pat	Status
	13.000	0.00	0.00	0.00	U1 All	OK	2.37	194.71	171.53	U2 Even	OK
	13.250	0.00	0.00	0.00	U1 All	OK	2.37	194.71	171.61	U2 Even	OK
	15.633	0.00	0.00	0.00	U1 All	OK	2.37	194.71	157.26	U2 Even	OK
	16.750	0.53	-46.45	0.00	U1 All	OK	2.37	194.71	141.20	U2 Even	OK
	17.150	0.72	-62.64	0.00	U1 All	OK	2.37	194.71	133.94	U2 Even	OK
	19.863	2.00	-166.19	-32.00	U2 Odd	OK	1.71	144.61	64.67	U2 Even	OK
	20.422	2.00	-166.19	-41.23	U2 Odd	OK	1.58	133.94	46.02	U2 Even	OK
	21.270	2.00	-166.19	-56.62	U2 Odd	OK	1.58	133.94	14.87	U2 Even	OK
	25.500	4.00	-296.33	-264.30	U2 S3	OK	1.58	133.94	0.00	U1 All	OK
	26.000	4.00	-296.33	-296.36	U2 S3	---	1.58	133.94	0.00	U1 All	---
3	0.000	4.00	-296.33	-297.34	U2 S3	---	1.58	133.94	0.00	U1 All	---
	0.500	4.00	-296.33	-265.14	U2 S3	OK	1.58	133.94	0.00	U1 All	OK
	4.746	2.00	-166.19	-53.82	U2 Even	OK	1.58	133.94	14.15	U2 Odd	OK
	5.329	2.00	-166.19	-43.14	U2 Even	OK	1.58	133.94	36.41	U2 Odd	OK
	5.871	2.00	-166.19	-33.88	U2 Even	OK	1.71	143.91	55.67	U2 Odd	OK
	8.729	0.65	-57.24	0.00	U1 All	OK	2.37	194.71	133.94	U2 Odd	OK
	9.250	0.41	-36.08	0.00	U1 All	OK	2.37	194.71	143.99	U2 Odd	OK
	10.117	0.00	0.00	0.00	U1 All	OK	2.37	194.71	157.76	U2 Odd	OK
	13.000	0.00	0.00	0.00	U1 All	OK	2.37	194.71	177.76	U2 Odd	OK
	15.883	0.00	0.00	0.00	U1 All	OK	2.37	194.71	157.76	U2 Odd	OK
	16.750	0.41	-36.08	0.00	U1 All	OK	2.37	194.71	143.99	U2 Odd	OK
	17.271	0.65	-57.24	0.00	U1 All	OK	2.37	194.71	133.94	U2 Odd	OK
	20.129	2.00	-166.19	-33.88	U2 Even	OK	1.71	143.91	55.67	U2 Odd	OK
	20.671	2.00	-166.19	-43.14	U2 Even	OK	1.58	133.94	36.41	U2 Odd	OK
	21.254	2.00	-166.19	-53.82	U2 Even	OK	1.58	133.94	14.15	U2 Odd	OK
	25.500	4.00	-296.33	-265.14	U2 S4	OK	1.58	133.94	0.00	U1 All	OK
	26.000	4.00	-296.33	-297.34	U2 S4	---	1.58	133.94	0.00	U1 All	---
4	0.000	4.00	-296.33	-296.36	U2 S4	---	1.58	133.94	0.00	U1 All	---
	0.500	4.00	-296.33	-264.30	U2 S4	OK	1.58	133.94	0.00	U1 All	OK
	4.730	2.00	-166.19	-56.62	U2 Odd	OK	1.58	133.94	14.87	U2 Even	OK
	5.578	2.00	-166.19	-41.23	U2 Odd	OK	1.58	133.94	46.02	U2 Even	OK
	6.137	2.00	-166.19	-32.00	U2 Odd	OK	1.71	144.61	64.67	U2 Even	OK
	8.850	0.72	-62.64	0.00	U1 All	OK	2.37	194.71	133.94	U2 Even	OK
	9.250	0.53	-46.45	0.00	U1 All	OK	2.37	194.71	141.20	U2 Even	OK
	10.367	0.00	0.00	0.00	U1 All	OK	2.37	194.71	157.26	U2 Even	OK
	12.750	0.00	0.00	0.00	U1 All	OK	2.37	194.71	171.61	U2 Even	OK
	13.000	0.00	0.00	0.00	U1 All	OK	2.37	194.71	171.53	U2 Even	OK
	15.633	0.00	0.00	0.00	U1 All	OK	2.37	194.71	152.43	U2 Even	OK
	16.750	0.52	-45.82	0.00	U1 All	OK	2.37	194.71	134.32	U2 Even	OK
	16.769	0.53	-46.60	0.00	U1 All	OK	2.37	194.71	133.94	U2 Even	OK
	19.923	2.00	-166.19	-33.75	U2 S6	OK	1.61	136.21	51.91	U2 S4	OK
	20.041	2.00	-166.19	-36.03	U2 S6	OK	1.58	133.94	48.30	U2 S4	OK
	21.210	2.00	-166.19	-60.38	U2 S6	OK	1.58	133.94	8.87	U2 S4	OK
	25.500	4.00	-296.33	-267.45	U2 S5	OK	1.58	133.94	0.00	U1 All	OK
	26.000	4.00	-296.33	-299.70	U2 S5	---	1.58	133.94	0.00	U1 All	---
5	0.000	4.00	-296.33	-300.91	U2 S5	---	1.58	133.94	0.00	U1 All	---
	0.500	4.00	-296.33	-268.24	U2 S5	OK	1.58	133.94	0.00	U1 All	OK
	4.805	2.00	-166.19	-62.75	U2 Even	OK	1.58	133.94	20.08	U2 Odd	OK
	4.975	2.00	-166.19	-58.70	U2 Even	OK	1.58	133.94	26.78	U2 Odd	OK
	5.312	2.00	-166.19	-50.91	U2 Even	OK	1.66	139.92	39.58	U2 Odd	OK
	8.503	0.52	-45.54	0.00	U1 All	OK	2.37	194.71	133.94	U2 Odd	OK

Span	Top						Bottom				
	x ft	A _{s,top} in ²	ΦM _{n-} k-ft	M _{u-} k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _{n+} k-ft	M _{u+} k-ft	Comb Pat	Status
	8.550	0.50	-43.66	0.00	U1 All	OK	2.37	194.71	134.94	U2 Odd	OK
	9.617	0.00	0.00	0.00	U1 All	OK	2.37	194.71	155.32	U2 Odd	OK
	12.000	0.00	0.00	0.00	U1 All	OK	2.37	194.71	181.15	U2 Odd	OK
	13.000	0.00	0.00	0.00	U1 All	OK	2.37	194.71	183.86	U2 Odd	OK
	15.450	0.00	0.00	0.00	U1 All	OK	2.37	194.71	170.15	U2 Odd	OK
	17.620	0.00	0.00	0.00	U1 All	OK	2.37	194.71	133.94	U2 Odd	OK
	20.089	0.00	0.00	0.00	U1 All	OK	1.82	152.63	67.00	U2 S5	OK
	21.148	0.65	-56.65	0.00	U1 All	OK	1.58	133.94	32.58	U2 S5	OK
	21.727	1.00	-86.40	0.00	U1 All	OK	1.58	133.94	11.91	U2 Even	OK
	21.862	1.00	-86.40	-2.11	U2 Odd	OK	1.58	133.94	9.83	U2 Even	OK
	23.500	2.00	-166.19	-77.75	U2 Odd	OK	1.58	133.94	0.00	U1 All	OK
	24.000	2.00	-166.19	-103.42	U2 Odd	---	1.58	133.94	0.00	U1 All	---

2.8. Longitudinal Beam Transverse Reinforcement Demand and Capacity

2.8.1. Section Properties

Span	d in	(A _v /s) _{min} in ² /in	ΦV _c kip
1	19.40	0.0100	22.09
2	19.40	0.0100	22.09
3	19.40	0.0100	22.09
4	19.40	0.0100	22.09
5	19.40	0.0100	22.09

2.8.2. Beam Transverse Reinforcement Demand

Notes:

*8 - Minimum transverse (stirrup) reinforcement governs.

Span	Start ft	End ft	Required				Demand
			X _u ft	V _u kip	Comb/Patt	A _v /s in ² /in	A _v /s in ² /in
1	0.750	4.941	2.117	42.36	U2/Odd	0.0232	0.0232
	4.941	7.764	4.941	28.80	U2/Odd	0.0077	0.0100 *8
	7.764	10.588	7.764	15.24	U2/Odd	0.0000	0.0100 *8
	10.588	13.412	13.412	15.70	U2/S2	0.0000	0.0100 *8
	13.412	16.236	16.236	29.27	U2/S2	0.0082	0.0100 *8
	16.236	19.059	19.059	42.83	U2/S2	0.0238	0.0238
	19.059	23.250	21.883	56.39	U2/S2	0.0393	0.0393
2	0.750	5.226	2.117	55.52	U2/S2	0.0383	0.0383
	5.226	8.336	5.226	40.59	U2/S2	0.0212	0.0212
	8.336	11.445	8.336	25.66	U2/S2	0.0041	0.0100 *8
	11.445	14.555	11.445	10.72	U2/S2	0.0000	0.0000
	14.555	17.664	17.664	25.29	U2/S3	0.0037	0.0100 *8
	17.664	20.774	20.774	40.23	U2/S3	0.0208	0.0208
3	20.774	25.250	23.883	55.16	U2/S3	0.0379	0.0379
	0.750	5.226	2.117	55.45	U2/S3	0.0382	0.0382
	5.226	8.336	5.226	40.51	U2/S3	0.0211	0.0211
	8.336	11.445	8.336	25.58	U2/S3	0.0040	0.0100 *8
	11.445	14.555	11.445	10.64	U2/S3	0.0000	0.0000
4	14.555	17.664	17.664	25.58	U2/S4	0.0040	0.0100 *8
	17.664	20.774	20.774	40.51	U2/S4	0.0211	0.0211

Span	Start ft	End ft	Required				Demand
			X _u ft	V _u kip	Comb/Patt	A _v /s in ² /in	A _v /s in ² /in
	20.774	25.250	23.883	55.45	U2/S4	0.0382	0.0382
4	0.750	5.226	2.117	55.16	U2/S4	0.0379	0.0379
	5.226	8.336	5.226	40.23	U2/S4	0.0208	0.0208
	8.336	11.445	8.336	25.29	U2/S4	0.0037	0.0100 *8
	11.445	14.555	14.555	10.72	U2/S5	0.0000	0.0000
	14.555	17.664	17.664	25.66	U2/S5	0.0041	0.0100 *8
	17.664	20.774	20.774	40.59	U2/S5	0.0212	0.0212
	20.774	25.250	23.883	55.52	U2/S5	0.0383	0.0383
5	0.750	4.941	2.117	56.39	U2/S5	0.0393	0.0393
	4.941	7.764	4.941	42.83	U2/S5	0.0238	0.0238
	7.764	10.588	7.764	29.27	U2/S5	0.0082	0.0100 *8
	10.588	13.412	10.588	15.70	U2/S5	0.0000	0.0100 *8
	13.412	16.236	16.236	15.24	U2/Odd	0.0000	0.0100 *8
	16.236	19.059	19.059	28.80	U2/Odd	0.0077	0.0100 *8
	19.059	23.250	21.883	42.36	U2/Odd	0.0232	0.0232

2.8.3. Beam Transverse Reinforcement Details

Span	Size	Stirrups (2 legs each unless otherwise noted)
1	#3	7 @ 7.7 + 14 @ 9.7 + 4 @ 8.5 + 10 @ 5.3
2	#3	10 @ 5.7 + 8 @ 9.3 + <- 37.3 -> + 8 @ 9.3 + 10 @ 5.7
3	#3	10 @ 5.7 + 8 @ 9.3 + <- 37.3 -> + 8 @ 9.3 + 10 @ 5.7
4	#3	10 @ 5.7 + 8 @ 9.3 + <- 37.3 -> + 8 @ 9.3 + 10 @ 5.7
5	#3	10 @ 5.3 + 4 @ 8.5 + 14 @ 9.7 + 7 @ 7.7

2.8.4. Beam Transverse Reinforcement Capacity

Notes:
 *8 - Minimum transverse (stirrup) reinforcement governs.

Span	Start ft	End ft	Required				Provided			
			X _u ft	V _u kip	Comb/Patt	A _v /s in ² /in	A _v in ²	Sp in	A _v /s in ² /in	ΦV _n kip
1	0.000	0.750	2.117	42.36	U2/Odd	----	----	----	----	
	0.750	4.941	2.117	42.36	U2/Odd	0.0232	0.22	7.7	0.0284	46.92
	4.941	16.236	16.236	29.27	U2/S2	0.0082	0.22	9.7	0.0227	41.93 *8
	16.236	19.059	19.059	42.83	U2/S2	0.0238	0.22	8.5	0.0260	44.77
	19.059	23.250	21.883	56.39	U2/S2	0.0393	0.22	5.3	0.0416	58.38
	23.250	24.000	21.883	56.39	U2/S2	----	----	----	----	----
2	0.000	0.750	2.117	55.52	U2/S2	----	----	----	----	
	0.750	5.226	2.117	55.52	U2/S2	0.0383	0.22	5.7	0.0389	56.06
	5.226	11.445	5.226	40.59	U2/S2	0.0212	0.22	9.3	0.0236	42.68
	11.445	14.555	11.445	10.72	U2/S2	0.0000	----	----	----	11.04
	14.555	20.774	20.774	40.23	U2/S3	0.0208	0.22	9.3	0.0236	42.68
	20.774	25.250	23.883	55.16	U2/S3	0.0379	0.22	5.7	0.0389	56.06
	25.250	26.000	23.883	55.16	U2/S3	----	----	----	----	----
3	0.000	0.750	2.117	55.45	U2/S3	----	----	----	----	
	0.750	5.226	2.117	55.45	U2/S3	0.0382	0.22	5.7	0.0389	56.06
	5.226	11.445	5.226	40.51	U2/S3	0.0211	0.22	9.3	0.0236	42.68
	11.445	14.555	11.445	10.64	U2/S3	0.0000	----	----	----	11.04
	14.555	20.774	20.774	40.51	U2/S4	0.0211	0.22	9.3	0.0236	42.68

Span	Start ft	End ft	Required				Provided			
			X _u ft	V _u kip	Comb/Patt	A _w /s in ² /in	A _v in ²	S _p in	A _w /s in ² /in	ΦV _n kip
	20.774	25.250	23.883	55.45	U2/S4	0.0382	0.22	5.7	0.0389	56.06
	25.250	26.000	23.883	55.45	U2/S4	----	----	----	----	----
4	0.000	0.750	2.117	55.16	U2/S4	----	----	----	----	----
	0.750	5.226	2.117	55.16	U2/S4	0.0379	0.22	5.7	0.0389	56.06
	5.226	11.445	5.226	40.23	U2/S4	0.0208	0.22	9.3	0.0236	42.68
	11.445	14.555	14.555	10.72	U2/S5	0.0000	----	----	----	11.04
	14.555	20.774	20.774	40.59	U2/S5	0.0212	0.22	9.3	0.0236	42.68
	20.774	25.250	23.883	55.52	U2/S5	0.0383	0.22	5.7	0.0389	56.06
	25.250	26.000	23.883	55.52	U2/S5	----	----	----	----	----
5	0.000	0.750	2.117	56.39	U2/S5	----	----	----	----	----
	0.750	4.941	2.117	56.39	U2/S5	0.0393	0.22	5.3	0.0416	58.38
	4.941	7.764	4.941	42.83	U2/S5	0.0238	0.22	8.5	0.0260	44.77
	7.764	19.059	7.764	29.27	U2/S5	0.0082	0.22	9.7	0.0227	41.93 *8
	19.059	23.250	21.883	42.36	U2/Odd	0.0232	0.22	7.7	0.0284	46.92
	23.250	24.000	21.883	42.36	U2/Odd	----	----	----	----	----


2.9. Slab Shear Capacity

Span	b	d	V _{ratio}	ΦV _c	V _u	X _u
	in	in		kip	kip	ft
1	---	---	---	---	---	---
2	---	---	---	---	---	---
3	---	---	---	---	---	---
4	---	---	---	---	---	---
5	---	---	---	---	---	---


2.10. Material TakeOff

2.10.1. Reinforcement in the Direction of Analysis


Top Bars	850.9 lb	<=>	6.75 lb/ft	<=>	6.753 lb/ft ²
Bottom Bars	877.4 lb	<=>	6.96 lb/ft	<=>	6.964 lb/ft ²
Stirrups	312.3 lb	<=>	2.48 lb/ft	<=>	2.479 lb/ft ²
Total Steel	2040.6 lb	<=>	16.20 lb/ft	<=>	16.195 lb/ft ²
Concrete	178.5 ft ³	<=>	1.42 ft ³ /ft	<=>	1.417 ft ³ /ft ²

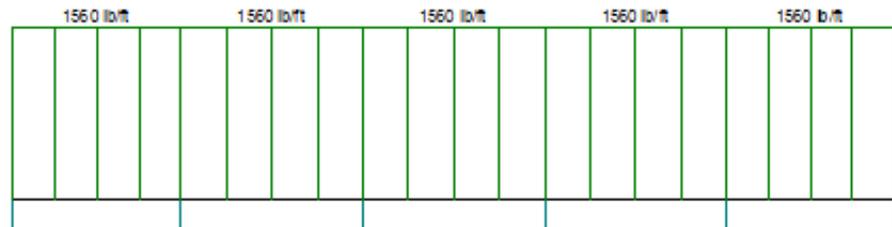

CASE/PATTERN: Live/All

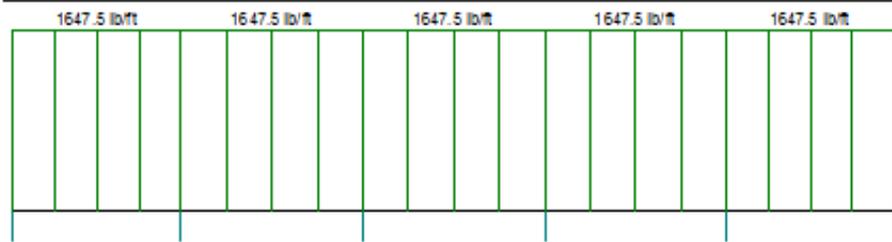

CASE: Dead

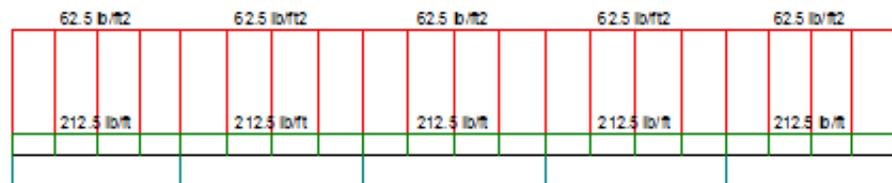

CASE: SELF

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-00000004-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\...\Example 3 - Structural Concrete by Hassoun-Example 16.1.slb

Project: spSlab/spBeam Manual Example 3


Frame: Structural Concrete by Hassoun-Example 16.1


Engineer: StructurePoint

Code: ACI 318-14

Date: 12/11/15

Time: 16:11:52

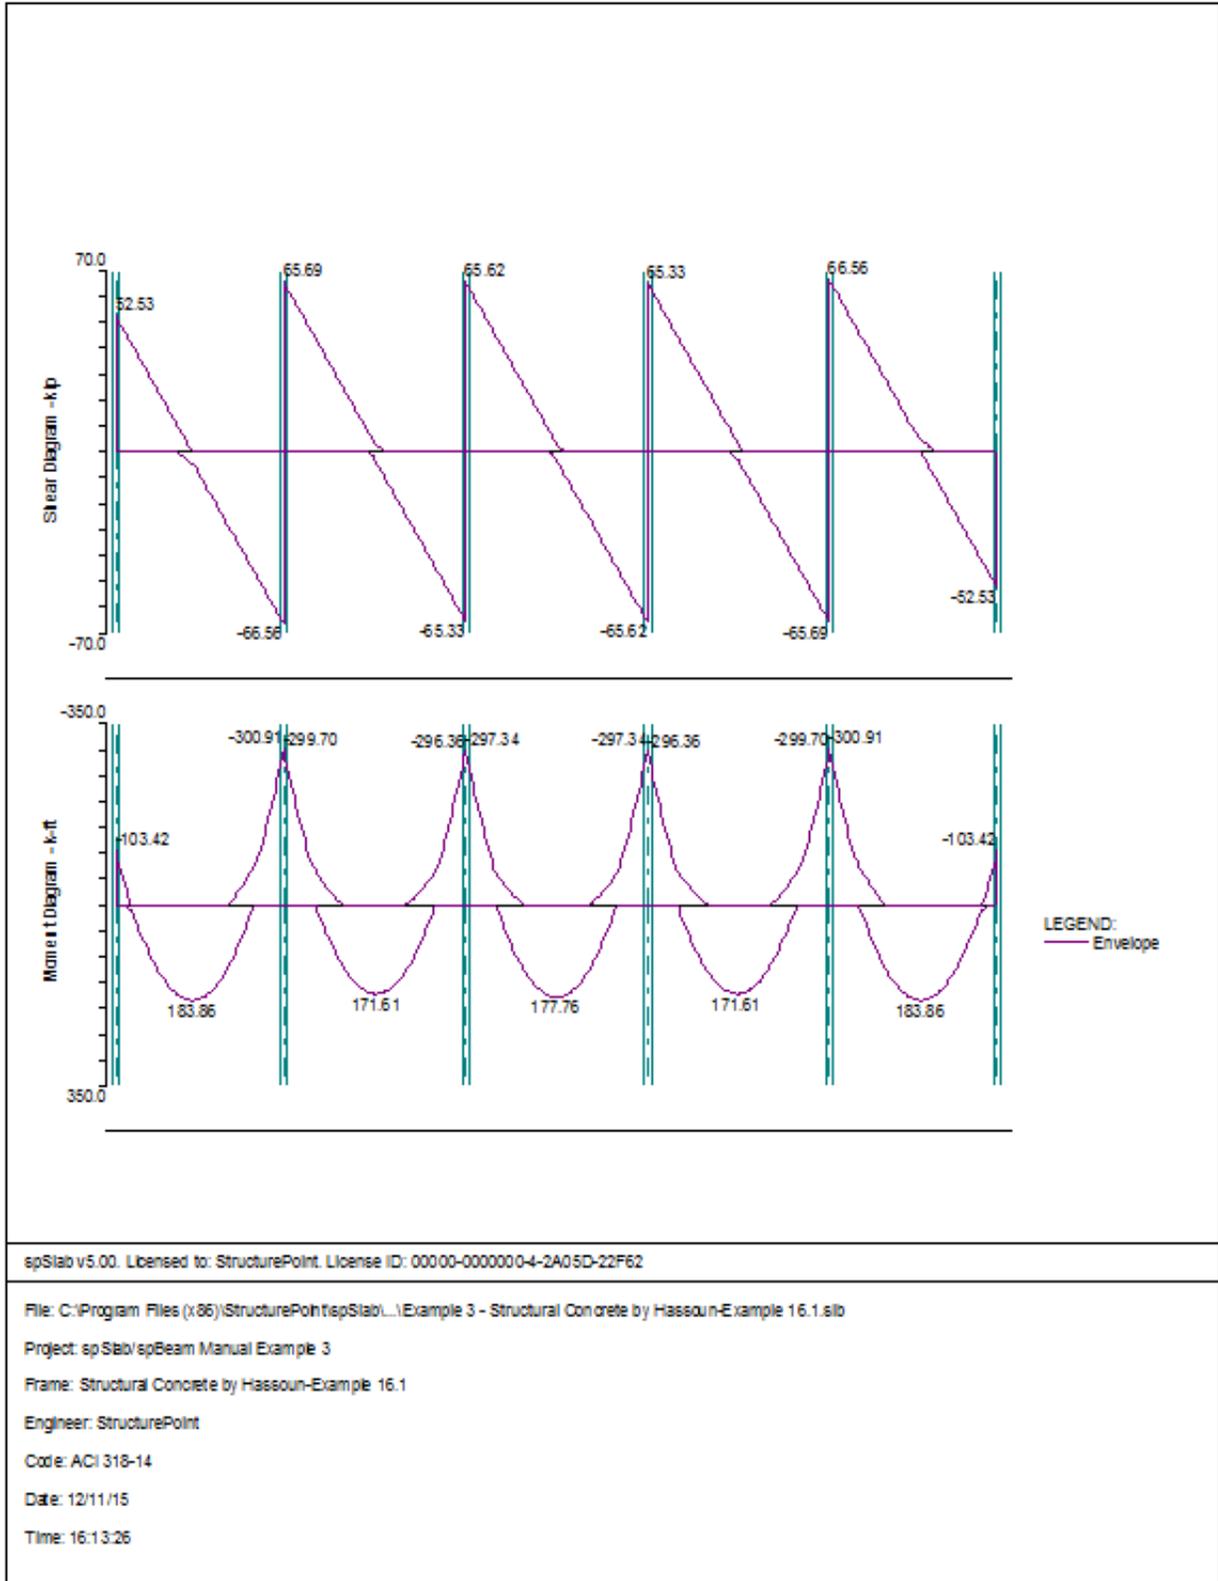

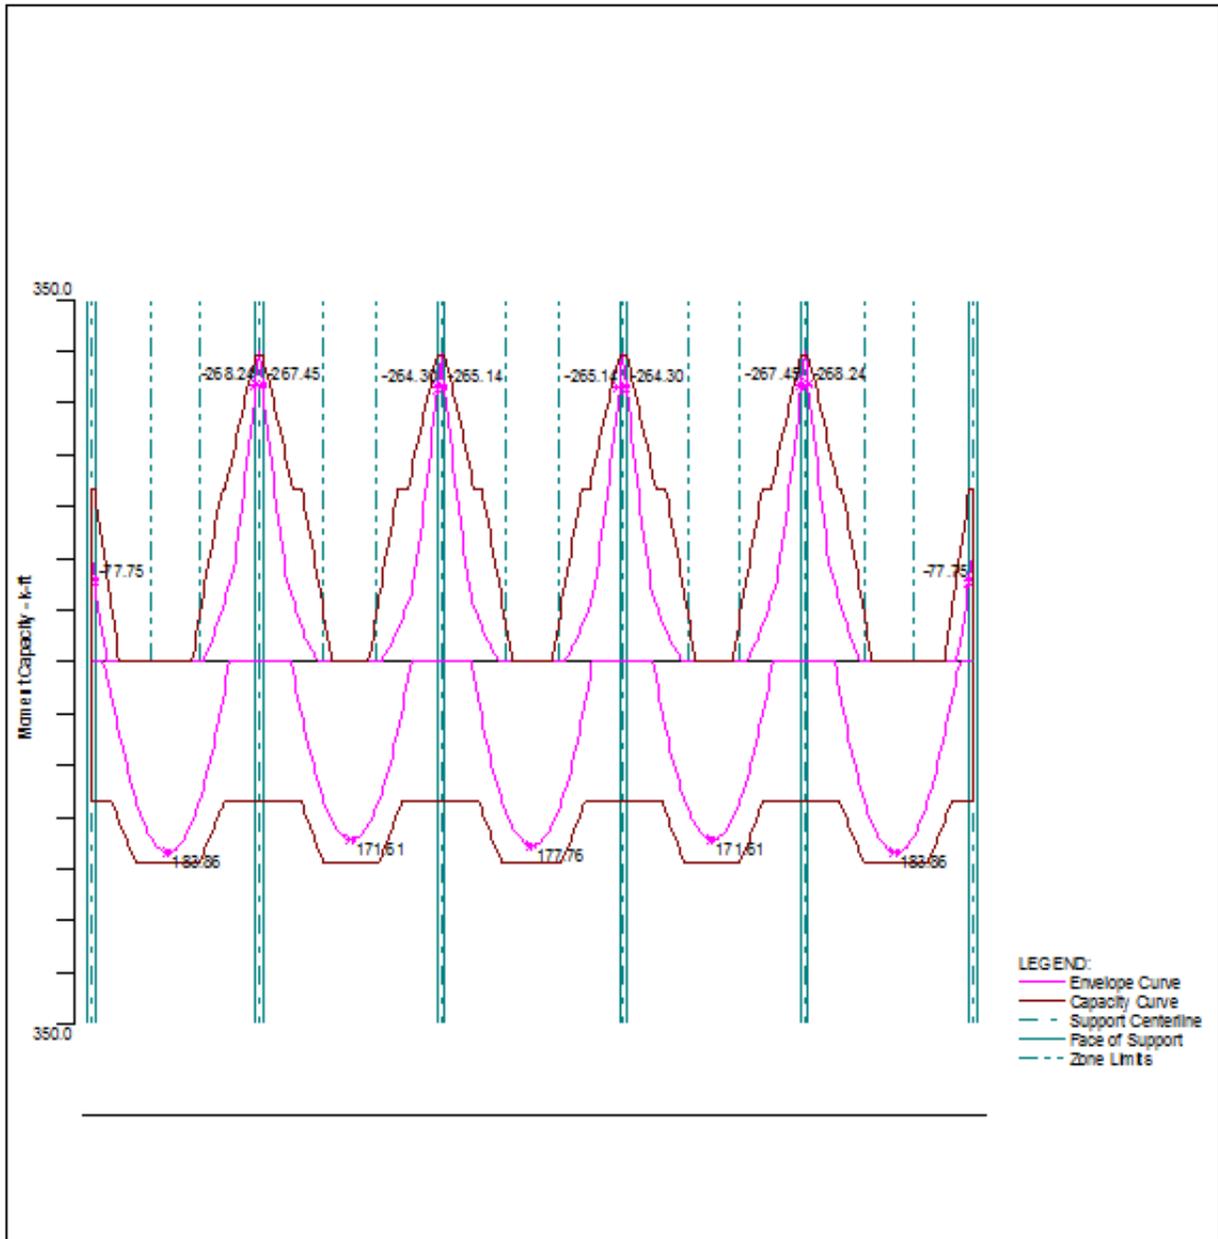

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-00000004-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\...\Example 3 - Structural Concrete by Hassoun-Example 16.1.slb

Project: sp Slab/spBeam Manual Example 3


Frame: Structural Concrete by Hassoun-Example 16.1


Engineer: StructurePoint

Code: ACI 318-14

Date: 12/11/15

Time: 16:27:30

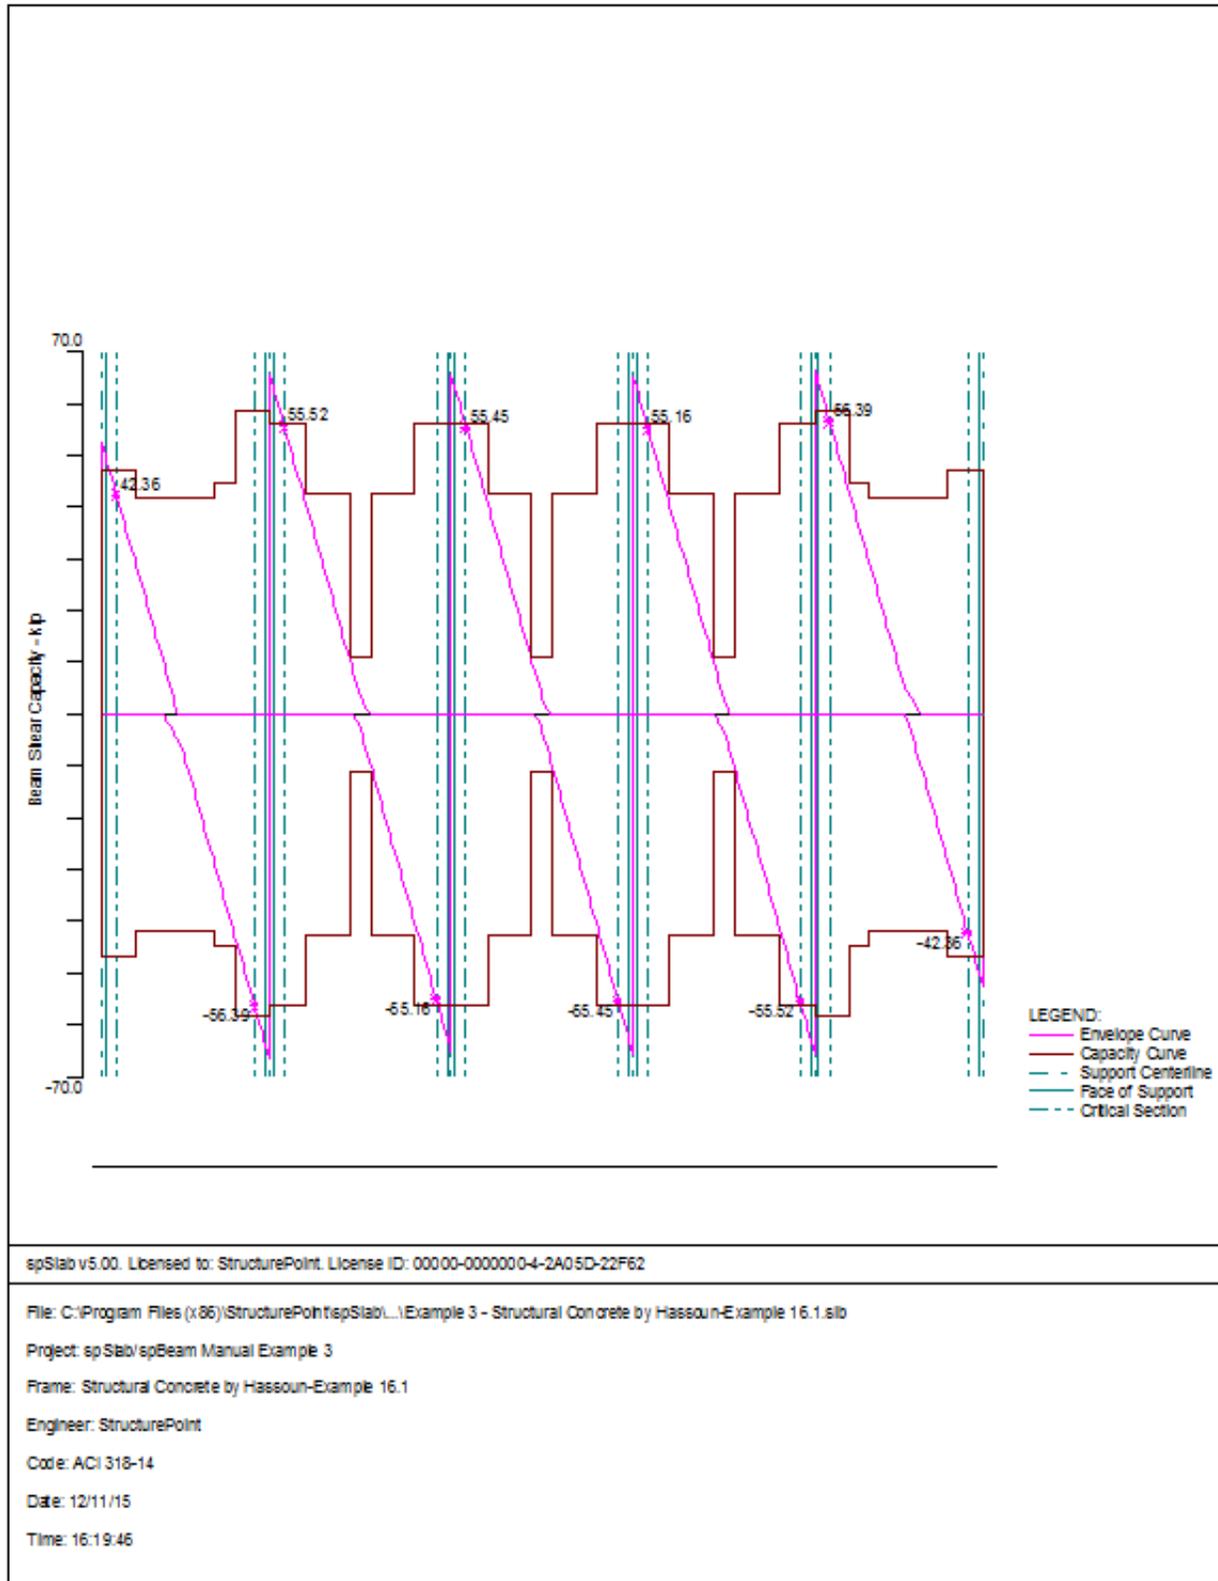

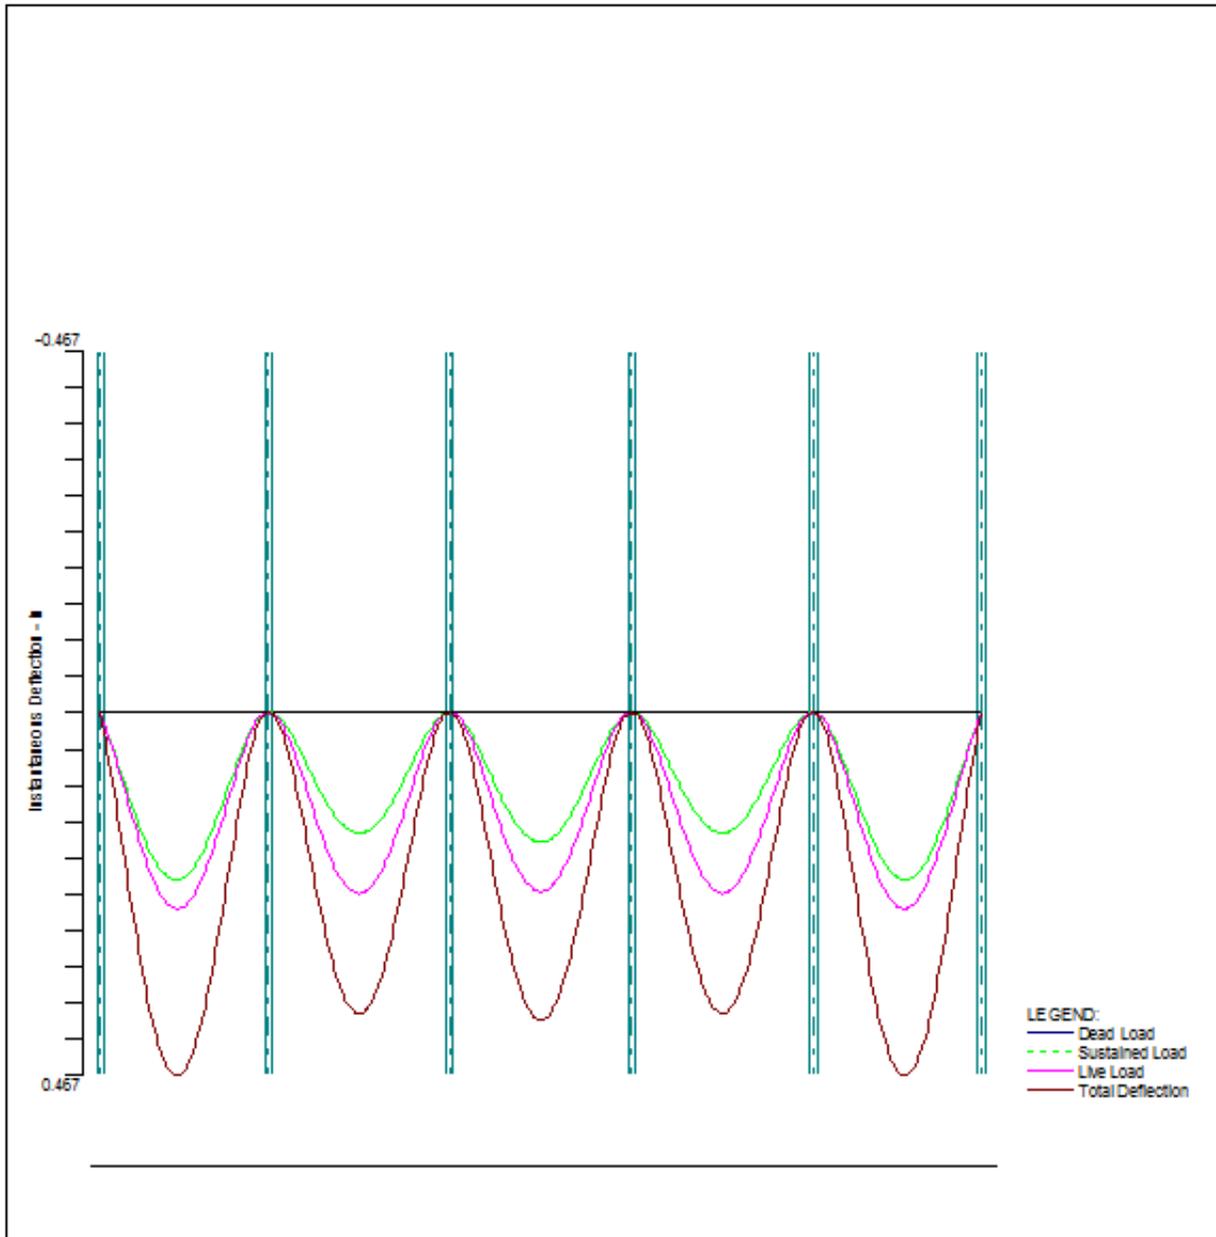

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-00000004-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\...\Example 3 - Structural Concrete by Hassoun-Example 16.1.slb

Project: spSlab/spBeam Manual Example 3


Frame: Structural Concrete by Hassoun-Example 16.1

Engineer: StructurePoint

Code: ACI 318-14

Date: 12/11/15

Time: 16:21:05

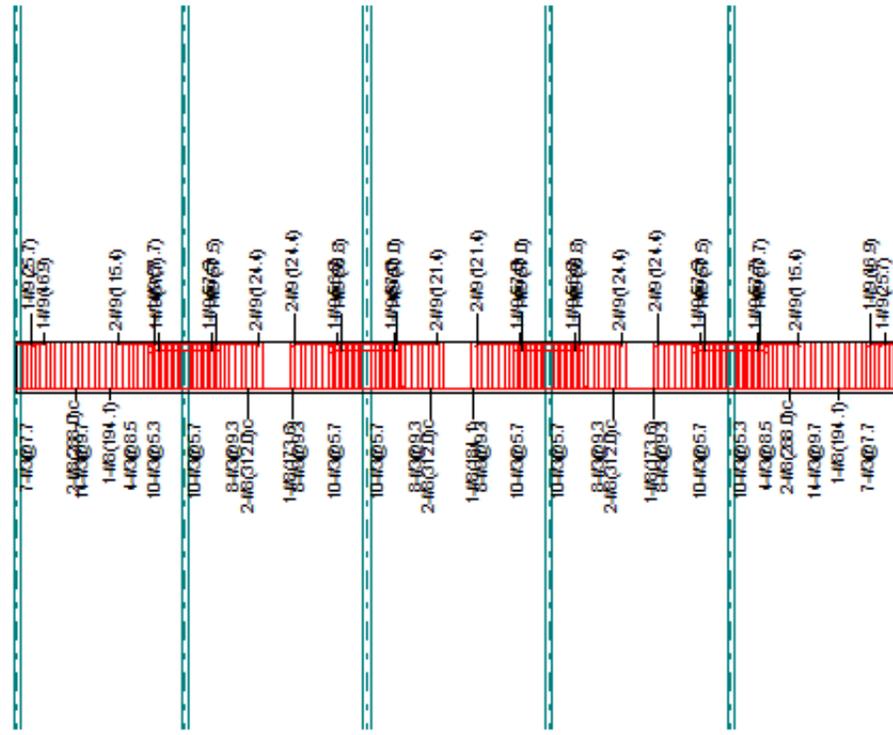

Flexural and Transverse Reinforcement

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-0000000-4-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\...Example 3 - Structural Concrete by Hassoun-Example 16.1.slb

Project: spSlab/spBeam Manual Example 3

Frame: Structural Concrete by Hassoun-Example 16.1

Engineer: StructurePoint

Code: ACI 318-14


Date: 12/11/15

Time: 16:22:18

6.4 Example 4 Flat Plate Floor System

6.4.1 Problem Formulation

An office building is planned using a flat plate floor system with the column layout as shown in figure below. No beams, drop panels, or column capitals are permitted. Specified live load is 100 psf and dead load will include the weight of the slab plus an allowance of 20 psf for finish floor plus suspended loads. The columns will be 18 in. square, and the floor-to-floor height of the structure will be 12 ft. The slab thickness will be 8.5 in. according to ACI Code. Design the interior panel C, using material strengths $f_y = 60,000$ psi and $f'_c = 4000$ psi. Straight-bar reinforcement will be used. This example refers to Example 13-3 from *Design of Concrete Structures* by Nilson, Darwin, and Dolan, Thirteenth Edition, 2004.

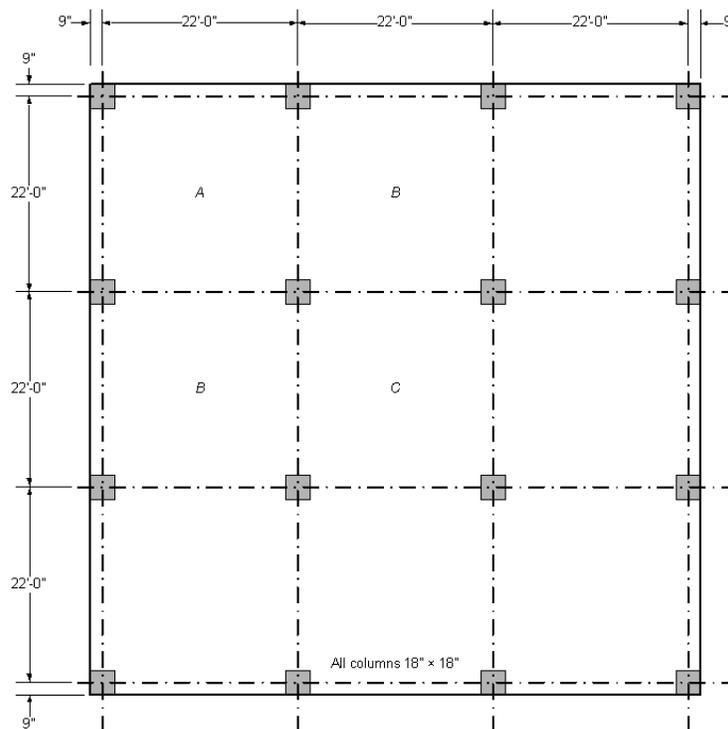

6.4.2 Preparing Input


1. From the **Input** menu, select **General Information**. A dialog box appears.
 - In the LABELS section, input the names of the project, frame, and engineer.
 - In the FRAME section, input 4 for NO OF SUPPORTS. Then, Click the check boxes next to LEFT CANTILEVER and RIGHT CANTILEVER.
 - In the FLOOR SYSTEM section, click the radial button next to TWO-WAY.
 - Leave all other options in the **General Information** tab to their default settings of ACI 318-14 design code, ASTM A615 reinforcement, and DESIGN run mode option.

The screenshot shows the 'General Information' dialog box with the following settings:


- Labels:** Project: spSlab/spBeam Manual, Example 4; Frame: Design of Concrete Structures by Nilson-Example 13; Engineer: StructurePoint
- Options:** Design code: ACI 318-14; Reinforcement: ASTM A615
- Run mode:** Design (selected), Investigation
- Frame:** No. of Supports: 4; Left cantilever (checked), Right cantilever (checked)
- Floor System:** Two-Way (selected), One-Way/Beam
- Other:** Distance location as ratio of span (unchecked)

6.4.3 Assigning Properties


2. Nothing needs to be changed in the **Material Properties** menu.

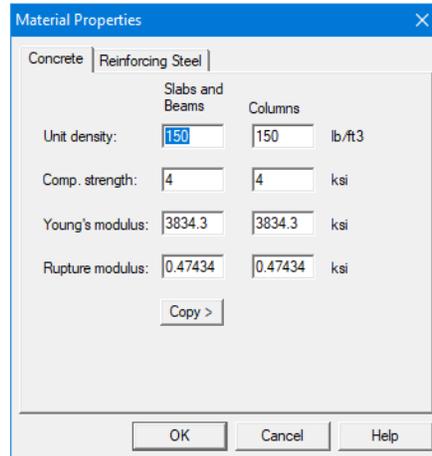


3. From the **Input** menu, select **Spans**. A dialog box appears.
 - Under the **Slabs/Flanges** tab, for Span No. 1 input 0.75 for LENGTH, 8.5 for THICKNESS, and 11 for WIDTH LEFT and WIDTH RIGHT. Press MODIFY.
 - Press COPY. Click the check box next to SPAN NO. 5. Press OK.
 - Under the **Slabs/Flanges** tab, for Span No. 2 input 22 for LENGTH, 8.5 for THICKNESS, and 11 for WIDTH LEFT and WIDTH RIGHT. Press MODIFY.
 - Click the check boxes next to SPAN NO. 3, and SPAN NO. 4. Press OK.
 - Press OK again.

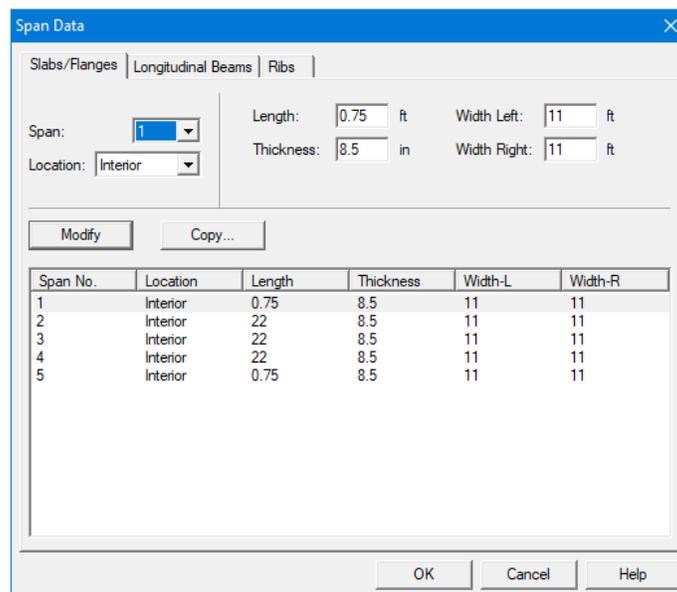


4. From the **Input** menu, select **Supports**. A dialog box appears.
 - Under the **Columns** tab, input 12 for the HEIGHT in both the ABOVE and BELOW rows.
 - Input 18 for both the c1 and c2 values in both the ABOVE and BELOW rows. Press MODIFY.
 - Press COPY. Press the CHECK ALL button. Press OK.
 - Press OK again.

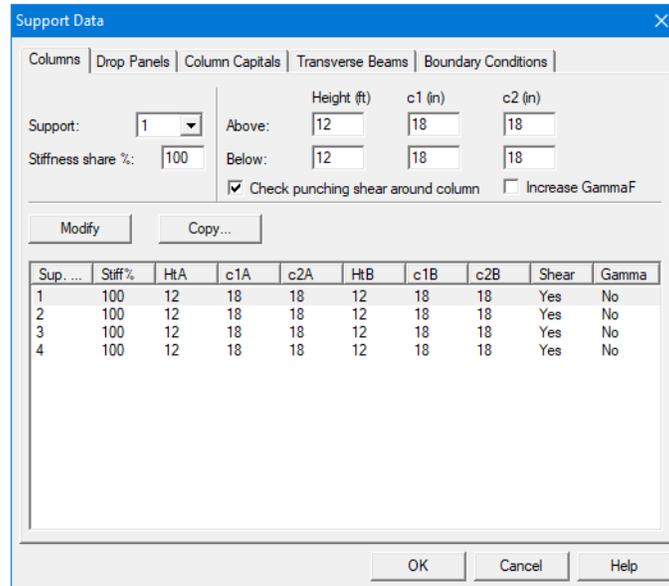


5. From the **Input** menu, select **Reinforcement Criteria**.
 - Use the drop down arrow next to MAX BAR SIZE for both TOP BARS and BOTTOM BARS to select #6 bars.
 - Press OK.

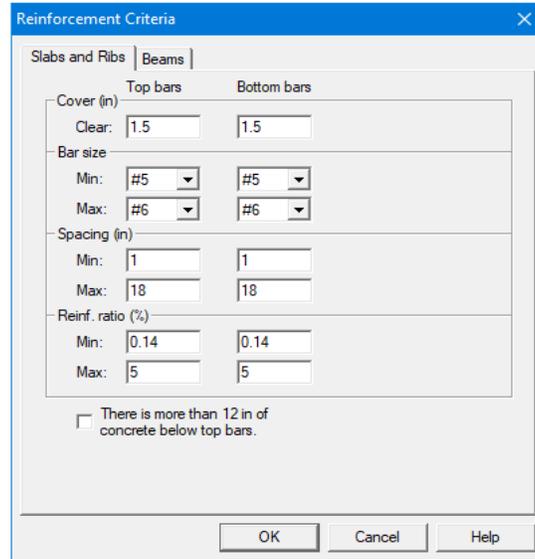



6. From the **Input** menu, select **Load Cases**. A dialog box appears.
 - Since we are not considering snow loads, click on SNOW in the LABEL column on the list in the bottom half of the LOAD CASES dialog box and press the DELETE button.
 - Since we are not considering lateral forces, click on WIND in the LABEL column on the list in the bottom half of the LOAD CASES dialog box and press the DELETE button.
 - Click on EQ in the LABEL column and press the DELETE button. Press OK.

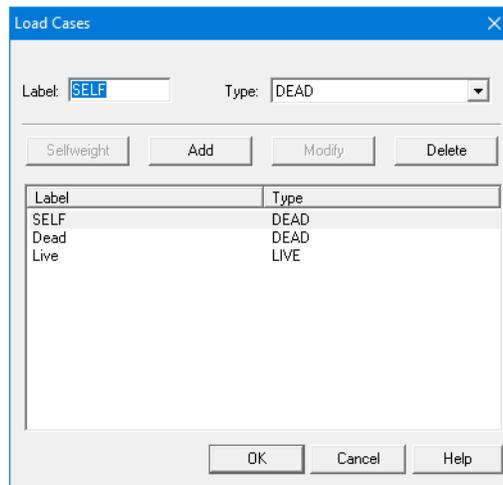

7. From the **Input** menu, select **Load Combinations**. A dialog box appears.
 - Delete all the load combinations by clicking anywhere on the list in the bottom half of the LOAD COMBINATIONS dialog box and pressing the DELETE button. Repeat this procedure until all the load combinations are deleted.
 - Input 1 . 2 in the SELF field, 1 . 2 in the DEAD field, and 1 . 6 in the LIVE field. Press ADD.
 - Press OK.

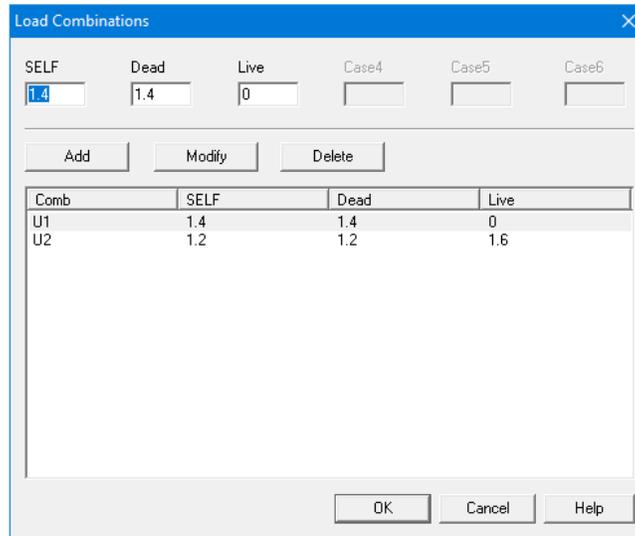

8. From the **Input** menu, select **Span Loads**. A dialog box appears.
 - Input 20 for the MAGNITUDE. Press ADD.
 - Press COPY. Press the CHECK ALL button. Press OK.
 - In the top left corner of the SPAN LOADS dialog box, there is a section called CURRENT CASE. Click on LIVE.
 - Input 100 for MAGNITUDE. Press ADD.
 - Press COPY. Press the CHECK ALL button. Press OK.
 - Press OK again.

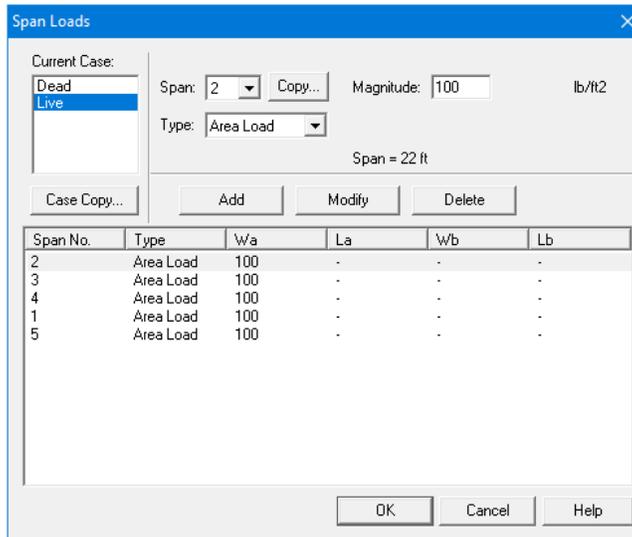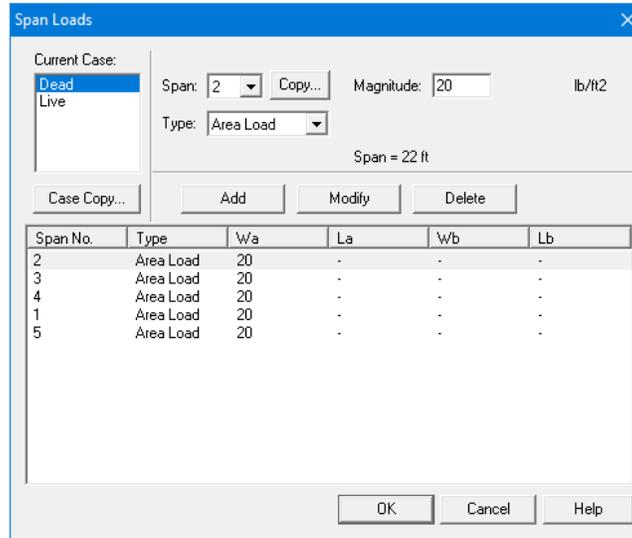

6.4.4 Solving


9. From the **Solve** menu, select **Execute**. Press CLOSE.
10. From the **Solve** menu, select **Results**.
 - Use the explorer to browse through result tables.
 - Use the ARROW keys or the mouse wheel to browse through different parts of the table quickly. Press the CLOSE button to close the SPRESULTS.

6.4.5 Viewing and Printing Results

11. To view diagrams, select **Loads, Internal Forces, Moment Capacity, Shear Capacity, Deflection, or Reinforcement** from the **View** menu. Right click in any of these diagrams to get new copy, printing, or display options.
12. You may print the results report by using the spReporter module. To print any of the diagrams you selected to view, use the **Print Preview** command found by right clicking in the diagram's window. After viewing the results, you may decide to investigate the input beams under the same loads but with a modified reinforcement configuration.
13. From the **Input** menu, select **General Information**. In the **General Information** dialog box change the RUN MODE option to INVESTIGATION. Do not change any of the other options. Press OK
14. From the **Input** menu, select the different commands under **Reinforcement Criteria** and **Reinforcing Bars** to modify the reinforcement configuration computed by the program.
15. Repeat steps 10 and subsequent to perform the investigation and view the results.



spSlab v5.50 Debug - Mar 29 2018
 A Computer Program for Analysis, Design, and Investigation of
 Reinforced Concrete Beams, One-way and Two-way Slab Systems
 Copyright - 1988-2018, STRUCTUREPOINT, LLC.
 All rights reserved

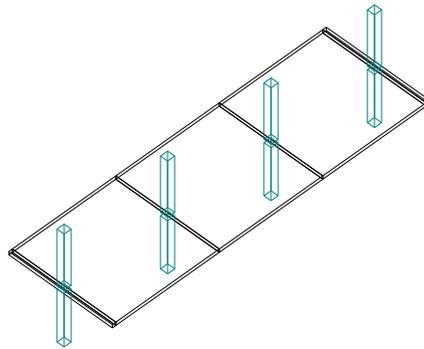

StructurePoint

Licensee stated above acknowledges that STRUCTUREPOINT (SP) is not and cannot be responsible for either the accuracy or adequacy of the material supplied as input for processing by the spSlab computer program. Furthermore, STRUCTUREPOINT neither makes any warranty expressed nor implied with respect to the correctness of the output prepared by the spSlab program. Although STRUCTUREPOINT has endeavored to produce spSlab error free the program is not and cannot be certified infallible. The final and only responsibility for analysis, design and engineering documents is the licensee's. Accordingly, STRUCTUREPOINT disclaims all responsibility in contract, negligence or other tort for any analysis, design or engineering documents prepared in connection with the use of the spSlab program. Licensed to: -- Unknown User --. License ID: 00000-0000000

Contents

1. Input Echo.....	3
1.1. General Information.....	3
1.2. Solve Options.....	3
1.3. Material Properties.....	3
1.3.1. Concrete: Slabs / Beams.....	3
1.3.2. Concrete: Columns.....	3
1.3.3. Reinforcing Steel.....	4
1.4. Reinforcement Database.....	4
1.5. Span Data.....	4
1.5.1. Slabs.....	4
1.6. Support Data.....	4
1.6.1. Columns.....	4
1.6.2. Boundary Conditions.....	4
1.7. Load Data.....	5
1.7.1. Load Cases and Combinations.....	5
1.7.2. Area Loads.....	5
1.8. Reinforcement Criteria.....	5
1.8.1. Slabs and Ribs.....	5
1.8.2. Beams.....	6
2. Design Results*.....	6
2.1. Strip Widths and Distribution Factors.....	6
2.2. Top Reinforcement.....	6
2.3. Top Bar Details.....	7
2.4. Top Bar Development Lengths.....	8
2.5. Bottom Reinforcement.....	8
2.6. Bottom Bar Details.....	8
2.7. Bottom Bar Development Lengths.....	9
2.8. Flexural Capacity.....	9
2.9. Slab Shear Capacity.....	12
2.10. Flexural Transfer of Negative Unbalanced Moment at Supports.....	12
2.11. Punching Shear Around Columns.....	12
2.11.1. Critical Section Properties.....	12
2.11.2. Punching Shear Results.....	12
2.12. Material TakeOff.....	12
2.12.1. Reinforcement in the Direction of Analysis.....	12

1. Input Echo

1.1. General Information

File Name	...\Example 4 - Design of Concrete Structures ...
Project	spSlab/spBeam Manual, Example 4
Frame	Design of Concrete Structures by Nilson-Example 13.3
Engineer	StructurePoint
Code	ACI 318-14
Reinforcement Database	ASTM A615
Mode	Design
Number of supports =	4 + Left cantilever + Right cantilever
Floor System	Two-Way

1.2. Solve Options

Live load pattern ratio = 75%
Minimum free edge distance for punching shear = 4 times slab thickness.
Circular critical section around circular supports used (if possible).
Deflections are based on cracked section properties.
In negative moment regions, I_g and M_{cr} DO NOT include flange/slab contribution (if available)
Long-term deflections are calculated for load duration of 60 months.
0% of live load is sustained.
Only deflections for direction of analysis will be calculated.
Compression reinforcement calculations NOT selected.
Default incremental rebar design selected.
User-defined slab strip widths NOT selected.
User-defined distribution factors NOT selected.
One-way shear in drop panel NOT selected.
Distribution of shear to strips NOT selected.
Beam T-section design NOT selected.
Longitudinal beam contribution in negative reinforcement design over support NOT selected.
Transverse beam contribution in negative reinforcement design over support NOT selected.

1.3. Material Properties

1.3.1. Concrete: Slabs / Beams

w_c	150 lb/ft ³
f'_c	4 ksi
E_c	3834.3 ksi
f_r	0.474342 ksi

1.3.2. Concrete: Columns

w_c	150 lb/ft ³
f'_c	4 ksi
E_c	3834.3 ksi
f_r	0.47434 ksi

1.3.3. Reinforcing Steel

f_y	60 ksi
f_{yt}	60 ksi
E_s	29000 ksi
Epoxy coated bars	No

1.4. Reinforcement Database

Size	Db in	Ab in ²	Wb lb/ft	Size	Db in	Ab in ²	Wb lb/ft
#3	0.38	0.11	0.38	#4	0.50	0.20	0.67
#5	0.63	0.31	1.04	#6	0.75	0.44	1.50
#7	0.88	0.60	2.04	#8	1.00	0.79	2.67
#9	1.13	1.00	3.40	#10	1.27	1.27	4.30
#11	1.41	1.56	5.31	#14	1.69	2.25	7.65
#18	2.26	4.00	13.60				

1.5. Span Data

1.5.1. Slabs

Notes:
 Deflection check required for panels where code-specified Hmin for two-way construction doesn't apply due to:
 *i - cantilever end span (LC, RC) support condition

Span	Loc	L1 ft	t in	wL ft	wR ft	L2L ft	L2R ft	H _{min} in
1	Int	0.750	8.50	11.000	11.000	22.000	22.000	--- LC *i
2	Int	22.000	8.50	11.000	11.000	22.000	22.000	8.20
3	Int	22.000	8.50	11.000	11.000	22.000	22.000	7.45
4	Int	22.000	8.50	11.000	11.000	22.000	22.000	8.20
5	Int	0.750	8.50	11.000	11.000	22.000	22.000	--- RC *i

1.6. Support Data

1.6.1. Columns

Support	c1a in	c2a in	Ha ft	c1b in	c2b in	Hb ft	Red %
1	18.00	18.00	12.000	18.00	18.00	12.000	100
2	18.00	18.00	12.000	18.00	18.00	12.000	100
3	18.00	18.00	12.000	18.00	18.00	12.000	100
4	18.00	18.00	12.000	18.00	18.00	12.000	100

1.6.2. Boundary Conditions

Support	Spring		Far End	
	K _x kip/in	K _{ry} kip-in/rad	Above	Below
1	0	0	Fixed	Fixed
2	0	0	Fixed	Fixed
3	0	0	Fixed	Fixed
4	0	0	Fixed	Fixed

1.7. Load Data

1.7.1. Load Cases and Combinations

Case Type	SELF DEAD	Dead DEAD	Live LIVE
U1	1.400	1.400	0.000
U2	1.200	1.200	1.600

1.7.2. Area Loads

Case/Patt	Span	Wa lb/ft ²
SELF	1	106.25
	2	106.25
	3	106.25
	4	106.25
	5	106.25
Dead	2	20.00
	3	20.00
	4	20.00
	1	20.00
	5	20.00
Live	2	100.00
	3	100.00
	4	100.00
	1	100.00
	5	100.00
Live/Odd	3	75.00
	1	75.00
Live/Even	5	75.00
	2	75.00
Live/S1	4	75.00
	2	75.00
Live/S2	1	75.00
	2	75.00
Live/S3	3	75.00
	4	75.00
Live/S4	3	75.00
	4	75.00
	5	75.00

1.8. Reinforcement Criteria

1.8.1. Slabs and Ribs

	Units	Top Bars		Bottom Bars	
		Min.	Max.	Min.	Max.
Bar Size		#5	#6	#5	#6
Bar spacing	in	1.00	18.00	1.00	18.00
Reinf ratio	%	0.14	5.00	0.14	5.00
Clear Cover	in	1.50		1.50	

There is NOT more than 12 in of concrete below top bars.

1.8.2. Beams

	Units	Top Bars		Bottom Bars		Stirrups	
		Min.	Max.	Min.	Max.	Min.	Max.
Bar Size		#5	#8	#5	#8	#3	#5
Bar spacing	in	1.00	18.00	1.00	18.00	6.00	18.00
Reinf ratio	%	0.14	5.00	0.14	5.00		
Clear Cover	in	1.50		1.50			
Layer dist.	in	1.00		1.00			
No. of legs						2	6
Side cover	in					1.50	
1st Stirrup	in					3.00	

There is NOT more than 12 in of concrete below top bars.

2. Design Results*

*Unless otherwise noted, all results are in the direction of analysis only. Another analysis in the perpendicular direction has to be carried out for two-way slab systems.

2.1. Strip Widths and Distribution Factors

Notes:

*Used for bottom reinforcement. **Used for top reinforcement.

Span	Strip	Width			Moment Factor		
		Left **	Right **	Bottom *	Left **	Right **	Bottom *
		ft	ft	ft	ft	ft	ft
1	Column	11.00	11.00	11.00	1.000	1.000	0.600
	Middle	11.00	11.00	11.00	0.000	0.000	0.400
2	Column	11.00	11.00	11.00	1.000	0.750	0.600
	Middle	11.00	11.00	11.00	0.000	0.250	0.400
3	Column	11.00	11.00	11.00	0.750	0.750	0.600
	Middle	11.00	11.00	11.00	0.250	0.250	0.400
4	Column	11.00	11.00	11.00	0.750	1.000	0.600
	Middle	11.00	11.00	11.00	0.250	0.000	0.400
5	Column	11.00	11.00	11.00	1.000	1.000	0.600
	Middle	11.00	11.00	11.00	0.000	0.000	0.400

2.2. Top Reinforcement

Notes:

*3 - Design governed by minimum reinforcement.

*5 - Number of bars governed by maximum allowable spacing.

Span	Strip	Zone	Width	M _{max}	X _{max}	A _{s,min}	A _{s,max}	A _{s,req}	Sp _{Prov}	Bars
			ft	k-ft	ft	in ²	in ²	in ²	in	
1	Column	Left	11.00	0.19	0.217	2.020	15.945	0.006	16.500	8-#5 *3 *5
		Midspan	11.00	0.61	0.402	2.020	15.945	0.020	16.500	8-#5 *3 *5
		Right	11.00	1.37	0.619	2.020	15.945	0.045	14.667	9-#5 *3 *5
	Middle	Left	11.00	0.00	0.000	2.020	15.945	0.000	16.500	8-#5 *3 *5
		Midspan	11.00	0.00	0.309	2.020	15.945	0.000	16.500	8-#5 *3 *5
		Right	11.00	0.00	0.619	2.020	15.945	0.000	16.500	8-#5 *3 *5
2	Column	Left	11.00	81.23	0.750	2.020	15.945	2.776	14.667	9-#5
		Midspan	11.00	0.00	11.000	0.000	15.945	0.000	0.000	---

STRUCTUREPOINT - spSlab v5.50 Debug - Mar 29 2018
 Licensed to: -- Unknown User --. License ID: 00000-0000000
 C:\Program Files (x86)\Stru...Example 4 - Design of Concrete Structures by Nilson-Example 13.3.slb

Page | 7
 3/30/2018
 11:29 AM

Span Strip	Zone	Width ft	M _{max} k-ft	X _{max} ft	A _{s,min} in ²	A _{s,max} in ²	A _{s,req} in ²	Sp _{prov} in	Bars
	Right	11.00	198.56	21.250	2.020	15.945	7.102	5.739	23-#5
Middle	Left	11.00	0.36	1.500	2.020	15.945	0.012	16.500	8-#5 *3 *5
	Midspan	11.00	0.00	11.000	0.000	15.945	0.000	0.000	---
	Right	11.00	66.19	21.250	2.020	15.945	2.250	16.500	8-#5
3 Column	Left	11.00	182.11	0.750	2.020	15.945	6.470	5.739	23-#5
	Midspan	11.00	0.00	11.000	0.000	15.945	0.000	0.000	---
	Right	11.00	182.11	21.250	2.020	15.945	6.470	5.739	23-#5
Middle	Left	11.00	60.70	0.750	2.020	15.945	2.060	16.500	8-#5 *5
	Midspan	11.00	0.00	11.000	0.000	15.945	0.000	0.000	---
	Right	11.00	60.70	21.250	2.020	15.945	2.060	16.500	8-#5 *5
4 Column	Left	11.00	198.56	0.750	2.020	15.945	7.102	5.739	23-#5
	Midspan	11.00	0.00	11.000	0.000	15.945	0.000	0.000	---
	Right	11.00	81.23	21.250	2.020	15.945	2.776	14.667	9-#5
Middle	Left	11.00	66.19	0.750	2.020	15.945	2.250	16.500	8-#5
	Midspan	11.00	0.00	11.000	0.000	15.945	0.000	0.000	---
	Right	11.00	0.36	20.500	2.020	15.945	0.012	16.500	8-#5 *3 *5
5 Column	Left	11.00	1.37	0.131	2.020	15.945	0.045	14.667	9-#5 *3 *5
	Midspan	11.00	0.61	0.348	2.020	15.945	0.020	16.500	8-#5 *3 *5
	Right	11.00	0.19	0.533	2.020	15.945	0.006	16.500	8-#5 *3 *5
Middle	Left	11.00	0.00	0.131	2.020	15.945	0.000	16.500	8-#5 *3 *5
	Midspan	11.00	0.00	0.441	2.020	15.945	0.000	16.500	8-#5 *3 *5
	Right	11.00	0.00	0.750	2.020	15.945	0.000	16.500	8-#5 *3 *5

2.3. Top Bar Details

Span Strip	Bars	Left			Continuous		Right			
		Length ft	Bars	Length ft	Bars	Length ft	Bars	Length ft	Bars	Length ft
1 Column	---		---		8-#5	0.75	1-#5	0.75	---	
Middle	---		---		8-#5	0.75	---		---	
2 Column	7-#5	7.52	2-#5	4.85	---		12-#5	7.53	11-#5	4.85
Middle	8-#5	5.26	---		---		8-#5	7.53	---	
3 Column	12-#5	8.53	11-#5	4.85	---		12-#5	8.53	11-#5	4.85
Middle	8-#5	8.53	---		---		8-#5	8.53	---	
4 Column	12-#5	7.53	11-#5	4.85	---		7-#5	7.52	2-#5	4.85
Middle	8-#5	7.53	---		---		8-#5	5.26	---	
5 Column	1-#5	0.75	---		8-#5	0.75	---		---	
Middle	---		---		8-#5	0.75	---		---	

2.4. Top Bar Development Lengths

Span Strip	Left				Continuous		Right			
	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in
1 Column	---		---		8-#5	12.00	1-#5	12.00	---	
1 Middle	---		---		8-#5	12.00	---		---	
2 Column	7-#5	14.16	2-#5	14.16	---		12-#5	14.18	11-#5	14.18
2 Middle	8-#5	12.00	---		---		8-#5	12.91	---	
3 Column	12-#5	12.91	11-#5	12.91	---		12-#5	12.91	11-#5	12.91
3 Middle	8-#5	12.00	---		---		8-#5	12.00	---	
4 Column	12-#5	14.18	11-#5	14.18	---		7-#5	14.16	2-#5	14.16
4 Middle	8-#5	12.91	---		---		8-#5	12.00	---	
5 Column	1-#5	12.00	---		8-#5	12.00	---		---	
5 Middle	---		---		8-#5	12.00	---		---	

2.5. Bottom Reinforcement

Notes:
 *3 - Design governed by minimum reinforcement.
 *5 - Number of bars governed by maximum allowable spacing.

Span	Strip	Width ft	M _{max} k-ft	X _{max} ft	A _{s,min} in ²	A _{s,max} in ²	A _{s,req} in ²	Sp _{Prov} in	Bars
1	Column	11.00	0.00	0.309	0.000	15.945	0.000	0.000	---
	Middle	11.00	0.00	0.309	0.000	15.945	0.000	0.000	---
2	Column	11.00	115.71	9.750	2.020	15.945	4.005	10.154	13-#5
	Middle	11.00	77.14	9.750	2.020	15.945	2.633	14.667	9-#5
3	Column	11.00	80.78	11.000	2.020	15.945	2.761	14.667	9-#5
	Middle	11.00	53.86	11.000	2.020	15.945	1.823	16.500	8-#5 *3 *5
4	Column	11.00	115.71	12.250	2.020	15.945	4.005	10.154	13-#5
	Middle	11.00	77.14	12.250	2.020	15.945	2.633	14.667	9-#5
5	Column	11.00	0.00	0.441	0.000	15.945	0.000	0.000	---
	Middle	11.00	0.00	0.441	0.000	15.945	0.000	0.000	---

2.6. Bottom Bar Details

Span Strip	Long Bars			Short Bars		
	Bars	Start ft	Length ft	Bars	Start ft	Length ft
1 Column	---			---		
1 Middle	---			---		
2 Column	13-#5	0.00	22.00	---		
2 Middle	7-#5	0.00	22.00	2-#5	0.00	18.70
3 Column	9-#5	0.00	22.00	---		
3 Middle	7-#5	0.00	22.00	1-#5	3.30	15.40
4 Column	13-#5	0.00	22.00	---		
4 Middle	7-#5	0.00	22.00	2-#5	3.30	18.70

Span Strip	Long Bars			Short Bars		
	Bars	Start	Length	Bars	Start	Length
		ft	ft		ft	ft
5 Column	---			---		
Middle	---			---		

2.7. Bottom Bar Development Lengths

Span Strip	Long Bars		Short Bars	
	Bars	DevLen	Bars	DevLen
		in		in
1 Column	---		---	
Middle	---		---	
2 Column	13-#5	14.14	---	
Middle	7-#5	13.43	2-#5	13.43
3 Column	9-#5	14.08	---	
Middle	7-#5	12.00	1-#5	12.00
4 Column	13-#5	14.14	---	
Middle	7-#5	13.43	2-#5	13.43
5 Column	---		---	
Middle	---		---	

2.8. Flexural Capacity

Span Strip	x	Top					Bottom					
		A _{s,top}	ΦM _{n-}	M _{u-}	Comb Pat	Status	A _{s,bot}	ΦM _{n+}	M _{u+}	Comb Pat	Status	
	ft	in ²	k-ft	k-ft			in ²	k-ft	k-ft			
1 Column	0.000	2.79	-81.62	0.00	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.217	2.79	-81.62	-0.19	U2 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.375	2.79	-81.62	-0.54	U2 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.402	2.79	-81.62	-0.61	U2 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.619	2.79	-81.62	-1.37	U2 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.750	2.79	-81.62	-1.93	U2 All	---	0.00	0.00	0.00	U1 All	---	
	Middle	0.000	2.48	-72.78	0.00	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.217	2.48	-72.78	0.00	U2 All	OK	0.00	0.00	0.00	U1 All	OK
		0.375	2.48	-72.78	0.00	U2 All	OK	0.00	0.00	0.00	U1 All	OK
		0.402	2.48	-72.78	0.00	U2 All	OK	0.00	0.00	0.00	U1 All	OK
		0.619	2.48	-72.78	0.00	U2 All	OK	0.00	0.00	0.00	U1 All	OK
		0.750	2.48	-72.78	0.00	U2 All	---	0.00	0.00	0.00	U1 All	---
	2 Column	0.000	2.79	-81.62	-130.31	U2 All	---	4.03	116.39	0.00	U1 All	---
		0.500	2.79	-81.62	-97.06	U2 All	---	4.03	116.39	0.00	U1 All	---
0.750		2.79	-81.62	-81.23	U2 All	OK	4.03	116.39	0.00	U1 All	OK	
3.670		2.79	-81.62	0.00	U1 All	OK	4.03	116.39	41.09	U2 All	OK	
4.850		2.17	-63.89	0.00	U1 All	OK	4.03	116.39	67.45	U2 All	OK	
6.335		2.17	-63.89	0.00	U1 All	OK	4.03	116.39	92.49	U2 All	OK	
7.515		0.00	0.00	0.00	U1 All	OK	4.03	116.39	105.95	U2 All	OK	
7.925		0.00	0.00	0.00	U1 All	OK	4.03	116.39	109.25	U2 All	OK	
9.750		0.00	0.00	0.00	U1 All	OK	4.03	116.39	115.71	U2 All	OK	
11.000		0.00	0.00	0.00	U1 All	OK	4.03	116.39	112.20	U2 All	OK	
14.075		0.00	0.00	0.00	U1 All	OK	4.03	116.39	80.81	U2 Even	OK	
14.469	0.00	0.00	0.00	U1 All	OK	4.03	116.39	74.95	U2 Even	OK		

Span Strip	Top						Bottom					
	x ft	A _{s,top} in ²	ΦM _{n-} k-ft	M _{u-} k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _{n+} k-ft	M _{u+} k-ft	Comb Pat	Status	
Middle	15.650	3.72	-107.79	0.00	U1 All	OK	4.03	116.39	53.96	U2 Even	OK	
	17.150	3.72	-107.79	-24.34	U2 Odd	OK	4.03	116.39	20.13	U2 Even	OK	
	18.331	7.13	-199.28	-51.08	U2 Odd	OK	4.03	116.39	0.00	U1 All	OK	
	21.250	7.13	-199.28	-198.56	U2 All	OK	4.03	116.39	0.00	U1 All	OK	
	21.500	7.13	-199.28	-212.70	U2 All	---	4.03	116.39	0.00	U1 All	---	
	22.000	7.13	-199.28	-241.57	U2 All	---	4.03	116.39	0.00	U1 All	---	
	0.000	2.48	-72.78	1.18	U2 All	---	2.79	81.62	0.00	U1 All	---	
	0.750	2.48	-72.78	0.00	U2 All	OK	2.79	81.62	0.00	U1 All	OK	
	1.500	2.48	-72.78	-0.36	U2 Even	OK	2.79	81.62	0.00	U1 All	OK	
	4.260	2.48	-72.78	0.00	U1 All	OK	2.79	81.62	36.67	U2 All	OK	
	5.260	0.00	0.00	0.00	U1 All	OK	2.79	81.62	50.20	U2 All	OK	
	7.925	0.00	0.00	0.00	U1 All	OK	2.79	81.62	72.84	U2 All	OK	
	9.750	0.00	0.00	0.00	U1 All	OK	2.79	81.62	77.14	U2 All	OK	
	11.000	0.00	0.00	0.00	U1 All	OK	2.79	81.62	74.80	U2 All	OK	
	14.075	0.00	0.00	0.00	U1 All	OK	2.79	81.62	53.88	U2 Even	OK	
	14.469	0.00	0.00	0.00	U1 All	OK	2.79	81.62	49.96	U2 Even	OK	
	15.545	2.48	-72.78	0.00	U1 All	OK	2.79	81.62	37.37	U2 Even	OK	
	17.581	2.48	-72.78	-8.73	U2 Odd	OK	2.79	81.62	5.94	U2 Even	OK	
	18.700	2.48	-72.78	-18.63	U2 All	OK	2.17	63.89	0.00	U1 All	OK	
	21.250	2.48	-72.78	-66.19	U2 All	OK	2.17	63.89	0.00	U1 All	OK	
	21.750	2.48	-72.78	-78.16	U2 All	---	2.17	63.89	0.00	U1 All	---	
	22.000	2.48	-72.78	-84.50	U2 All	---	2.17	63.89	0.00	U1 All	---	
3 Column	0.000	7.13	-199.28	-223.07	U2 All	---	2.79	81.62	0.00	U1 All	---	
	0.250	7.13	-199.28	-209.10	U2 All	---	2.79	81.62	0.00	U1 All	---	
	0.750	7.13	-199.28	-182.11	U2 All	OK	2.79	81.62	0.00	U1 All	OK	
	3.774	7.13	-199.28	-51.16	U2 S1	OK	2.79	81.62	0.00	U1 All	OK	
	4.850	3.72	-107.79	-30.73	U2 S1	OK	2.79	81.62	14.42	U2 S3	OK	
	7.455	3.72	-107.79	0.00	U1 All	OK	2.79	81.62	58.25	U2 Odd	OK	
	7.925	2.10	-61.75	0.00	U1 All	OK	2.79	81.62	63.82	U2 Odd	OK	
	8.531	0.00	0.00	0.00	U1 All	OK	2.79	81.62	69.85	U2 Odd	OK	
	11.000	0.00	0.00	0.00	U1 All	OK	2.79	81.62	80.78	U2 Odd	OK	
	13.469	0.00	0.00	0.00	U1 All	OK	2.79	81.62	69.85	U2 Odd	OK	
	14.075	2.10	-61.75	0.00	U1 All	OK	2.79	81.62	63.82	U2 Odd	OK	
	14.545	3.72	-107.79	0.00	U1 All	OK	2.79	81.62	58.25	U2 Odd	OK	
	17.150	3.72	-107.79	-30.73	U2 S4	OK	2.79	81.62	14.42	U2 S2	OK	
	18.226	7.13	-199.28	-51.16	U2 S4	OK	2.79	81.62	0.00	U1 All	OK	
	21.250	7.13	-199.28	-182.11	U2 All	OK	2.79	81.62	0.00	U1 All	OK	
	21.750	7.13	-199.28	-209.10	U2 All	---	2.79	81.62	0.00	U1 All	---	
	22.000	7.13	-199.28	-223.07	U2 All	---	2.79	81.62	0.00	U1 All	---	
	Middle	0.000	2.48	-72.78	-74.36	U2 All	---	2.17	63.89	0.00	U1 All	---
		0.750	2.48	-72.78	-60.70	U2 All	OK	2.17	63.89	0.00	U1 All	OK
		3.300	2.48	-72.78	-21.50	U2 All	OK	2.17	63.89	0.00	U1 All	OK
		4.300	2.48	-72.78	-13.60	U2 S1	OK	2.48	72.78	1.85	U2 S3	OK
		7.531	2.48	-72.78	0.00	U1 All	OK	2.48	72.78	39.47	U2 Odd	OK
7.925		1.50	-44.57	0.00	U1 All	OK	2.48	72.78	42.54	U2 Odd	OK	
8.531		0.00	0.00	0.00	U1 All	OK	2.48	72.78	46.57	U2 Odd	OK	
11.000		0.00	0.00	0.00	U1 All	OK	2.48	72.78	53.86	U2 Odd	OK	
13.469		0.00	0.00	0.00	U1 All	OK	2.48	72.78	46.57	U2 Odd	OK	
14.075		1.50	-44.57	0.00	U1 All	OK	2.48	72.78	42.54	U2 Odd	OK	
14.469		2.48	-72.78	0.00	U1 All	OK	2.48	72.78	39.47	U2 Odd	OK	
17.700		2.48	-72.78	-13.60	U2 S4	OK	2.48	72.78	1.85	U2 S2	OK	
18.700		2.48	-72.78	-21.50	U2 All	OK	2.17	63.89	0.00	U1 All	OK	
21.250		2.48	-72.78	-60.70	U2 All	OK	2.17	63.89	0.00	U1 All	OK	

Span Strip	Top						Bottom				
	x ft	A _{s,top} in ²	ΦM _{n-} k-ft	M _{u-} k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _{n+} k-ft	M _{u+} k-ft	Comb Pat	Status
	22.000	2.48	-72.78	-74.36	U2 All	---	2.17	63.89	0.00	U1 All	---
4 Column	0.000	7.13	-199.28	-241.57	U2 All	---	4.03	116.39	0.00	U1 All	---
	0.500	7.13	-199.28	-212.70	U2 All	---	4.03	116.39	0.00	U1 All	---
	0.750	7.13	-199.28	-198.56	U2 All	OK	4.03	116.39	0.00	U1 All	OK
	3.669	7.13	-199.28	-51.08	U2 Odd	OK	4.03	116.39	0.00	U1 All	OK
	4.850	3.72	-107.79	-24.34	U2 Odd	OK	4.03	116.39	20.13	U2 Even	OK
	6.350	3.72	-107.79	0.00	U1 All	OK	4.03	116.39	53.96	U2 Even	OK
	7.531	0.00	0.00	0.00	U1 All	OK	4.03	116.39	74.95	U2 Even	OK
	7.925	0.00	0.00	0.00	U1 All	OK	4.03	116.39	80.81	U2 Even	OK
	11.000	0.00	0.00	0.00	U1 All	OK	4.03	116.39	112.20	U2 All	OK
	12.250	0.00	0.00	0.00	U1 All	OK	4.03	116.39	115.71	U2 All	OK
	14.075	0.00	0.00	0.00	U1 All	OK	4.03	116.39	109.25	U2 All	OK
	14.485	0.00	0.00	0.00	U1 All	OK	4.03	116.39	105.95	U2 All	OK
	15.665	2.17	-63.89	0.00	U1 All	OK	4.03	116.39	92.49	U2 All	OK
	17.150	2.17	-63.89	0.00	U1 All	OK	4.03	116.39	67.45	U2 All	OK
	18.330	2.79	-81.62	0.00	U1 All	OK	4.03	116.39	41.09	U2 All	OK
	21.250	2.79	-81.62	-81.23	U2 All	OK	4.03	116.39	0.00	U1 All	OK
	21.500	2.79	-81.62	-97.06	U2 All	---	4.03	116.39	0.00	U1 All	---
22.000	2.79	-81.62	-130.31	U2 All	---	4.03	116.39	0.00	U1 All	---	
Middle	0.000	2.48	-72.78	-84.50	U2 All	---	2.17	63.89	0.00	U1 All	---
	0.250	2.48	-72.78	-78.16	U2 All	---	2.17	63.89	0.00	U1 All	---
	0.750	2.48	-72.78	-66.19	U2 All	OK	2.17	63.89	0.00	U1 All	OK
	3.300	2.48	-72.78	-18.63	U2 All	OK	2.17	63.89	0.00	U1 All	OK
	4.419	2.48	-72.78	-8.73	U2 Odd	OK	2.79	81.62	5.94	U2 Even	OK
	6.455	2.48	-72.78	0.00	U1 All	OK	2.79	81.62	37.37	U2 Even	OK
	7.531	0.00	0.00	0.00	U1 All	OK	2.79	81.62	49.96	U2 Even	OK
	7.925	0.00	0.00	0.00	U1 All	OK	2.79	81.62	53.88	U2 Even	OK
	11.000	0.00	0.00	0.00	U1 All	OK	2.79	81.62	74.80	U2 All	OK
	12.250	0.00	0.00	0.00	U1 All	OK	2.79	81.62	77.14	U2 All	OK
	14.075	0.00	0.00	0.00	U1 All	OK	2.79	81.62	72.84	U2 All	OK
	16.740	0.00	0.00	0.00	U1 All	OK	2.79	81.62	50.20	U2 All	OK
	17.740	2.48	-72.78	0.00	U1 All	OK	2.79	81.62	36.67	U2 All	OK
	20.500	2.48	-72.78	-0.36	U2 Even	OK	2.79	81.62	0.00	U1 All	OK
	21.250	2.48	-72.78	0.00	U2 All	OK	2.79	81.62	0.00	U1 All	OK
22.000	2.48	-72.78	1.18	U2 All	---	2.79	81.62	0.00	U1 All	---	
5 Column	0.000	2.79	-81.62	-1.93	U2 All	---	0.00	0.00	0.00	U1 All	---
	0.131	2.79	-81.62	-1.37	U2 All	OK	0.00	0.00	0.00	U1 All	OK
	0.348	2.79	-81.62	-0.61	U2 All	OK	0.00	0.00	0.00	U1 All	OK
	0.375	2.79	-81.62	-0.54	U2 All	OK	0.00	0.00	0.00	U1 All	OK
	0.533	2.79	-81.62	-0.19	U2 All	OK	0.00	0.00	0.00	U1 All	OK
	0.750	2.79	-81.62	0.00	U1 All	OK	0.00	0.00	0.00	U1 All	OK
	0.000	2.48	-72.78	0.00	U2 All	---	0.00	0.00	0.00	U1 All	---
	0.131	2.48	-72.78	0.00	U2 All	OK	0.00	0.00	0.00	U1 All	OK
	0.348	2.48	-72.78	0.00	U2 All	OK	0.00	0.00	0.00	U1 All	OK
	0.375	2.48	-72.78	0.00	U2 All	OK	0.00	0.00	0.00	U1 All	OK
0.533	2.48	-72.78	0.00	U2 All	OK	0.00	0.00	0.00	U1 All	OK	
0.750	2.48	-72.78	0.00	U1 All	OK	0.00	0.00	0.00	U1 All	OK	

2.9. Slab Shear Capacity

Span	b in	d in	V _{ratio}	ΦV _c kip	V _u kip	X _u ft
1	264.00	6.69	1.000	167.49	0.00	0.00
2	264.00	6.69	1.000	167.49	75.38	20.69
3	264.00	6.69	1.000	167.49	66.42	20.69
4	264.00	6.69	1.000	167.49	75.38	1.31
5	264.00	6.69	1.000	167.49	0.00	0.00

2.10. Flexural Transfer of Negative Unbalanced Moment at Supports

Support	Width in	Width-c in	d in	M _{unb} k-ft	Comb	Patt	γ _f	A _{s,req} in ²	A _{s,prov} in ²	Add Bars
1	43.50	43.50	6.69	127.20	U2	All	0.617	2.857	0.919	7-#5
2	43.50	43.50	6.69	63.54	U2	Even	0.600	1.320	2.350	---
3	43.50	43.50	6.69	63.54	U2	Even	0.600	1.320	2.350	---
4	43.50	43.50	6.69	127.20	U2	All	0.617	2.857	0.919	7-#5

2.11. Punching Shear Around Columns

2.11.1. Critical Section Properties

Support	Type	b ₁ in	b ₂ in	b ₀ in	d _{avg} in	CG in	c _(left) in	c _(right) in	A _c in ²	J _c in ⁴
1	Rect	21.34	24.69	67.38	6.69	5.58	14.58	6.76	450.57	23814
2	Rect	24.69	24.69	98.75	6.69	0.00	12.34	12.34	660.39	68312
3	Rect	24.69	24.69	98.75	6.69	0.00	12.34	12.34	660.39	68312
4	Rect	21.34	24.69	67.38	6.69	-5.58	6.76	14.58	450.57	23814


2.11.2. Punching Shear Results

Support	V _u kip	v _u psi	M _{unb} k-ft	Comb	Patt	γ _v	v _u psi	ΦV _c psi
1	70.43	156.3	94.43	U2	All	0.383	279.4	189.7 *EXCEEDED
2	158.40	239.9	-28.64	U2	All	0.400	264.7	189.7 *EXCEEDED
3	158.40	239.9	28.64	U2	All	0.400	264.7	189.7 *EXCEEDED
4	70.43	156.3	-94.43	U2	All	0.383	279.4	189.7 *EXCEEDED


2.12. Material TakeOff

2.12.1. Reinforcement in the Direction of Analysis

Top Bars	1137.0 lb	<=>	16.85 lb/ft	<=>	0.766 lb/ft ²
Bottom Bars	1379.1 lb	<=>	20.43 lb/ft	<=>	0.929 lb/ft ²
Stirrups	0.0 lb	<=>	0.00 lb/ft	<=>	0.000 lb/ft ²
Total Steel	2516.1 lb	<=>	37.28 lb/ft	<=>	1.694 lb/ft ²
Concrete	1051.9 ft ³	<=>	15.58 ft ³ /ft	<=>	0.708 ft ³ /ft ²

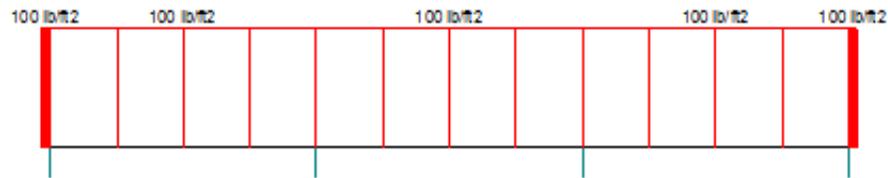

CASE/PATTERN: Live/All

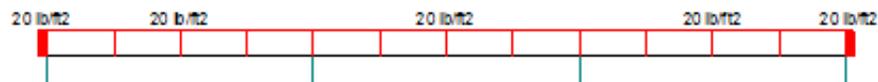

CASE: Dead



CASE: SELF

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-00000004-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\Example 4 - Design of Concrete Structures by Nilson-Example 13.3.slb

Project: spSlab/spBeam Manual, Example 4


Frame: Design of Concrete Structures by Nilson-Example 13.3


Engineer: StructurePoint


Code: ACI 318-14

Date: 12/11/15

Time: 16:56:48

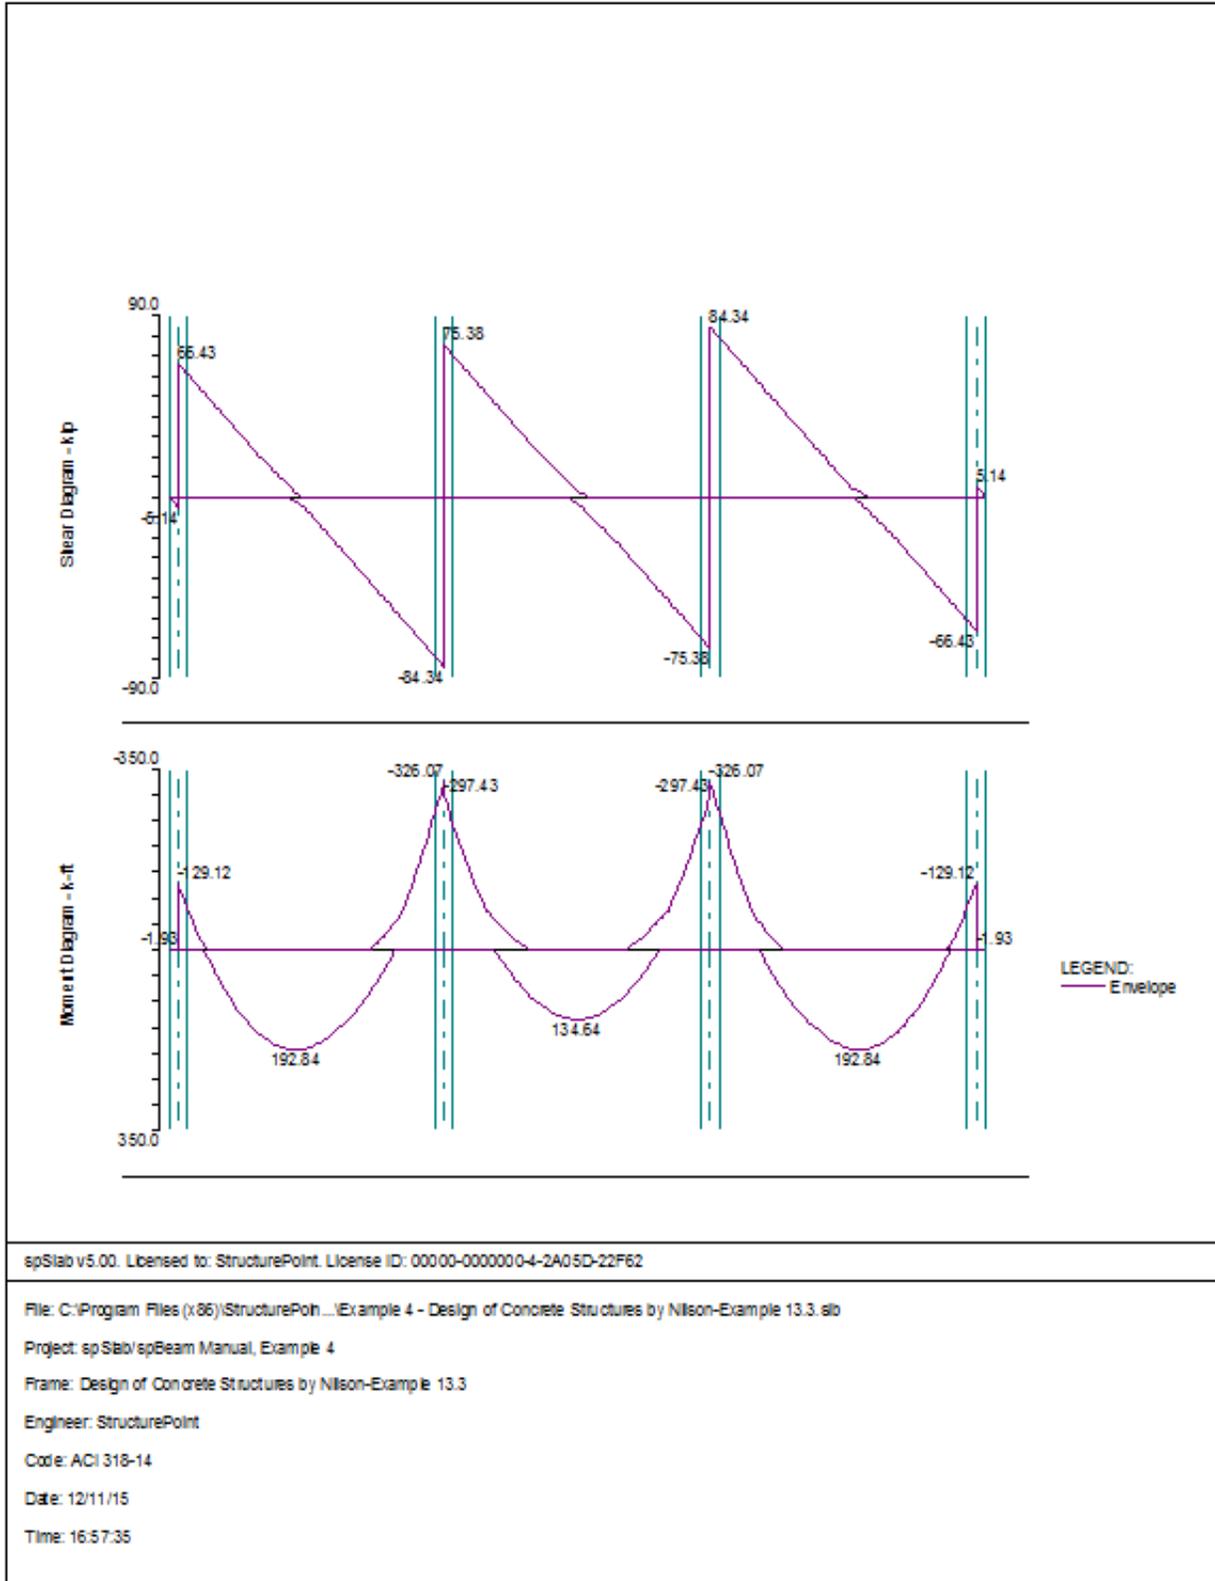

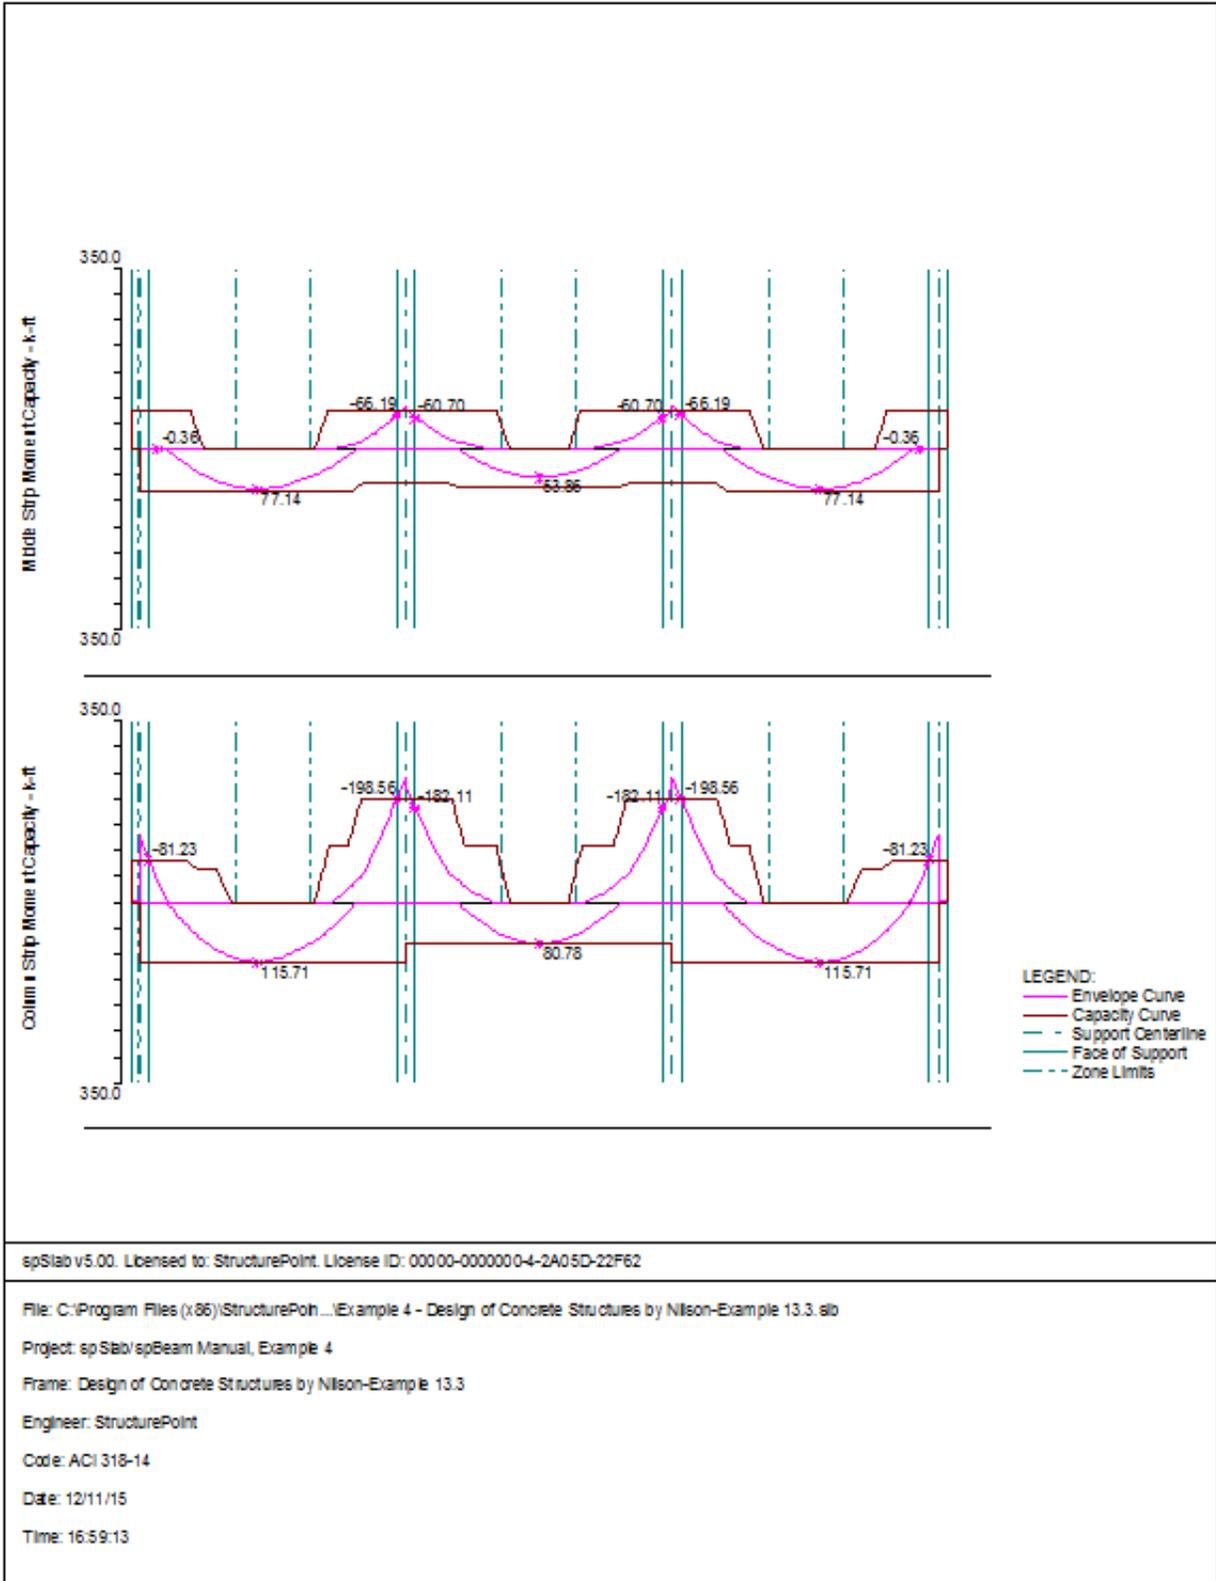

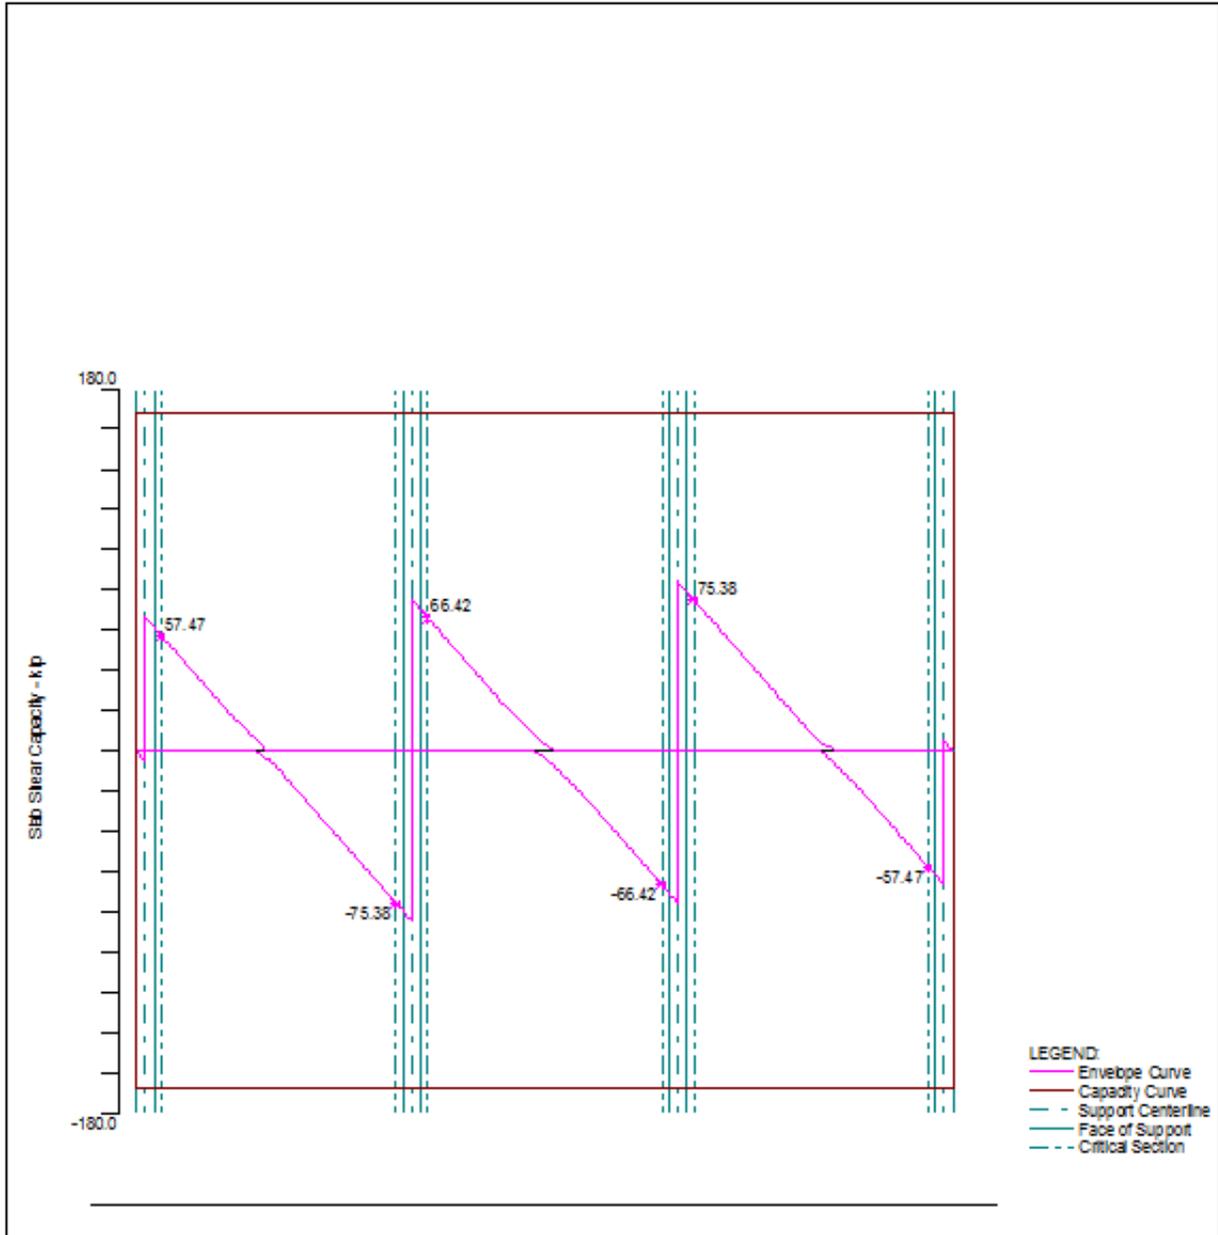

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-0000000-4-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\Example 4 - Design of Concrete Structures by Nilson-Example 13.3.slb

Project: spSlab/spBeam Manual, Example 4


Frame: Design of Concrete Structures by Nilson-Example 13.3

Engineer: StructurePoint

Code: ACI 318-14

Date: 12/11/15

Time: 17:00:14

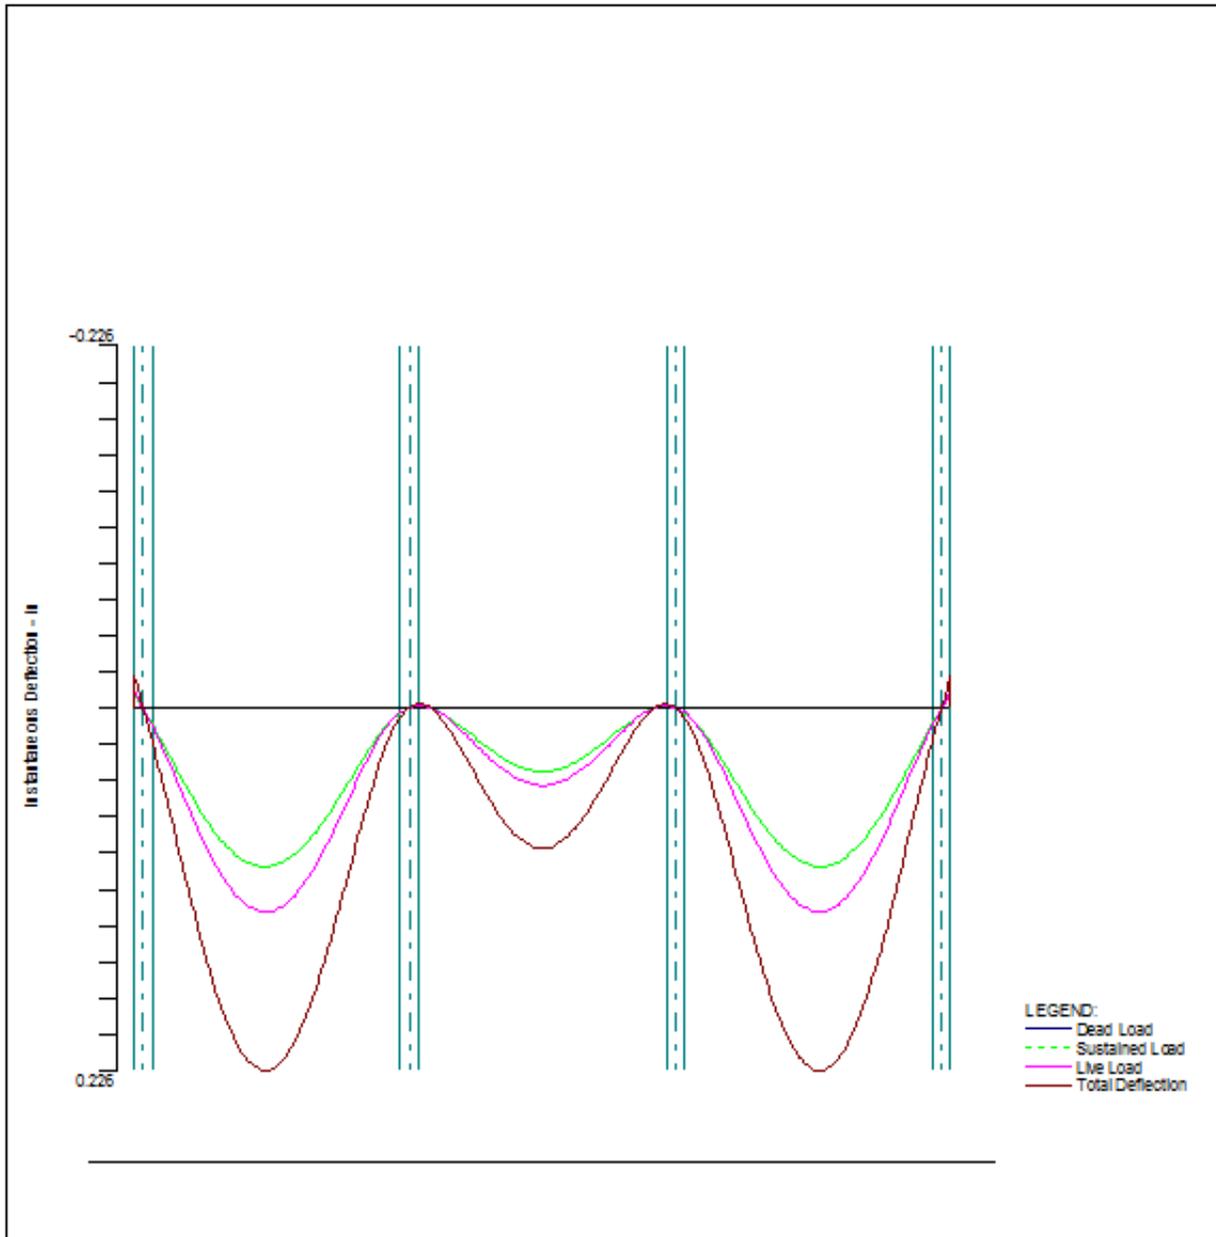

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-000000-4-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\Example 4 - Design of Concrete Structures by Nilson-Example 13.3.slb

Project: spSlab/spBeam Manual, Example 4


Frame: Design of Concrete Structures by Nilson-Example 13.3

Engineer: StructurePoint

Code: ACI 318-14

Date: 12/11/15


Time: 17:02:46

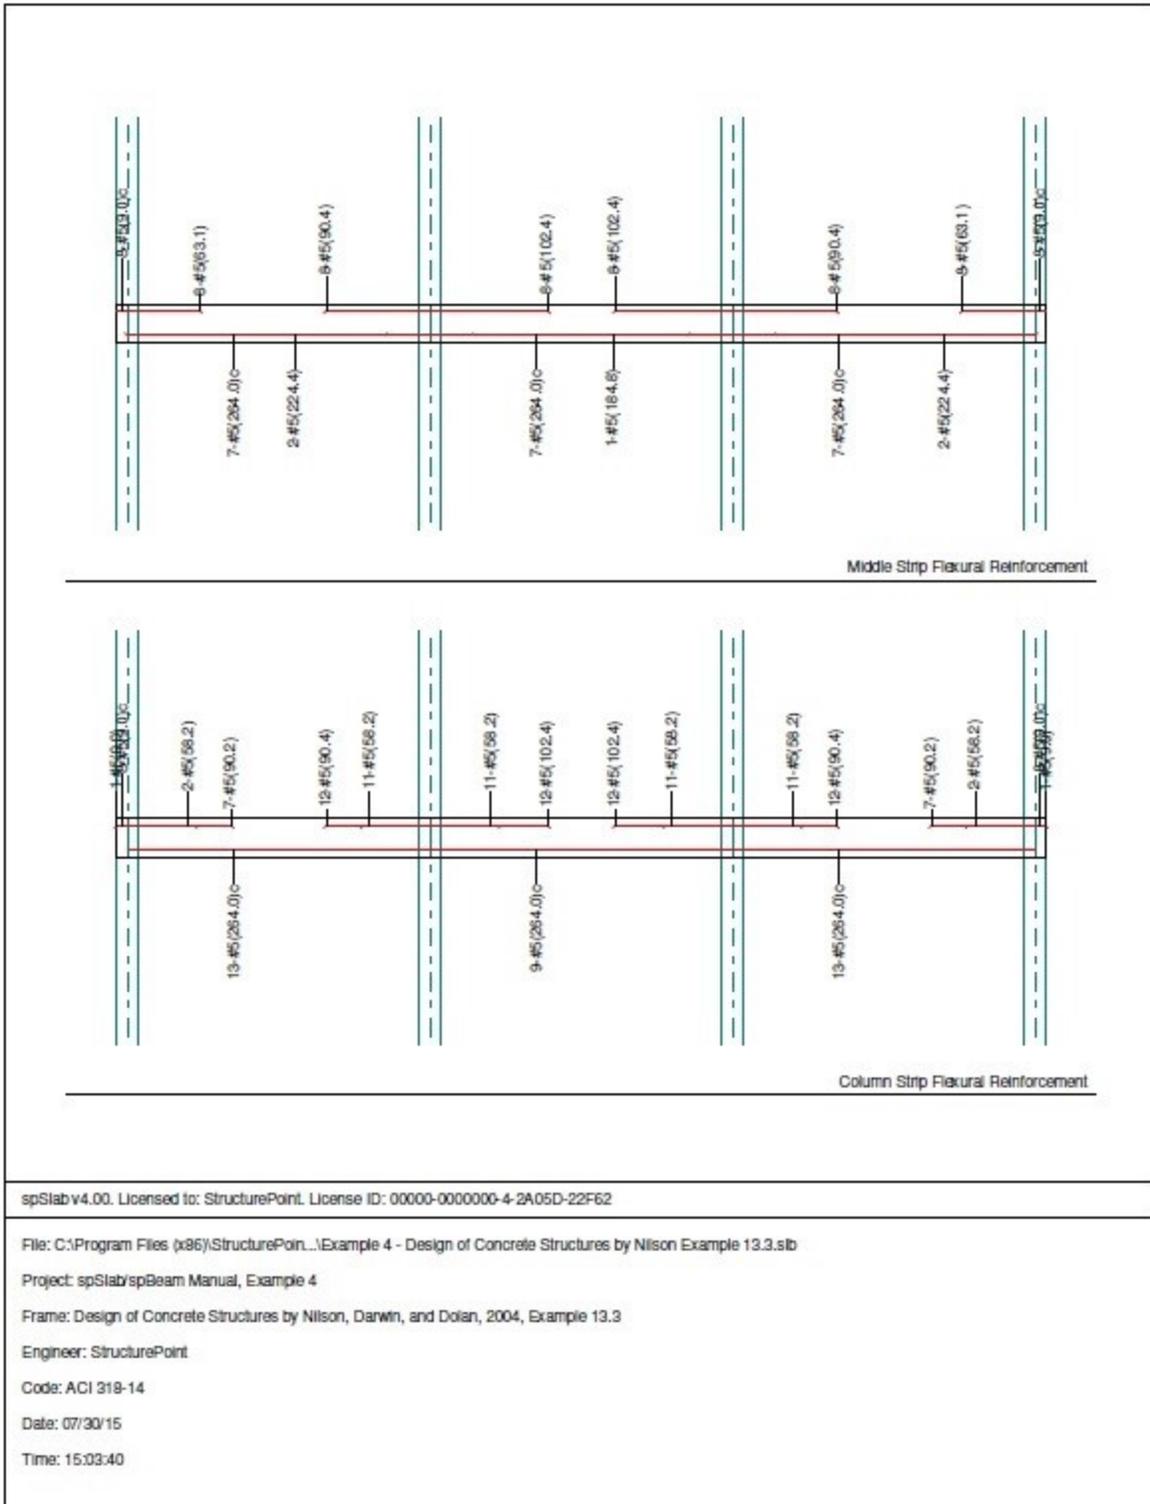

6.5 Example 5 Two-way Slab System

6.5.1 Problem Formulation

Using the Equivalent Frame Method, determine design moments for the slab system in the direction shown, for an intermediate floor. This example refers to Example 20-2 from *PCA Notes on ACI 318 Building Code Requirements for Structural Concrete*.

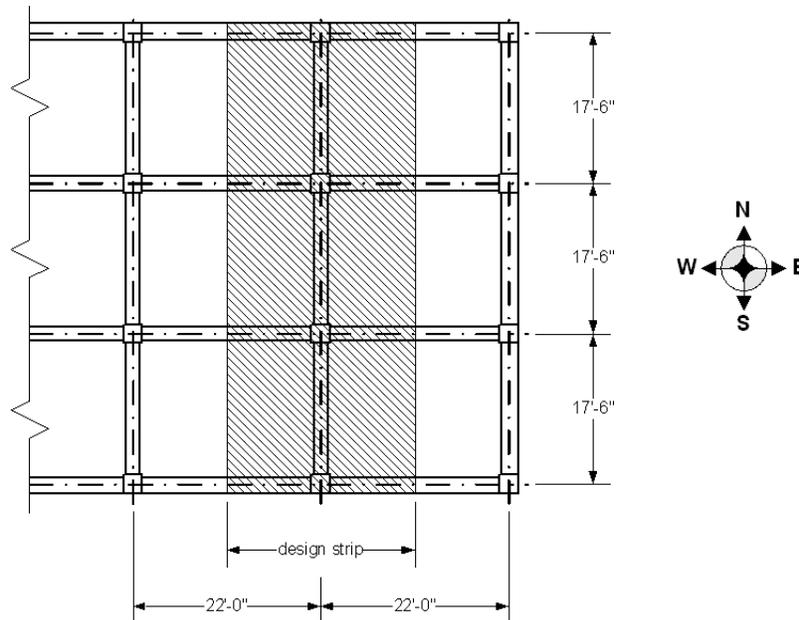

Story height = 12 ft

Edge beam dimensions = 14 × 27 in.

Interior beam dimensions = 14 × 20 in.

Column dimensions = 18 × 18 in.

Service live load = 100 psf


Dead load = self weight

f'_c = 4000 psi (for all members), normal weight concrete

f_y = 60,000 psi


6.5.2 Preparing Input

1. From the **Input** menu, select **General Information**. A dialog box appears.
 - In the LABELS section, input the names of the project, frame, and engineer.
 - In the FRAME section, input 4 for NO OF SUPPORTS. . Then, Click the check boxes next to LEFT CANTILEVER and RIGHT CANTILEVER.
 - In the FLOOR SYSTEM section, click the radial button next to TWO-WAY.
 - Leave all other options in the **General Information** tab to their default settings of ACI 318-1 design code, ASTM A615 reinforcement, and DESIGN run mode option.

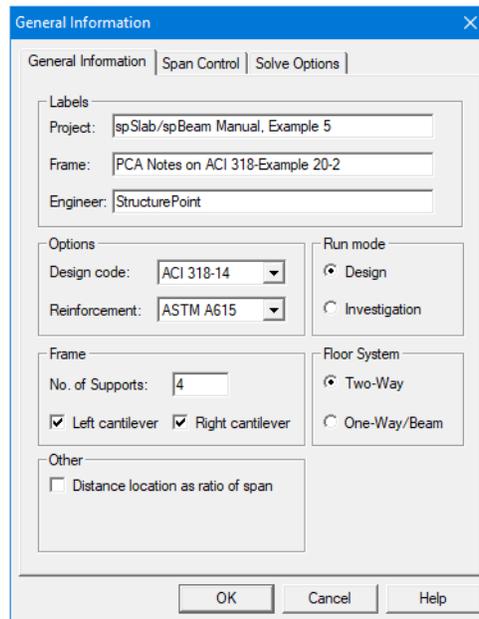


6.5.3 Assigning Properties

2. Nothing needs to be changed in the **Material Properties** menu.

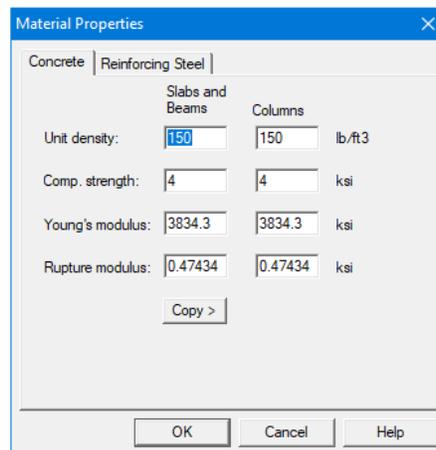

3. From the **Input** menu, select **Spans**. A dialog box appears.
 - Under the **Slabs/Flanges** tab, for Span No. 1 input 0.75 for LENGTH, 6 for THICKNESS, and 11 for WIDTH LEFT and WIDTH RIGHT. Press MODIFY.
 - Press COPY. Click the check box next to SPAN NO. 5. Press OK.
 - Under the **Slabs/Flanges** tab, for Span No. 2 input 17.5 for LENGTH, 6 for THICKNESS, and 11 for WIDTH LEFT and WIDTH RIGHT. Press MODIFY.
 - Press COPY. Click the check boxes next to SPAN NO. 3 and SPAN NO. 4. Press OK.
 - Select the **Longitudinal Beams** tab. Input 14 for WIDTH and 20 for DEPTH. Press MODIFY.
 - Press COPY. Press the CHECK ALL button. Press OK.
 - Press OK again.

Span No.	Location	Length	Thickness	Width-L	Width-R
1	Interior	0.75	6	11	11
2	Interior	17.5	6	11	11
3	Interior	17.5	6	11	11
4	Interior	17.5	6	11	11
5	Interior	0.75	6	11	11

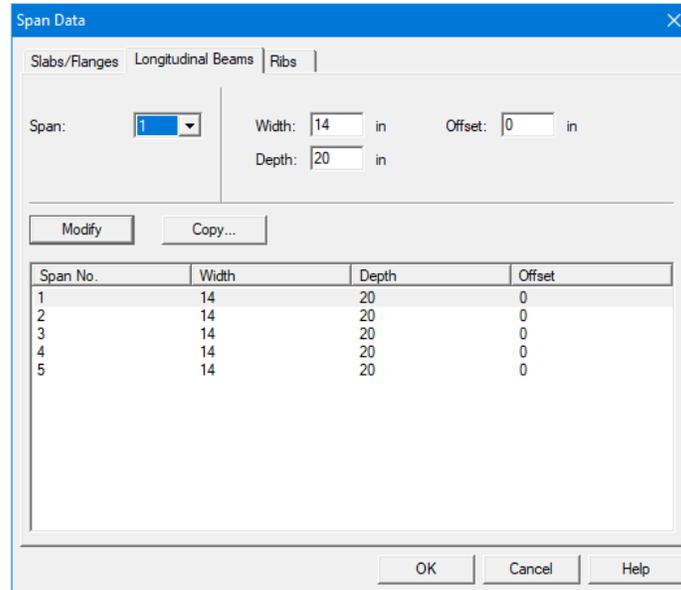

Span Data

Slabs/Flanges | Longitudinal Beams | Ribs

Span: 1 | Width: 14 in | Offset: 0 in
Depth: 20 in

Modify | Copy...

Span No.	Width	Depth	Offset
1	14	20	0
2	14	20	0
3	14	20	0
4	14	20	0
5	14	20	0

OK | Cancel | Help

4. From the **Input** menu, select **Supports**. A dialog box appears.
 - Under the **Columns** tab, input 12 for the HEIGHT in both the ABOVE and BELOW rows.
 - Input 18 for both the C1 and C2 values in both the ABOVE and BELOW rows. Press MODIFY.
 - Press COPY. Press the CHECK ALL button. Press OK.
 - Under the **Transverse Beams** tab, input 14 for WIDTH and 27 for DEPTH. Press MODIFY.
 - Press COPY. Click the check box next to SUPPORT 4. Press OK.
 - Use the drop down arrow next to SUPPORT to select SUPPORT 2.
 - Input 14 for WIDTH and 20 for DEPTH. Press MODIFY.
 - Press COPY. Click the check box next to SUPPORT 3 and unclick the check box next to SUPPORT 1. Press OK.
 - Press OK again.


Sup. No	Stiff%	HtA	c1A	c2A	HtB	c1B	c2B	Shear	Gamma
1	100	12	18	18	12	18	18	Yes	No
2	100	12	18	18	12	18	18	Yes	No
3	100	12	18	18	12	18	18	Yes	No
4	100	12	18	18	12	18	18	Yes	No

Sup. No	Width	Depth	Offset
1	14	27	0
2	14	20	0
3	14	20	0
4	14	27	0


5. Nothing needs to be changed in the **Reinforcement Criteria** menu.

6. From the **Input** menu, select **Load Cases**. A dialog box appears.


- Since the Self weight is to be entered under DEAD Load Label to match the Reference’s input, click on SELF in the LABEL column on the top of the list of the LOAD CASES dialog box and press the DELETE button.
- Since we are not considering snow loads, click on SNOW in the LABEL column on the list in the bottom half of the LOAD CASES dialog box and press the DELETE button.
- Since we are not considering lateral forces, click on WIND in the LABEL column on the list in the bottom half of the LOAD CASES dialog box and press the DELETE button.
- Click on EQ in the LABEL column and press the DELETE button. Press OK.

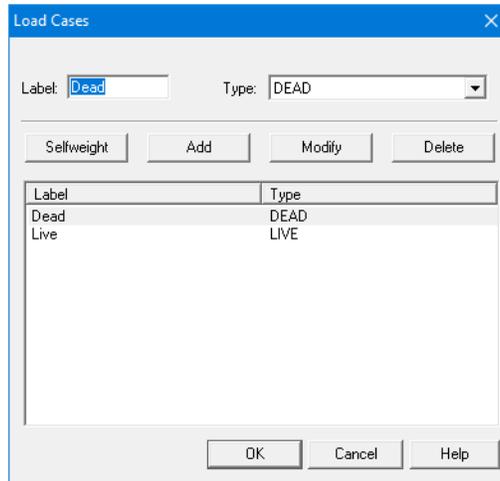


7. From the **Input** menu, select **Load Combinations**. A dialog box appears.
 - Delete all the load combinations by clicking anywhere on the list in the bottom half of the LOAD COMBINATIONS dialog box and pressing the DELETE button. Repeat this procedure until all the load combinations are gone.
 - Input 1 . 2 in the DEAD field, and 1 . 6 in the LIVE field. Press ADD.
 - Press OK.

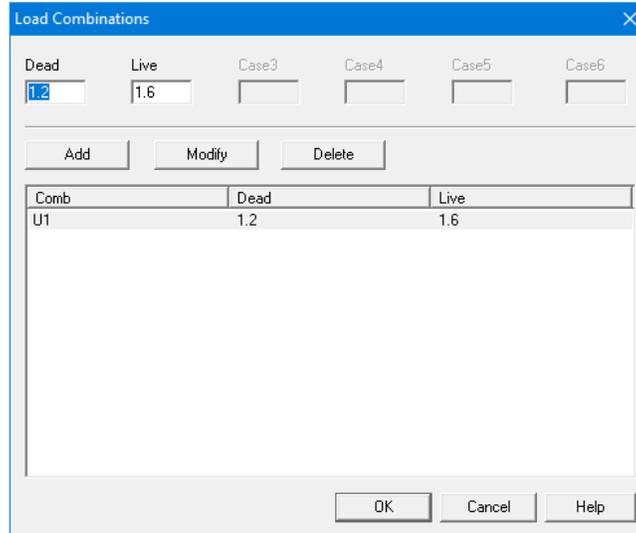

8. From the **Input** menu, select **Span Loads**. A dialog box appears.

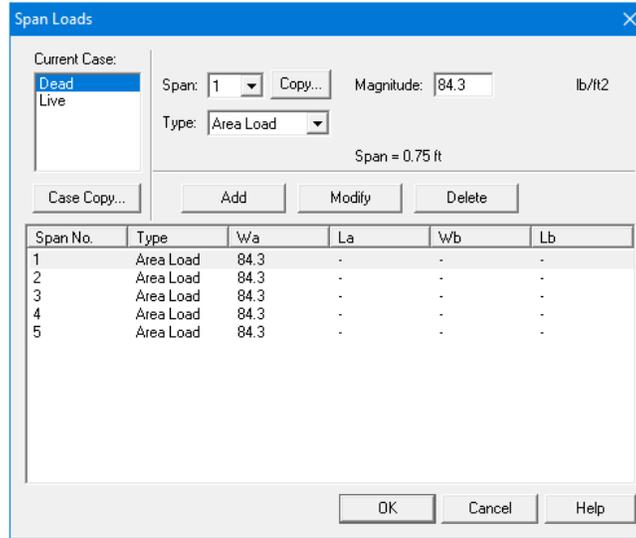

- In the top left corner of the SPAN LOADS dialog box, there is a section called CURRENT CASE. Click on DEAD.
- Input 84 . 3 for MAGNITUDE. Press ADD.
- Press COPY. Press the CHECK ALL button. Press OK.
- Then, click on LIVE in the CURRENT CASE section.
- Input 100 for MAGNITUDE. Press ADD.
- Press COPY. Press the CHECK ALL button. Press OK.
- Press OK again.

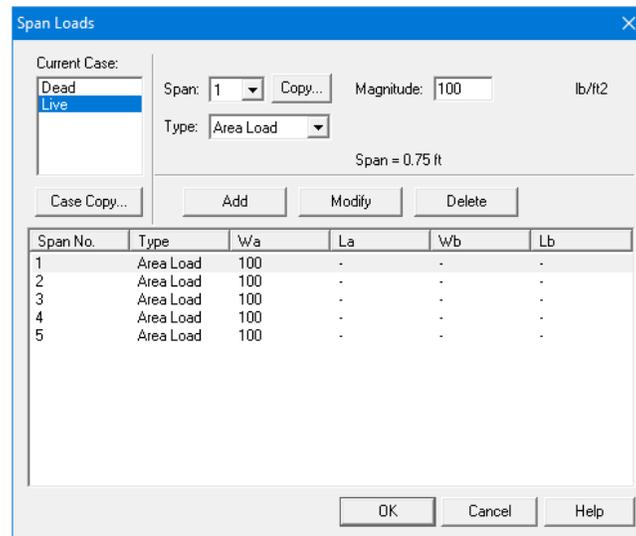

6.5.4 Solving


9. From the **Solve** menu, select **Execute**. Press CLOSE.
10. From the **Solve** menu, select **Results**.
 - Use the explorer to browse through result tables.
 - Use the ARROW keys or the mouse wheel to browse through different parts of the table quickly. Press the CLOSE button to close the SPRESULTS.

6.5.5 Viewing and Printing Results

11. To view diagrams, select **Loads, Internal Forces, Moment Capacity, Shear Capacity, Deflection, or Reinforcement** from the **View** menu. Right click in any of these diagrams to get new copy, printing, or display options.
12. You may print the results report by using the spReporter module. To print any of the diagrams you selected to view, use the **Print Preview** command found by right clicking in the diagram's window. After viewing the results, you may decide to investigate the input beams under the same loads but with a modified reinforcement configuration.
13. From the **Input** menu, select **General Information**. In the **General Information** dialog box change the RUN MODE option to INVESTIGATION. Do not change any of the other options. Press OK
14. From the **Input** menu, select the different commands under **Reinforcement Criteria** and **Reinforcing Bars** to modify the reinforcement configuration computed by the program.
15. Repeat steps 10 and subsequent to perform the investigation and view the results.



spSlab v5.50 Debug - Mar 29 2018
 A Computer Program for Analysis, Design, and Investigation of
 Reinforced Concrete Beams, One-way and Two-way Slab Systems
 Copyright - 1988-2018, STRUCTUREPOINT, LLC.
 All rights reserved

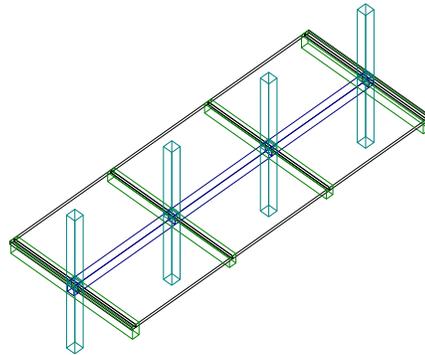

StructurePoint

Licensee stated above acknowledges that STRUCTUREPOINT (SP) is not and cannot be responsible for either the accuracy or adequacy of the material supplied as input for processing by the spSlab computer program. Furthermore, STRUCTUREPOINT neither makes any warranty expressed nor implied with respect to the correctness of the output prepared by the spSlab program. Although STRUCTUREPOINT has endeavored to produce spSlab error free the program is not and cannot be certified infallible. The final and only responsibility for analysis, design and engineering documents is the licensee's. Accordingly, STRUCTUREPOINT disclaims all responsibility in contract, negligence or other tort for any analysis, design or engineering documents prepared in connection with the use of the spSlab program. Licensed to: -- Unknown User --, License ID: 00000-0000000

Contents

1. Input Echo.....	3
1.1. General Information.....	3
1.2. Solve Options.....	3
1.3. Material Properties.....	3
1.3.1. Concrete: Slabs / Beams.....	3
1.3.2. Concrete: Columns.....	3
1.3.3. Reinforcing Steel.....	4
1.4. Reinforcement Database.....	4
1.5. Span Data.....	4
1.5.1. Slabs.....	4
1.5.2. Ribs and Longitudinal Beams.....	4
1.6. Support Data.....	4
1.6.1. Columns.....	4
1.6.2. Transverse Beams.....	5
1.6.3. Boundary Conditions.....	5
1.7. Load Data.....	5
1.7.1. Load Cases and Combinations.....	5
1.7.2. Area Loads.....	5
1.8. Reinforcement Criteria.....	6
1.8.1. Slabs and Ribs.....	6
1.8.2. Beams.....	6
2. Design Results*.....	6
2.1. Strip Widths and Distribution Factors.....	6
2.2. Top Reinforcement.....	7
2.3. Top Bar Details.....	8
2.4. Top Bar Development Lengths.....	8
2.5. Bottom Reinforcement.....	9
2.6. Bottom Bar Details.....	9
2.7. Bottom Bar Development Lengths.....	10
2.8. Flexural Capacity.....	10
2.9. Longitudinal Beam Transverse Reinforcement Demand and Capacity.....	13
2.9.1. Section Properties.....	13
2.9.2. Beam Transverse Reinforcement Demand.....	13
2.9.3. Beam Transverse Reinforcement Details.....	14
2.9.4. Beam Transverse Reinforcement Capacity.....	14
2.10. Slab Shear Capacity.....	15
2.11. Flexural Transfer of Negative Unbalanced Moment at Supports.....	15
2.12. Punching Shear Around Columns.....	15
2.12.1. Critical Section Properties.....	15
2.12.2. Punching Shear Results.....	15
2.13. Material TakeOff.....	15
2.13.1. Reinforcement in the Direction of Analysis.....	15

1. Input Echo

1.1. General Information

File Name	...\Example 5 - PCA Notes on ACI 318-Example 2...
Project	spSlab/spBeam Manual, Example 5
Frame	PCA Notes on ACI 318-Example 20-2
Engineer	StructurePoint
Code	ACI 318-14
Reinforcement Database	ASTM A615
Mode	Design
Number of supports =	4 + Left cantilever + Right cantilever
Floor System	Two-Way

1.2. Solve Options

Live load pattern ratio = 75%
Minimum free edge distance for punching shear = 4 times slab thickness.
Circular critical section around circular supports used (if possible).
Deflections are based on cracked section properties.
In negative moment regions, I_g and M_{cr} DO NOT include flange/slab contribution (if available)
Long-term deflections are calculated for load duration of 60 months.
0% of live load is sustained.
Only deflections for direction of analysis will be calculated.
Compression reinforcement calculations NOT selected.
Default incremental rebar design selected.
User-defined slab strip widths NOT selected.
User-defined distribution factors NOT selected.
One-way shear in drop panel NOT selected.
Distribution of shear to strips NOT selected.
Beam T-section design NOT selected.
Longitudinal beam contribution in negative reinforcement design over support NOT selected.
Transverse beam contribution in negative reinforcement design over support NOT selected.

1.3. Material Properties

1.3.1. Concrete: Slabs / Beams

w_c	150 lb/ft ³
f'_c	4 ksi
E_c	3834.3 ksi
f_r	0.474342 ksi

1.3.2. Concrete: Columns

w_c	150 lb/ft ³
f'_c	4 ksi
E_c	3834.3 ksi
f_r	0.47434 ksi

1.3.3. Reinforcing Steel

f_y	60 ksi
f_{yt}	60 ksi
E_s	29000 ksi
Epoxy coated bars	No

1.4. Reinforcement Database

Size	Db in	Ab in ²	Wb lb/ft	Size	Db in	Ab in ²	Wb lb/ft
#3	0.38	0.11	0.38	#4	0.50	0.20	0.67
#5	0.63	0.31	1.04	#6	0.75	0.44	1.50
#7	0.88	0.60	2.04	#8	1.00	0.79	2.67
#9	1.13	1.00	3.40	#10	1.27	1.27	4.30
#11	1.41	1.56	5.31	#14	1.69	2.25	7.65
#18	2.26	4.00	13.60				

1.5. Span Data

1.5.1. Slabs

Notes:

Deflection check required for panels where code-specified Hmin for two-way construction doesn't apply due to:
 *i - cantilever end span (LC, RC) support condition

Span	Loc	L1 ft	t in	wL ft	wR ft	L2L ft	L2R ft	H _{min} in
1	Int	0.750	6.00	11.000	11.000	22.000	22.000	--- LC *i
2	Int	17.500	6.00	11.000	11.000	22.000	22.000	5.79
3	Int	17.500	6.00	11.000	11.000	22.000	22.000	5.79
4	Int	17.500	6.00	11.000	11.000	22.000	22.000	5.79
5	Int	0.750	6.00	11.000	11.000	22.000	22.000	--- RC *i

1.5.2. Ribs and Longitudinal Beams

Span	Ribs			Beams		
	b in	h in	Sp in	b in	h in	Offset in
1	0.00	0.00	0.00	14.00	20.00	0.00
2	0.00	0.00	0.00	14.00	20.00	0.00
3	0.00	0.00	0.00	14.00	20.00	0.00
4	0.00	0.00	0.00	14.00	20.00	0.00
5	0.00	0.00	0.00	14.00	20.00	0.00

1.6. Support Data

1.6.1. Columns

Support	c1a in	c2a in	Ha ft	c1b in	c2b in	Hb ft	Red %
1	18.00	18.00	12.000	18.00	18.00	12.000	100
2	18.00	18.00	12.000	18.00	18.00	12.000	100
3	18.00	18.00	12.000	18.00	18.00	12.000	100
4	18.00	18.00	12.000	18.00	18.00	12.000	100

1.6.2. Transverse Beams

Supports	b in	h in	Ecc in
1	14.00	27.00	0.00
2	14.00	20.00	0.00
3	14.00	20.00	0.00
4	14.00	27.00	0.00

1.6.3. Boundary Conditions

Support	Spring		Far End	
	K _z kip/in	K _y kip-in/rad	Above	Below
1	0	0	Fixed	Fixed
2	0	0	Fixed	Fixed
3	0	0	Fixed	Fixed
4	0	0	Fixed	Fixed

1.7. Load Data

1.7.1. Load Cases and Combinations

Case Type	Dead DEAD	Live LIVE
U1	1.200	1.600

1.7.2. Area Loads

Case/Patt	Span	Wa lb/ft ²
Dead	1	84.30
	2	84.30
	3	84.30
	4	84.30
	5	84.30
Live	1	100.00
	2	100.00
	3	100.00
	4	100.00
	5	100.00
Live/Odd	1	75.00
	3	75.00
	5	75.00
Live/Even	2	75.00
	4	75.00
Live/S1	1	75.00
	2	75.00
Live/S2	2	75.00
	3	75.00
Live/S3	3	75.00
	4	75.00
Live/S4	4	75.00
	5	75.00

1.8. Reinforcement Criteria

1.8.1. Slabs and Ribs

	Units	Top Bars		Bottom Bars	
		Min.	Max.	Min.	Max.
Bar Size		#5	#8	#5	#8
Bar spacing	in	1.00	18.00	1.00	18.00
Reinf ratio	%	0.14	5.00	0.14	5.00
Clear Cover	in	1.50		1.50	

There is NOT more than 12 in of concrete below top bars.

1.8.2. Beams

	Units	Top Bars		Bottom Bars		Stirrups	
		Min.	Max.	Min.	Max.	Min.	Max.
Bar Size		#5	#8	#5	#8	#3	#5
Bar spacing	in	1.00	18.00	1.00	18.00	6.00	18.00
Reinf ratio	%	0.14	5.00	0.14	5.00		
Clear Cover	in	1.50		1.50			
Layer dist.	in	1.00		1.00			
No. of legs						2	6
Side cover	in					1.50	
1st Stirrup	in					3.00	

There is NOT more than 12 in of concrete below top bars.

2. Design Results*

*Unless otherwise noted, all results are in the direction of analysis only. Another analysis in the perpendicular direction has to be carried out for two-way slab systems.

2.1. Strip Widths and Distribution Factors

Notes:
 *Used for bottom reinforcement. **Used for top reinforcement.

Span	Strip	Width			Moment Factor			
		Left **	Right **	Bottom *	Left **	Right **	Bottom *	
		ft	ft	ft	ft	ft	ft	
1	Column	7.58	7.58	7.58	0.122	0.122	0.113	
	Middle	13.25	13.25	13.25	0.188	0.188	0.250	
	Beam	1.17	1.17	1.17	0.690	0.690	0.637	
2	Column	7.58	7.58	7.58	0.113	0.101	0.101	
	Middle	13.25	13.25	13.25	0.246	0.327	0.327	
	Beam	1.17	1.17	1.17	0.641	0.572	0.572	
3	Column	7.58	7.58	7.58	0.101	0.101	0.101	
	Middle	13.25	13.25	13.25	0.327	0.327	0.327	
	Beam	1.17	1.17	1.17	0.572	0.572	0.572	
4	Column	7.58	7.58	7.58	0.101	0.113	0.101	
	Middle	13.25	13.25	13.25	0.327	0.246	0.327	
	Beam	1.17	1.17	1.17	0.572	0.641	0.572	
5	Column	7.58	7.58	7.58	0.122	0.122	0.113	
	Middle	13.25	13.25	13.25	0.188	0.188	0.250	
	Beam	1.17	1.17	1.17	0.690	0.690	0.637	

2.2. Top Reinforcement

Notes:

*3 - Design governed by minimum reinforcement.

*5 - Number of bars governed by maximum allowable spacing.

Span Strip	Zone	Width ft	M _{max} k-ft	X _{max} ft	A _{s,min} in ²	A _{s,max} in ²	A _{s,req} in ²	Sp _{Prov} in	Bars	
1 Column	Left	7.58	0.02	0.217	0.983	6.883	0.001	11.375	8-#5 *3 *5	
	Midspan	7.58	0.06	0.402	0.983	6.883	0.003	11.375	8-#5 *3 *5	
	Right	7.58	0.14	0.619	0.983	6.883	0.007	11.375	8-#5 *3 *5	
	Middle	Left	13.25	0.03	0.217	1.717	12.026	0.002	11.357	14-#5 *3 *5
		Midspan	13.25	0.10	0.402	1.717	12.026	0.005	11.357	14-#5 *3 *5
		Right	13.25	0.22	0.619	1.717	12.026	0.011	11.357	14-#5 *3 *5
	Beam	Left	1.17	0.11	0.217	0.356	4.599	0.001	8.576	2-#5 *3
		Midspan	1.17	0.35	0.402	0.356	4.599	0.004	8.576	2-#5 *3
		Right	1.17	0.79	0.619	0.356	4.599	0.010	4.288	3-#5 *3
2 Column	Left	7.58	7.06	0.750	0.983	6.883	0.378	11.375	8-#5 *3 *5	
	Midspan	7.58	0.00	8.750	0.000	6.883	0.000	0.000	---	
	Right	7.58	14.23	16.750	0.983	6.883	0.769	11.375	8-#5 *3 *5	
	Middle	Left	13.25	15.36	0.750	1.717	12.026	0.824	11.357	14-#5 *3 *5
		Midspan	13.25	0.00	8.750	0.000	12.026	0.000	0.000	---
		Right	13.25	46.12	16.750	1.717	12.026	2.533	11.357	14-#5 *5
	Beam	Left	1.17	40.00	0.750	0.661	4.599	0.497	4.288	3-#5 *3
		Midspan	1.17	0.00	8.750	0.000	4.599	0.000	0.000	---
		Right	1.17	80.63	16.750	0.849	4.599	1.021	2.859	4-#5
3 Column	Left	7.58	12.91	0.750	0.983	6.883	0.696	11.375	8-#5 *3 *5	
	Midspan	7.58	0.15	11.150	0.983	6.883	0.008	11.375	8-#5 *3 *5	
	Right	7.58	12.91	16.750	0.983	6.883	0.696	11.375	8-#5 *3 *5	
	Middle	Left	13.25	41.84	0.750	1.717	12.026	2.290	11.357	14-#5 *5
		Midspan	13.25	0.47	11.150	1.717	12.026	0.025	11.357	14-#5 *3 *5
		Right	13.25	41.84	16.750	1.717	12.026	2.290	11.357	14-#5 *5
	Beam	Left	1.17	73.15	0.750	0.849	4.599	0.923	2.859	4-#5
		Midspan	1.17	0.83	11.150	0.356	4.599	0.010	8.576	2-#5 *3
		Right	1.17	73.15	16.750	0.849	4.599	0.923	2.859	4-#5
4 Column	Left	7.58	14.23	0.750	0.983	6.883	0.769	11.375	8-#5 *3 *5	
	Midspan	7.58	0.00	8.750	0.000	6.883	0.000	0.000	---	
	Right	7.58	7.06	16.750	0.983	6.883	0.378	11.375	8-#5 *3 *5	
	Middle	Left	13.25	46.12	0.750	1.717	12.026	2.533	11.357	14-#5 *5
		Midspan	13.25	0.00	8.750	0.000	12.026	0.000	0.000	---
		Right	13.25	15.36	16.750	1.717	12.026	0.824	11.357	14-#5 *3 *5
	Beam	Left	1.17	80.63	0.750	0.849	4.599	1.021	2.859	4-#5
		Midspan	1.17	0.00	8.750	0.000	4.599	0.000	0.000	---
		Right	1.17	40.00	16.750	0.661	4.599	0.497	4.288	3-#5 *3
5 Column	Left	7.58	0.14	0.131	0.983	6.883	0.007	11.375	8-#5 *3 *5	
	Midspan	7.58	0.06	0.348	0.983	6.883	0.003	11.375	8-#5 *3 *5	

STRUCTUREPOINT - spSlab v5.50 Debug - Mar 29 2018
 Licensed to: -- Unknown User --. License ID: 00000-0000000
 C:\Program Files (x86)\StructurePoint\spSlab\E...\Example 5 - PCA Notes on ACI 318-Example 20-2.slb

Page | 8
 3/30/2018
 11:41 AM

Span Strip	Zone	Width ft	M _{max} k-ft	X _{max} ft	A _{s,min} in ²	A _{s,max} in ²	A _{s,req} in ²	Sp _{Prov} in	Bars
	Right	7.58	0.02	0.533	0.983	6.883	0.001	11.375	8-#5 *3 *5
Middle	Left	13.25	0.22	0.131	1.717	12.026	0.011	11.357	14-#5 *3 *5
	Midspace	13.25	0.10	0.348	1.717	12.026	0.005	11.357	14-#5 *3 *5
	Right	13.25	0.03	0.533	1.717	12.026	0.002	11.357	14-#5 *3 *5
Beam	Left	1.17	0.79	0.131	0.356	4.599	0.010	4.288	3-#5 *3
	Midspace	1.17	0.35	0.348	0.356	4.599	0.004	8.576	2-#5 *3
	Right	1.17	0.11	0.533	0.356	4.599	0.001	8.576	2-#5 *3

2.3. Top Bar Details

NOTES:

* - Bar cut-off location does not meet ACI 318, 12.10.5.1. Revise location, unless the requirements of either 12.10.5.2 or 12.10.5.3 are manually checked and satisfied.

Span Strip	Bars	Left			Continuous		Right			
		Length ft	Bars	Length ft	Bars	Length ft	Bars	Length ft	Bars	Length ft
1 Column	---	---	---	---	8-#5	0.75	---	---	---	---
Middle	---	---	---	---	14-#5	0.75	---	---	---	---
Beam	---	---	---	---	2-#5	0.75	1-#5	0.75	---	---
2 Column	4-#5	3.75	4-#5	1.75	---	---	4-#5	6.75	4-#5	1.75
Middle	14-#5	3.75	---	---	---	---	14-#5	6.75	---	---
Beam	3-#5	4.27	---	---	---	---	3-#5	7.27	1-#5 *	2.51
3 Column	---	---	---	---	8-#5	17.50	---	---	---	---
Middle	---	---	---	---	14-#5	17.50	---	---	---	---
Beam	1-#5 *	3.22	1-#5 *	2.25	2-#5	17.50	1-#5 *	3.22	1-#5 *	2.25
4 Column	4-#5	6.75	4-#5	1.75	---	---	4-#5	3.75	4-#5	1.75
Middle	14-#5	6.75	---	---	---	---	14-#5	3.75	---	---
Beam	3-#5	7.27	1-#5 *	2.51	---	---	3-#5	4.27	---	---
5 Column	---	---	---	---	8-#5	0.75	---	---	---	---
Middle	---	---	---	---	14-#5	0.75	---	---	---	---
Beam	1-#5	0.75	---	---	2-#5	0.75	---	---	---	---

2.4. Top Bar Development Lengths

Span Strip	Bars	Left		Continuous		Right				
		DevLen in	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in
1 Column	---	---	---	---	8-#5	12.00	---	---	---	---
Middle	---	---	---	---	14-#5	12.00	---	---	---	---
Beam	---	---	---	---	2-#5	12.00	1-#5	12.00	---	---
2 Column	4-#5	12.00	4-#5	12.00	---	---	4-#5	12.00	4-#5	12.00
Middle	14-#5	12.00	---	---	---	---	14-#5	12.00	---	---
Beam	3-#5	12.00	---	---	---	---	3-#5	12.81	1-#5	12.81
3 Column	---	---	---	---	8-#5	12.00	---	---	---	---
Middle	---	---	---	---	14-#5	12.00	---	---	---	---
Beam	1-#5	12.00	1-#5	12.00	2-#5	12.00	1-#5	12.00	1-#5	12.00

Span Strip	Left				Continuous		Right			
	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in	Bars	DevLen in
4 Column	4-#5	12.00	4-#5	12.00	---	---	4-#5	12.00	4-#5	12.00
Middle	14-#5	12.00	---	---	---	---	14-#5	12.00	---	---
Beam	3-#5	12.81	1-#5	12.81	---	---	3-#5	12.00	---	---
5 Column	---	---	---	---	8-#5	12.00	---	---	---	---
Middle	---	---	---	---	14-#5	12.00	---	---	---	---
Beam	1-#5	12.00	---	---	2-#5	12.00	---	---	---	---

2.5. Bottom Reinforcement

Notes:

*3 - Design governed by minimum reinforcement.

*5 - Number of bars governed by maximum allowable spacing.

Span	Strip	Width ft	M _{max} k-ft	X _{max} ft	A _{s,min} in ²	A _{s,max} in ²	A _{s,req} in ²	Sp _{Prov} in	Bars
1	Column	7.58	0.00	0.309	0.000	6.883	0.000	0.000	---
	Middle	13.25	0.00	0.309	0.000	12.026	0.000	0.000	---
	Beam	1.17	0.00	0.309	0.000	4.599	0.000	0.000	---
2	Column	7.58	8.50	8.000	0.983	6.883	0.456	11.375	8-#5 *3 *5
	Middle	13.25	27.55	8.000	1.717	12.026	1.492	11.357	14-#5 *3 *5
	Beam	1.17	48.17	8.000	0.799	4.599	0.601	4.288	3-#5 *3
3	Column	7.58	6.47	8.750	0.983	6.883	0.346	11.375	8-#5 *3 *5
	Middle	13.25	20.96	8.750	1.717	12.026	1.129	11.357	14-#5 *3 *5
	Beam	1.17	36.65	8.750	0.605	4.599	0.455	8.576	2-#5 *3
4	Column	7.58	8.50	9.500	0.983	6.883	0.456	11.375	8-#5 *3 *5
	Middle	13.25	27.55	9.500	1.717	12.026	1.492	11.357	14-#5 *3 *5
	Beam	1.17	48.17	9.500	0.799	4.599	0.601	4.288	3-#5 *3
5	Column	7.58	0.00	0.441	0.000	6.883	0.000	0.000	---
	Middle	13.25	0.00	0.441	0.000	12.026	0.000	0.000	---
	Beam	1.17	0.00	0.441	0.000	4.599	0.000	0.000	---

2.6. Bottom Bar Details

Span Strip	Long Bars			Short Bars		
	Bars	Start ft	Length ft	Bars	Start ft	Length ft
1 Column	---			---		
	---			---		
	---			---		
2 Column	8-#5	0.00	17.50	---		
	7-#5	0.00	17.50	7-#5	0.00	14.88
	3-#5	0.00	17.50	---		
3 Column	8-#5	0.00	17.50	---		
	7-#5	0.00	17.50	7-#5	2.63	12.25
	2-#5	0.00	17.50	---		
4 Column	8-#5	0.00	17.50	---		
	7-#5	0.00	17.50	7-#5	2.63	14.88

Span	Strip	Long Bars			Short Bars		
		Bars	Start ft	Length ft	Bars	Start ft	Length ft
	Beam	3-#5	0.00	17.50	---		
5	Column	---			---		
	Middle	---			---		
	Beam	---			---		

2.7. Bottom Bar Development Lengths

Span	Strip	Long Bars		Short Bars	
		Bars	DevLen in	Bars	DevLen in
1	Column	---		---	
	Middle	---		---	
	Beam	---		---	
2	Column	8-#5	12.00	---	
	Middle	7-#5	12.00	7-#5	12.00
	Beam	3-#5	12.00	---	
3	Column	8-#5	12.00	---	
	Middle	7-#5	12.00	7-#5	12.00
	Beam	2-#5	12.00	---	
4	Column	8-#5	12.00	---	
	Middle	7-#5	12.00	7-#5	12.00
	Beam	3-#5	12.00	---	
5	Column	---		---	
	Middle	---		---	
	Beam	---		---	

2.8. Flexural Capacity

Span	Strip	Top						Bottom				
		x ft	A _{s,top} in ²	ΦM _n - k-ft	M _u - k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _n + k-ft	M _u + k-ft	Comb Pat	Status
1	Column	0.000	2.48	-44.05	0.00	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.217	2.48	-44.05	-0.02	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.375	2.48	-44.05	-0.05	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.402	2.48	-44.05	-0.06	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.619	2.48	-44.05	-0.14	U1 All	OK	0.00	0.00	0.00	U1 All	OK
	Middle	0.750	2.48	-44.05	-0.20	U1 All	---	0.00	0.00	0.00	U1 All	---
		0.000	4.34	-77.08	0.00	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.217	4.34	-77.08	-0.03	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.375	4.34	-77.08	-0.08	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.402	4.34	-77.08	-0.10	U1 All	OK	0.00	0.00	0.00	U1 All	OK
	Beam	0.619	4.34	-77.08	-0.22	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.750	4.34	-77.08	-0.30	U1 All	---	0.00	0.00	0.00	U1 All	---
		0.000	0.93	-73.66	0.00	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.217	0.93	-73.66	-0.11	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.375	0.93	-73.66	-0.31	U1 All	OK	0.00	0.00	0.00	U1 All	OK
	0.402	0.93	-73.66	-0.35	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.619	0.93	-73.66	-0.79	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.750	0.93	-73.66	-1.12	U1 All	---	0.00	0.00	0.00	U1 All	---	

Span Strip	Top						Bottom					
	x ft	A _{s,top} in ²	ΦM _{n-} k-ft	M _{u-} k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _{n+} k-ft	M _{u+} k-ft	Comb Pat	Status	
2 Column	0.000	2.48	-44.05	-10.78	U1 All	---	2.48	44.05	0.00	U1 All	---	
	0.750	2.48	-44.05	-7.06	U1 All	OK	2.48	44.05	0.00	U1 All	OK	
	1.750	1.24	-22.70	-2.95	U1 Even	OK	2.48	44.05	0.00	U1 All	OK	
	2.750	1.24	-22.70	0.00	U1 All	OK	2.48	44.05	0.83	U1 All	OK	
	3.750	0.00	0.00	0.00	U1 All	OK	2.48	44.05	3.52	U1 All	OK	
	6.350	0.00	0.00	0.00	U1 All	OK	2.48	44.05	7.81	U1 All	OK	
	8.000	0.00	0.00	0.00	U1 All	OK	2.48	44.05	8.50	U1 All	OK	
	8.750	0.00	0.00	0.00	U1 All	OK	2.48	44.05	8.29	U1 All	OK	
	10.750	0.00	0.00	0.00	U1 All	OK	2.48	44.05	6.46	U1 Even	OK	
	11.150	0.50	-9.24	0.00	U1 All	OK	2.48	44.05	5.94	U1 Even	OK	
	11.750	1.24	-22.70	0.00	U1 All	OK	2.48	44.05	5.02	U1 Even	OK	
	15.750	1.24	-22.70	-9.46	U1 All	OK	2.48	44.05	0.00	U1 All	OK	
	16.750	2.48	-44.05	-14.23	U1 All	OK	2.48	44.05	0.00	U1 All	OK	
	17.500	2.48	-44.05	-18.14	U1 All	---	2.48	44.05	0.00	U1 All	---	
	Middle	0.000	4.34	-77.08	-22.97	U1 All	---	4.34	77.08	0.00	U1 All	---
		0.750	4.34	-77.08	-15.36	U1 All	OK	4.34	77.08	0.00	U1 All	OK
		2.750	4.34	-77.08	0.00	U1 All	OK	4.34	77.08	2.68	U1 All	OK
3.750		0.00	0.00	0.00	U1 All	OK	4.34	77.08	11.41	U1 All	OK	
6.350		0.00	0.00	0.00	U1 All	OK	4.34	77.08	25.30	U1 All	OK	
8.000		0.00	0.00	0.00	U1 All	OK	4.34	77.08	27.55	U1 All	OK	
8.750		0.00	0.00	0.00	U1 All	OK	4.34	77.08	26.88	U1 All	OK	
10.750		0.00	0.00	0.00	U1 All	OK	4.34	77.08	20.94	U1 Even	OK	
11.150		1.74	-31.96	0.00	U1 All	OK	4.34	77.08	19.25	U1 Even	OK	
11.750		4.34	-77.08	0.00	U1 All	OK	4.34	77.08	16.26	U1 Even	OK	
13.875		4.34	-77.08	-8.12	U1 Odd	OK	4.34	77.08	1.02	U1 Even	OK	
14.875		4.34	-77.08	-17.71	U1 All	OK	2.17	39.72	0.00	U1 All	OK	
16.750		4.34	-77.08	-46.12	U1 All	OK	2.17	39.72	0.00	U1 All	OK	
17.500		4.34	-77.08	-59.82	U1 All	---	2.17	39.72	0.00	U1 All	---	
Beam		0.000	0.93	-73.66	-61.08	U1 All	---	0.93	73.66	0.00	U1 All	---
		0.750	0.93	-73.66	-40.00	U1 All	OK	0.93	73.66	0.00	U1 All	OK
		3.266	0.93	-73.66	0.00	U1 All	OK	0.93	73.66	12.96	U1 All	OK
	4.266	0.00	0.00	0.00	U1 All	OK	0.93	73.66	26.53	U1 All	OK	
	6.350	0.00	0.00	0.00	U1 All	OK	0.93	73.66	44.24	U1 All	OK	
	8.000	0.00	0.00	0.00	U1 All	OK	0.93	73.66	48.17	U1 All	OK	
	8.750	0.00	0.00	0.00	U1 All	OK	0.93	73.66	46.99	U1 All	OK	
	10.234	0.00	0.00	0.00	U1 All	OK	0.93	73.66	39.73	U1 Even	OK	
	11.150	0.80	-63.46	0.00	U1 All	OK	0.93	73.66	33.65	U1 Even	OK	
	11.302	0.93	-73.66	0.00	U1 All	OK	0.93	73.66	32.42	U1 Even	OK	
	14.987	0.93	-73.66	-34.90	U1 All	OK	0.93	73.66	0.00	U1 All	OK	
	16.054	1.24	-97.13	-61.53	U1 All	OK	0.93	73.66	0.00	U1 All	OK	
	16.750	1.24	-97.13	-80.63	U1 All	OK	0.93	73.66	0.00	U1 All	OK	
	17.500	1.24	-97.13	-102.80	U1 All	---	0.93	73.66	0.00	U1 All	---	
	3 Column	0.000	2.48	-44.05	-16.55	U1 All	---	2.48	44.05	0.00	U1 All	---
		0.750	2.48	-44.05	-12.91	U1 All	OK	2.48	44.05	0.00	U1 All	OK
		6.350	2.48	-44.05	-0.15	U1 Even	OK	2.48	44.05	5.05	U1 Odd	OK
8.750		2.48	-44.05	0.00	U1 All	OK	2.48	44.05	6.47	U1 Odd	OK	
11.150		2.48	-44.05	-0.15	U1 Even	OK	2.48	44.05	5.05	U1 Odd	OK	
16.750		2.48	-44.05	-12.91	U1 All	OK	2.48	44.05	0.00	U1 All	OK	
17.500		2.48	-44.05	-16.55	U1 All	---	2.48	44.05	0.00	U1 All	---	
Middle		0.000	4.34	-77.08	-53.65	U1 All	---	2.17	39.72	0.00	U1 All	---
		0.750	4.34	-77.08	-41.84	U1 All	OK	2.17	39.72	0.00	U1 All	OK
		2.625	4.34	-77.08	-16.97	U1 All	OK	2.17	39.72	0.00	U1 All	OK

Span Strip	x ft	Top					Bottom					
		A _{s,top} in ²	ΦM _{n-} k-ft	M _{u-} k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _{n+} k-ft	M _{u+} k-ft	Comb Pat	Status	
Beam	3.625	4.34	-77.08	-9.01	U1 S1	OK	4.34	77.08	1.12	U1 S3	OK	
	6.350	4.34	-77.08	-0.47	U1 Even	OK	4.34	77.08	16.37	U1 Odd	OK	
	8.750	4.34	-77.08	0.00	U1 All	OK	4.34	77.08	20.96	U1 Odd	OK	
	11.150	4.34	-77.08	-0.47	U1 Even	OK	4.34	77.08	16.37	U1 Odd	OK	
	13.875	4.34	-77.08	-9.01	U1 S4	OK	4.34	77.08	1.12	U1 S2	OK	
	14.875	4.34	-77.08	-16.97	U1 All	OK	2.17	39.72	0.00	U1 All	OK	
	16.750	4.34	-77.08	-41.84	U1 All	OK	2.17	39.72	0.00	U1 All	OK	
	17.500	4.34	-77.08	-53.65	U1 All	---	2.17	39.72	0.00	U1 All	---	
	0.000	1.24	-97.13	-93.79	U1 All	---	0.62	49.65	0.00	U1 All	---	
	0.750	1.24	-97.13	-73.15	U1 All	OK	0.62	49.65	0.00	U1 All	OK	
	1.246	1.24	-97.13	-60.51	U1 All	OK	0.62	49.65	0.00	U1 All	OK	
	2.217	0.94	-74.37	-38.14	U1 All	OK	0.62	49.65	0.00	U1 All	OK	
	2.246	0.92	-72.95	-37.49	U1 All	OK	0.62	49.65	0.00	U1 All	OK	
	3.217	0.62	-49.65	-19.05	U1 S1	OK	0.62	49.65	0.00	U1 All	OK	
	6.350	0.62	-49.65	-0.83	U1 Even	OK	0.62	49.65	28.62	U1 Odd	OK	
	8.750	0.62	-49.65	0.00	U1 All	OK	0.62	49.65	36.65	U1 Odd	OK	
	11.150	0.62	-49.65	-0.83	U1 Even	OK	0.62	49.65	28.62	U1 Odd	OK	
	14.283	0.62	-49.65	-19.05	U1 S4	OK	0.62	49.65	0.00	U1 All	OK	
	15.254	0.92	-72.95	-37.49	U1 All	OK	0.62	49.65	0.00	U1 All	OK	
	15.283	0.94	-74.37	-38.14	U1 All	OK	0.62	49.65	0.00	U1 All	OK	
16.254	1.24	-97.13	-60.51	U1 All	OK	0.62	49.65	0.00	U1 All	OK		
16.750	1.24	-97.13	-73.15	U1 All	OK	0.62	49.65	0.00	U1 All	OK		
17.500	1.24	-97.13	-93.79	U1 All	---	0.62	49.65	0.00	U1 All	---		
4 Column	0.000	2.48	-44.05	-18.14	U1 All	---	2.48	44.05	0.00	U1 All	---	
	0.750	2.48	-44.05	-14.23	U1 All	OK	2.48	44.05	0.00	U1 All	OK	
	1.750	1.24	-22.70	-9.46	U1 All	OK	2.48	44.05	0.00	U1 All	OK	
	5.750	1.24	-22.70	0.00	U1 All	OK	2.48	44.05	5.02	U1 Even	OK	
	6.350	0.50	-9.24	0.00	U1 All	OK	2.48	44.05	5.94	U1 Even	OK	
	6.750	0.00	0.00	0.00	U1 All	OK	2.48	44.05	6.46	U1 Even	OK	
	8.750	0.00	0.00	0.00	U1 All	OK	2.48	44.05	8.29	U1 All	OK	
	9.500	0.00	0.00	0.00	U1 All	OK	2.48	44.05	8.50	U1 All	OK	
	11.150	0.00	0.00	0.00	U1 All	OK	2.48	44.05	7.81	U1 All	OK	
	13.750	0.00	0.00	0.00	U1 All	OK	2.48	44.05	3.52	U1 All	OK	
	14.750	1.24	-22.70	0.00	U1 All	OK	2.48	44.05	0.83	U1 All	OK	
	15.750	1.24	-22.70	-2.95	U1 Even	OK	2.48	44.05	0.00	U1 All	OK	
	16.750	2.48	-44.05	-7.06	U1 All	OK	2.48	44.05	0.00	U1 All	OK	
	17.500	2.48	-44.05	-10.78	U1 All	---	2.48	44.05	0.00	U1 All	---	
	Middle	0.000	4.34	-77.08	-59.82	U1 All	---	2.17	39.72	0.00	U1 All	---
		0.750	4.34	-77.08	-46.12	U1 All	OK	2.17	39.72	0.00	U1 All	OK
		2.625	4.34	-77.08	-17.71	U1 All	OK	2.17	39.72	0.00	U1 All	OK
		3.625	4.34	-77.08	-8.12	U1 Odd	OK	4.34	77.08	1.02	U1 Even	OK
		5.750	4.34	-77.08	0.00	U1 All	OK	4.34	77.08	16.26	U1 Even	OK
		6.350	1.74	-31.96	0.00	U1 All	OK	4.34	77.08	19.25	U1 Even	OK
6.750		0.00	0.00	0.00	U1 All	OK	4.34	77.08	20.94	U1 Even	OK	
8.750		0.00	0.00	0.00	U1 All	OK	4.34	77.08	26.88	U1 All	OK	
9.500		0.00	0.00	0.00	U1 All	OK	4.34	77.08	27.55	U1 All	OK	
11.150		0.00	0.00	0.00	U1 All	OK	4.34	77.08	25.30	U1 All	OK	
Beam	13.750	0.00	0.00	0.00	U1 All	OK	4.34	77.08	11.41	U1 All	OK	
	14.750	4.34	-77.08	0.00	U1 All	OK	4.34	77.08	2.68	U1 All	OK	
	16.750	4.34	-77.08	-15.36	U1 All	OK	4.34	77.08	0.00	U1 All	OK	
	17.500	4.34	-77.08	-22.97	U1 All	---	4.34	77.08	0.00	U1 All	---	
	0.000	1.24	-97.13	-102.80	U1 All	---	0.93	73.66	0.00	U1 All	---	
	0.750	1.24	-97.13	-80.63	U1 All	OK	0.93	73.66	0.00	U1 All	OK	

Span Strip	Top						Bottom					
	x ft	A _{s,top} in ²	ΦM _{n-} k-ft	M _{u-} k-ft	Comb Pat	Status	A _{s,bot} in ²	ΦM _{n+} k-ft	M _{u+} k-ft	Comb Pat	Status	
5 Column	1.446	1.24	-97.13	-61.53	U1 All	OK	0.93	73.66	0.00	U1 All	OK	
	2.513	0.93	-73.66	-34.90	U1 All	OK	0.93	73.66	0.00	U1 All	OK	
	6.198	0.93	-73.66	0.00	U1 All	OK	0.93	73.66	32.42	U1 Even	OK	
	6.350	0.80	-63.46	0.00	U1 All	OK	0.93	73.66	33.65	U1 Even	OK	
	7.266	0.00	0.00	0.00	U1 All	OK	0.93	73.66	39.73	U1 Even	OK	
	8.750	0.00	0.00	0.00	U1 All	OK	0.93	73.66	46.99	U1 All	OK	
	9.500	0.00	0.00	0.00	U1 All	OK	0.93	73.66	48.17	U1 All	OK	
	11.150	0.00	0.00	0.00	U1 All	OK	0.93	73.66	44.24	U1 All	OK	
	13.234	0.00	0.00	0.00	U1 All	OK	0.93	73.66	26.53	U1 All	OK	
	14.234	0.93	-73.66	0.00	U1 All	OK	0.93	73.66	12.96	U1 All	OK	
	16.750	0.93	-73.66	-40.00	U1 All	OK	0.93	73.66	0.00	U1 All	OK	
	17.500	0.93	-73.66	-61.08	U1 All	---	0.93	73.66	0.00	U1 All	---	
	Middle	0.000	2.48	-44.05	-0.20	U1 All	---	0.00	0.00	0.00	U1 All	---
		0.131	2.48	-44.05	-0.14	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.348	2.48	-44.05	-0.06	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.375	2.48	-44.05	-0.05	U1 All	OK	0.00	0.00	0.00	U1 All	OK
		0.533	2.48	-44.05	-0.02	U1 All	OK	0.00	0.00	0.00	U1 All	OK
Beam	0.750	2.48	-44.05	0.00	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.000	4.34	-77.08	-0.30	U1 All	---	0.00	0.00	0.00	U1 All	---	
	0.131	4.34	-77.08	-0.22	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.348	4.34	-77.08	-0.10	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.375	4.34	-77.08	-0.08	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
Beam	0.533	4.34	-77.08	-0.03	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.750	4.34	-77.08	0.00	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.000	0.93	-73.66	-1.12	U1 All	---	0.00	0.00	0.00	U1 All	---	
	0.131	0.93	-73.66	-0.79	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.348	0.93	-73.66	-0.35	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
Beam	0.375	0.93	-73.66	-0.31	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.533	0.93	-73.66	-0.11	U1 All	OK	0.00	0.00	0.00	U1 All	OK	
	0.750	0.93	-73.66	0.00	U1 All	OK	0.00	0.00	0.00	U1 All	OK	

2.9. Longitudinal Beam Transverse Reinforcement Demand and Capacity

2.9.1. Section Properties

Span	d in	(A _v /s) _{min} in ² /in	ΦV _c kip
1	18.19	0.0117	24.16
2	18.19	0.0117	24.16
3	18.19	0.0117	24.16
4	18.19	0.0117	24.16
5	18.19	0.0117	24.16

2.9.2. Beam Transverse Reinforcement Demand

Notes:

*8 - Minimum transverse (stirrup) reinforcement governs.

Span	Start ft	End ft	Required				Demand
			X _u ft	V _u kip	Comb/Patt	A _v /s in ² /in	A _v /s in ² /in
1	0.000	0.000	0.000	0.00	U1/All	0.0000	0.0000
2	1.000	4.118	2.266	32.35	U1/All	0.0100	0.0117 *8

Span	Start ft	End ft	Required				Demand
			X _u ft	V _u kip	Comb/Patt	A _v /s in ² /in	A _v /s in ² /in
	4.118	5.971	4.118	21.70	U1/All	0.0000	0.0117 *8
	5.971	7.824	5.971	11.38	U1/Even	0.0000	0.0000
	7.824	9.676	9.676	10.23	U1/All	0.0000	0.0000
	9.676	11.529	11.529	20.88	U1/All	0.0000	0.0117 *8
	11.529	13.382	13.382	31.52	U1/All	0.0090	0.0117 *8
	13.382	16.500	15.234	42.17	U1/All	0.0220	0.0220
3	1.000	4.118	2.266	37.26	U1/All	0.0160	0.0160
	4.118	5.971	4.118	26.61	U1/All	0.0030	0.0117 *8
	5.971	7.824	5.971	15.97	U1/All	0.0000	0.0117 *8
	7.824	9.676	9.676	6.78	U1/S3	0.0000	0.0000
	9.676	11.529	11.529	15.97	U1/All	0.0000	0.0117 *8
	11.529	13.382	13.382	26.61	U1/All	0.0030	0.0117 *8
4	1.000	4.118	2.266	42.17	U1/All	0.0220	0.0220
	4.118	5.971	4.118	31.52	U1/All	0.0090	0.0117 *8
	5.971	7.824	5.971	20.88	U1/All	0.0000	0.0117 *8
	7.824	9.676	7.824	10.23	U1/All	0.0000	0.0000
	9.676	11.529	11.529	11.38	U1/Even	0.0000	0.0000
	11.529	13.382	13.382	21.70	U1/All	0.0000	0.0117 *8
5	0.750	0.750	0.750	0.00	U1/All	0.0000	0.0000

2.9.3. Beam Transverse Reinforcement Details

Span	Size	Stirrups (2 legs each unless otherwise noted)
1	#5	--- None ---
2	#3	8 @ 8.0 + <-- 44.5 --> + 10 @ 8.6
3	#3	10 @ 8.6 + <-- 22.2 --> + 10 @ 8.6
4	#3	10 @ 8.6 + <-- 44.5 --> + 8 @ 8.0
5	#5	--- None ---

2.9.4. Beam Transverse Reinforcement Capacity

Notes:
 *8 - Minimum transverse (stirrup) reinforcement governs.

Span	Start ft	End ft	Required				Provided			
			X _u ft	V _u kip	Comb/Patt	A _v /s in ² /in	A _v in ²	Sp in	A _v /s in ² /in	ΦV _n kip
1	0.000	0.750	0.000	0.00	U1/All	----	----	----	----	----
2	0.000	1.000	2.266	32.35	U1/All	----	----	----	----	----
	1.000	5.971	2.266	32.35	U1/All	0.0100	0.22	8.0	0.0277	46.79 *8
	5.971	9.676	5.971	11.38	U1/Even	0.0000	----	----	----	12.08
	9.676	16.500	15.234	42.17	U1/All	0.0220	0.22	8.6	0.0255	45.05
3	16.500	17.500	15.234	42.17	U1/All	----	----	----	----	----
	0.000	1.000	2.266	37.26	U1/All	----	----	----	----	----
	1.000	7.824	2.266	37.26	U1/All	0.0160	0.22	8.6	0.0255	45.05
	7.824	9.676	9.676	6.78	U1/S3	0.0000	----	----	----	12.08
4	9.676	16.500	15.234	37.26	U1/All	0.0160	0.22	8.6	0.0255	45.05
	16.500	17.500	15.234	37.26	U1/All	----	----	----	----	----

Span	Start ft	End ft	Required				Provided			
			X _u ft	V _u kip	Comb/Patt	A _w /s in ² /in	A _v in ²	S _p in	A _w /s in ² /in	ΦV _n kip
4	0.000	1.000	2.266	42.17	U1/All	----	----	----	----	----
	1.000	7.824	2.266	42.17	U1/All	0.0220	0.22	8.6	0.0255	45.05
	7.824	11.529	11.529	11.38	U1/Even	0.0000	----	----	----	12.08
	11.529	16.500	15.234	32.35	U1/All	0.0100	0.22	8.0	0.0277	46.79 *8
	16.500	17.500	15.234	32.35	U1/All	----	----	----	----	----
5	0.000	0.750	0.750	0.00	U1/All	----	----	----	----	----

2.10. Slab Shear Capacity

Span	b in	d in	V _{ratio}	ΦV _c kip	V _u kip	X _u ft
1	250.00	4.19	0.000	99.32	0.00	0.00
2	250.00	4.19	0.000	99.32	0.00	16.40
3	250.00	4.19	0.000	99.32	0.00	16.40
4	250.00	4.19	0.000	99.32	0.00	1.10
5	250.00	4.19	0.000	99.32	0.00	0.00

2.11. Flexural Transfer of Negative Unbalanced Moment at Supports

Support	Width in	Width-c in	d in	M _{unb} k-ft	Comb	Patt	γ _f	A _{s,req} in ²	A _{s,prov} in ²	Add Bars
1	36.00	36.00	4.19	93.21	U1	All	0.612	3.931	1.530	8-#5
2	36.00	36.00	4.19	46.73	U1	Even	0.600	1.646	1.840	---
3	36.00	36.00	4.19	46.73	U1	Even	0.600	1.646	1.840	---
4	36.00	36.00	4.19	93.21	U1	All	0.612	3.931	1.530	8-#5

2.12. Punching Shear Around Columns

2.12.1. Critical Section Properties

Support	Type	b ₁ in	b ₂ in	b ₀ in	d _{avg} in	CG in	C _(left) in	C _(right) in	A _c in ²	J _c in ⁴
1	Rect	20.09	22.19	62.38	16.76	3.24	12.24	7.86	1045.2	77428
2	Rect	22.19	22.19	88.75	13.02	0.00	11.09	11.09	1155.6	99277
3	Rect	22.19	22.19	88.75	13.02	0.00	11.09	11.09	1155.6	99277
4	Rect	20.09	22.19	62.38	16.76	-3.24	7.86	12.24	1045.2	77428

2.12.2. Punching Shear Results

Support	V _u kip	v _u psi	M _{unb} k-ft	Comb	Patt	γ _v	v _u psi	ΦV _c psi
1	48.86	46.8	80.04	U1	All	0.388	84.6	189.7
2	104.56	90.5	-16.77	U1	All	0.400	99.5	189.7
3	104.56	90.5	16.77	U1	All	0.400	99.5	189.7
4	48.86	46.8	-80.04	U1	All	0.388	84.6	189.7

2.13. Material TakeOff


2.13.1. Reinforcement in the Direction of Analysis


Top Bars	989.4 lb	<=>	18.32 lb/ft	<=>	0.833 lb/ft ²
Bottom Bars	1274.0 lb	<=>	23.59 lb/ft	<=>	1.072 lb/ft ²
Stirrups	98.3 lb	<=>	1.82 lb/ft	<=>	0.083 lb/ft ²

STRUCTUREPOINT - spSlab v5.50 Debug - Mar 29 2018
 Licensed to: -- Unknown User --, License ID: 00000-0000000
 C:\Program Files (x86)\StructurePoint\spSlab\E...\Example 5 - PCA Notes on ACI 318-Example 20-2.slb

Page | 16
 3/30/2018
 11:41 AM

Total Steel	2361.7 lb	<=>	43.74 lb/ft	<=>	1.988 lb/ft ²
Concrete	817.2 ft ³	<=>	15.13 ft ³ /ft	<=>	0.688 ft ³ /ft ²

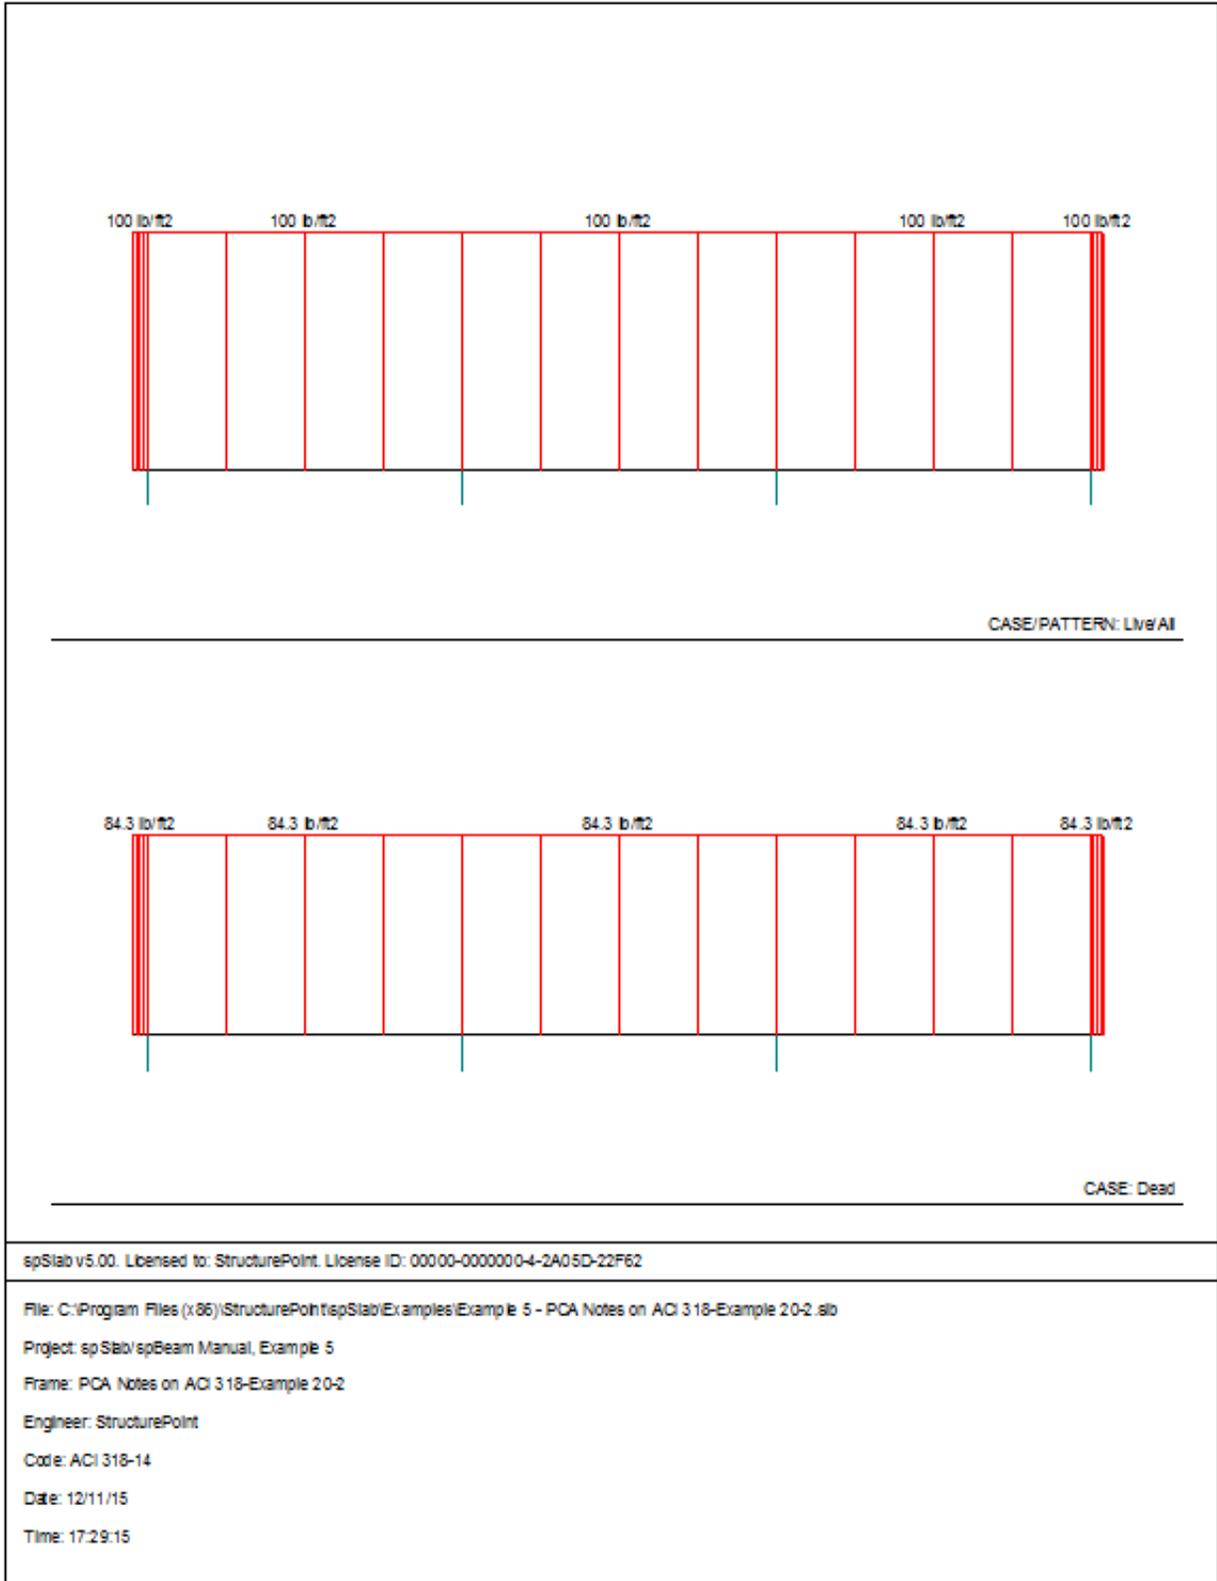

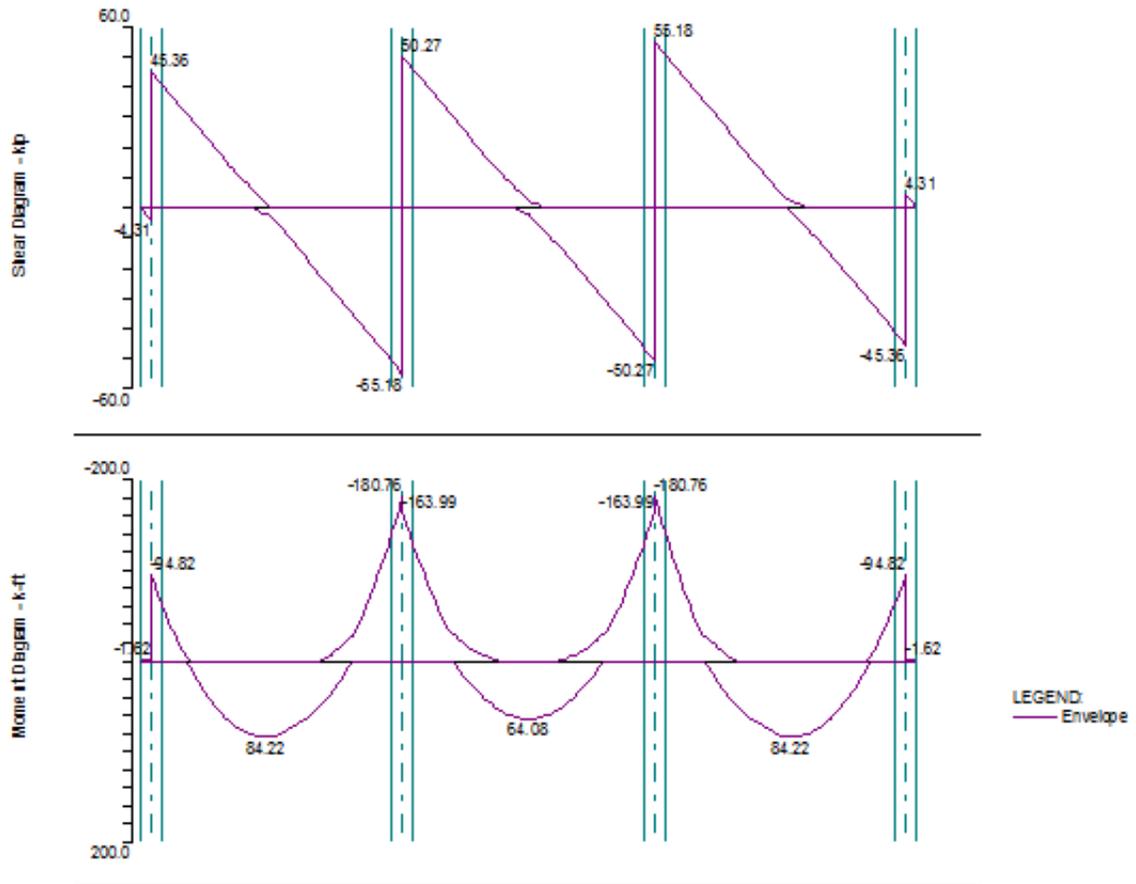

spSlab v5.00. Licensed to: StructurePoint. License ID: 00000-0000000-4-2A05D-22F62

File: C:\Program Files (x86)\StructurePoint\spSlab\Examples\Example 5 - PCA Notes on ACI 318-Example 20-2.slb

Project: spSlab/spBeam Manual, Example 5


Frame: PCA Notes on ACI 318-Example 20-2


Engineer: StructurePoint


Code: ACI 318-14

Date: 12/11/15

Time: 17:30:01

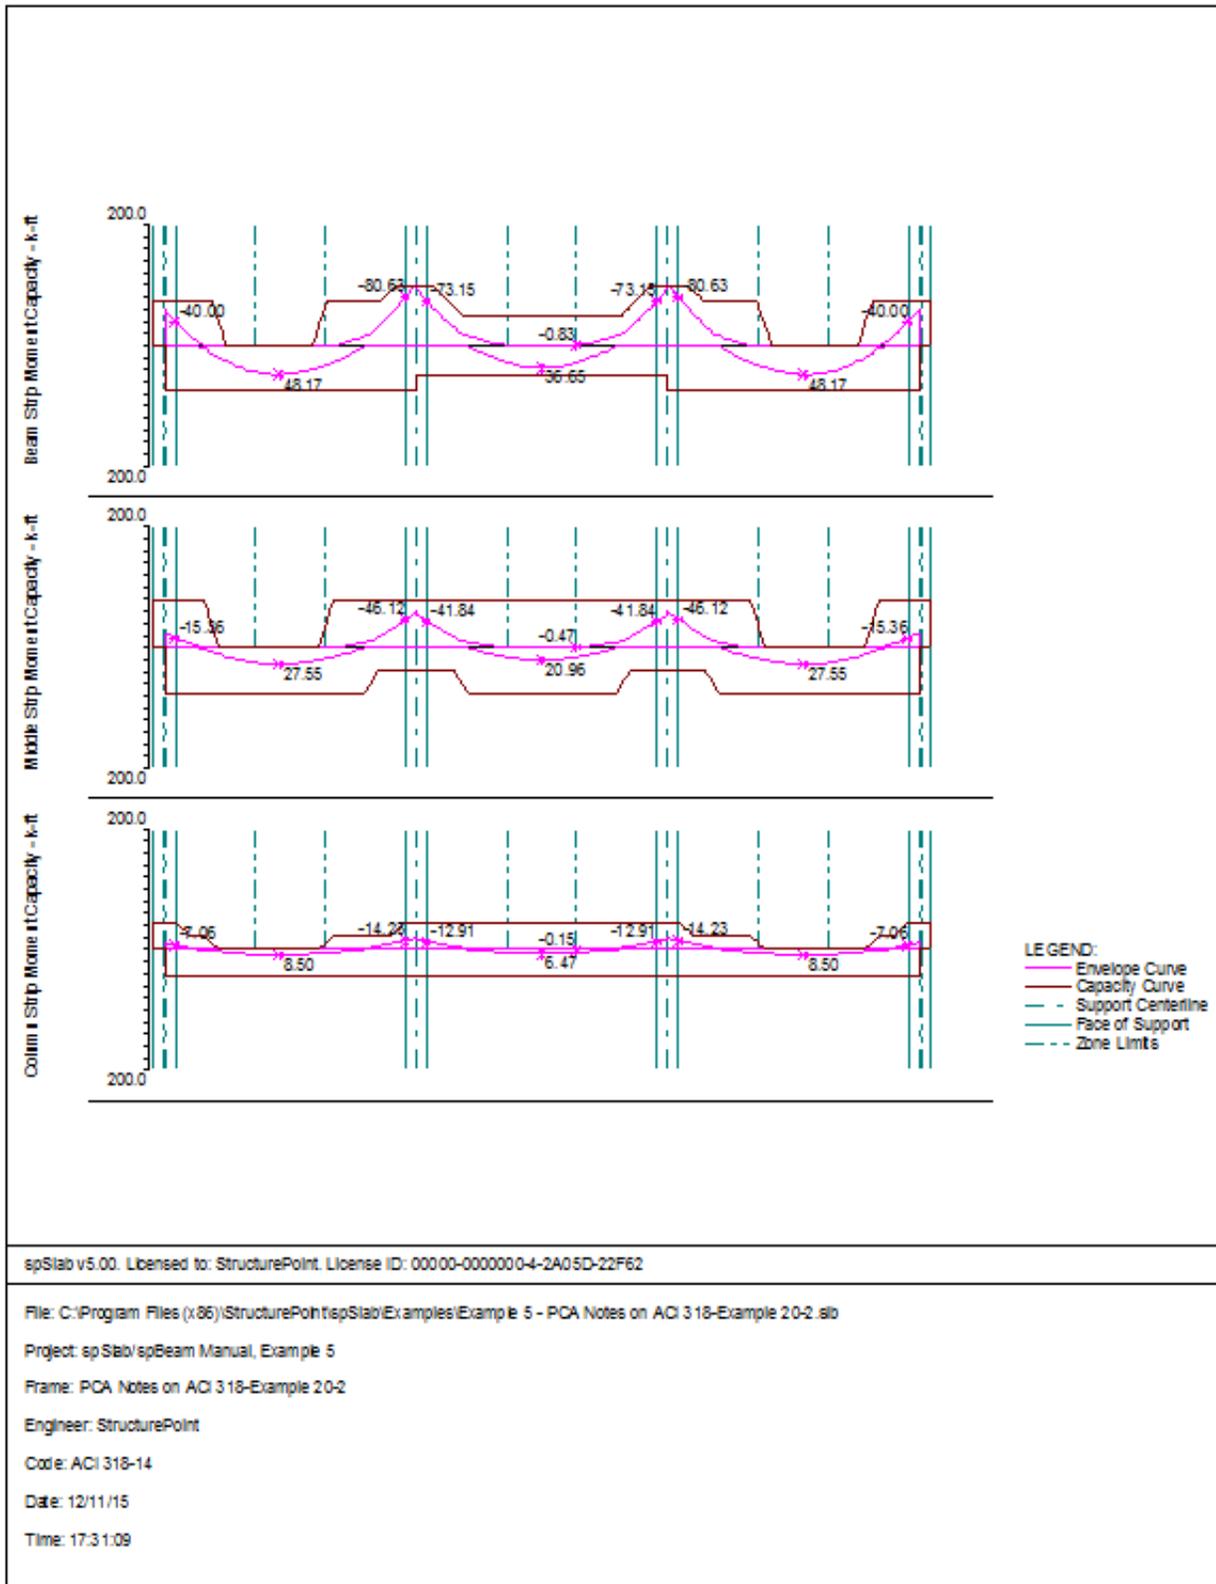

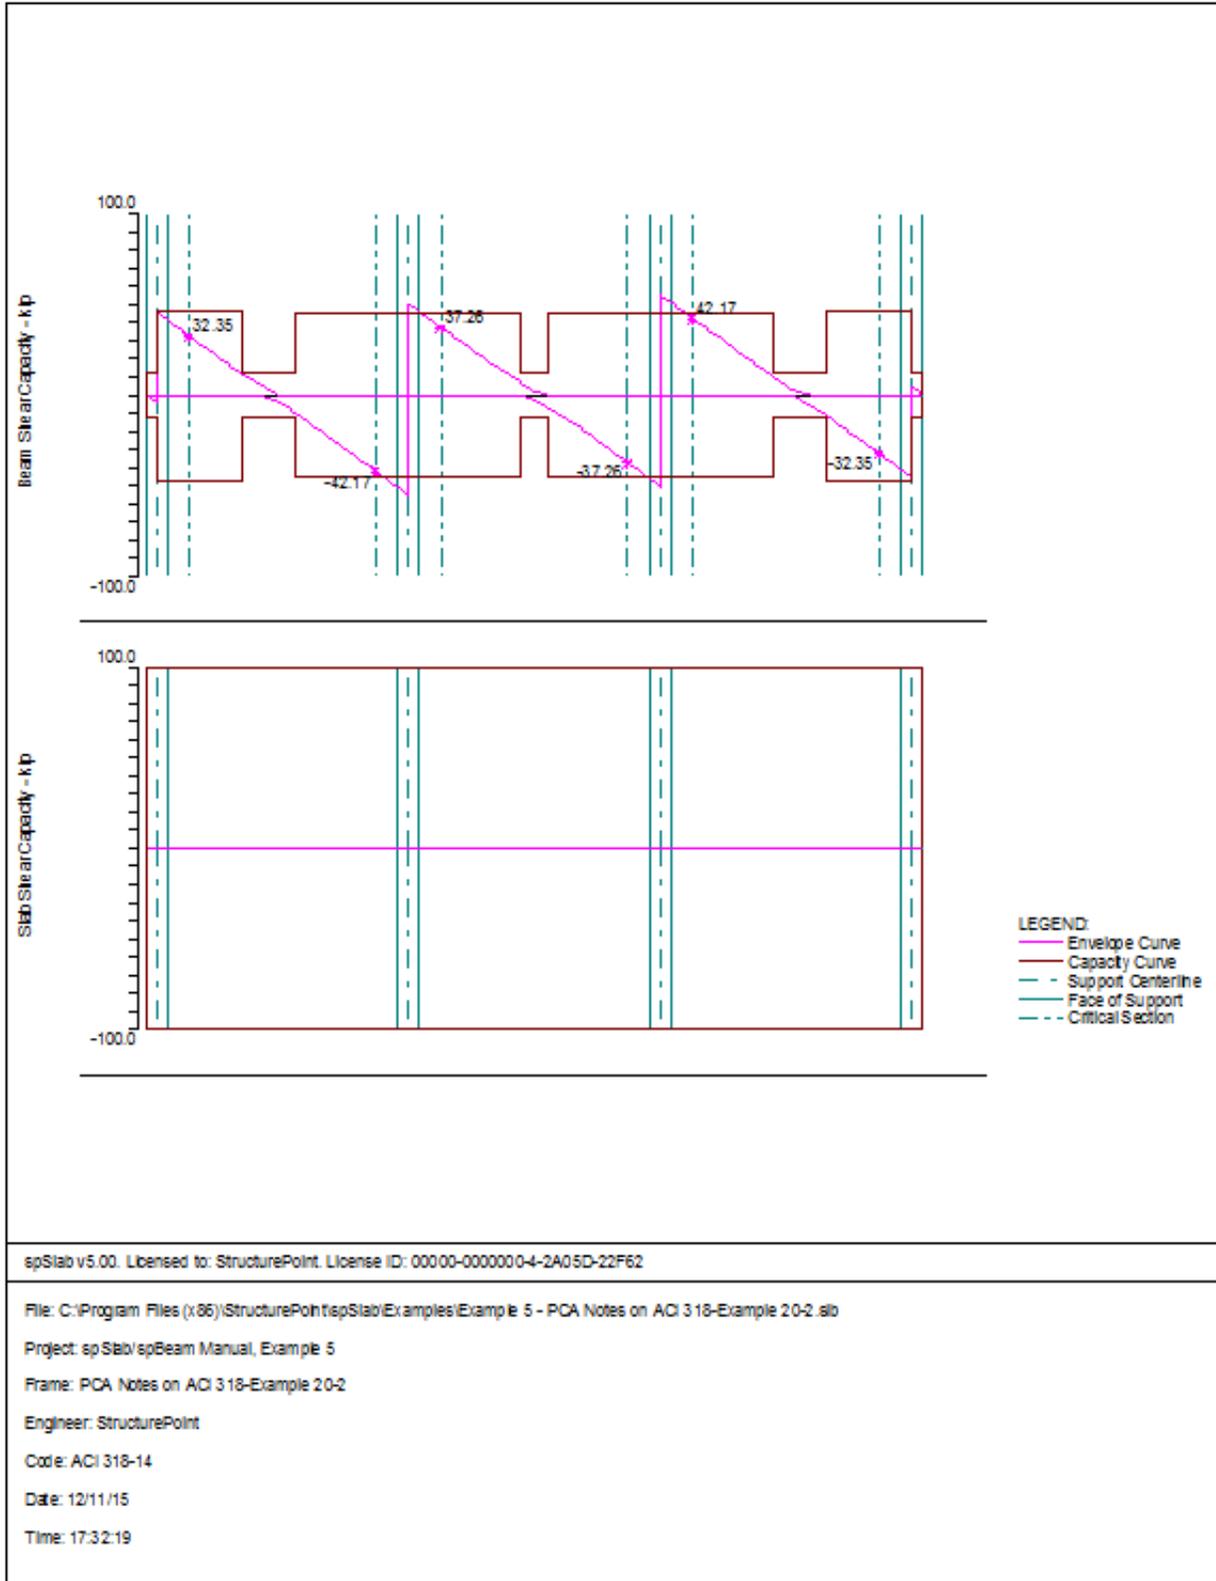

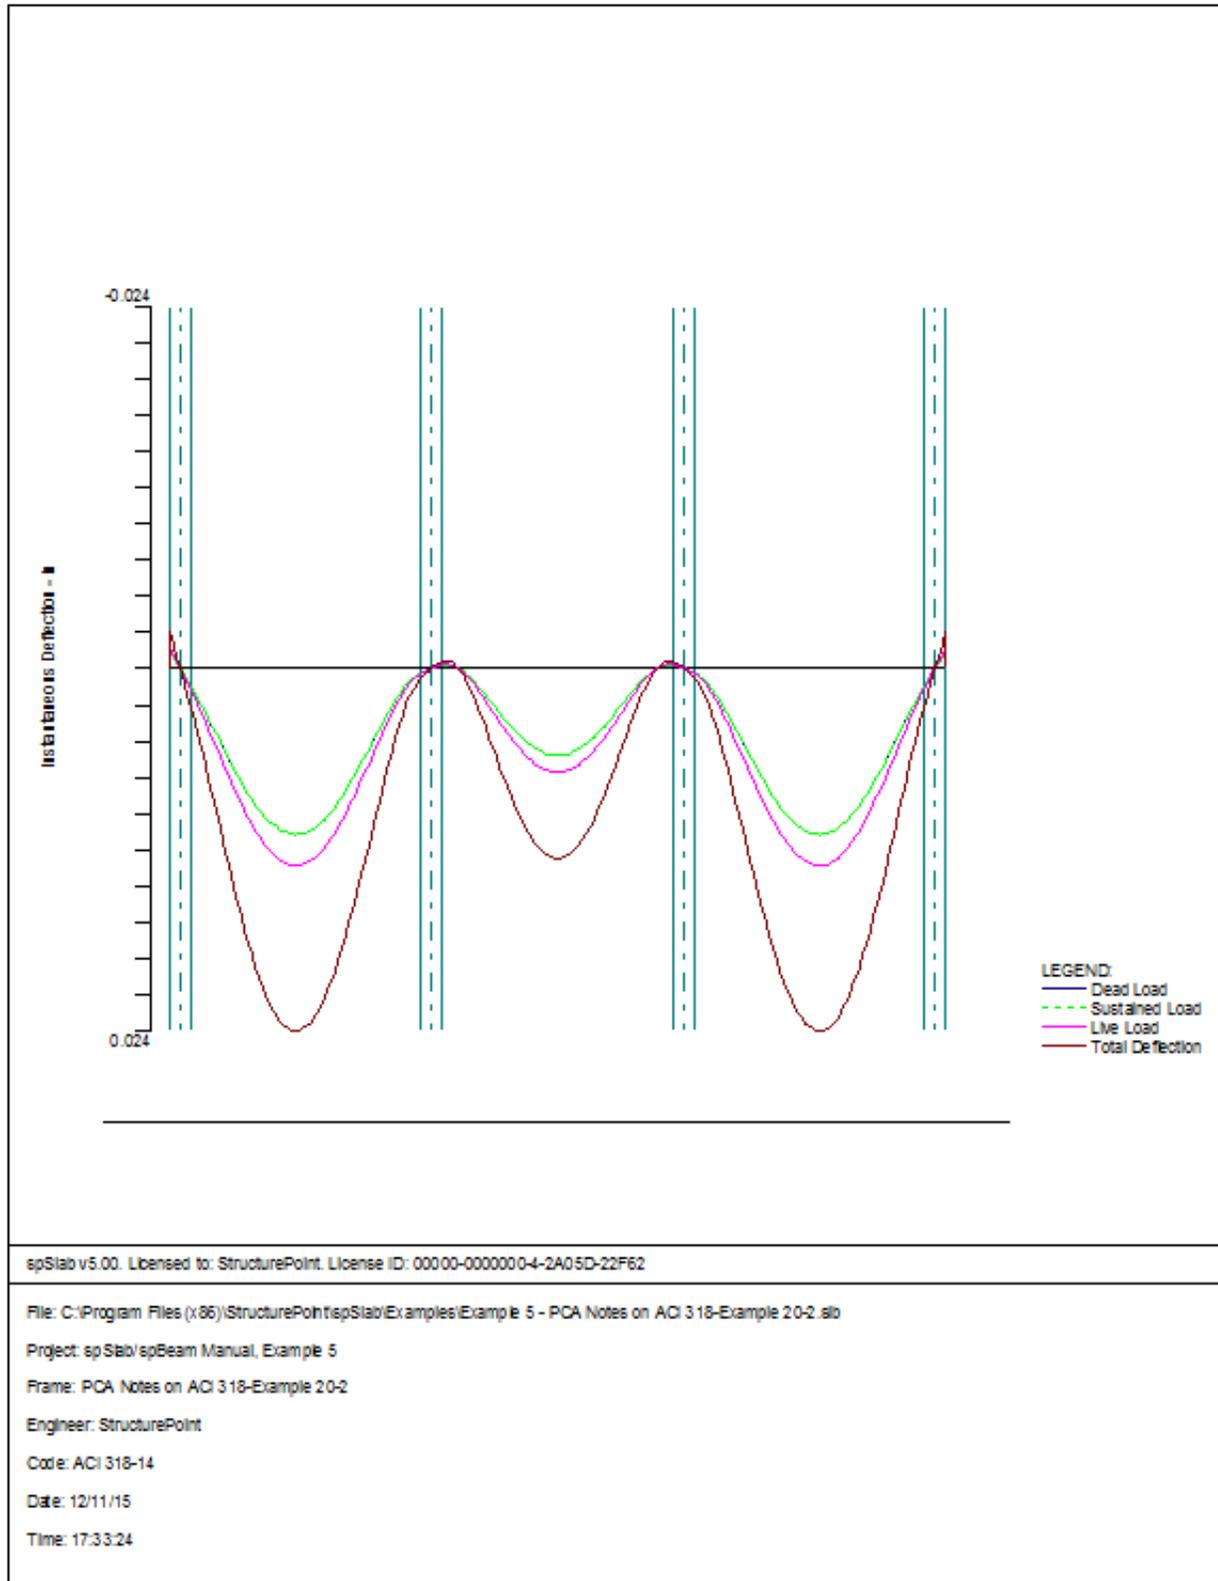


CHAPTER

7

spReporter MODULE

7.1 Program Description	358
7.2 Toolbar	358
7.3 Export / Print Panel	360
7.4 Explorer panel	361

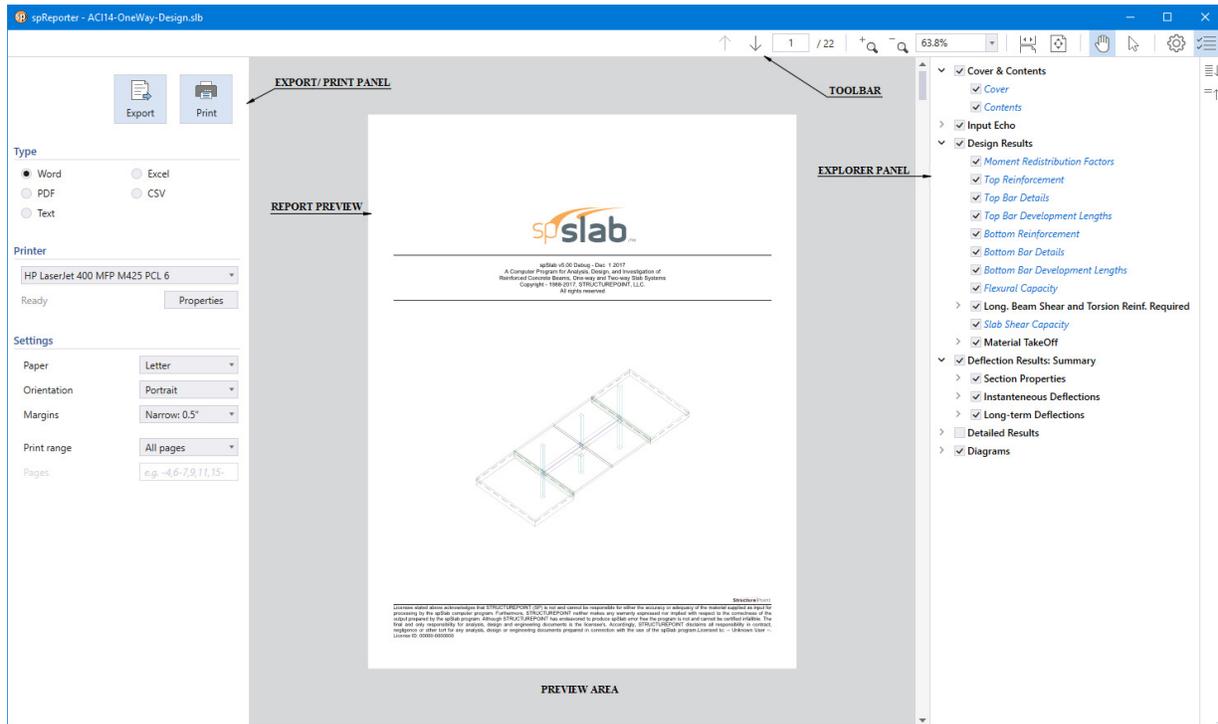

7.1 Program Description

spReporter is a module of the spSlab program. It enables the user to view, customize, print and export reports in different formats.

spReporter is accessed from within spSlab. Once a successful run has been performed, you can open spReporter by selecting the **Reporter** command from the **View** menu. Alternatively, spReporter can also be accessed by pressing the **F7** key or by clicking on the **spReporter** button in the program toolbar. Immediately after opening spReporter, you can export and/or print the default report by pressing Export/Print button. Various options to customize the report before printing and/or exporting it are also provided. Once the work in spReporter is complete click the close button in the top right corner to exit the spReporter window.

7.2 Toolbar

Previous page

Displays the previous page of the report.

Next page

Displays the next page of the report.

Page number box

Displays the page with the page number entered in the box.

Zoom in

Zooms in on the report (Ctrl + Mouse wheel up).

Zoom out

Zooms out on the report (Ctrl + Mouse wheel down).

Zoom box

Zooms on the report preview to the extent typed in the box or selected from the dropdown list.

Fit to window width and enable scrolling

Fits the width of report to the preview space width and enables scrolling.

Fit one full page to window

Fits one full page in the preview space.

Pan


When toggled on and if the report is bigger than preview window, enables panning the report.

Text selection

When toggled on enables selecting text in the report.

Settings

Modifies settings for report and explorer panel.

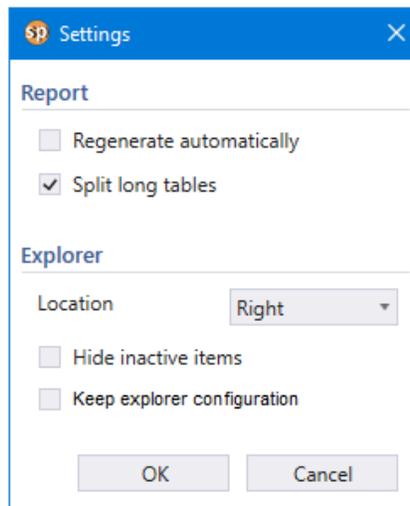

– Report Settings

Regenerate automatically: Enables automatic regeneration of report when content selection is modified by the user.

Split long tables: Displays table headings in all pages when tables are split along several pages.

– Explorer Settings

Location: Displays explorer panel on the left or right side of screen depending on selection.

Hide inactive items: Hides unused tables from the explorer view.

Keep explorer configurations: Saves the explorer configuration i.e. information about selected tables and opened/closed sections so that it is available the next time user opens spReporter

Explorer

Shows or hides the explorer panel.

7.3 Export / Print Panel

Export

Exports the report in the selected format.

Print

Prints the report in the selected format when the option is available.

Type

Provides 5 format options to print and/or export the reports

- **Word:** Produces a Microsoft Word file with .docx extension.
- **PDF:** Produces an Adobe Acrobat file with .pdf extension.
- **Text:** Produces a Text file with .txt extension.
- **Excel:** Produces a Microsoft Excel file with .xlsx extension.
- **CSV:** Produces a Comma Separated file with .csv extension.


Printer

Provides the option to select available printers and change printer properties.

Settings

Provides the options to modify print settings.

- **Paper:** Provides the options to select from available paper sizes.
- **Orientation:** Provides the options to select between landscape or portrait paper orientation.
- **Margins:** Provides the options to use narrow, normal, wide or custom margins to the report.

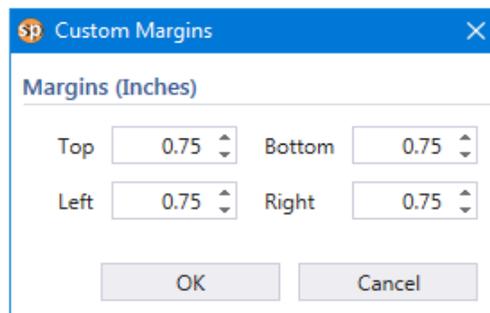

- **Print range:** Provides the options to select the pages to print and/or export.

7.4 Explorer panel

The explorer panel consists of all the available report items classified into sections and arranged hierarchically. Each item listed in the explorer panel is preceded by a checkbox. The user can check/uncheck the checkbox to include or exclude from the report, the items or sections.

Expand all

Expands item list.

Collapse all


Collapses item list.

CHAPTER

8

spResults MODULE

8.1 Introduction	364
8.2 Toolbar	364
8.3 Explorer panel	366

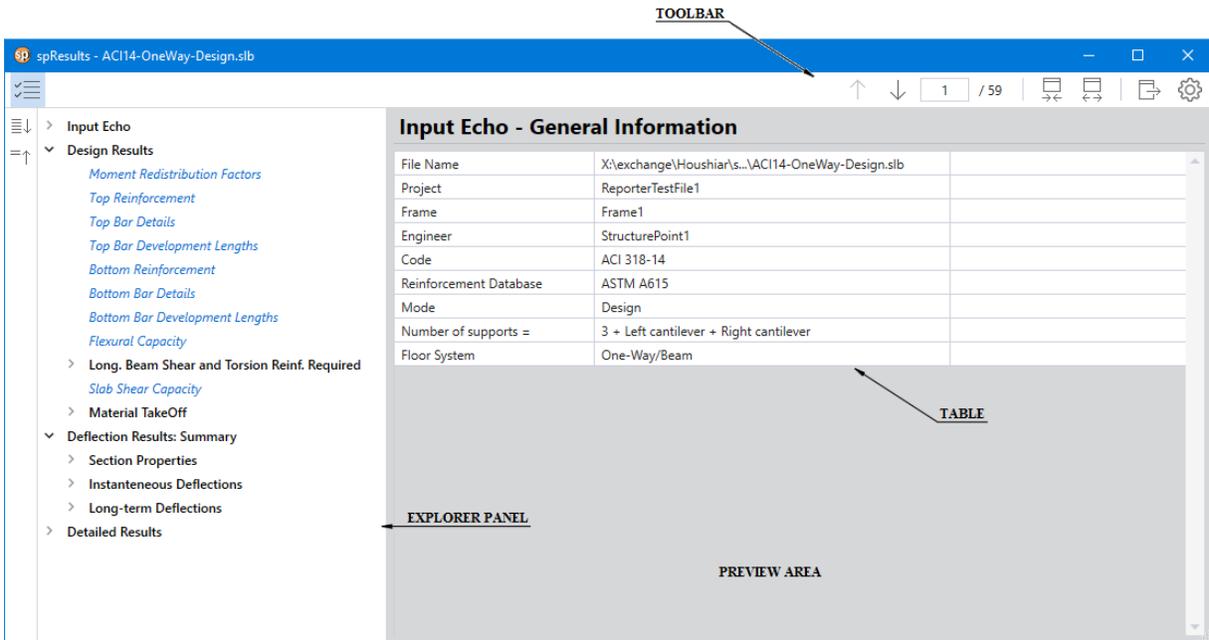

8.1 Introduction

spResults is a module of the spSlab program. It enables the user to view program input and output in tables and export them in different formats.

spResults is accessed from within spSlab. Once a model has been successfully executed, you can open spResults by selecting the **Results** command from the **View** menu. Alternatively, spResults can also be accessed by pressing the **F6** key or by clicking on the **spResults** button in the program toolbar. Once the work in spReporter is complete click the close button in the top right corner to exit spResults window.

8.2 Toolbar

Previous table

Displays the previous table.

Next table

Displays the next table.

Table number box

Displays the table with the table number entered in the box.

Auto fit column width to view area

When toggled on always fits the width of table to the preview space width.

Maintain maximum column width


Switches all table columns to their default maximum width.

Export current table

Exports the table being viewed in the selected format.

Settings

Modifies settings for tables and explorer panel.

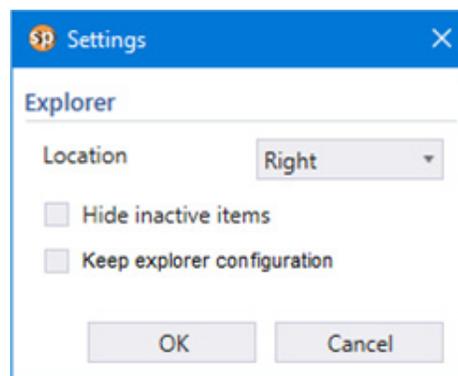

– Tables settings

Highlight critical items: Enables highlighting of critical items in the “Loads and Capacities” table.

Highlighting color: Provides color options for highlighting critical items.

– Explorer settings

Location: Displays explorer panel on the left or right side of screen depending on selection

Hide inactive items: Hides unused tables from the explorer view.

Keep explorer configuration: Saves the explorer configuration i.e. information about selected tables and opened /closed sections so that it is available the next time user opens spReporter.

Explorer

Shows or hides the explorer panel.

8.3 Explorer panel

The explorer panel consists of all the available items of the result classified into sections and arranged hierarchically. Any item in the explorer panel can be clicked on to display the corresponding table in the preview space.

Expand all

Expands item list.

Collapse all

Collapses item list.

CHAPTER
A

APPENDIX

A.1 Conversion Factors - English to SI	368
A.2 Conversion Factors - SI to English	368
A.3 Contact Information	369

A.1 Conversion Factors - English to SI

To convert from	To	Multiply by
in.	m (1000 mm)	0.025400
ft	m	0.304800
lb	N (0.001 kN)	4.448222
kip (1000 lbs)	kN	4.448222
plf (lb/ft)	N/m	14.593904
psi (lb/in. ²)	kPa	6.894757
ksi (kips/in. ²)	MPa	6.894757
psf (lb/ft ²)	N/m ² (Pa)	47.88026
pcf (lb/ft ³)	kg/m ³	16.018460
ft-kips	kN • m	1.355818

A.2 Conversion Factors - SI to English

To convert from	To	Multiply by
m (1000 mm)	in	39.37008
m	ft	3.28084
N (0.001 kN)	lb	0.224809
kN	kip (1000 lbs)	0.224809
kN/m	plf (lb/ft)	68.52601
MPa	psi (lb/in. ²)	145.0377
MPa	ksi (kips/in. ²)	0.145038
kN/m ² (kPa)	psf (lb/ft ²)	20.88555
kg/m ³	pcf (lb/ft ³)	0.062428
kN • m	ft-kips	0.737562

A.3 Contact Information

Web Site: <http://www.StructurePoint.org>

E-mail: info@StructurePoint.org

support@StructurePoint.org

StructurePoint, LLC.

5420 Old Orchard Road

Skokie, IL 60077

USA

Phone: +1- 847- 966- 4357

Fax: +1- 847- 966- 1542